

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

LIFTGATE WINDOW GLASS

[G1549838]

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Refer to: [Rear Window Wiper Pivot Arm](#) (501-16 Wipers and Washers, Removal and Installation).
2. Refer to: [Liftgate Lower Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


3.

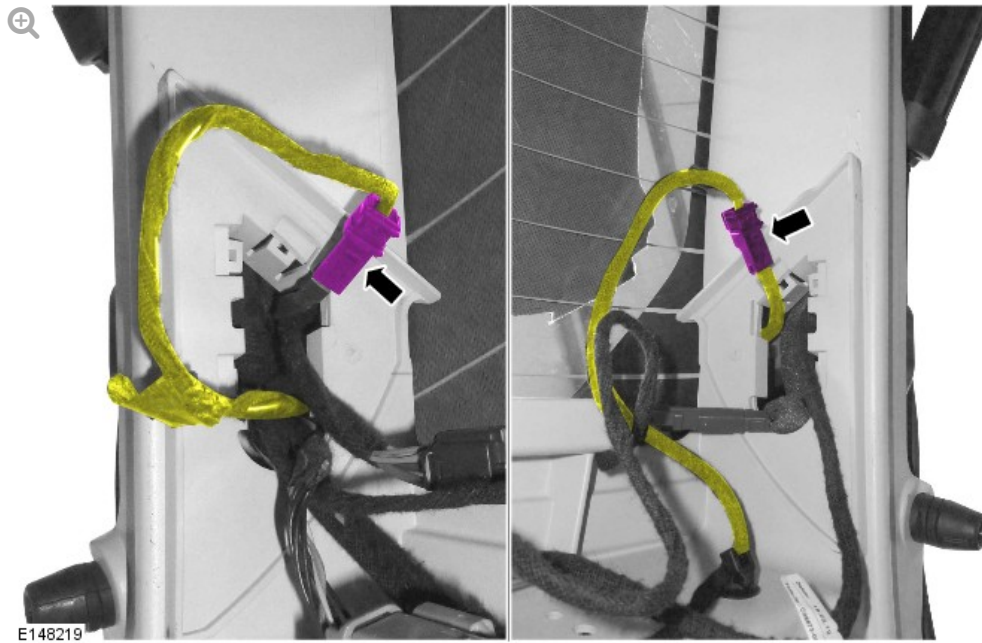

4.



CAUTIONS:

- Protect the surrounding components.
- Protect the surrounding paintwork to avoid damage.

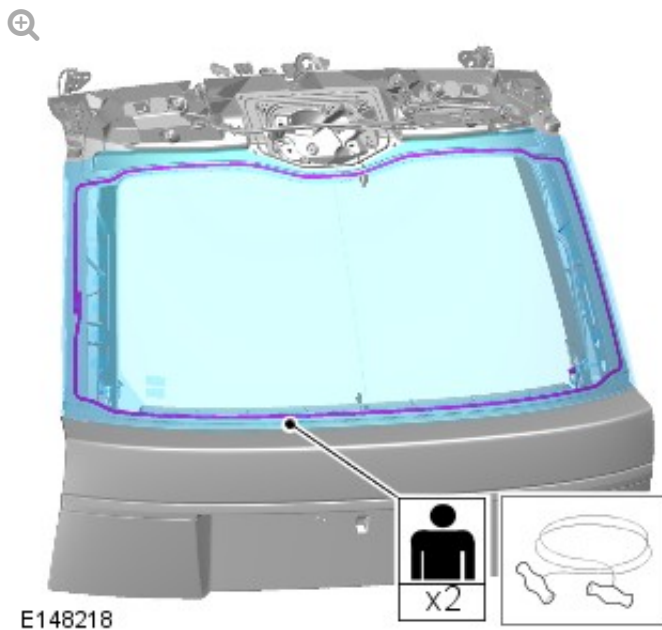

Use a glazing cutting wire to cut the sealant.

5.

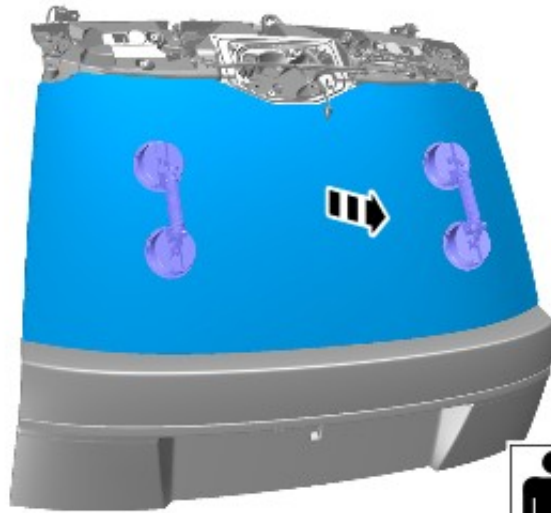


E148220

INSTALLATION

1.

CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Correct preparation of body apertures "post painting" to ensure satisfactory glass adhesion, must be carried out in line with industry practise.

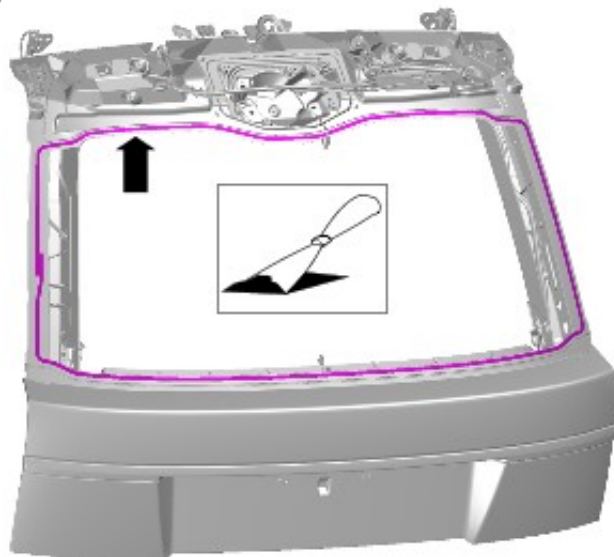


E148221

2.

NOTE:

Make sure that a Hi-modulus sealer (for example, Wurth Ultimate adhesive) is used when bonding the component to the vehicle.

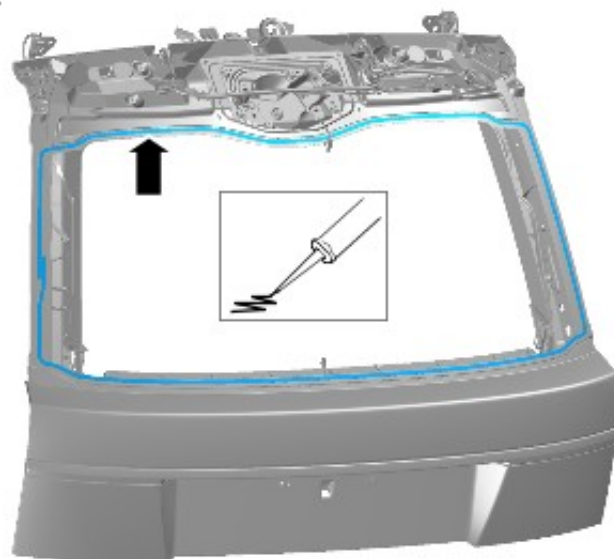

E148216


Prepare the window glass, window glass flange and trimmed PU adhesive in accordance with the instructions included with the PU

adhesive kit.

3.



4.

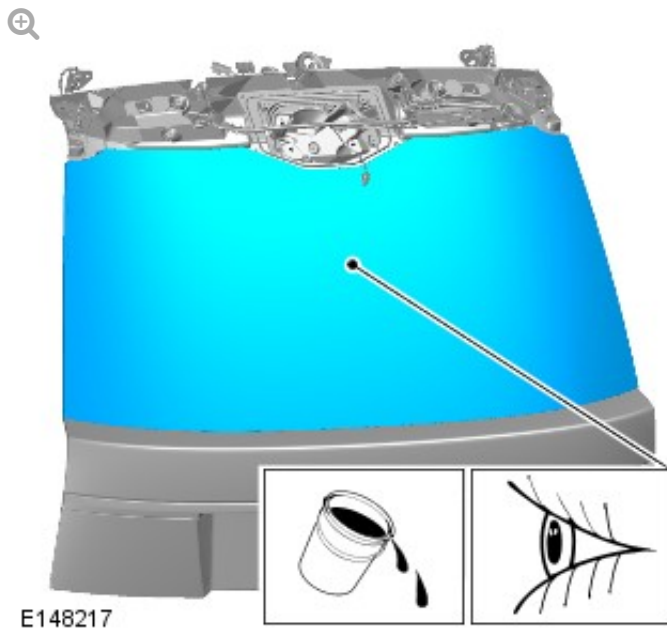

Test the sealer for leaks, apply additional sealer if necessary. If water is used, allow sealer to dry before testing. Spray water around the glass and check for leaks. Mark any area that leaks. Dry the glass and sealer then apply additional sealer.

5. To install, reverse the removal procedure.

