

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

PASSENGER DOOR WINDOW CONTROL SWITCH (G1551656)

REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- The ignition must be switched off.

1.


CAUTION:

Apply heatshrink or protective tape to the end of a suitable tool to protect the interior components.

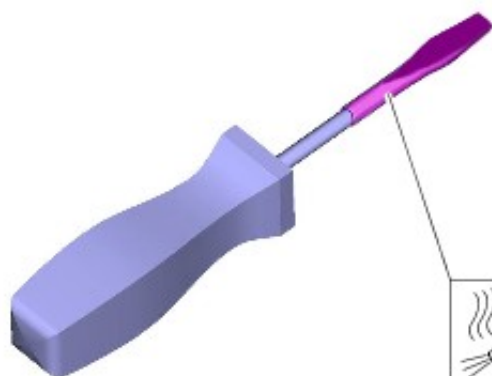

E92956


2.

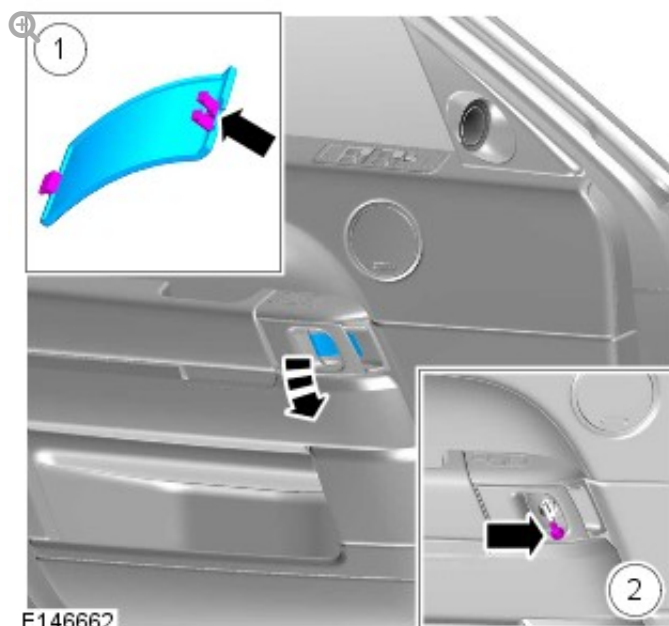

E146662

Torque: 1.5 Nm


3.

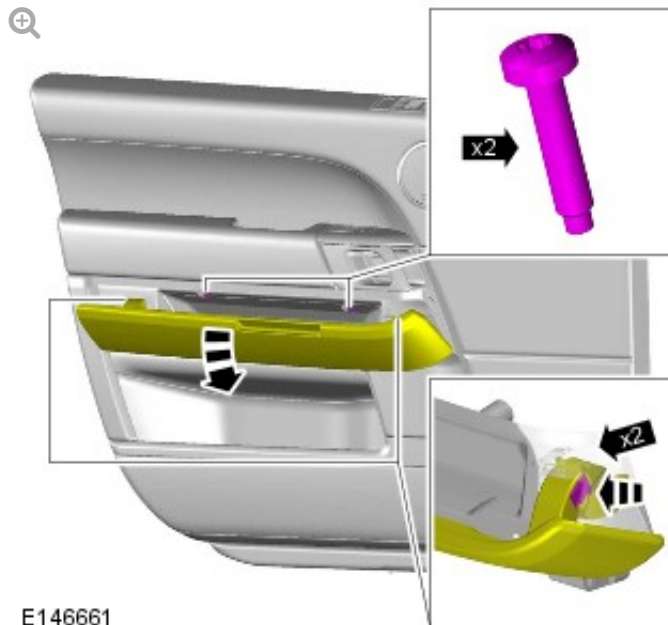

E146661

Torque: 3.5 Nm

4.

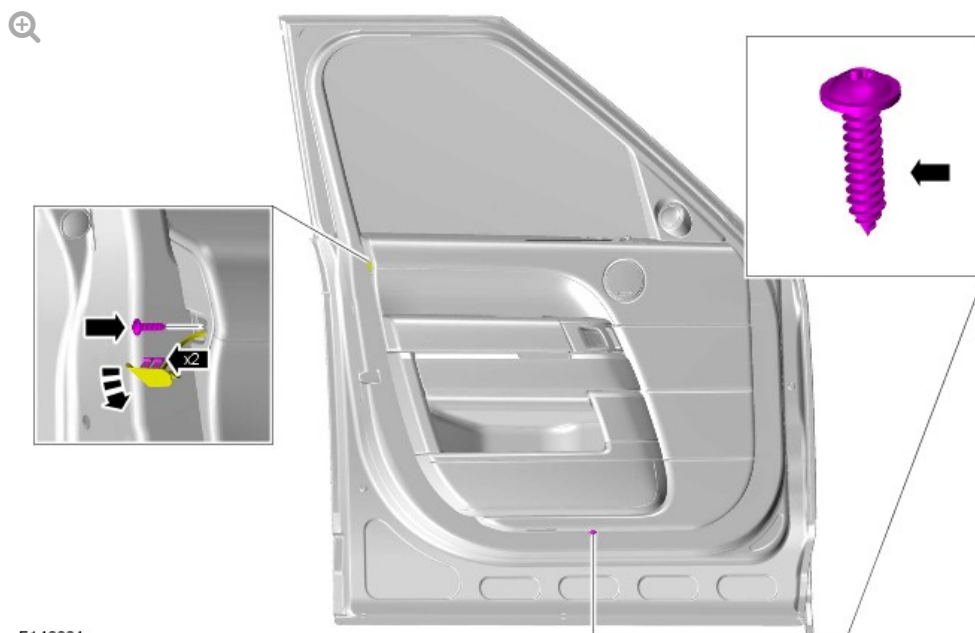


E146664

Torque:

Upper screw **1.5 Nm**


Lower screw **1 Nm**

5.

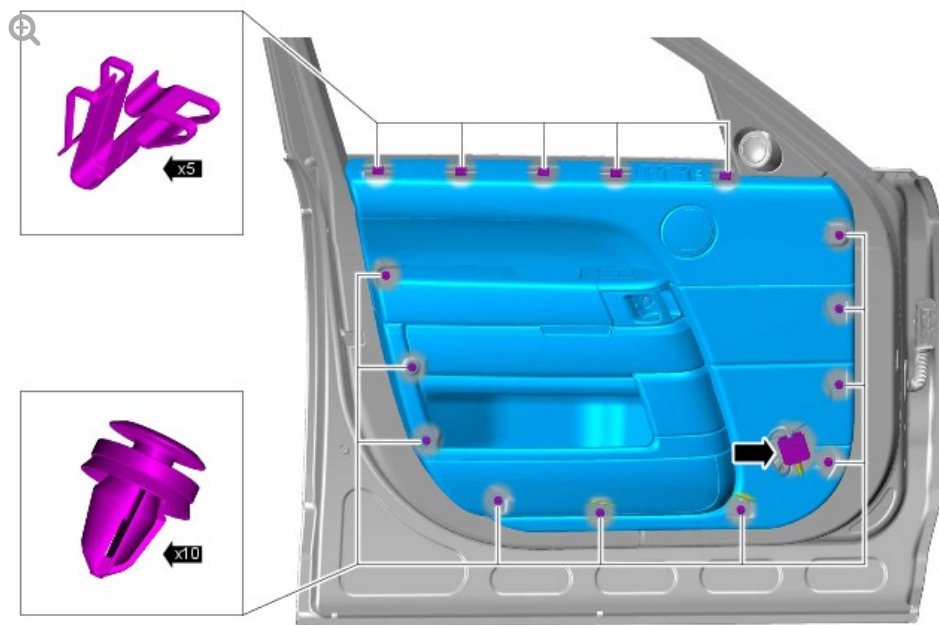


E146663

6.

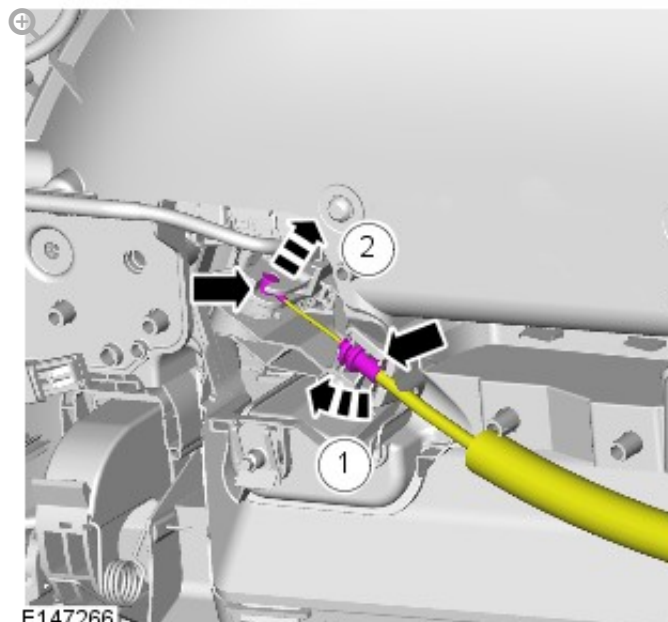


E147266

7.

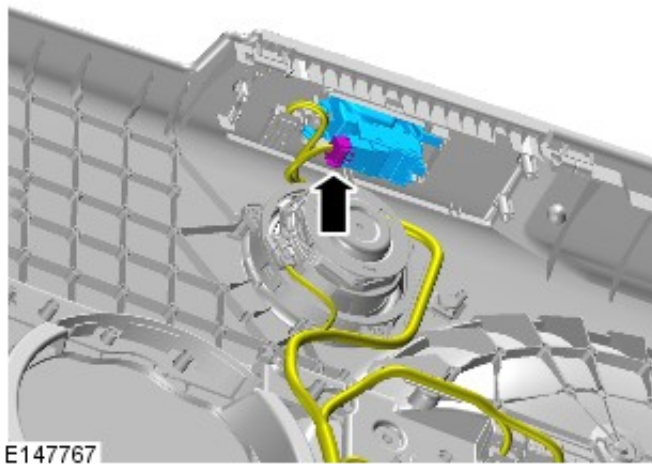

8.

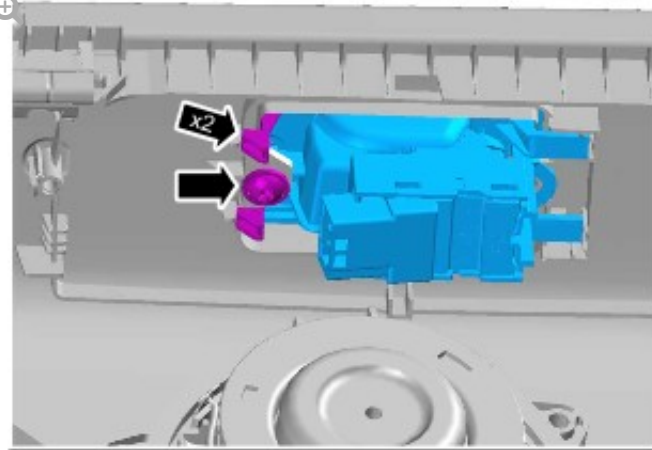

Torque: 1.5 Nm

INSTALLATION

1. To install, reverse the removal procedure.