

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

REAR GLASS ROOF PANEL

[G1551686]

REMOVAL AND INSTALLATION

REMOVAL


NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.

NOTE:


Repeat the procedure for the other side.

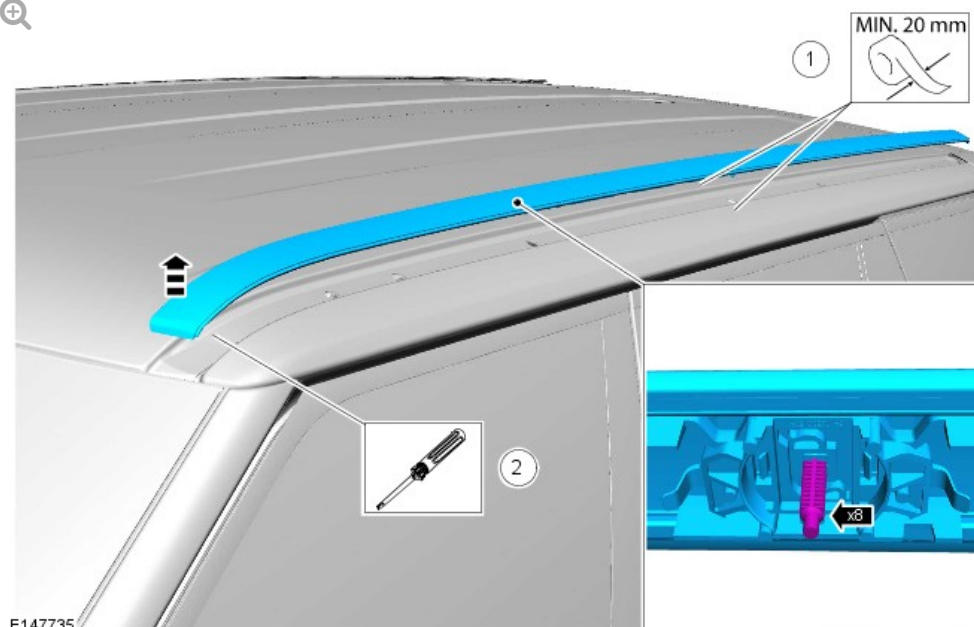

2.

NOTE:

Repeat the procedure for the other side.

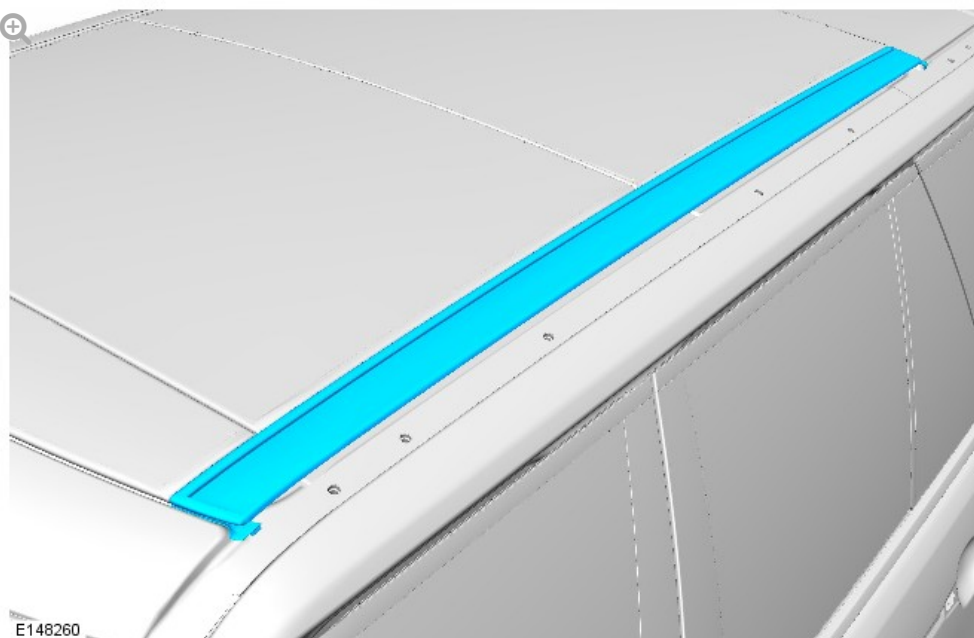

3.

NOTE:


The procedure must be carried out on both sides.

Refer to: [Roof Opening Panel Blind](#) (501-17 Roof Opening Panel, Removal and Installation).

4.

CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

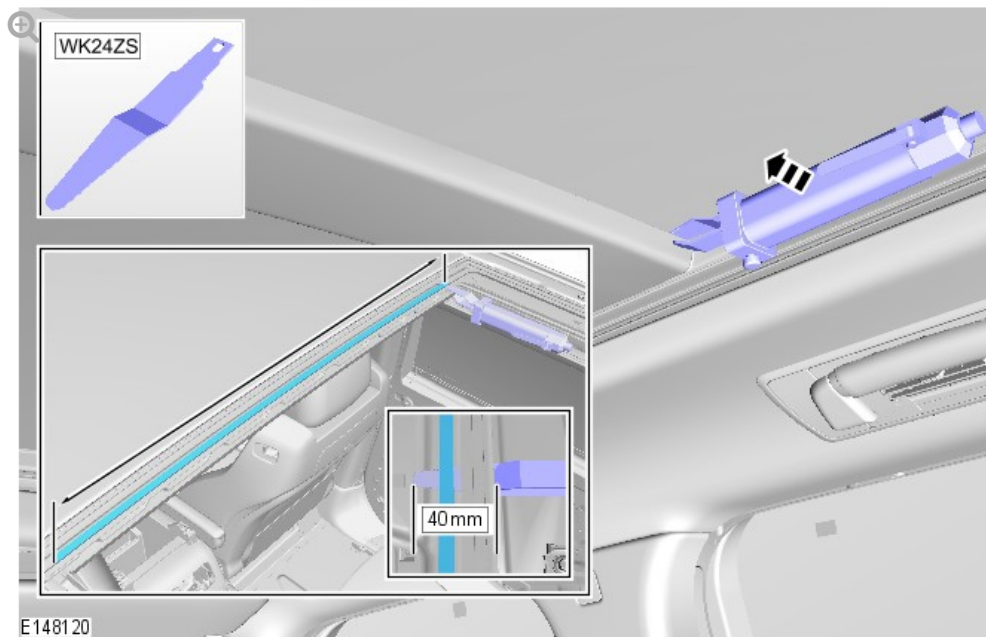


- Cut the sealant in the area shown, use a WK1S blade, and set the controller arm set to a 40mm cut depth.

5.

CAUTION:

Protect the surrounding paintwork and body from the movement of the cutting blades, using WK11PP.

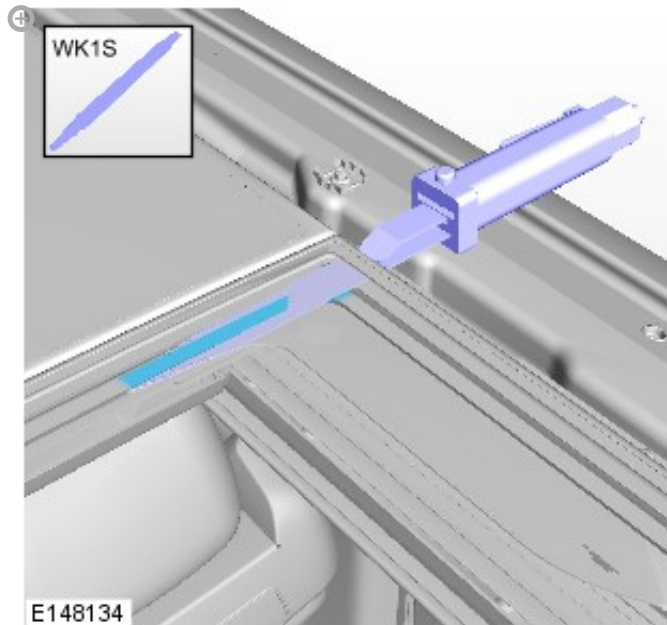


- Cut the sealant in the area shown, use a WK1S blade.

6.

CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

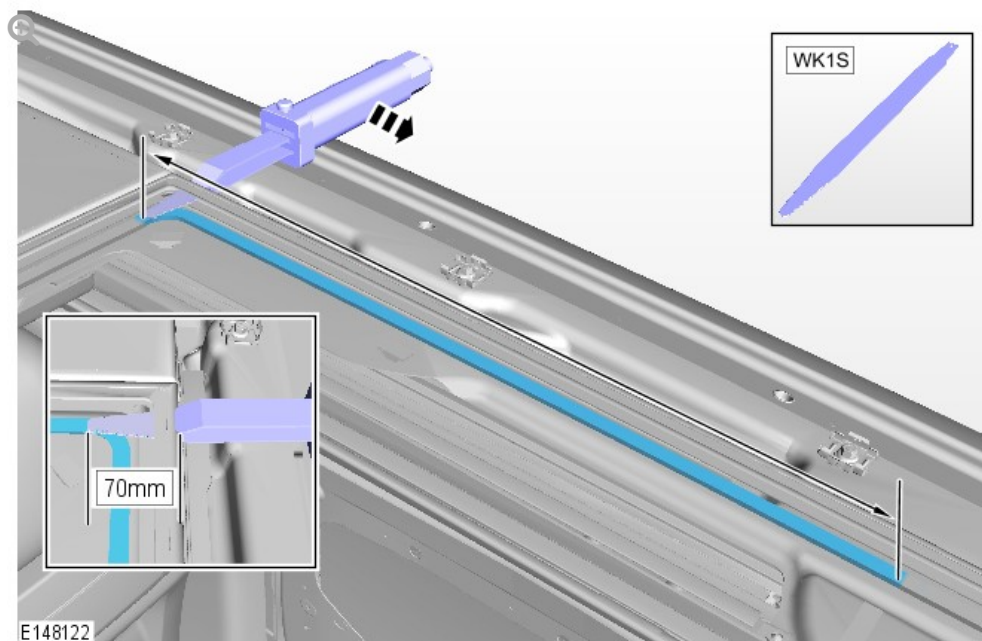


- Cut the sealant in the area shown, use a WK1S blade, and set the controller arm set to a 70mm cut depth.

7.


CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

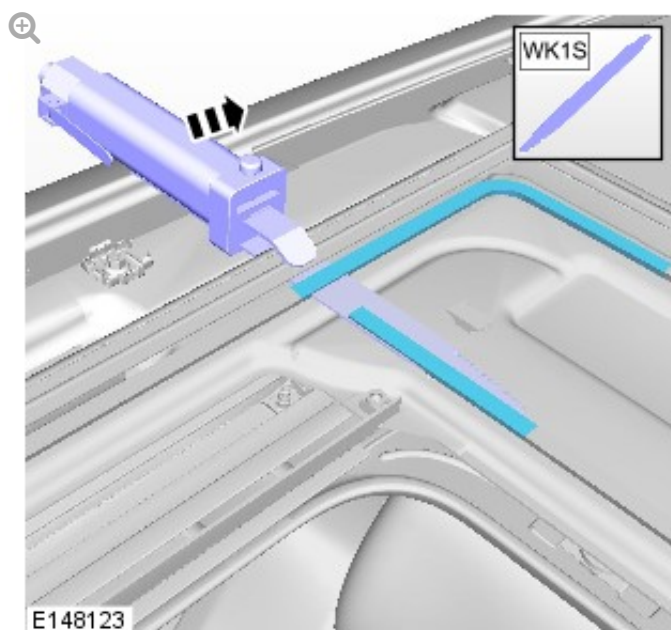


- Cut the sealant in the area shown, use a WK1S blade.

8.

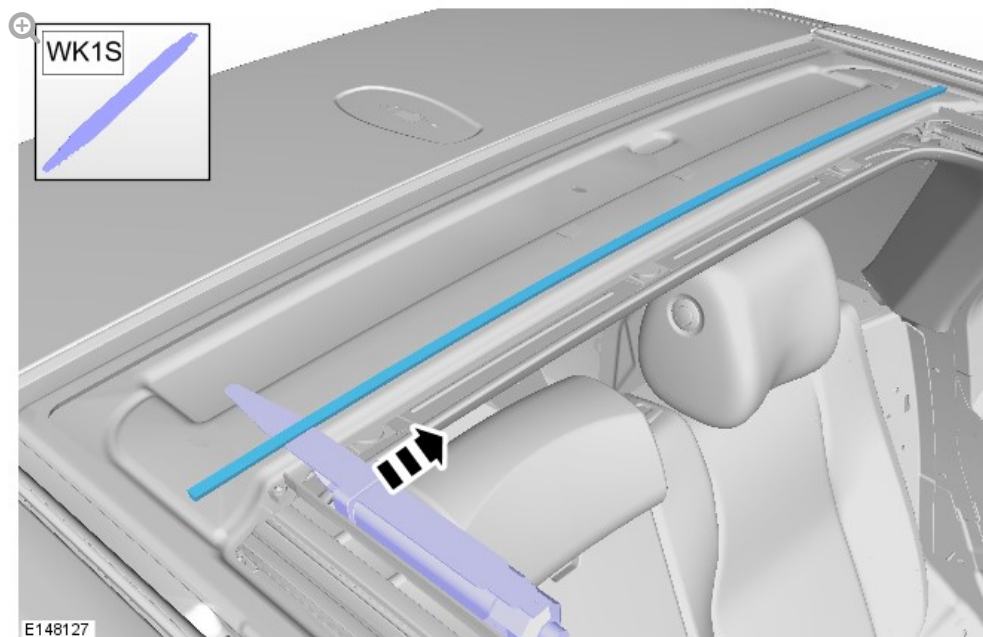

- Cut the sealant in the area shown, use a WK1S blade.

9.

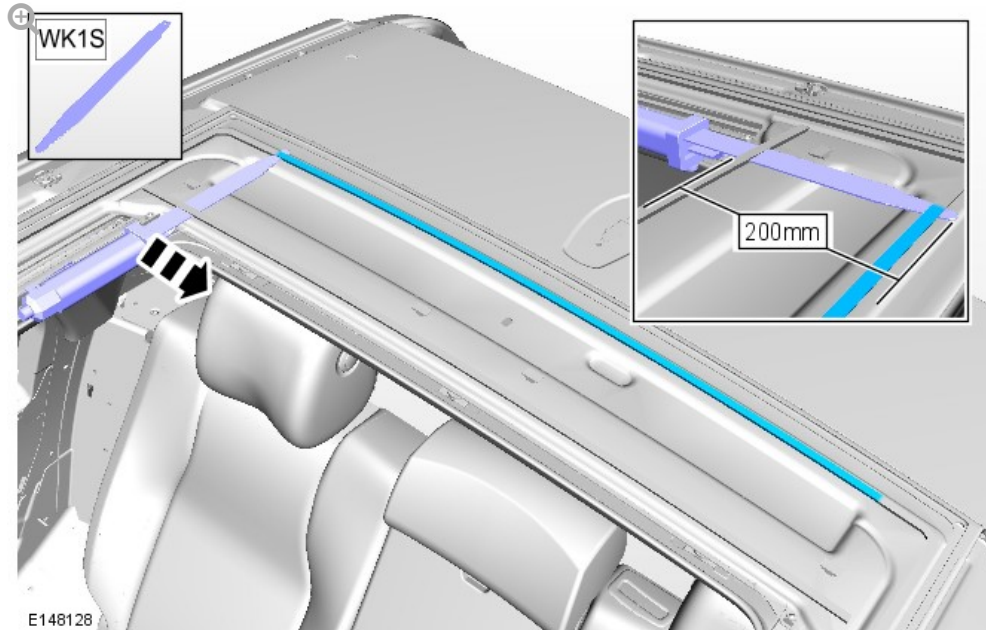


- Cut the sealant in the area shown, use a WK1S blade.
- Cut the sealant in the area shown, use a WK1S blade, and set the controller arm set to a 200mm cut depth.

10.

CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

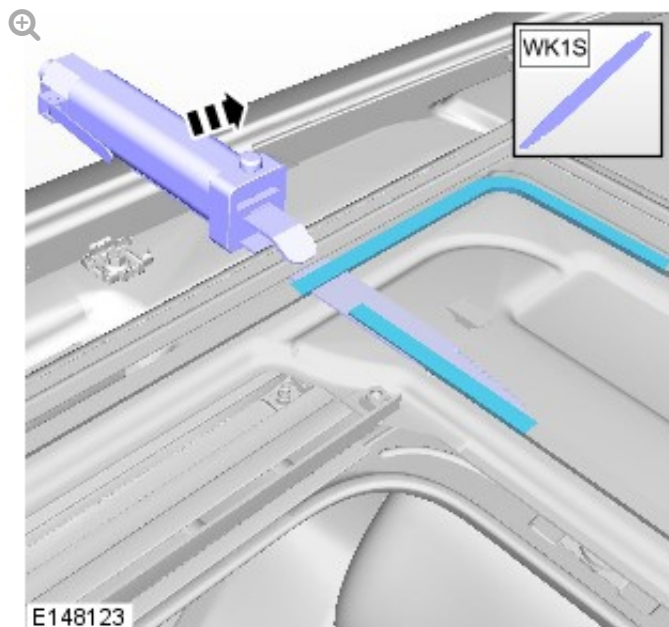


- Cut the sealant in the area shown, use a WK1S blade.

11.


CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

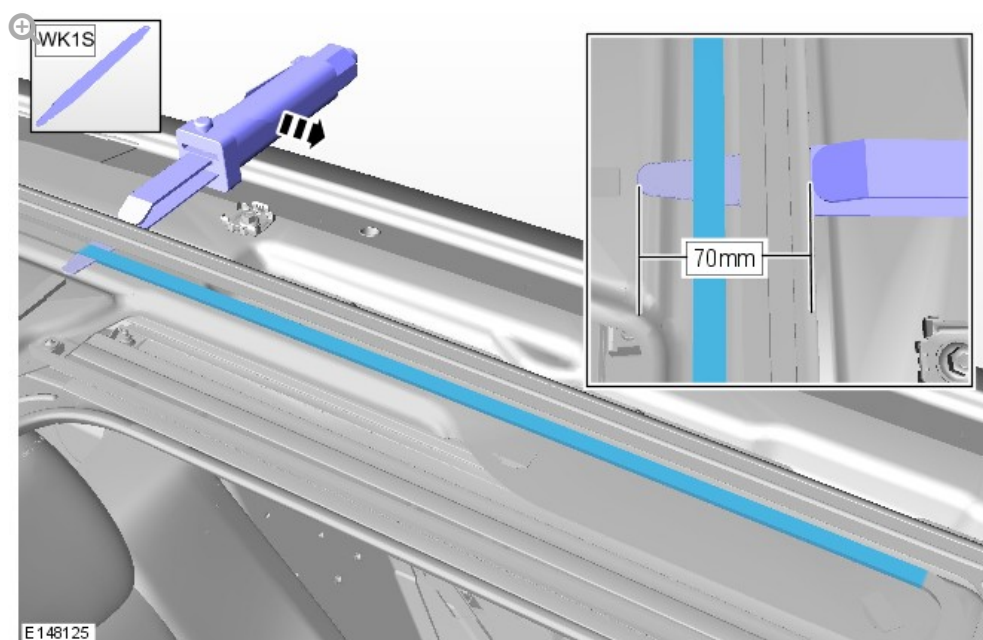

- Cut the sealant in the area shown, use a WK1S blade, and set the controller arm set to a 70mm cut depth.

12.

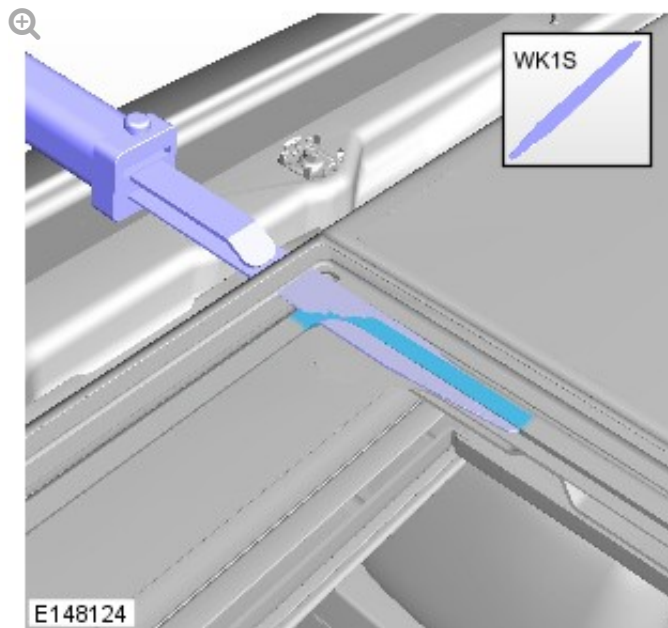


- Cut the sealant in the area shown, use a WK1S blade.

13.

NOTE:

This step requires the aid of another technician.

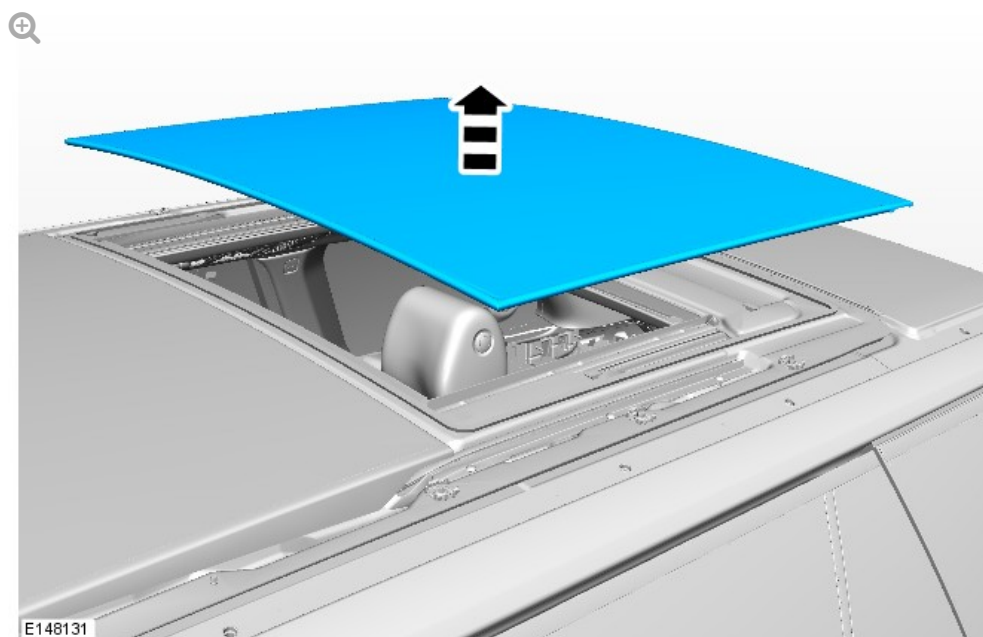


INSTALLATION

1.

CAUTIONS:


- Make sure that the mating faces are clean and free of foreign material.
- Correct preparation of body apertures “post painting” to ensure satisfactory glass adhesion, must be carried out in line with industry practise.
- Using a suitable spirit wipe clean the component surfaces.

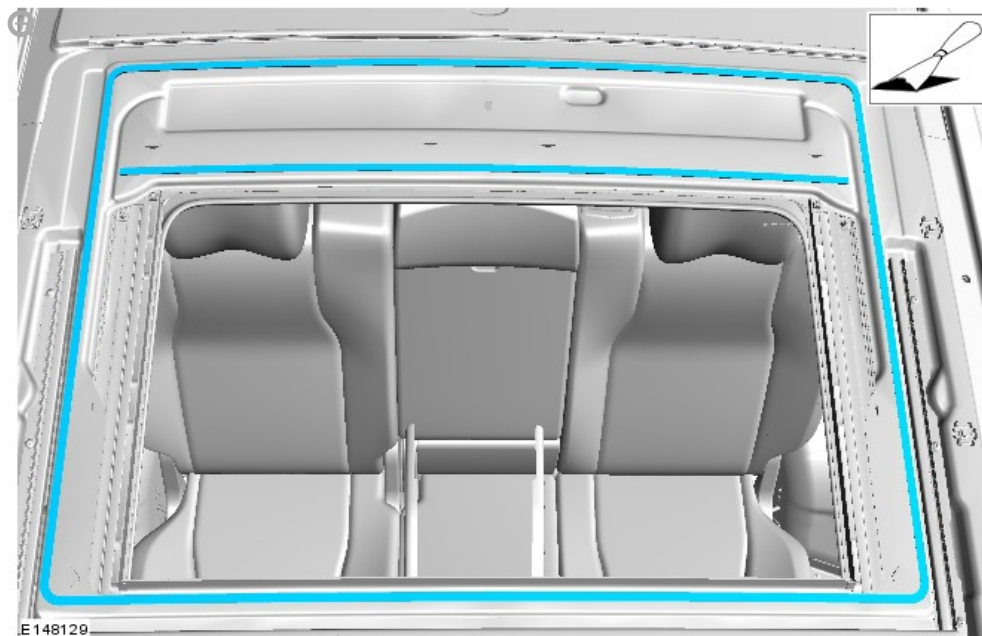

2.

NOTE:


Repeat the procedure for the other side.

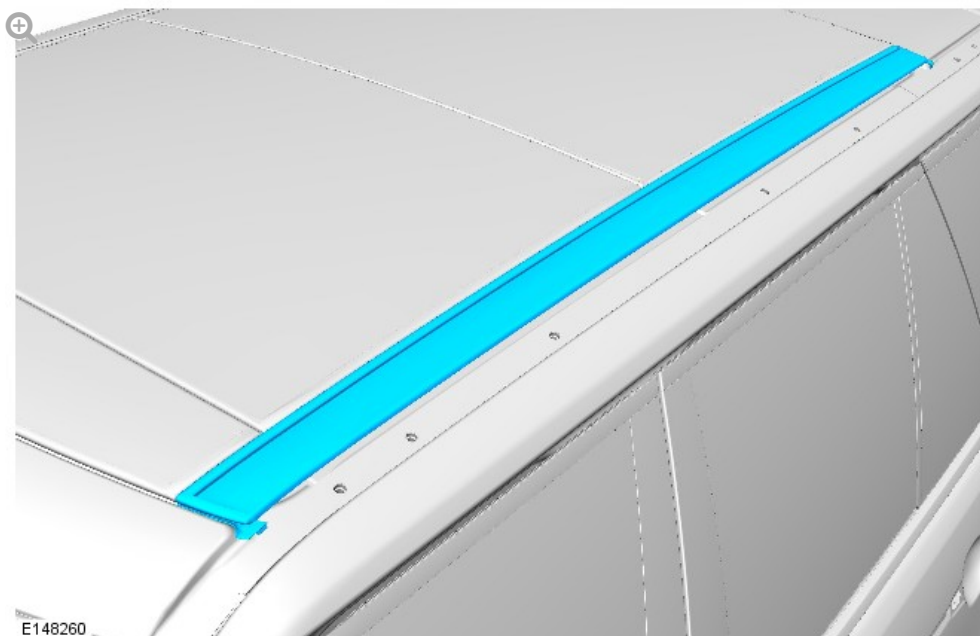

3.

CAUTIONS:


- Make sure that the mating faces are clean and free of foreign material.
- Using a suitable spirit wipe clean the component surfaces.

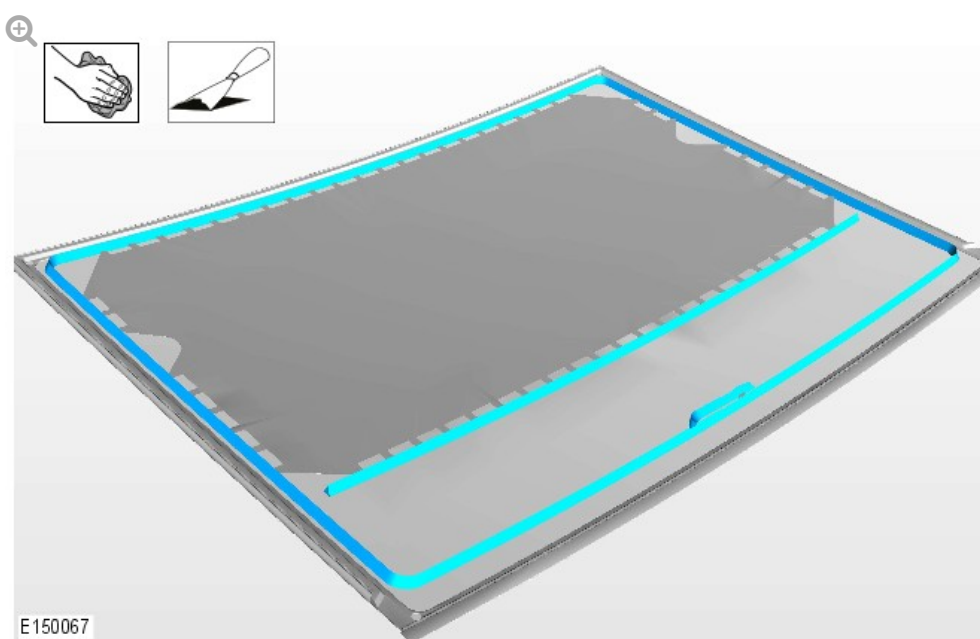

4.

NOTE:

Make sure that the sealant follows the orientation and dimensions as illustrated to allow correct installation of the component.

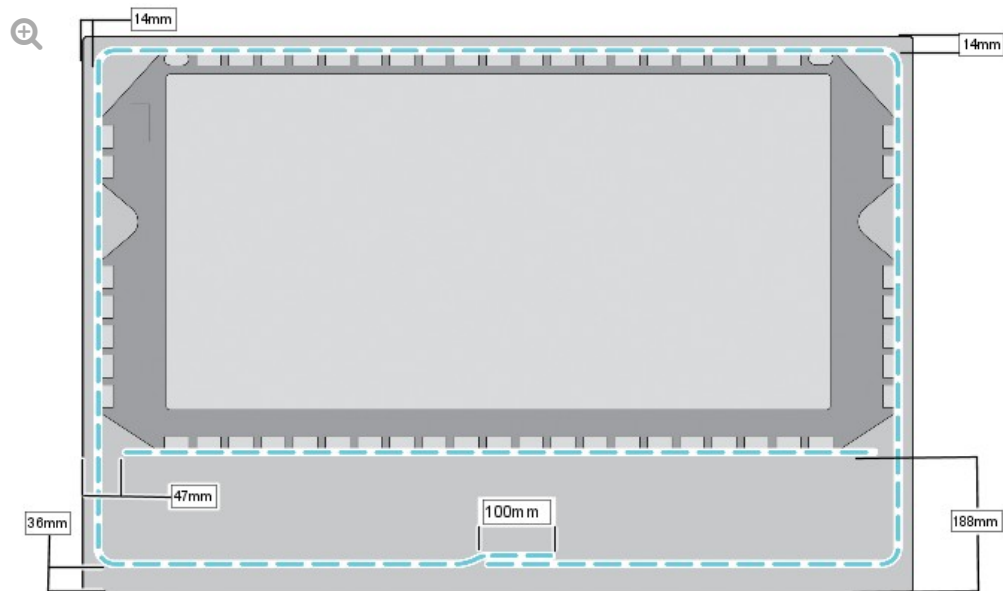


E155380

Prepare the window glass, window glass flange and trimmed PU adhesive in accordance with the instructions included with the PU adhesive kit.

5.


CAUTION:

Touching the adhesive surface will impair rebonding.

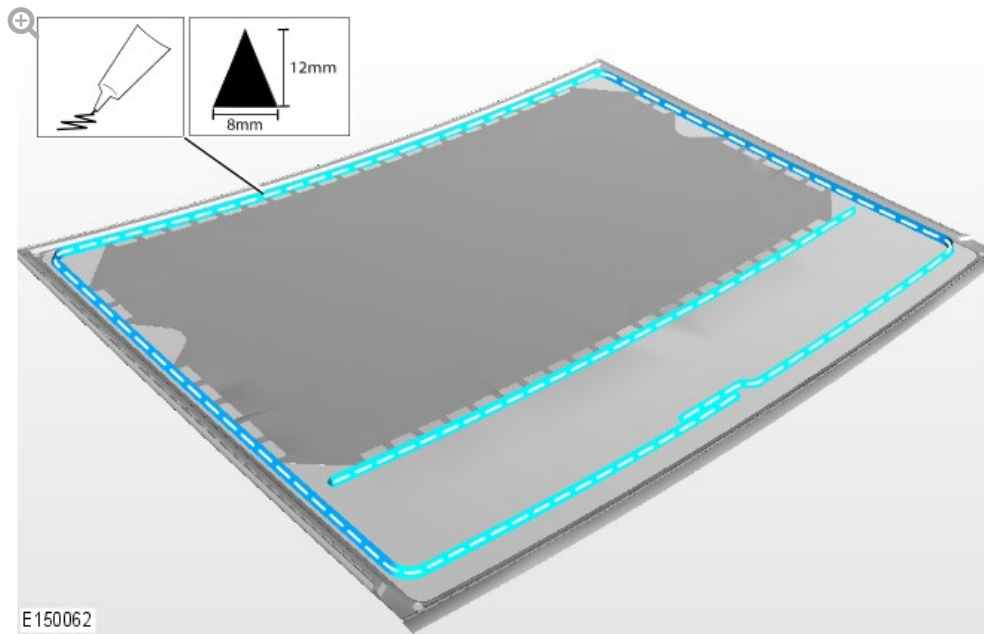

Apply the sealant with the indicated bead dimensions.

6.

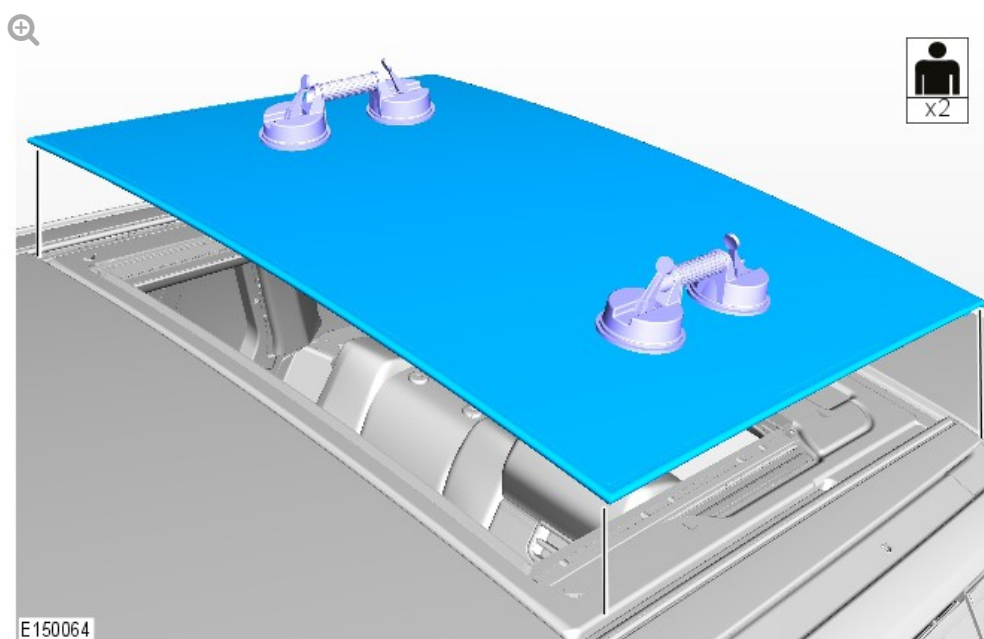


- Make sure the component is aligned with the measurements taken prior to removal. Failure to follow this instruction may result in damage to the glass panels during operation of the roof opening panel.
- Apply a downward pressure to the glass to achieve the correct glass position. Refer to step 6.
- Allow up to 1 hour, depending on temperature and humidity, to

allow the adhesive to set before continuing with the procedure.

7.

NOTE:


With the roof opening panel closed, check the alignment of the glass to the roof panel. The glass should be central in its aperture. Profile of rear glass panel to body: front edge, set flush or up to 1.0 mm (0.040") low; rear edge, set flush or up to 2.0 mm (0.080") high.

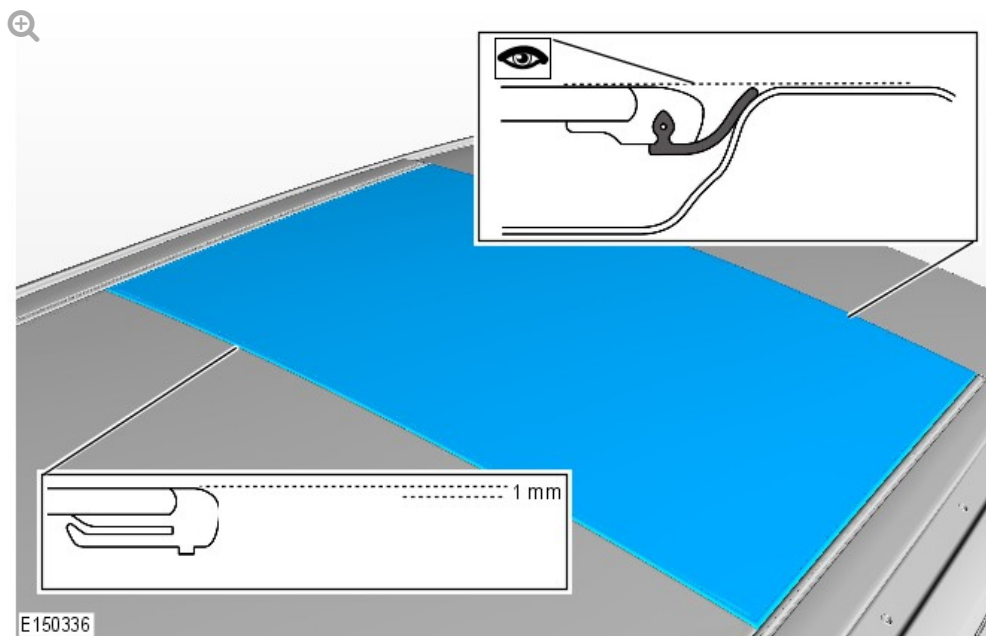

8.

NOTE:

Repeat the procedure for the other side.

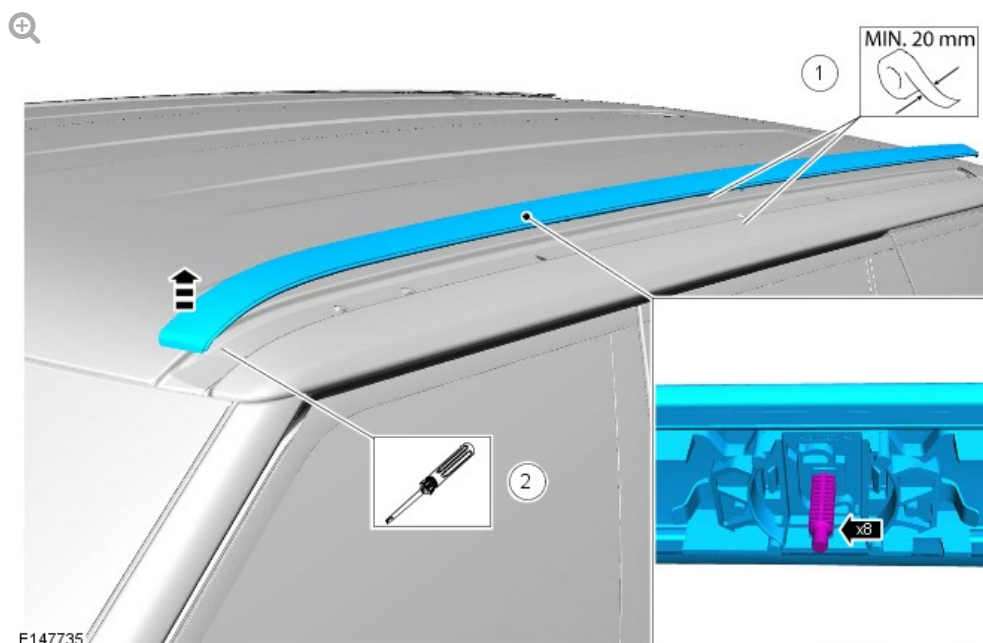

9. Refer to: [Roof Opening Panel Blind](#) (501-17 Roof Opening Panel, Removal and Installation).