

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

# REAR QUARTER WINDOW GLASS [G1549841]

REMOVAL AND INSTALLATION


---

---

## REMOVAL

1. Refer to: ['C' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Refer to: ['D' Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Refer to: [Rear Quarter Panel Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).


4.

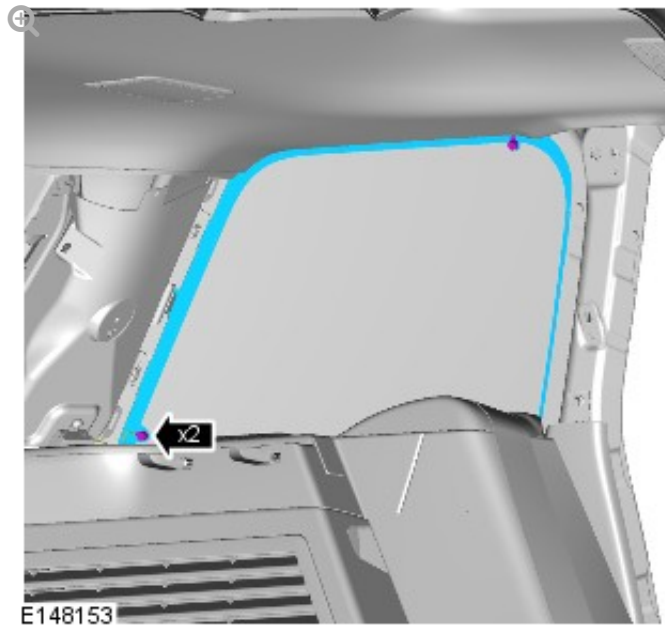

5.



### CAUTIONS:

- Protect the surrounding components.
- Protect the surrounding paintwork to avoid damage.

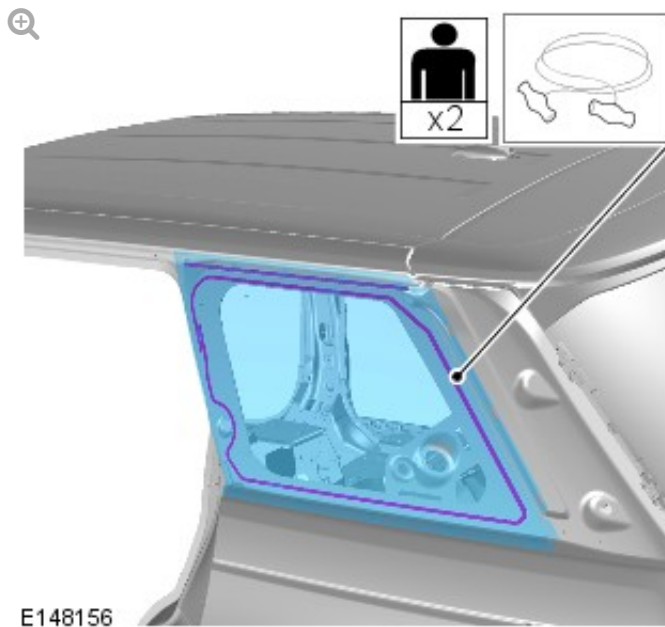

Pull glazing wire through windshield sealant to the inside of the vehicle.

6.

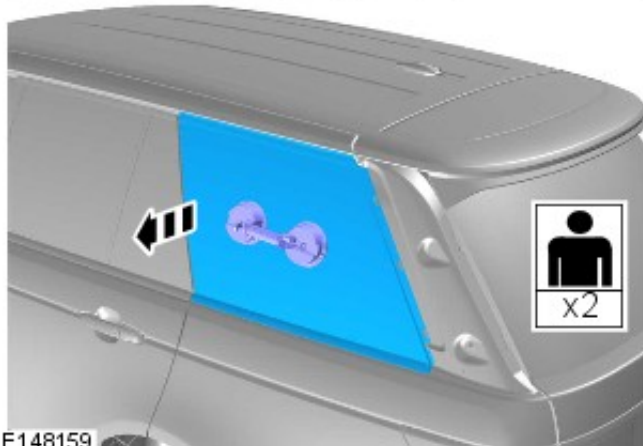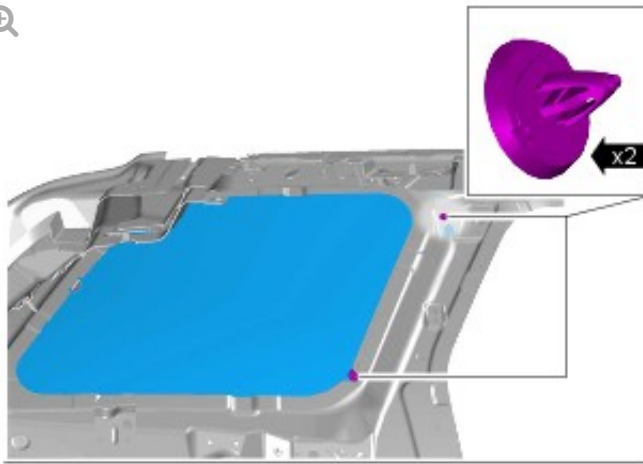


E148159

## INSTALLATION

1.

### CAUTIONS:


- Make sure that the mating faces are clean and free of foreign material.
- Correct preparation of body apertures "post painting" to ensure satisfactory glass adhesion, must be carried out in line with industry practise.

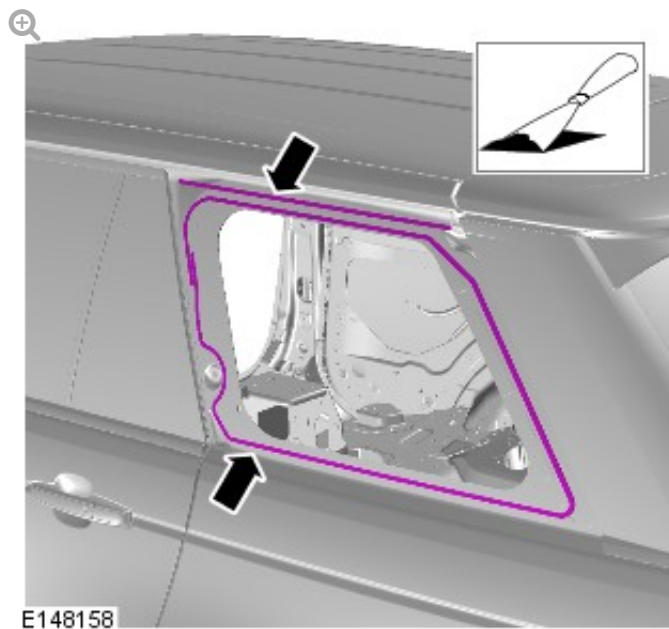

2.

#### NOTE:


Make sure that a Hi-modulus sealer (for example, Wurth Ultimate adhesive) is used when bonding the component to the vehicle.

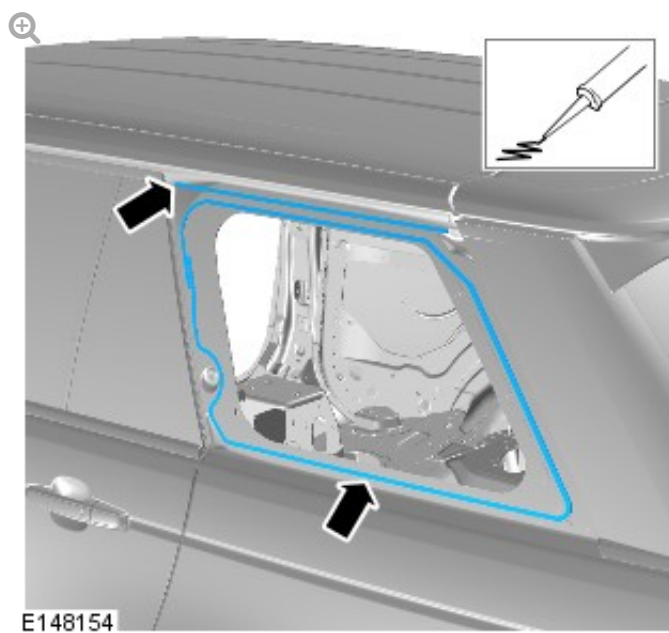


Prepare the window glass, window glass flange and trimmed PU adhesive in accordance with the instructions included with the PU

adhesive kit.

3.

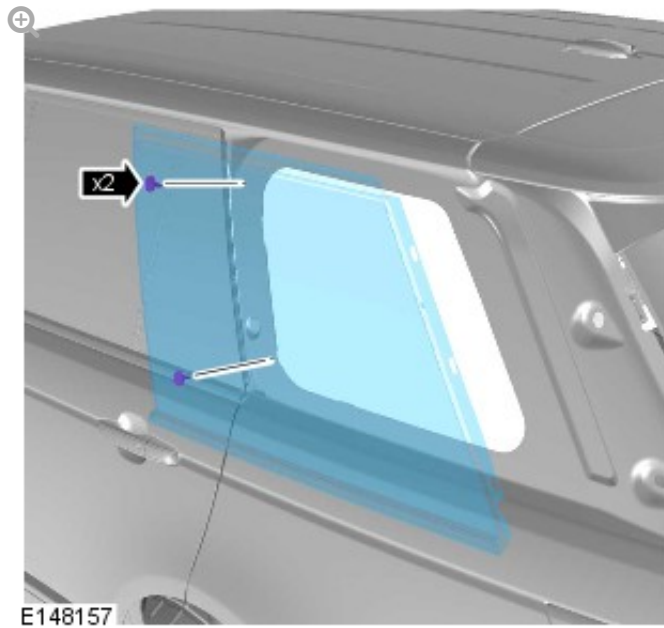

4.

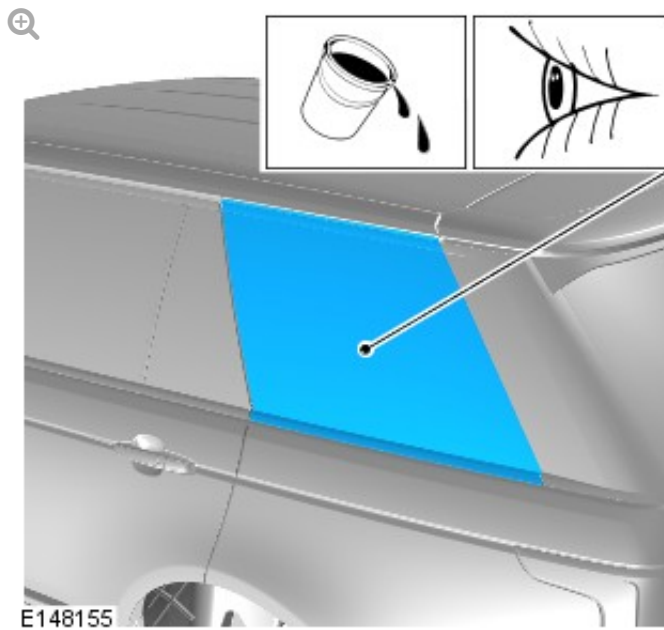

Test the sealer for leaks, apply additional sealer if necessary. If water is used, allow sealer to dry before testing. Spray water around the glass and check for leaks. Mark any area that leaks. Dry the glass and sealer then apply additional sealer.

5. To install, reverse the removal procedure.

