


2016.0 RANGE ROVER (LG), 501-14

HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS

DESCRIPTION AND OPERATION


COMPONENT LOCATION - SHEET 1 of 2

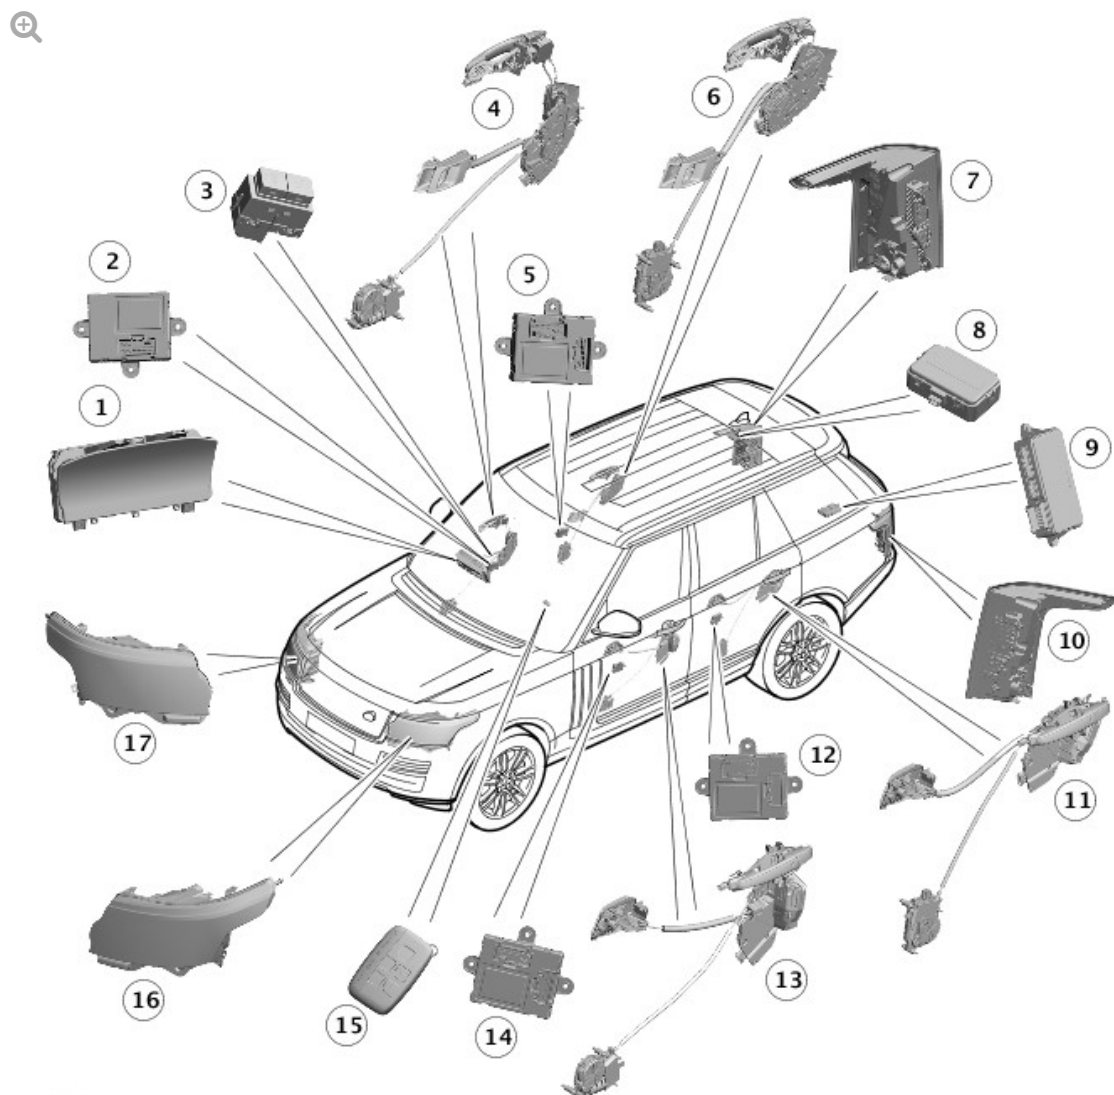

E149391

ITEM	DESCRIPTION
1	Instrument Cluster (IC)
2	Driver Door Module (DDM)
3	Driver door Central Locking (CL) switch
4	Driver door latch
5	Rear right door module
6	Rear right door latch
7	Right tail lamp assembly
8	Radio Frequency (RF) receiver
9	Keyless Vehicle Module (KVM)
10	Left tail lamp assembly
11	Rear left door latch
12	Rear left door module
13	Passenger door latch
14	Passenger Door Module (PDM)
15	Smart key
16	Left headlamp assembly
17	Right headlamp assembly

COMPONENT LOCATION - SHEET 2 of 2

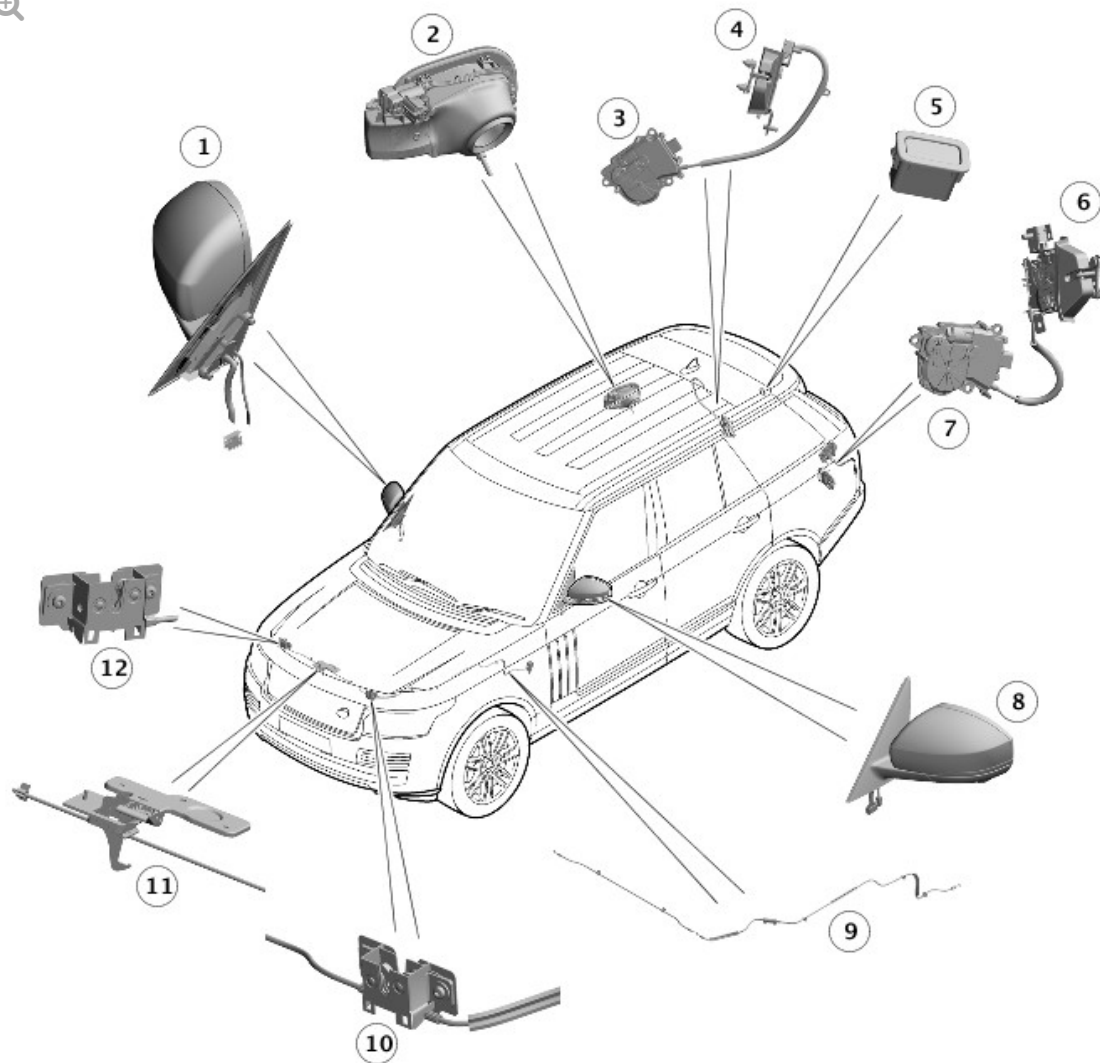

E149392

ITEM		DESCRIPTION
1		Driver door mirror
2		Fuel flap release motor
3		Right tailgate latch
4		Upper tailgate soft close motor
5		Tailgate release switch
6		Upper tailgate soft close motor
7		Right tailgate latch
8		Passenger door mirror
9		Hood release cable
10		Left hood latch

11	Hood safety latch guide
12	Right hood latch

OVERVIEW

All the vehicle hinged panels are secured by latches with mating strikers. The latches incorporate panel ajar switches that will inform the driver of an open access point.

The Central Locking (CL) system is operated by either the smart key or either front door casing lock/unlock switches. The CL system controls the automatic locking and unlocking of the vehicle entry points. The software used to control the CL system is incorporated within the Central Junction Box (CJB).

The CL system is also integrated with the interior lighting function. The interior lights and exterior mirror lamps are illuminated via the RF receiver and CJB following a valid unlock request from the smart key.


For additional information, refer to: [Interior Lighting](#) (417-02 Interior Lighting, Description and Operation).

If configured by the dealer, the exterior door mirror power fold function is also operated by the CL system.

A concealed mechanical door lock is provided in the driver door exterior handle, and is used to gain access to the vehicle if the battery is discharged or the CL system fails.

DESCRIPTION

DOOR LATCHES

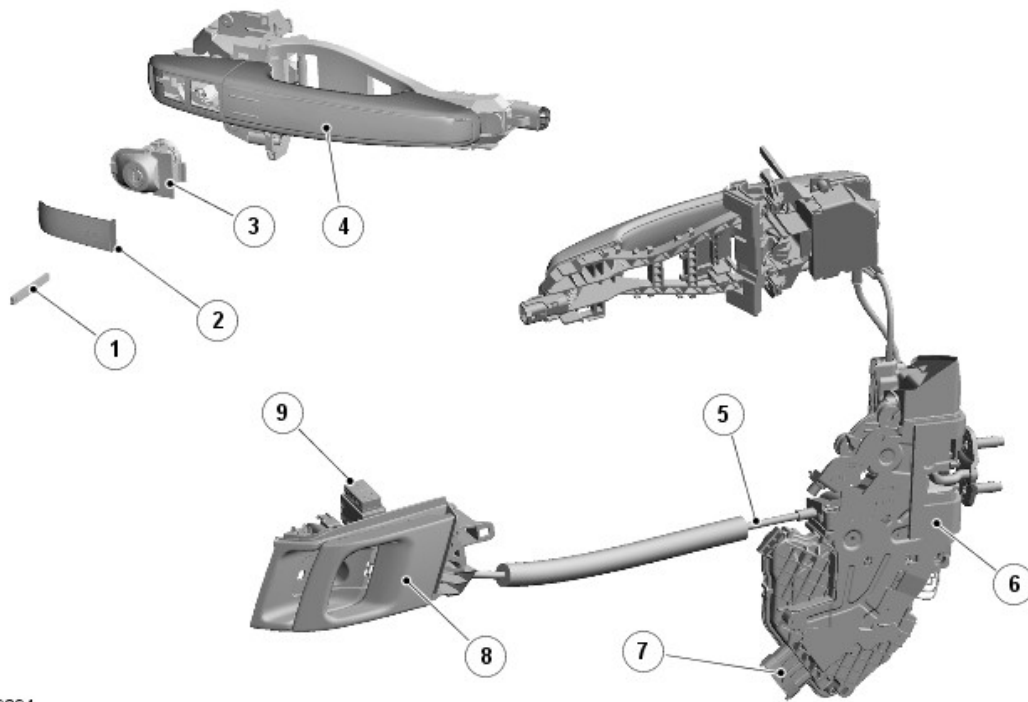

E149394

ITEM	DESCRIPTION
1	Emergency key blade
2	Driver door emergency key barrel cover
3	Emergency key barrel
4	Driver door exterior door handle
5	Door interior release cable
6	Door latch
7	Electrical connection to Driver Door Module (DDM)
8	Door interior release handle
9	Door casing lock/unlock switches

The door latches are installed at the rear edge of each door and engage with corresponding strikers mounted to the 'B' and 'C' pillars. Each interior and exterior door handle is connected with a release cable to the corresponding door latch. In the driver door a third release cable is connected between the door latch and the concealed emergency mechanical door lock.

Each door latch is a sealed unit that comprises the following:

- Lock motor
- Double lock motor (all except North American Specification (NAS) and Japan vehicles)
- Door ajar switch
- Lock status switch
- ESC switch (rear doors only)
- Power release motor (for passive entry only)
- Claw switch (for power cinch only)
- Door ajar switch
- Pawl switch (for power cinch only).

Each door latch incorporates either one or two electrical connectors depending upon the specification and provides the interface with the door control module, CJB and power cinch motor unit if fitted. The front door control modules are connected to the CJB on the medium speed CAN bus; the rear door control modules are connected via the LIN bus to the front door control modules.

When the latch engages with the striker plate a signal transmitted from the latch actuator mechanism to the door module confirms the latch is engaged. The module activates the closing motor to pull the latch closed through the last 6 mm of travel. A mechanical cable connection between the motor and latch assembly is used to complete the closing process.

The lock and double lock motors control the engagement of the door latches with the release cables to lock and unlock the vehicle. When the vehicle is locked, the lock motors disengage the release mechanism of the door latches from the exterior release cables. When the vehicle is double

locked, the double lock motors also disengage the release mechanism of the door latches from the interior release cables. When the vehicle is subsequently unlocked, the interior and exterior release cables are re-engaged with the door latches.

All door casings incorporate a lock/unlock switch packaged above the interior release handles. When a front door central lock/unlock switch is pressed, all the vehicle doors will centrally lock/unlock. When a rear door lock/unlock switch is pressed, only the activated rear door will lock/unlock.

Rear Door Child Locks

The rear door latches incorporate Electrical Child Safety (ECS) that provide additional rear occupancy safety. The ECS is activated using the front driver's door ESC child switch / rear glass inhibit switch located on the front driver's door casing. Activating the child lock to the locked condition will prevent both the rear door latches from releasing when the interior door handle is operated.

For further information on child locks, refer to the Owner's Handbook.

Door Ajar Switch

An ajar switch is installed in each door latch and is hardwired to the CJB. If the ignition is in power modes 4 (Accessory) or 6 (Ignition) and a door is opened or is not fully closed, the corresponding door ajar switch is opened to disconnect the ground from the CJB. A message is transmitted by the CJB via the medium speed CAN bus to the IC, to inform the driver that a door is ajar.

On vehicles with a low-line IC the door ajar symbol is illuminated.

For additional information, refer to: [Instrument Cluster](#) (413-01 Instrument Cluster, Description and Operation) /

[Instrument Cluster - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (413-01 Instrument Cluster, Description and Operation).

On vehicles with a high-line IC, the door ajar symbol is illuminated and a


message is also displayed in the message center. For additional information, refer to: (413-01 Instrument Cluster)

[Instrument Cluster](#) (Description and Operation),
[Instrument Cluster - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (Description and Operation).

The door ajar switch is also integrated with the vehicle security system and is used as the detection device for unauthorized vehicle entry.

For additional information, refer to: Anti-Theft - Active (419-01A, Description and Operation).

HOOD LATCHES

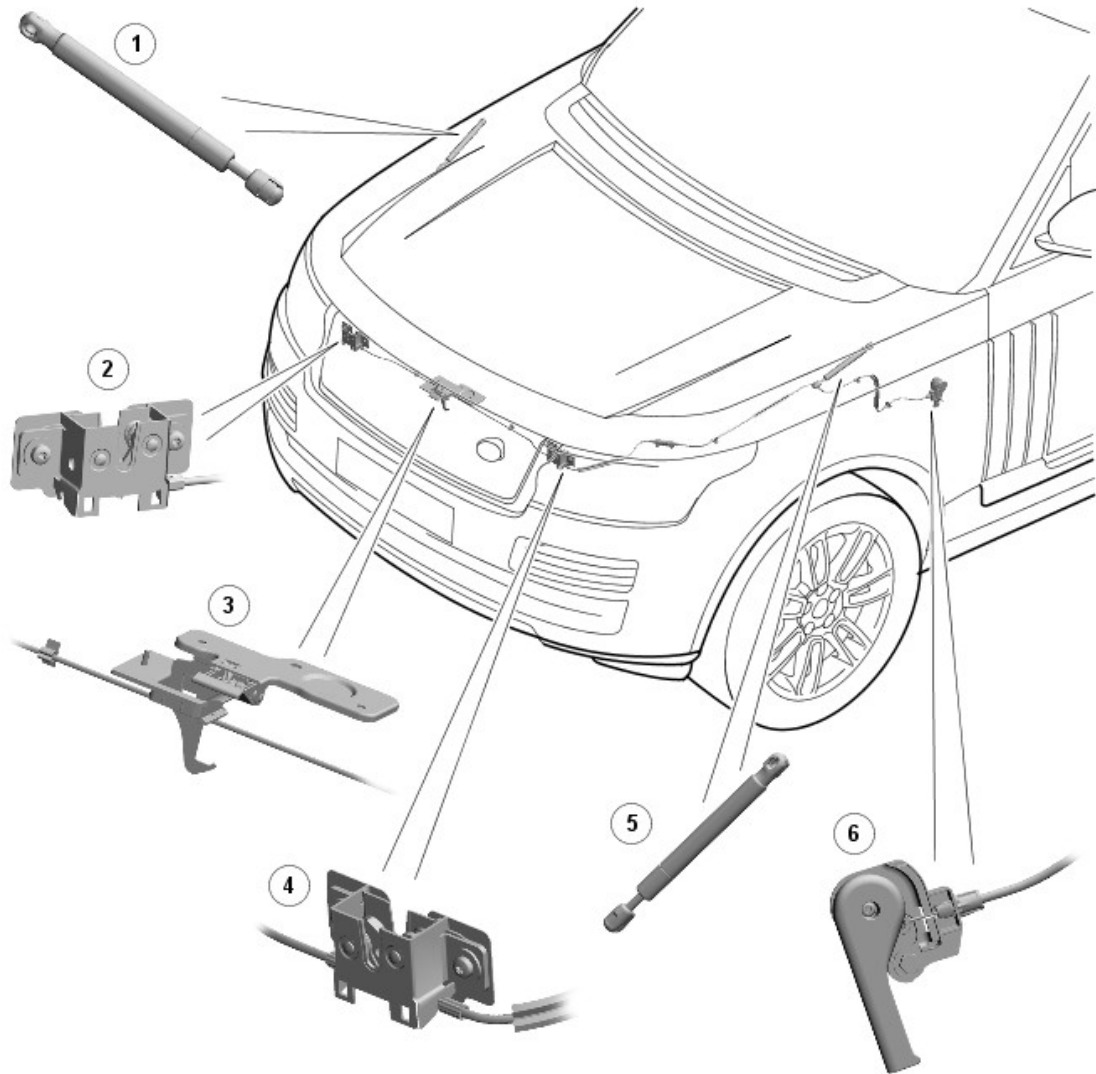

E149397

ITEM	DESCRIPTION
1	Right hood strut
2	Right hood latch
3	Hood safety latch guide
4	Left hood latch
5	Left hood strut
6	Hood release lever

The hood is secured in the closed position by 2 latches located on each side

of the hood latch panel. The hood release lever is located below the IP on the left 'A' pillar and is connected with a cable to the hood latches. Operation of the hood release lever will open the 2 hood latches and release the hood.

A mechanically operated safety latch guide is installed at the front center of the hood. The safety latch guide prevents the hood from fully opening in the event that the hood latches are open, and the vehicle is in motion. The safety latch guide is spring operated to bias the latch guide to the latched position, and is formed with a lever plate. The lever must be pressed to release the safety latch guide from the mating latch plate when the hood is to be fully opened.

Hood Ajar Switch

The left hood latch incorporates the hood ajar switch that is hardwired to the CJB. If the ignition is in power modes 4 (Accessory) or 6 (Ignition) and the hood is opened or is not fully closed, the hood ajar switch is opened to disconnect the ground from the CJB. A message is transmitted by the CJB via the medium speed CAN bus to the IC, to inform the driver that the hood is ajar.

On vehicles with a low-line instrument cluster the hood ajar symbol is illuminated.

For additional information, refer to: [Instrument Cluster](#) (413-01 Instrument Cluster, Description and Operation) /

[Instrument Cluster - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (413-01 Instrument Cluster, Description and Operation).


On vehicles with a high-line instrument cluster, the hood ajar symbol is illuminated and a message is also displayed in the message center. For additional information, refer to: (413-01 Instrument Cluster)

[Instrument Cluster](#) (Description and Operation),

[Instrument Cluster - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (Description and Operation).

The hood ajar switch is also integrated with the vehicle security system and is used as the detection device for unauthorized vehicle entry. For additional information, refer to: Anti-Theft - Active (419-01A, Description and Operation).


UPPER POWERED TAILGATE

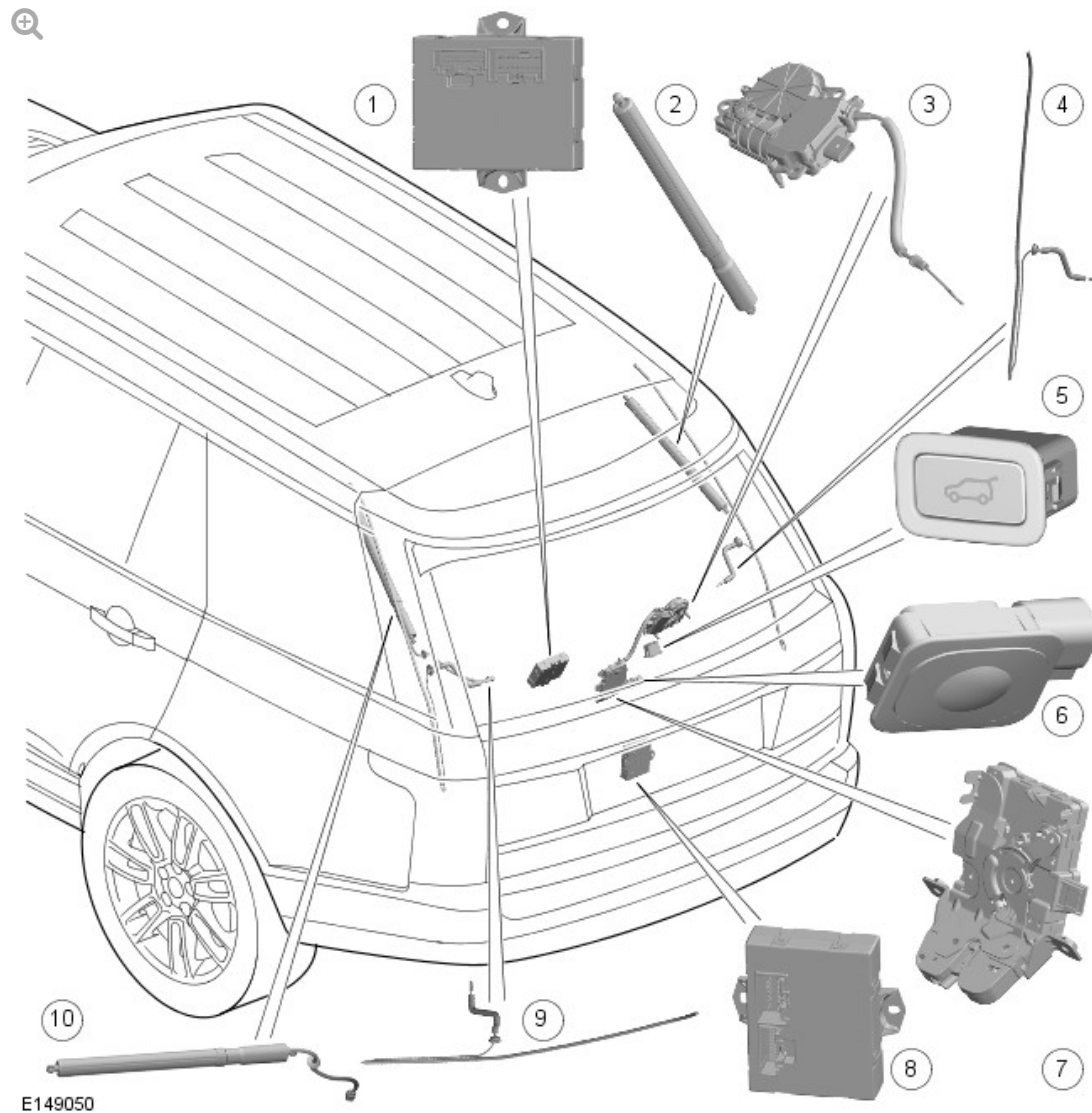

ITEM	DESCRIPTION
1	Upper Tailgate Control Module (UTCM)
2	Upper Right upper tailgate actuator
3	Upper tailgate soft close motor
4	Upper tailgate right anti-pinch strip
5	Tailgate global close switch

6	Upper tailgate open/close switch
7	Upper tailgate latch
8	Lower Tailgate Control Module (LTCM)
9	Upper tailgate left anti-pinch strip
10	Left upper tailgate actuator

LOWER POWERED TAILGATE

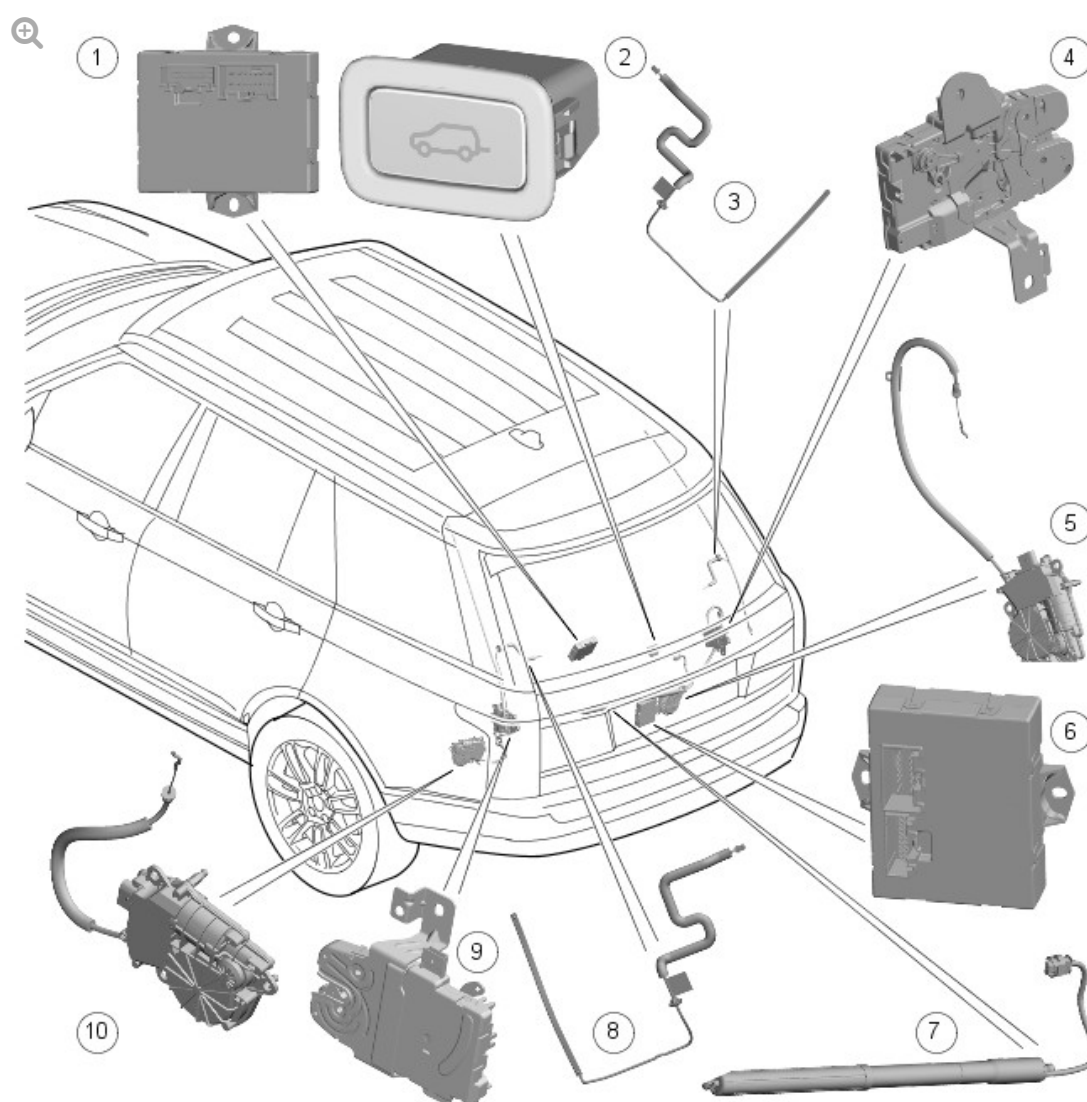

E149051

ITEM	DESCRIPTION
1	UTCM
2	Lower tailgate open/close switch

3	Lower tailgate right anti-pinch strip
4	Right lower tailgate latch
5	Right lower soft close actuator
6	LTCM
7	Lower tailgate actuator
8	Lower tailgate left anti-pinch strip
9	Left lower tailgate latch
10	Left lower soft close actuator

Upper and Lower Tailgates

The upper tailgate is constructed from lightweight plastic composites. The upper tailgate consists of three parts, which are bonded together to make the finished single piece tailgate. The outer body colored part is constructed from polypropylene, similar to a bumper construction to provide increased bump resistance.

The lower tailgate assembly is constructed from aluminum panels.

Depending on vehicle specification the tailgates are offered with either:

- manual opening and closing, or with a
- powered opening and closing function.

The upper powered tailgate is opened and closed by two electrically driven tailgate actuators mounted in place of the gas struts as used on the manual tailgate. The lower powered tailgate is opened and closed by one tailgate actuator also mounted in place of the gas strut.

The tailgate actuator assembly has ball joints at either end allowing it to articulate between the fixed mounts on the vehicle. The nominal opening and closing time of the system is 5 seconds (+/-2.0 seconds).

The tailgates operate using electronic latches with the addition of a soft-

close closing motors to pull the latch closed for the last 6 mm of travel (soft close). The upper latches and soft closing motor are located in the upper tailgate. The lower latch and soft closing motors are located in the lower loadspace. The closing motors pull the latches closed at the end of the tailgates' travel, once the latches' secondary switch is reached.

The lower tailgate latches are mounted at the left and right sides of the tailgate interior body panel and are fully electrically operated units. The tailgate latches are incorporating the tailgate lock motor, and are receiving a power supply via a hardwired connection from the CJB. A release microswitch is housed within a touch-pad that is located on the underside of the tailgate exterior handle.

The tailgate latches are released by the CJB when the vehicle is stationary and either the smart key switch is pressed, or the exterior handle touch-pad is applied. They can also be released by the switch in the cabin (with the handle which has the tailgate symbol on it).

For additional information, refer to: [Body Closures](#) (501-03 Body Closures, Description and Operation).

Tailgate Ajar Switch

The tailgate latches are also incorporating the tailgate ajar switch that is hardwired to the CJB. If the ignition is in power modes 4 (Accessory) or 6 (Ignition) and the tailgate is opened or is not fully closed, the tailgate ajar switch is opened to disconnect the ground from the CJB. A message is transmitted by the CJB via the medium speed CAN bus to the IC, to inform the driver that the tailgate is ajar.

On vehicles with a low-line instrument cluster the tailgate ajar symbol is illuminated.

For additional information, refer to: [Instrument Cluster](#) (413-01 Instrument Cluster, Description and Operation) /

[Instrument Cluster - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (413-01 Instrument Cluster, Description and Operation).

On vehicles with a high-line instrument cluster, the tailgate ajar symbol is illuminated and a message is also displayed in the message center. For additional information, refer to: (413-01 Instrument Cluster)


[Instrument Cluster](#) (Description and Operation),

[Instrument Cluster - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (Description and Operation).

The tailgate ajar switch is also integrated with the vehicle security system and is used as the detection device for unauthorized vehicle entry.

For additional information, refer to: Anti-Theft - Active (419-01A, Description and Operation).

FUEL FILLER DOOR ACTUATOR

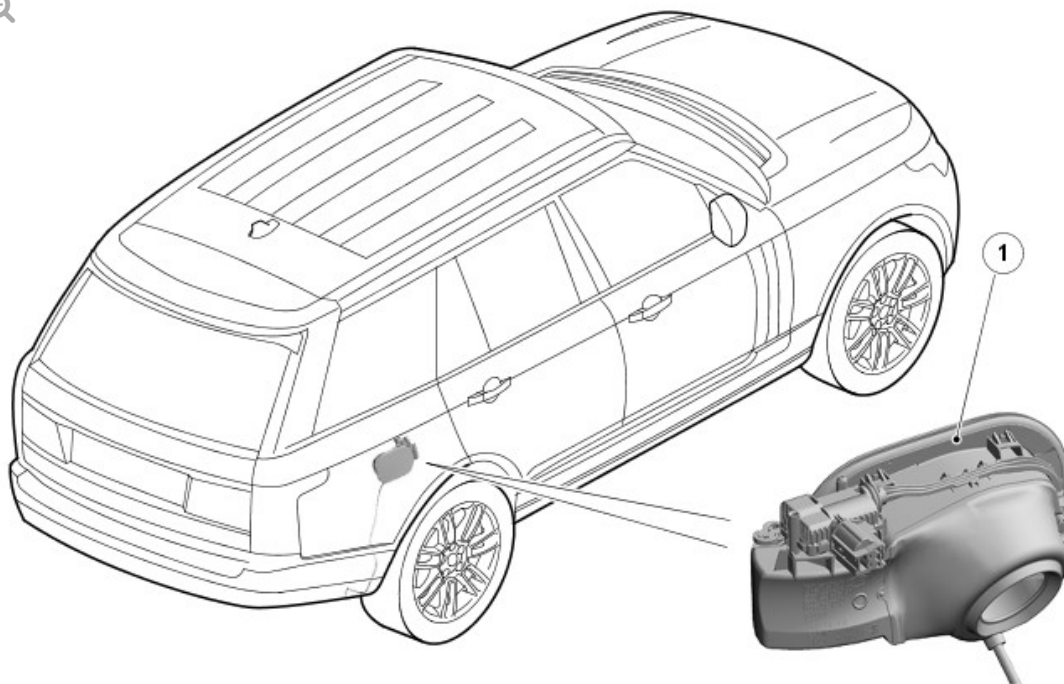

E149396

The fuel filler door is electrically locked and unlocked with an actuator and plastic pin. The actuator is located behind the fuel filler door housing, and operates the pin to engage or release a spigot on the door mounting hinge arm.

NOTE:

Locking feature is not available on NAS spec cars.


The fuel filler door actuator is hardwired to the CJB and is operated by the vehicle CL system. The CJB reverses the polarity of the actuator power and ground connections, allowing the pin to move in both directions for locking and unlocking. When unlocked, the fuel filler door is manually opened to gain access to the fuel tank filler cap.

CENTRAL LOCKING SYSTEM CONTROLS

The CL system provides the driver with control over the locking and unlocking of the vehicle entry points, from inside or outside the vehicle. Manual operation of the CL system is achieved using the following:

- Smart key and RF receiver
- Front door CL switch
- IP CL switches.

Smart Key and Emergency Mechanical Door Lock

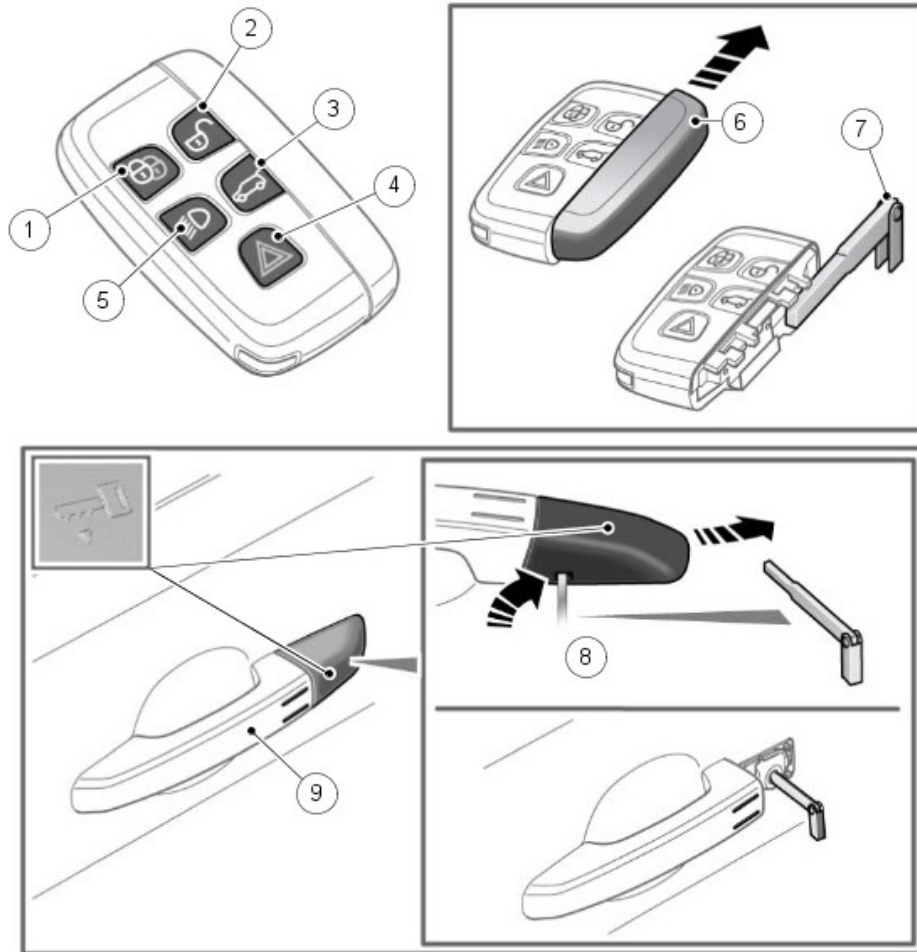

E134623

ITEM	DESCRIPTION
1	Vehicle lock switch
2	Vehicle unlock switch
3	Tailgate unlock switch
4	Panic alarm switch
5	Headlamp delay function switch
6	Emergency key blade cover
7	Emergency key blade
8	Emergency key barrel
9	Front door handle

The smart key contains an emergency key blade, concealed in the key fob. The driver door exterior handle incorporates a mechanical operated door lock that is concealed behind a removable plastic cover. The door lock allows the door to be mechanically unlocked and locked using the emergency key blade in the event that the remote CL operation fails, or a vehicle power failure occurs.

When the mechanical door lock is used the CL system will not operate, and if already armed the vehicle alarm will sound when the door is opened. The vehicle is not able to be double locked, or the alarm system armed using the emergency key blade.

The smart key contains a Printed Circuit Board (PCB), transponder and a battery.

The smart key contains an emergency key blade, concealed in the key fob. The emergency key blade is used to access the vehicle through the driver door if the CL system fails. The emergency key blade is also used to disable the passenger airbag.

For additional information, refer to: [Airbag and Safety Belt Pretensioner Supplemental Restraint System](#) (501-20B Supplemental Restraint System, Description and Operation).

The smart key is identical for all vehicle specifications, but differs in the preset frequency and power that the smart key operates. The smart key for each vehicle specification is identified by a suffix change to the base part number as follows:

Part No. Suffix	Operating Frequency	Vehicle Specification
A#	315 MHz	NAS, Japan and Korea
B#	433 MHz	Europe and ROW

Each smart key features a unique identification code that is programmed within the integral transponder. The RF signal produced by the smart key contains the unique identification code and also a rolling code. During

vehicle production, the unique identification codes of the valid smart keys are programmed into the KVM, and the rolling codes are also synchronized with the KVM.

When the smart key is operated, the KVM checks the unique identification and rolling code. The KVM will only respond if the RF signal produced is from a valid smart key for the vehicle.

For additional information, refer to: Anti-Theft - Active (419-01A, Description and Operation).

A total of 8 'slots' are available in the KVM software to allow for replacement and the addition of smart keys. In service, the Land Rover approved diagnostic system may be used to communicate with the KVM for the following:

- Identification of smart key allocation within the KVM.
- Enabling of new smart keys
- Disabling of existing smart keys.

If the smart key rolling code loses synchronization with the KVM, the smart key functions will not operate. Synchronization between the smart key and KVM is restored automatically when switches are pressed.

Additional switches are located on the smart key to provide convenience operation of the tailgate release, headlamp delay and panic alarm functions.

RF Receiver



E149398

The RF receiver is installed on the headlining on center between pillar 'C' and 'D'. The receiver provides functionality for the remote CL system.

NOTE:

Tire Pressure Monitoring System (TPMS) is provided by a separate receiver


The RF receiver is identical for all vehicle specifications, but differs in the preset frequency that the receiver operates. The RF receiver for each vehicle specification is identified by a suffix change to the base part number as follows:

Part No. Suffix	Operating Frequency	Vehicle Specification
A#	315 MHz	NAS, Japan and Korea
B#	433 MHz	Europe and ROW

The RF receiver converts the signals transmitted by the smart key into digital messages, and then transmits the message via the ISO9141 bus to the KVM.

A permanent power feed is supplied to the RF receiver by the CJB.

Front Door Central Locking Switch

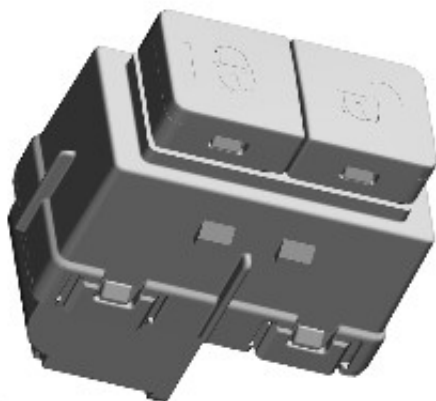

E149395

Both the front door casing interior lock/unlock switches will activate the CL function. When a front door CL switch is pressed, all the vehicle doors will centrally lock/unlock.

When a front door casing lock/unlock switch is pressed, the door control module on the activated door transmits the central lock/unlock request to the CJB. The CJB then transmits the central lock/unlock command to all the vehicle door control modules to lock/unlock all the vehicle doors.

The CL feature using the front door casing lock/unlock switch is inhibited if either of the front doors is ajar. If a front door is ajar when a front door CL switch is pressed to lock the doors, the doors will lock and then instantly unlock.

When a rear door casing lock/unlock switch is pressed, the locking switch will only lock/unlock the activated rear door.

SYSTEM OPERATION

Central Locking System - Manual Operation

The CL system provides the option of 2 or 3 manual locking modes, dependent on the vehicle specification. The locking modes are activated using either front door casing lock/unlock switches, exterior door handle lock switch (if passive entry is fitted) or the smart key lock/unlock switches:

- Internally locked mode

- Externally locked mode
- Double locked mode (all except NAS and Japan vehicles).

When the vehicle is externally locked, the CJB flashes the direction indicators once for 250 milliseconds. When the vehicle is double locked, the CJB flashes the direction indicators twice for 250 milliseconds with a 250 millisecond pause between flashes. When the vehicle is unlocked with the smart key, the CJB flashes the direction indicator lamps twice for 250 milliseconds with a 250 millisecond pause between flashes.

The smart key may be configured by the driver for single point entry or global entry, by simultaneously pressing the smart key lock and unlock switches for 4 seconds. The vehicle must initially be in an unlocked state. The direction indicators will flash twice for 250 milliseconds with a 250 millisecond pause between flashes to confirm the mode change. The vehicle will also lock and then unlock in the selected mode

When single point entry is enabled, an unlock command from the smart key will only unlock the driver's door, tailgate and the fuel filler door. To unlock the remaining entry points, a second unlock command from the smart key or either front door casing lock/unlock switches is required.

Additional options for speed dependent locking and automatic relocking modes may be configured by the dealer. All vehicles incorporate an automatically operated crash unlocking mode.

Internally Locked Mode

The internally locked mode is activated by a single press of a front door central lock/unlock switch.

When in the internally locked mode:

- The exterior door release handles are disengaged from the release mechanism of the door latches to prevent opening of the doors from outside the vehicle.

- The CJB disregards an open request from the tailgate release switches to prevent opening of the tailgate from outside the vehicle.
- The vehicle may be unlocked by either a single press a front door casing unlock switch or a single press of the smart key unlock switch. The vehicle will also unlock if the driver or front passenger door is opened.

Externally Locked Mode

The externally locked mode is activated by a single press of the smart key lock switch or by a single press of the exterior door handle lock switch (if passive entry is fitted and a valid smart key is range of the handle). When in the externally locked mode:

- The exterior door release handles are disengaged from the release mechanism of the door latches to prevent opening of the doors from outside the vehicle.
- The CJB disregards an open request from the tailgate release switches to prevent exterior opening of the tailgate and doors.
- The fuel filler door actuator is energized to lock the fuel filler door.
- The vehicle may be unlocked by a single press of the smart key unlock switch or by action of operating the exterior door handle (if passive entry is fitted and a valid smart key is range of the handle).

For all UK, Europe and ROW specification vehicles, a single press of the smart key lock switch will externally lock the vehicle to disengage the exterior handles, and will arm the active anti-theft system.

For additional information, refer to: Anti-Theft - Active (419-01 Anti-Theft - Active, Description and Operation).

For NAS and Japan specification vehicles, a single press of the smart key lock switch will externally lock the vehicle to disengage the exterior handles, and will arm the active and passive anti-theft system. For additional information, refer to:

Anti-Theft - Active (419-01A, Description and Operation),
[Anti-Theft - Passive](#) (419-01B Anti-Theft - Passive, Description and Operation).

Double Locked Mode

For all vehicles except NAS and Japan specifications, pressing the smart key lock switch or the exterior door handle lock switch (if passive entry is fitted and a valid smart key is range of the handle) twice within 3 seconds will double lock the vehicle to disengage the interior and exterior handles, and will arm the active and passive anti-theft system.

For additional information, refer to: Anti-Theft - Active (419-01A, Description and Operation).

Central Locking System - Automatic Modes

The CL system features automatic modes to control the vehicle entry points, and provide protection for the system components.

The CL system incorporates the following automatic modes:

- Mislock mode
- Speed dependent locking mode (if programmed)
- Crash unlocking mode
- Repetition blocking mode
- Lockout protection mode
- Automatic relock mode (if programmed)
- Transport mode.

Mislock Mode

A mislock occurs if the CJB receives an external lock or double lock request

when a hinged panel is ajar. To indicate a mislock the CJB sounds the horns to produce a 100 millisecond 'chirp'.

If a mislock occurs due to an external lock request when a hinged panel is ajar, the CJB will not carry out a lock request on any access points.

Speed Dependent Locking Mode

When speed dependent locking is enabled the CJB will internally lock all the doors when the vehicle speed exceeds 8 km/h (5 mph) with all the doors closed and the engine running. If the driver or front passenger door is opened and then closed, when the vehicle slows down or stops and then increases to more than 8 km/h (5 mph) again, the CJB will internally lock the doors.

Speed dependent locking may be enabled or disabled by the dealer using the Land Rover approved diagnostic system.

Crash Unlocking Mode

With the ignition in power mode 6 (Ignition), if a crash occurs that triggers deployment of the air bags, then the CJB will unlock all of the doors. The CJB is informed of the crash by a status message from the Restraints Control Module (RCM) on the medium speed CAN bus that changes from 'no crash' to 'crash'.

The CL system will also perform crash unlocking mode if a 'no crash' status message is not received from the RCM every 500 milliseconds.

For additional information, refer to: [Seatbelt System](#) (501-20A Seatbelt System, Description and Operation).

Repetition Blocking Mode

To protect the CL system motors and actuators against system misuse, the CJB incorporates repetition blocking to limit the maximum operating rate of each motor and actuator. The lock motor in each door latch also incorporates thermal protection.

Central Locking System Motor and Actuator Operating Parameters

Motor or Actuator	Current On Time (ms)	Maximum Operations (per minute)	Nominal Operating Current (A)	Stall Current (A)
Tailgate latch	600 ± 10	10	3.6 to 5.2	7.5
Fuel filler door	400 ± 10	5	2.7	8
Door double lock	100 to 110	10	0.28	1.14
Door lock	100 to 110	10	0.54	3.31

Lockout Protection Mode

The vehicle is not able to be locked using a front door casing lock switch if any door is open.

If an internal lock request is received from either of the front door casing lock switches, the CJB will centrally lock the vehicle and then centrally unlock the vehicle if any door is open.

If a front door is open and the open door casing lock is pressed and held in the locked position, the open front door may remain in the locked state. When the open door is subsequently closed, the CJB will centrally unlock all doors.

Automatic Relock Mode

Automatic relock prevents accidental operation of the smart key switches that will unlock and disarm the vehicle.

When the CL system is unlocked using the smart key, and a door or tailgate is not opened or the smart key is not placed in the start control unit within 1 minute, the CJB will automatically lock or double lock the vehicle again, depending on the previously locked mode.


Transport Mode

All new vehicles are delivered from the factory in transport mode. Transport mode replaces the traditional transit relay and inhibits a number of electrical systems and features to reduce quiescent drain from the battery during delivery. When the vehicle is in transport mode 'transp' is displayed in the IC odometer. Single point entry is enabled and global locking and unlocking using the smart key is disabled.

The speed locking mode is also disabled, but crash unlocking mode remains enabled.

To remove the vehicle from transport mode, the Land Rover approved diagnostic system must be connected during the Pre-Delivery Inspection (PDI). For further information, refer to the PDI manual.

CONTROL DIAGRAM

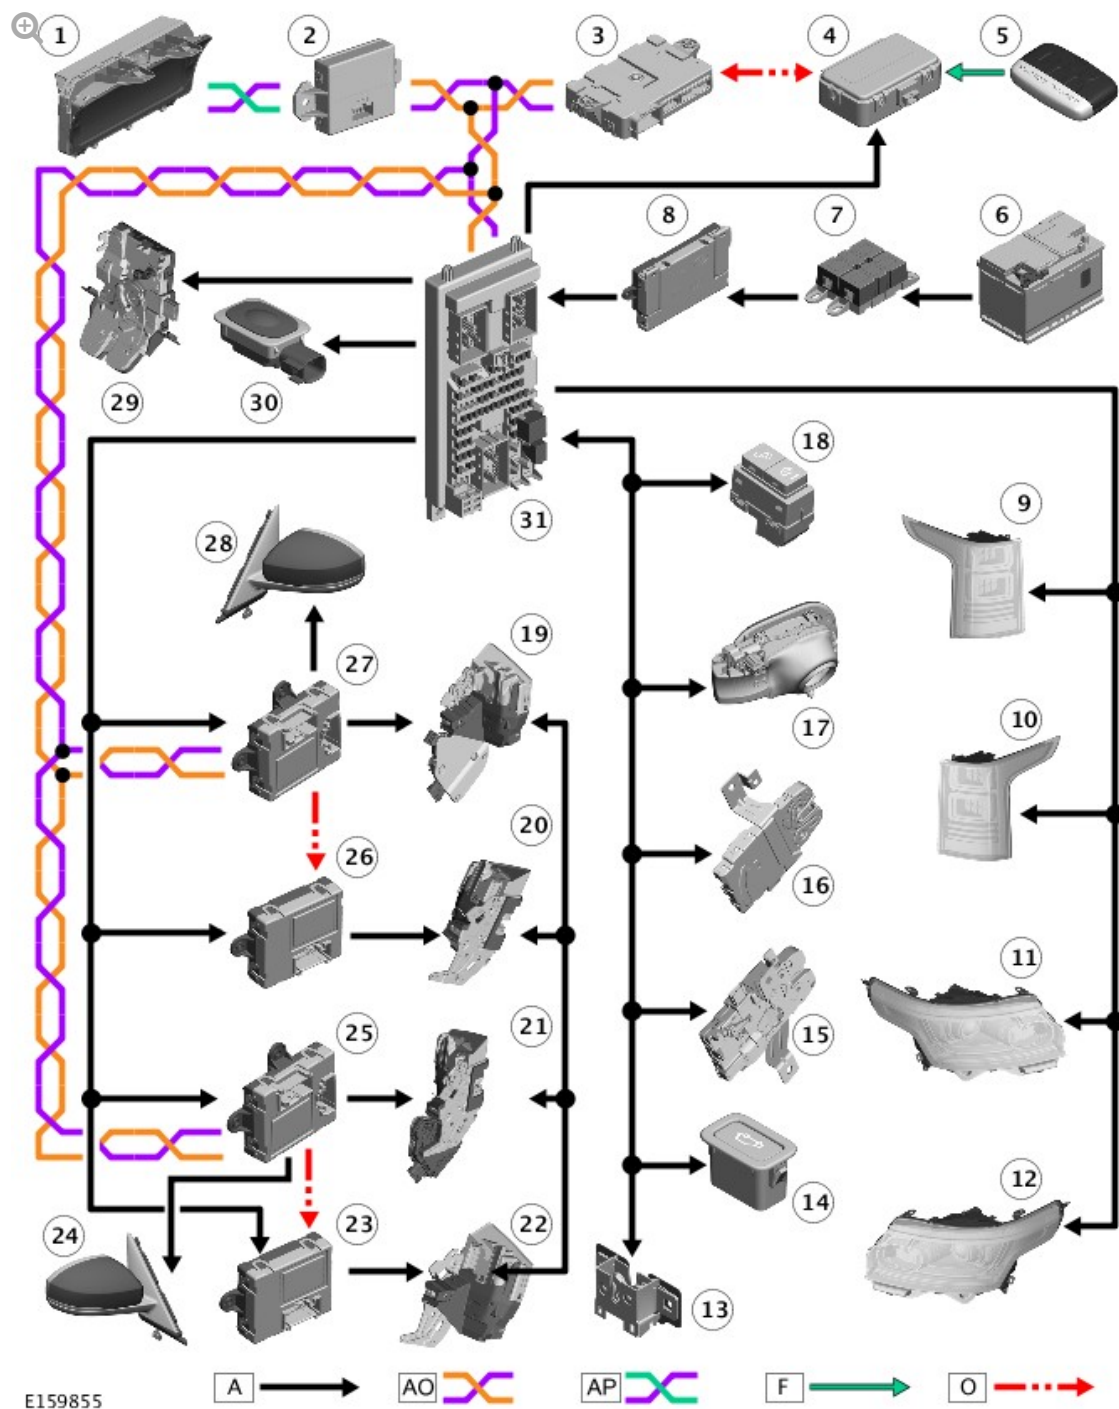

A = HARDWIRED; AO = MEDIUM SPEED CAN (CONTROLLER AREA NETWORK) BODY SYSTEMS; AP = MEDIUM SPEED CAN COMFORT AND CONVENIENCE SYSTEMS; F = RF TRANSMISSION; O = LIN (LOCAL INTERCONNECT NETWORK) BUS.

ITEM	DESCRIPTION
1	Instrument Cluster (IC)
2	Gateway Module (GWM)
3	Keyless Vehicle Module (KVM)

4	Radio Frequency (RF) receiver
5	Smart key
6	Battery
7	Battery Junction Box (BJB) 2
8	BJB
9	Left tail lamp assembly
10	Right tail lamp assembly
11	Right headlamp assembly
12	Left headlamp assembly
13	Left hood latch
14	Tailgate release switch
15	Left tailgate latch
16	Right tailgate latch
17	Fuel flap release motor
18	Driver door Central Locking (CL) switch
19	Front left door latch
20	Rear left door latch
21	Front right door latch
22	Rear right door latch
23	Rear right door module
24	Right door mirror
25	Front right door module
26	Rear Left door module
27	Front left door module
28	Left door mirror
29	Upper tailgate latch
30	Upper tailgate open/close switch
31	Central Junction Box (CJB)

