

2016.0 RANGE ROVER (LG), 501-14

HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS

EXTERIOR FRONT DOOR HANDLE [G1551649]

REMOVAL AND INSTALLATION

REMOVAL

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTES:

- Removal steps in this procedure may contain installation details.
- Make sure the door window glass is in the fully closed position.
- LHD illustration shown, RHD is similar.

1. Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.


WARNING:

To avoid accidental deployment, the restraints control module backup power supply must be depleted. Wait at least two minutes after disconnecting the battery ground cable(s) before commencing any repair or adjustment to the supplemental restraint system (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.


Make the SRS system safe.

Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).


3.

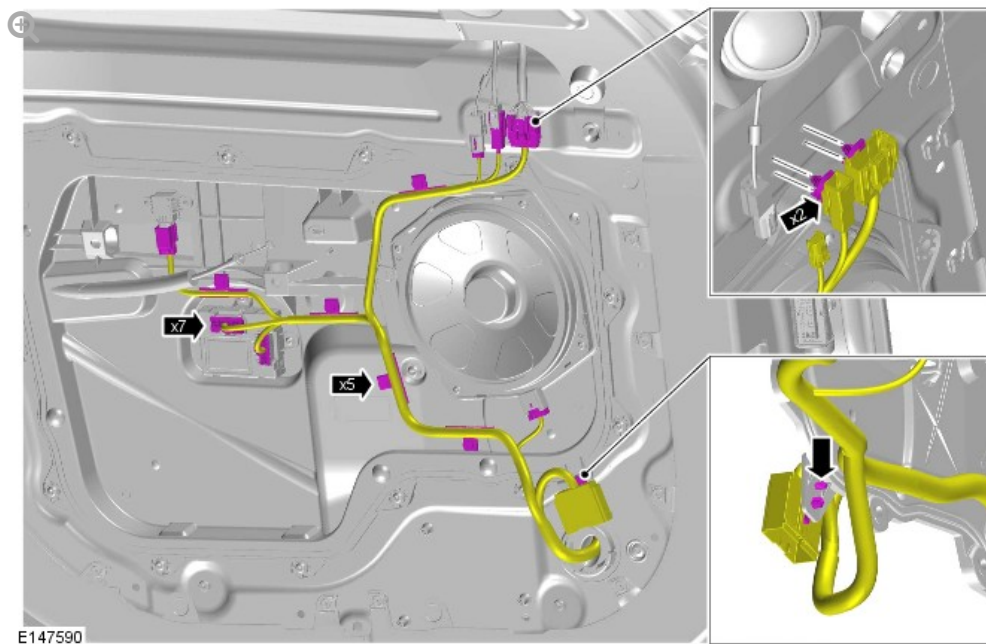

4.

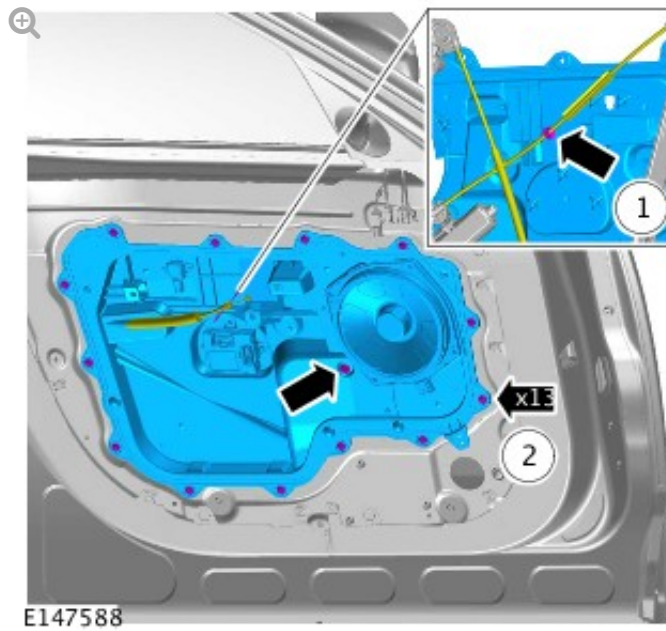


5.

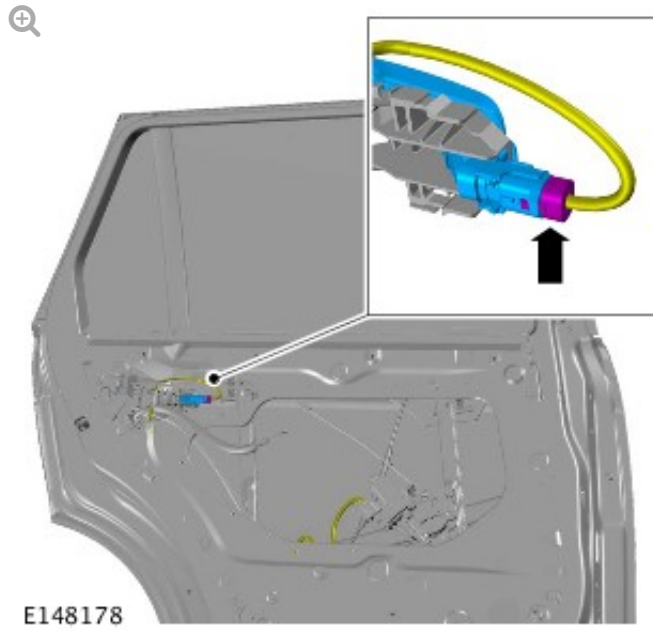

6.

NOTE:

LH shown.

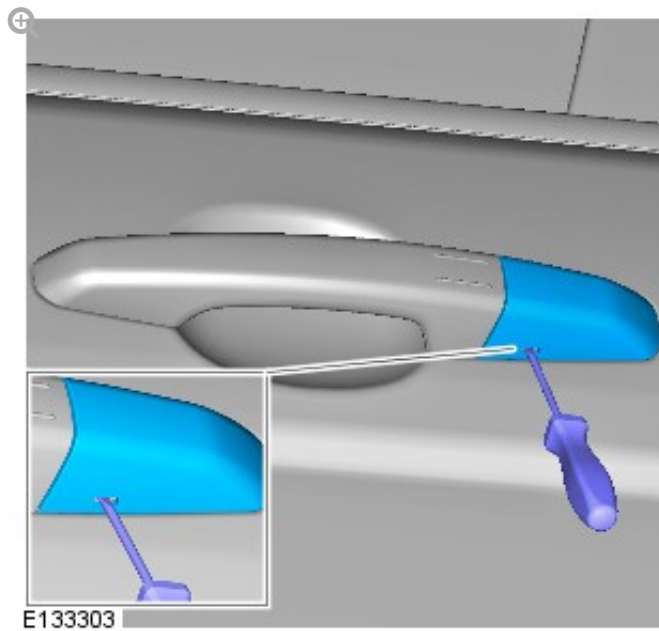


E133303

7.

NOTES:

- Loosen the bolt, but do not fully remove.
- LH shown.

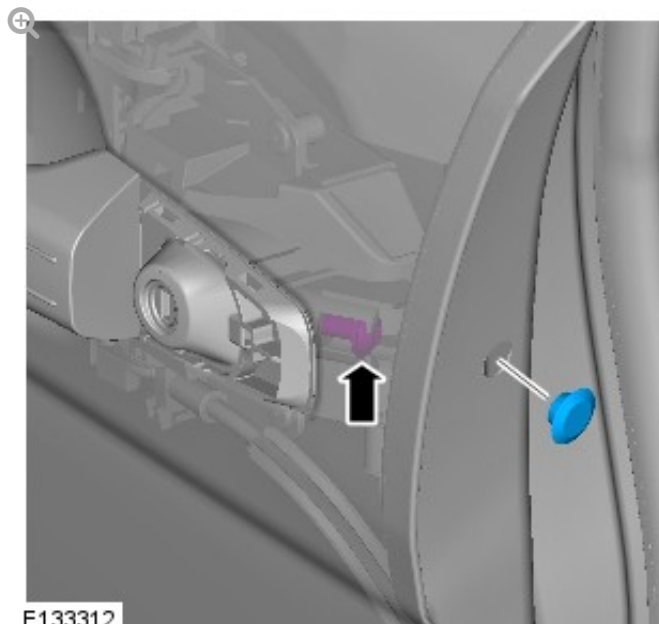


E133312

Torque: 4.1 Nm

8.

NOTE:


LH shown.

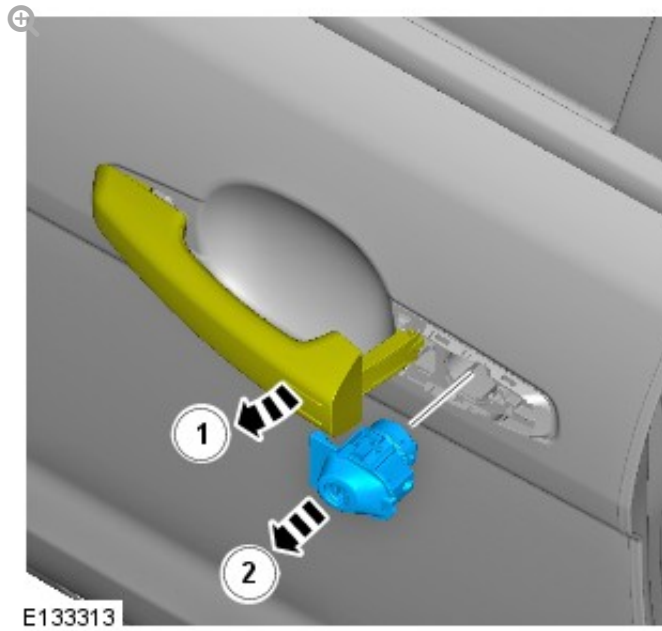

9.

NOTE:


LH shown.

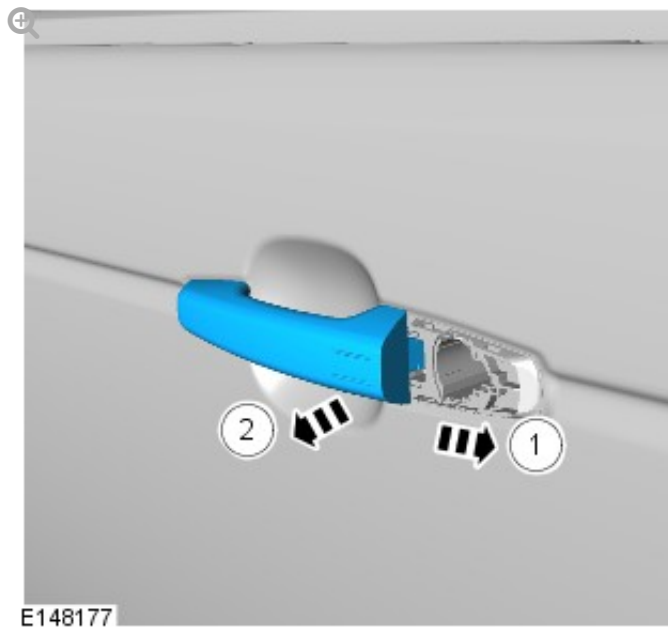

10.

NOTE:


RH Shown.

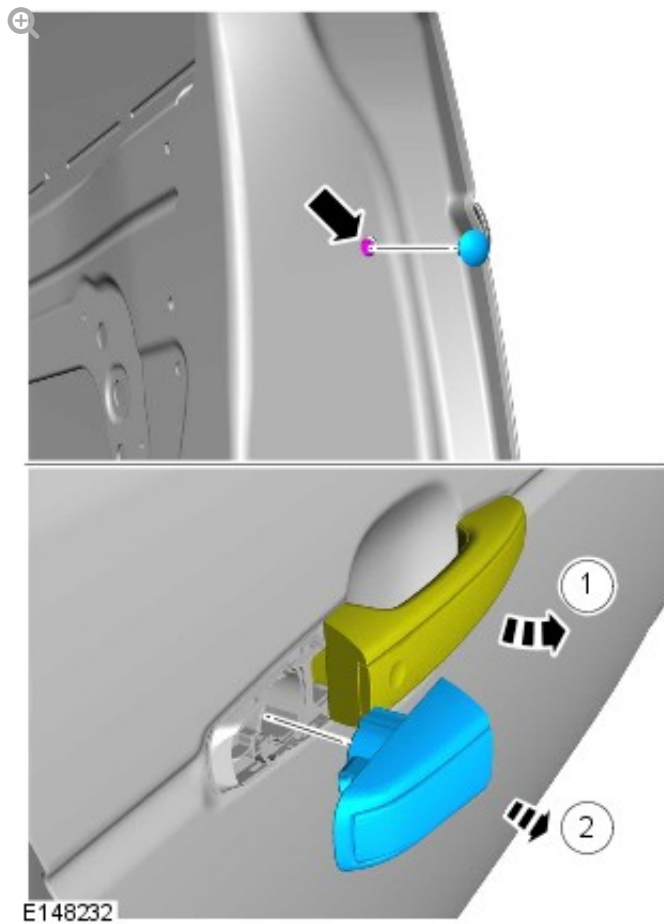

11.

NOTE:

RH Shown.

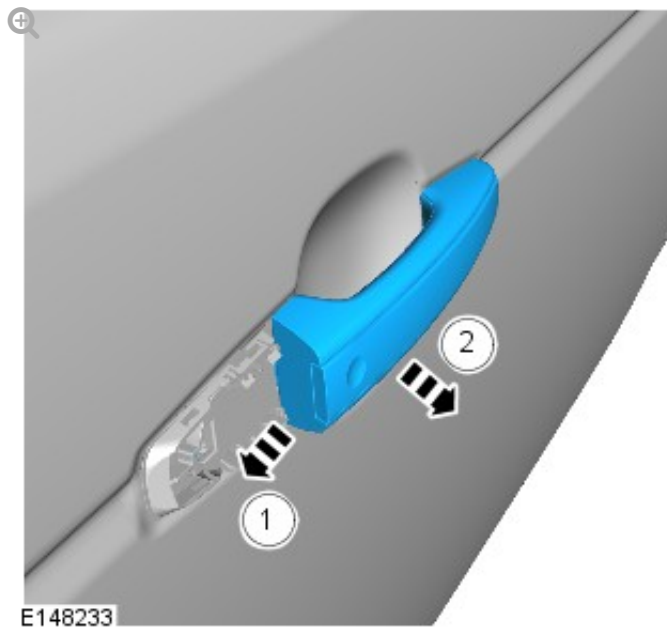



INSTALLATION

1. To install reverse the removal procedure.

2.

NOTE:

LH shown.

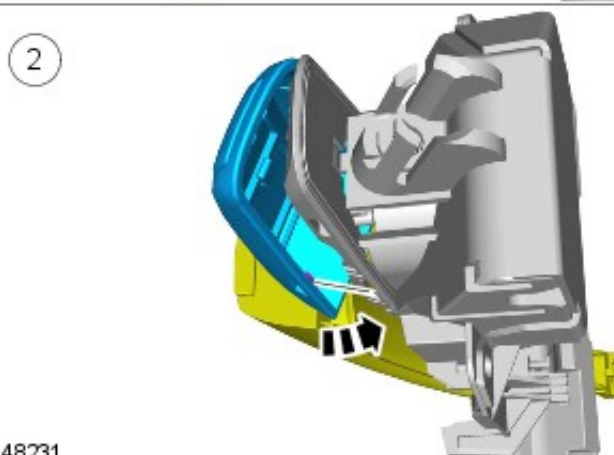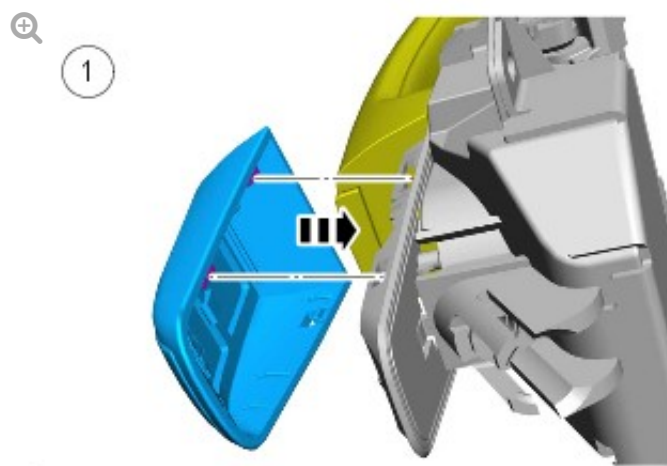

E148231

Install the door lock cover.