

2016.0 RANGE ROVER (LG), 501-14

HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS

EXTERIOR REAR DOOR HANDLE - STANDARD WHEEL BASE [G1551650]

REMOVAL AND INSTALLATION

REMOVAL

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTES:


- Removal steps in this procedure may contain installation details.
- Make sure the door window glass is in the fully closed position.

1. Refer to: [Rear Door Trim Panel - Long Wheel Base](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

NOTE:


LH illustration shown, RH is similar.

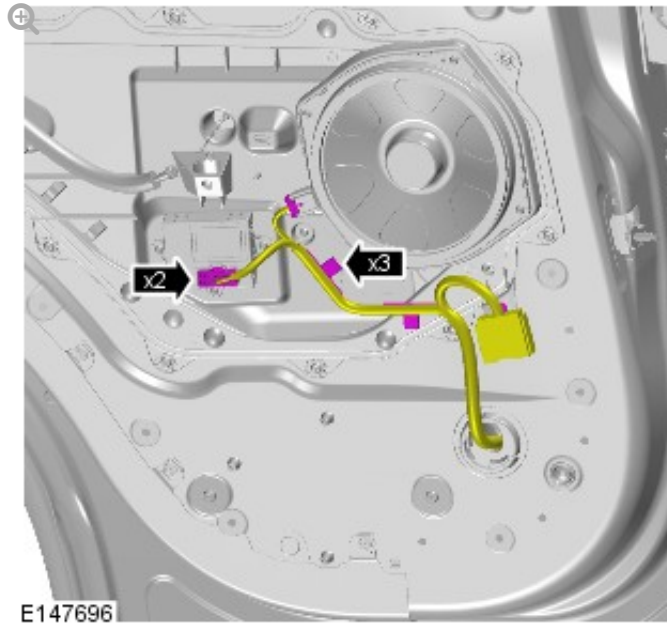

3.

NOTE:

LH illustration shown, RH is similar.

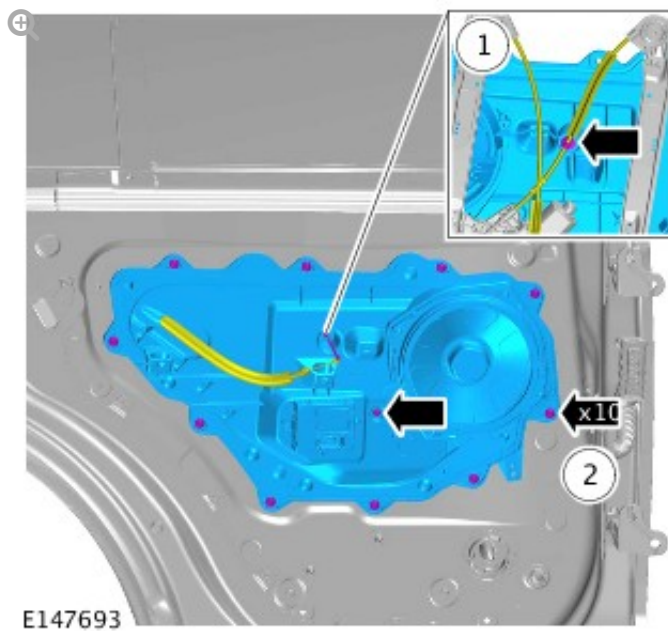


E147693

4.

NOTE:

LH illustration shown, RH is similar.

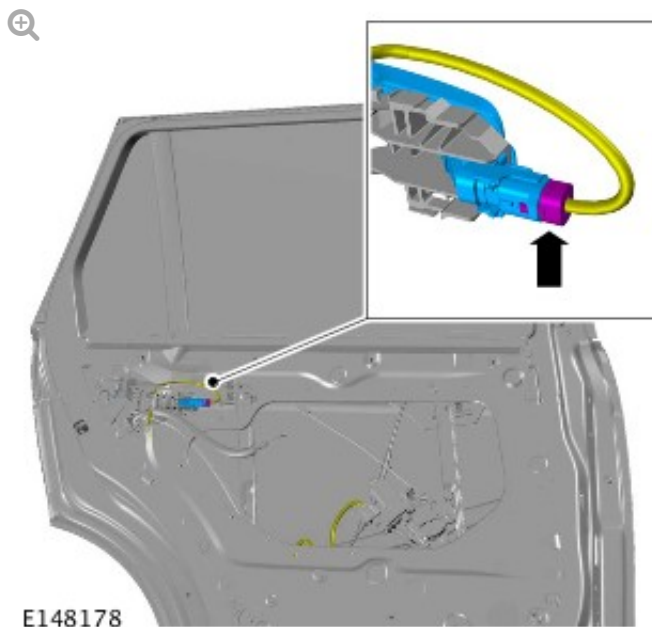


E148178

5.

NOTES:

- Loosen the bolt, but do not fully remove.
- RH illustration shown, LH is similar.

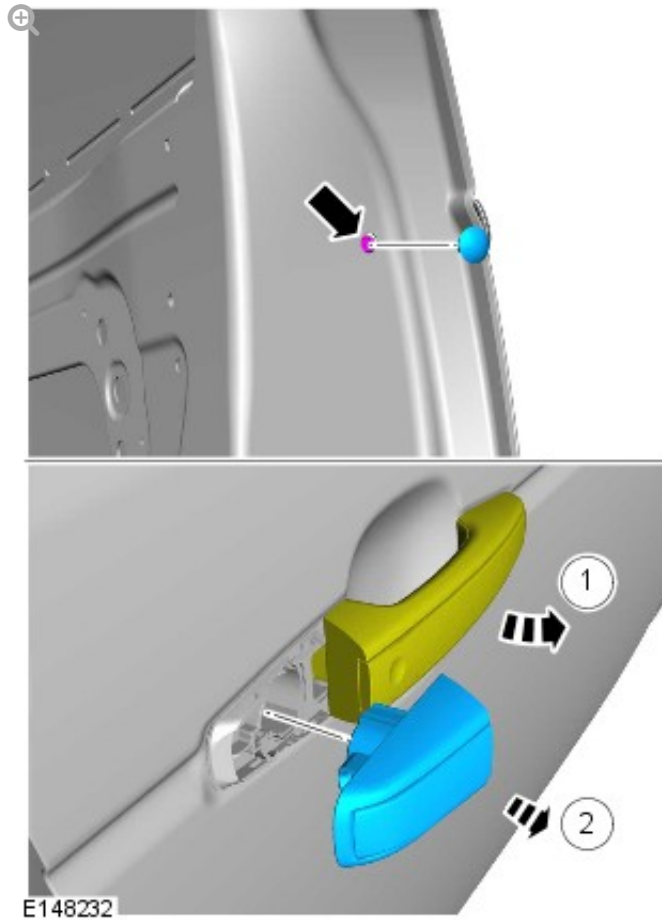


Torque: 4.1 Nm

6.

NOTE:

RH illustration shown, LH is similar.

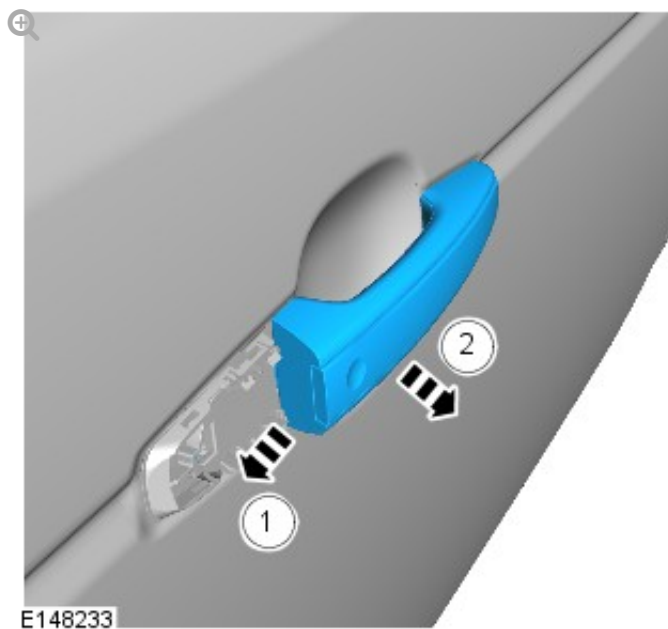

INSTALLATION

1. To install reverse the removal procedure.