

2016.0 RANGE ROVER (LG), 501-14

HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS

REAR DOOR LATCH – STANDARD WHEEL BASE

[G1551653]

REMOVAL AND INSTALLATION

REMOVAL

NOTES:


- Removal steps in this procedure may contain installation details.
- Left-hand shown, right-hand similar.

1. Refer to: [Exterior Rear Door Handle - Standard Wheel Base](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

2.


NOTE:

Loosen the bolt, but do not fully remove.

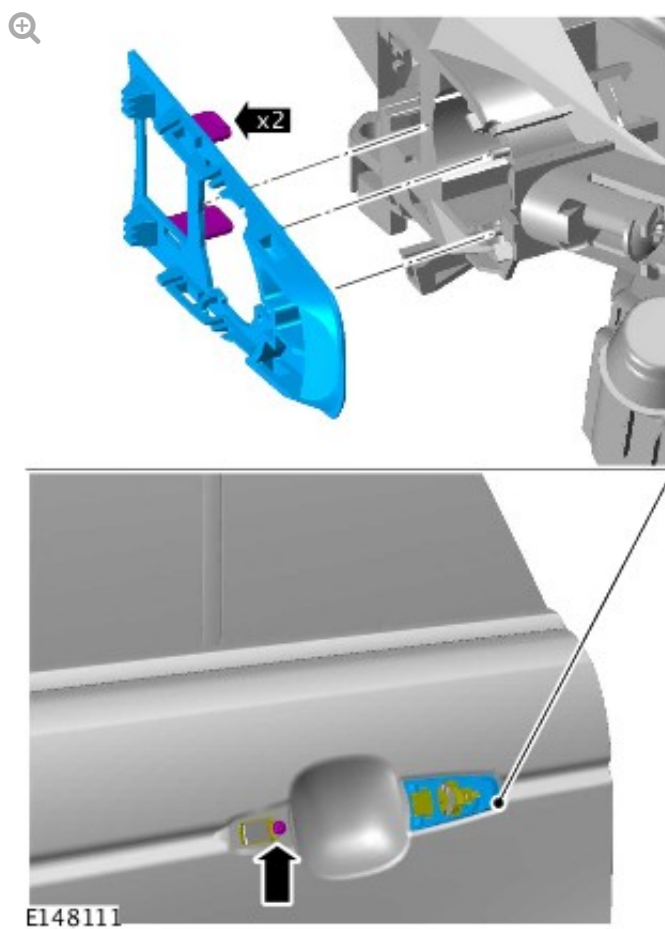


Torque: 3.2 Nm

3.

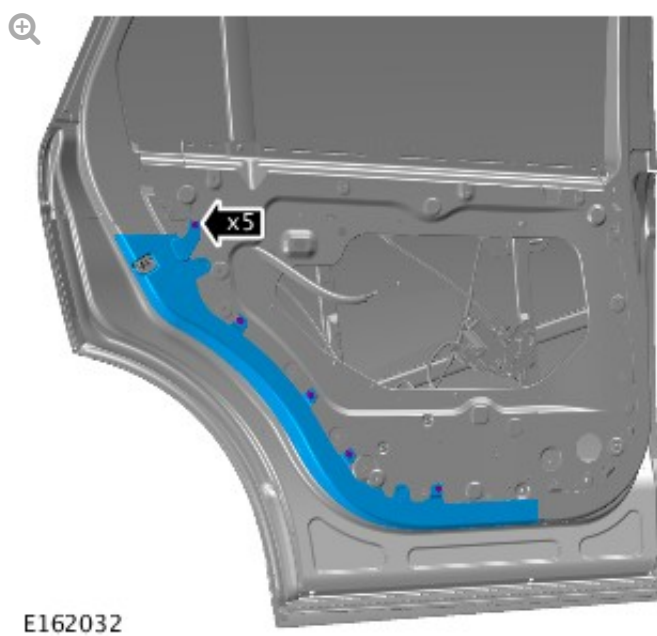


4.

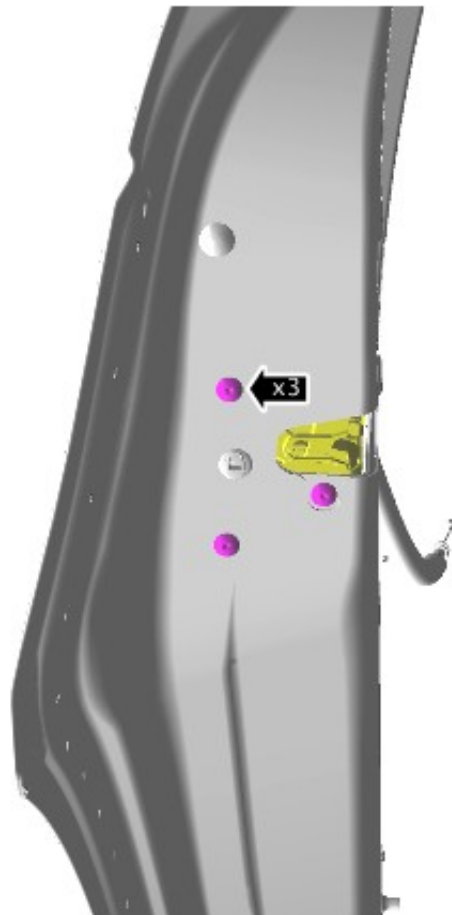


E147973

Torque: 7 Nm

5.

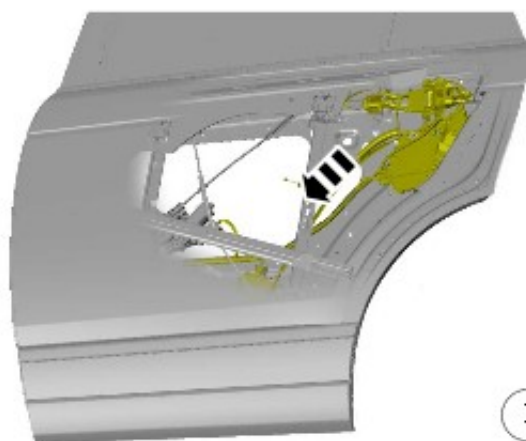


1

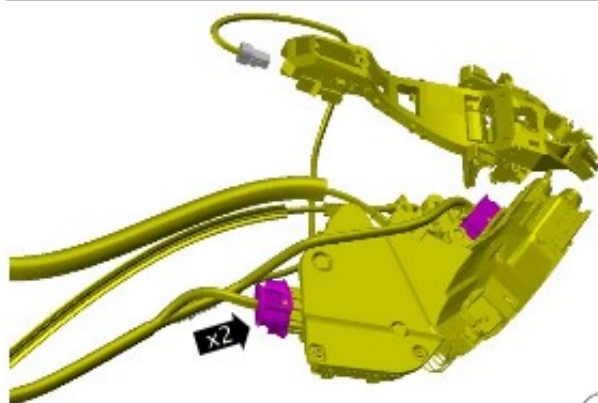

2

E148238


6.

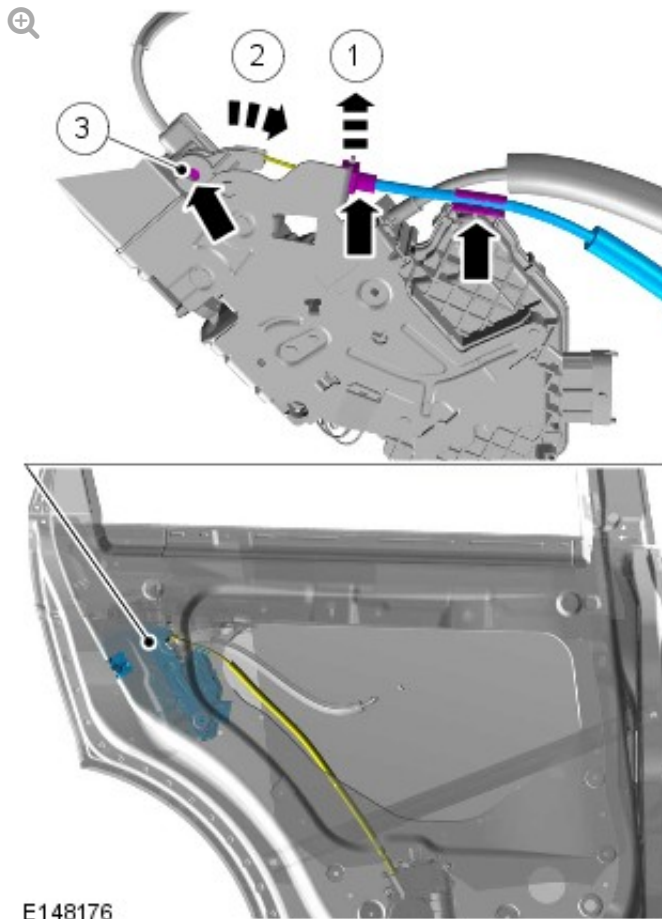


7.

NOTE:

Do not disassemble further if the component is removed for access only.

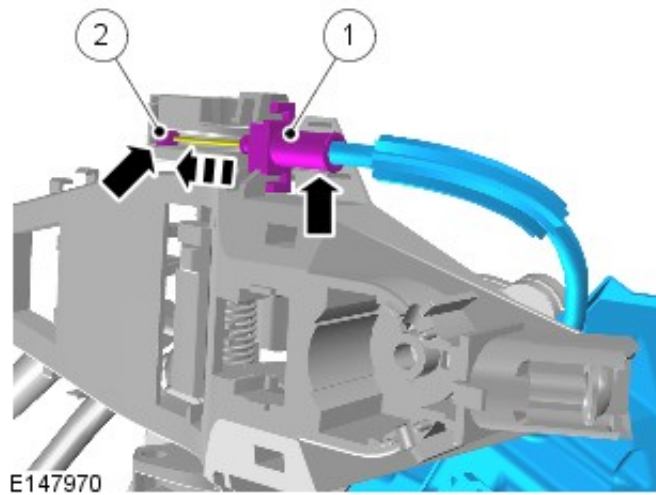

8.

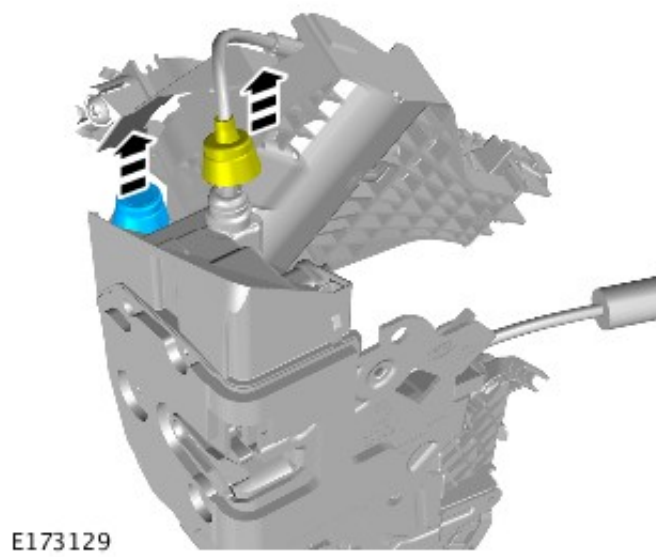


9.

CAUTION:

Inspect the component, replace if damaged.

NOTE:

Care should be taken when removing water cover to allow for a secure fit during installation.

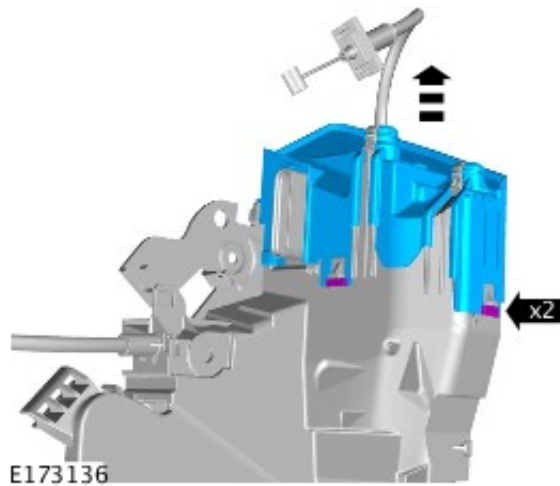


10.

CAUTION:


Inspect the component, replace if damaged.

NOTE:


Care should be taken when removing water cover to allow for a secure fit during installation.

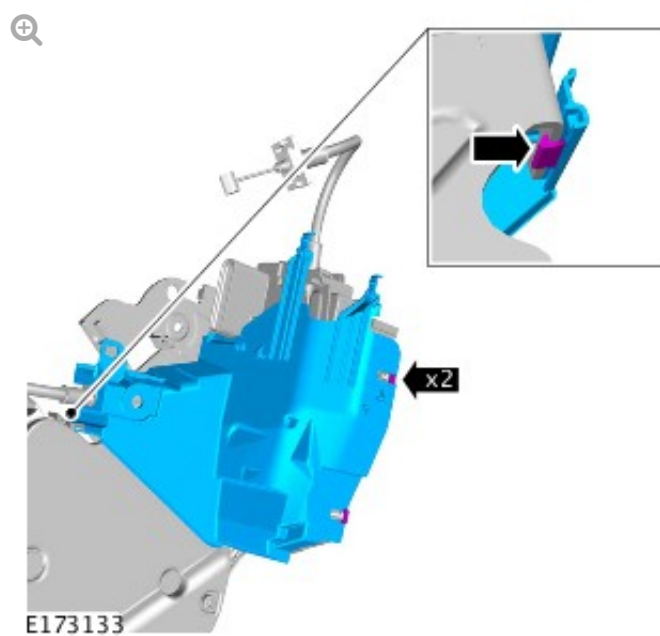

11.

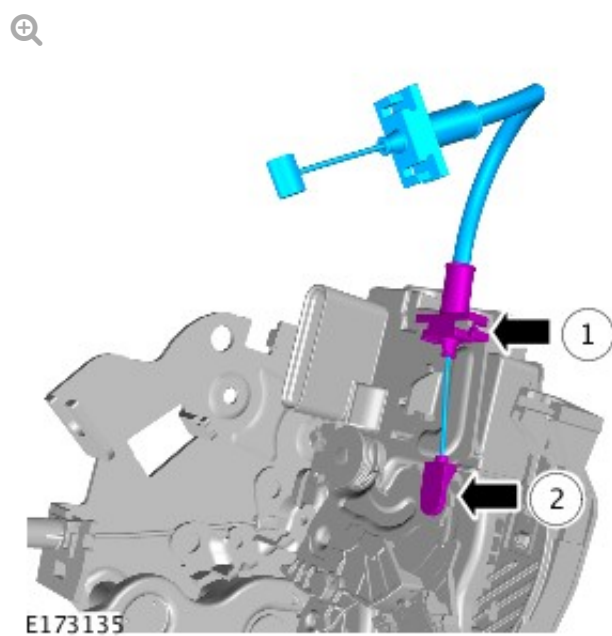

12.

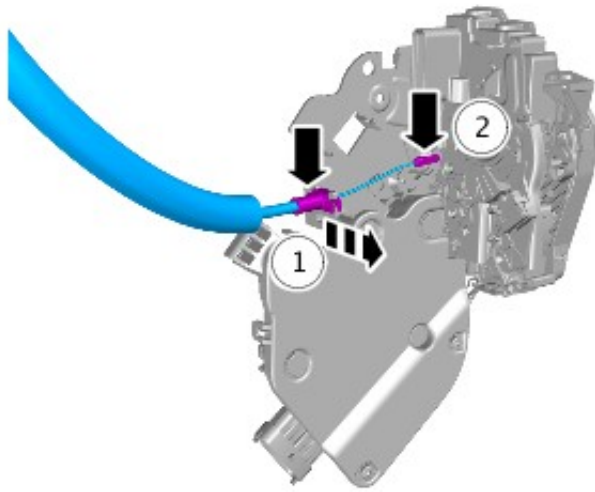

E173081

INSTALLATION

1. To install, reverse the removal procedure.