

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - LONG WHEEL BASE

INSTRUMENT PANEL LOWER SECTION (G1551609)

REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

CAUTION:

Apply heatshrink or protective tape to the end of a suitable tool to protect the interior components.

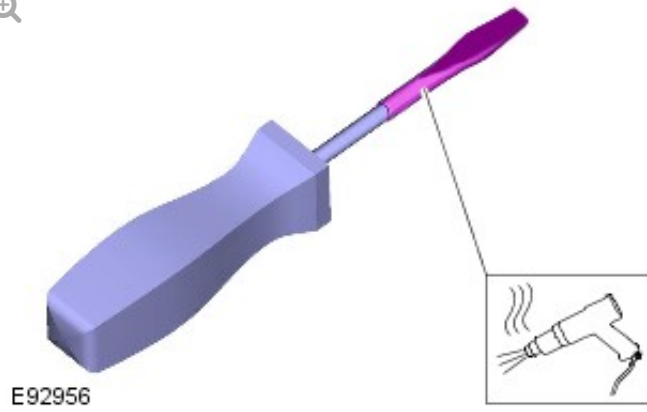


2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3.

NOTE:


Repeat the procedure for the other side.

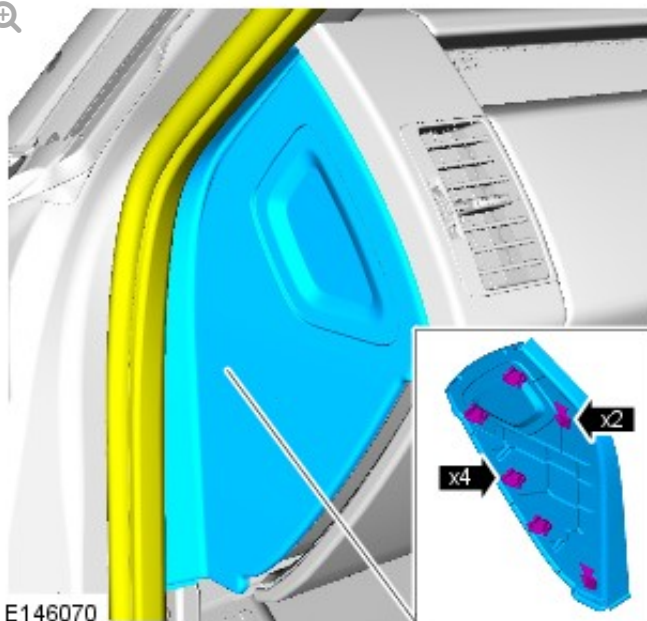



4.

NOTE:

Repeat the procedure for the other side.

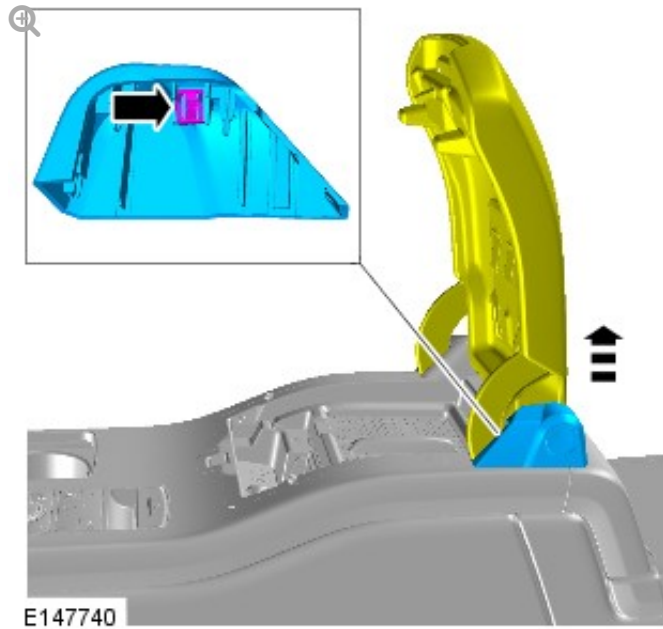


5.

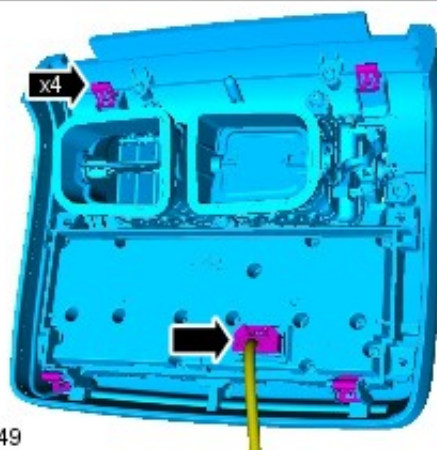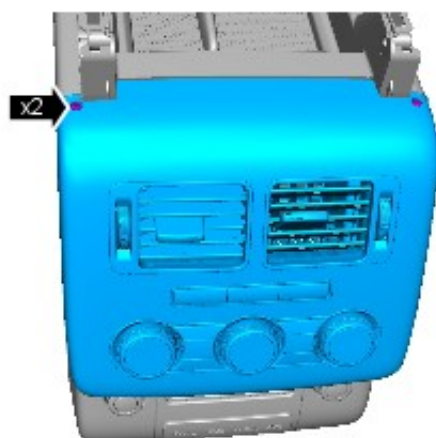


E147749

6.

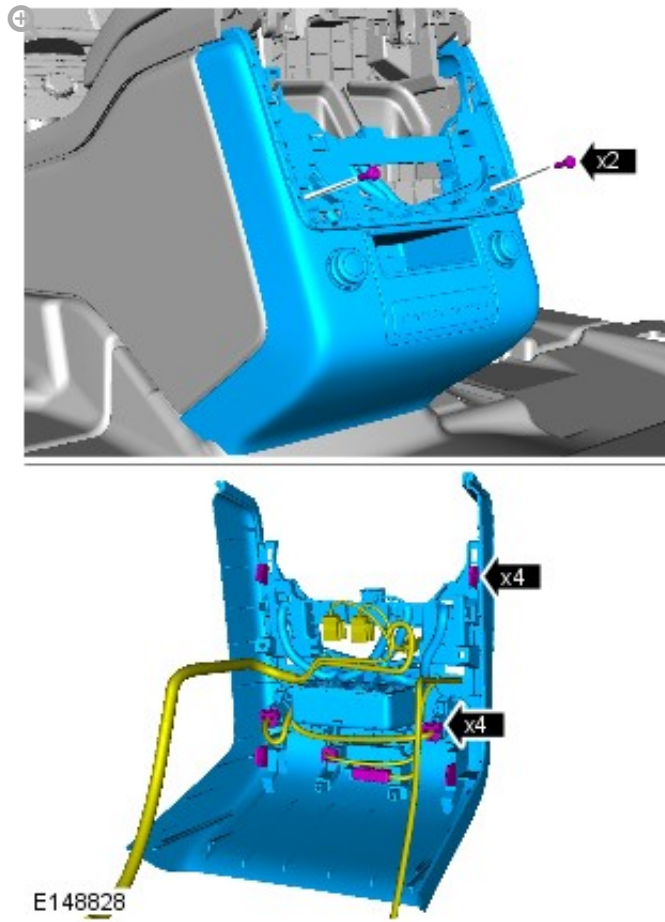


Torque: 1.7 Nm

7.

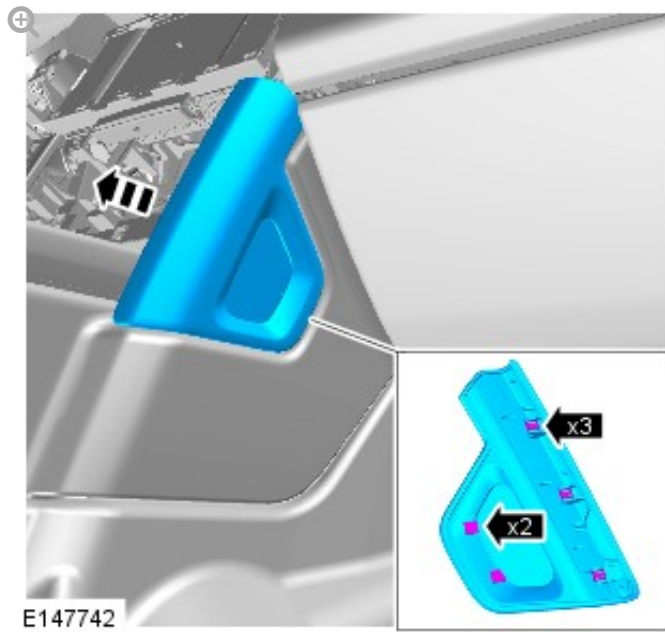


8.

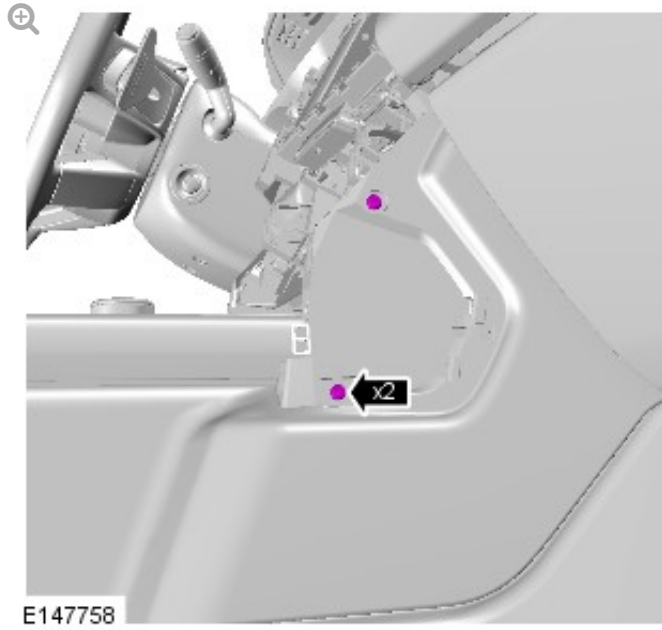

E147758


Torque: 1.7 Nm

9.

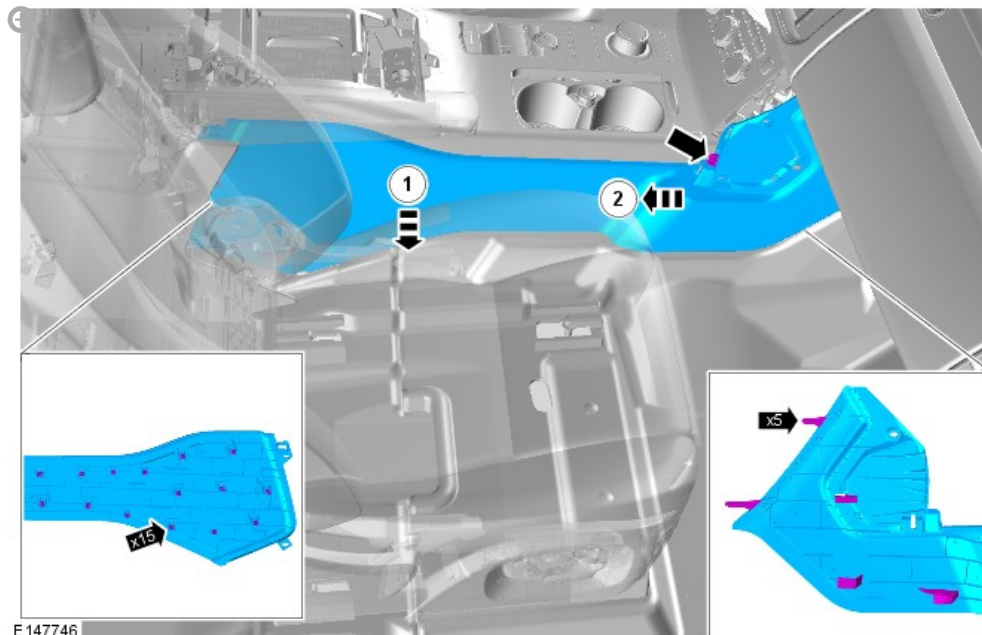

E147746


10.

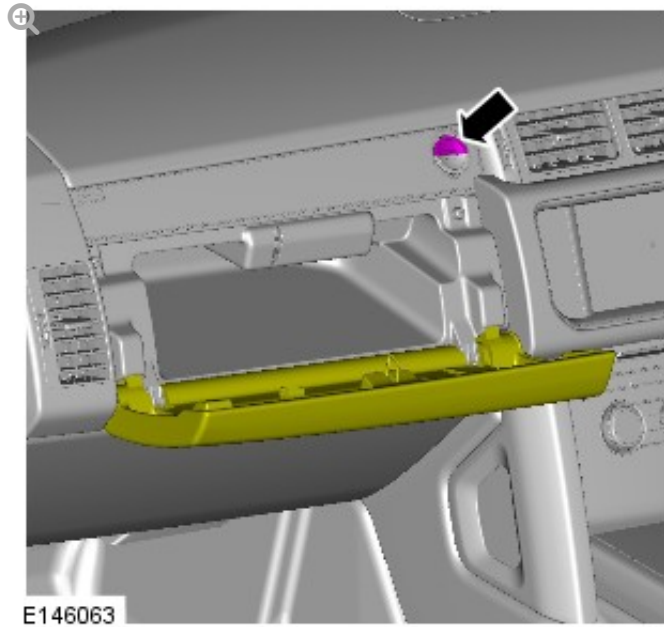

11.


NOTE:

Release the trim clips from the middle to the sides, failure to follow this instruction may result in damage to the retaining frame.

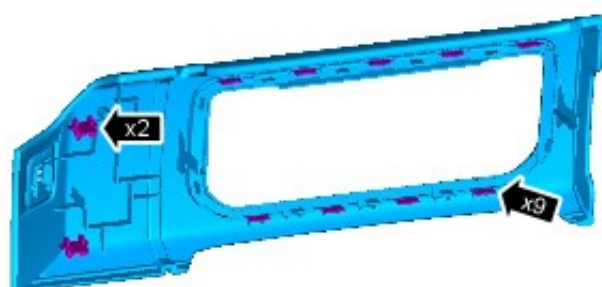

E146064

12.


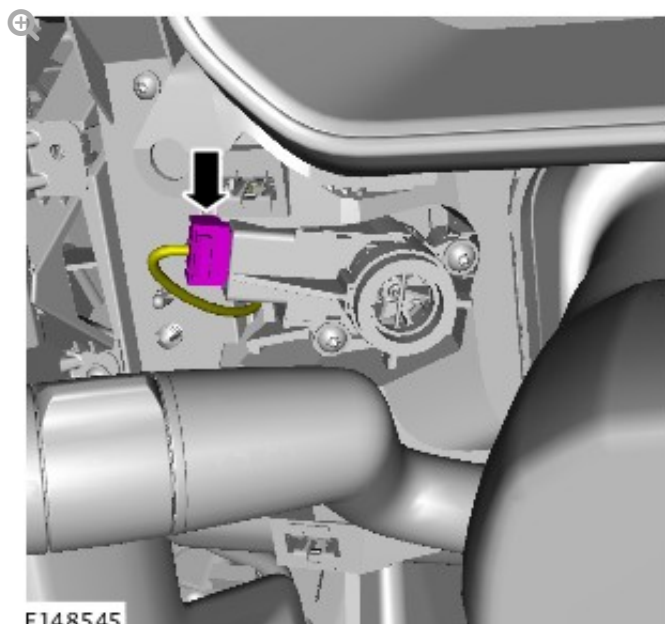


E148545

13.

NOTE:

The steering wheel is shown removed for clarity.

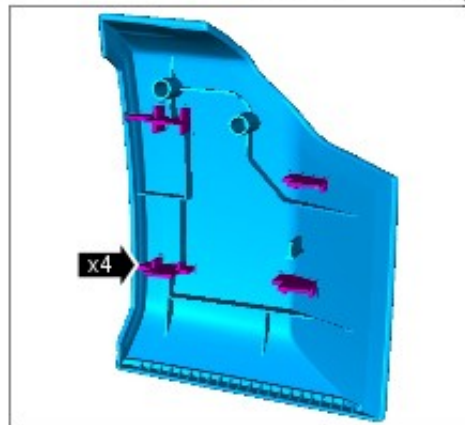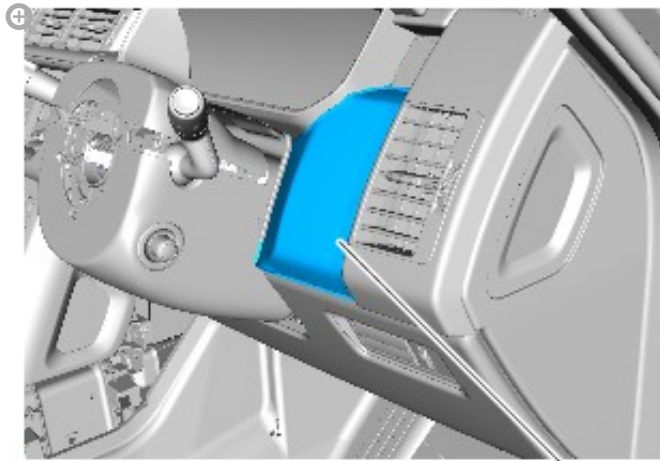


E148285

14.

NOTE:

The steering wheel is shown removed for clarity.


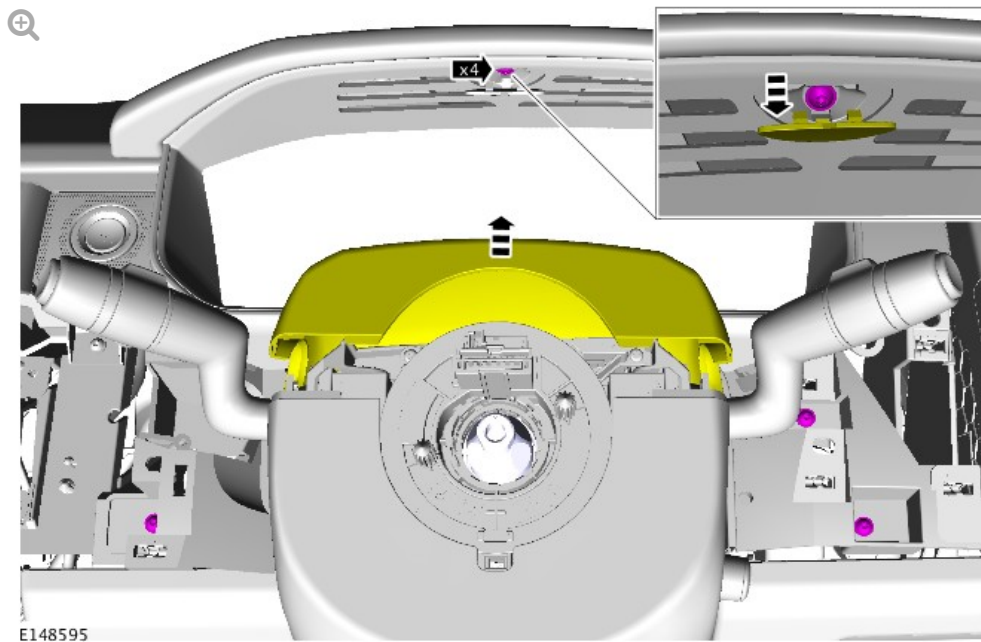


Torque: 1.7 Nm

15.



NOTE:

The steering wheel is shown removed for clarity.

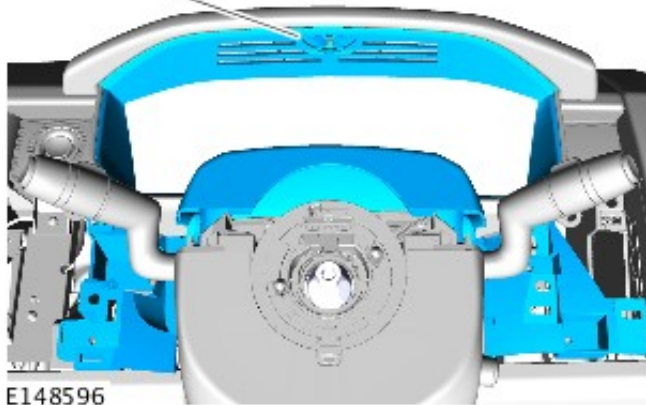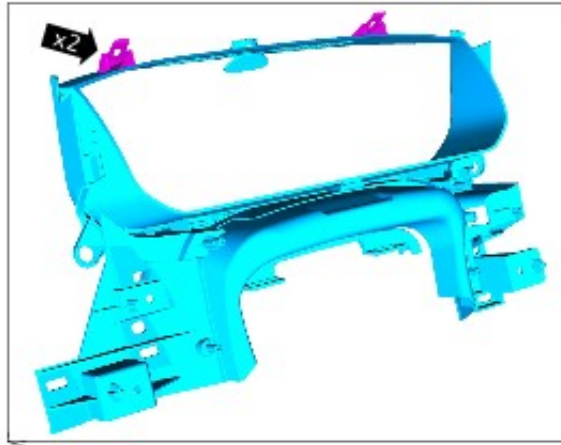

E148596

16.

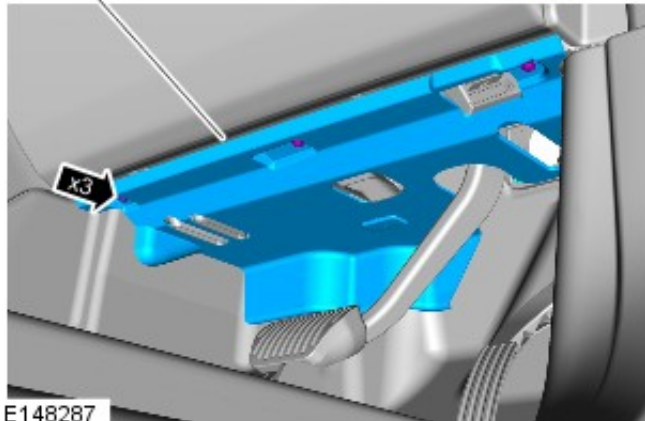
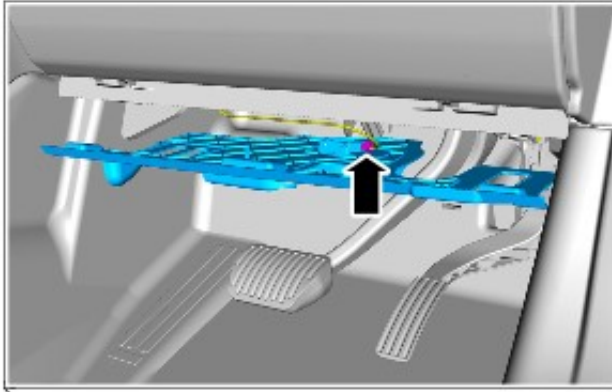


E148287

17.

CAUTION:

LH illustration shown, RH is similar.

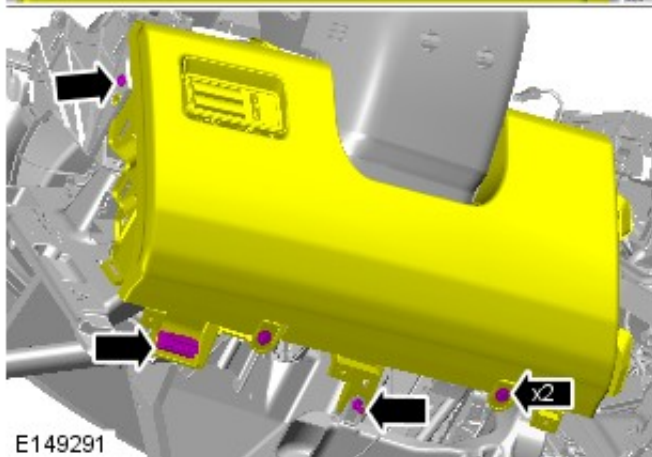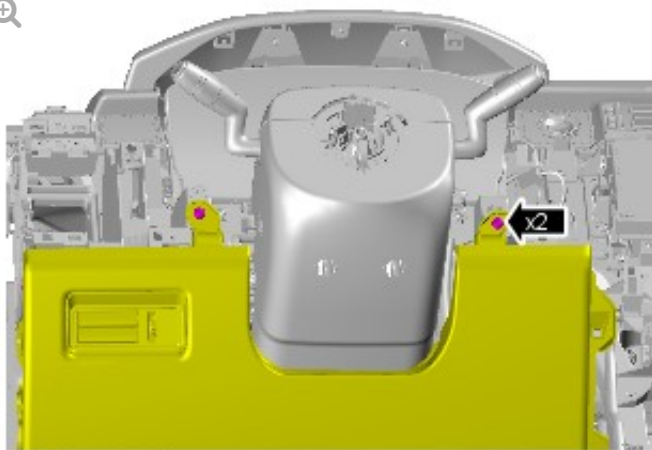


E149291

Torque:

M6 2.5 Nm

M6 9 Nm

18.

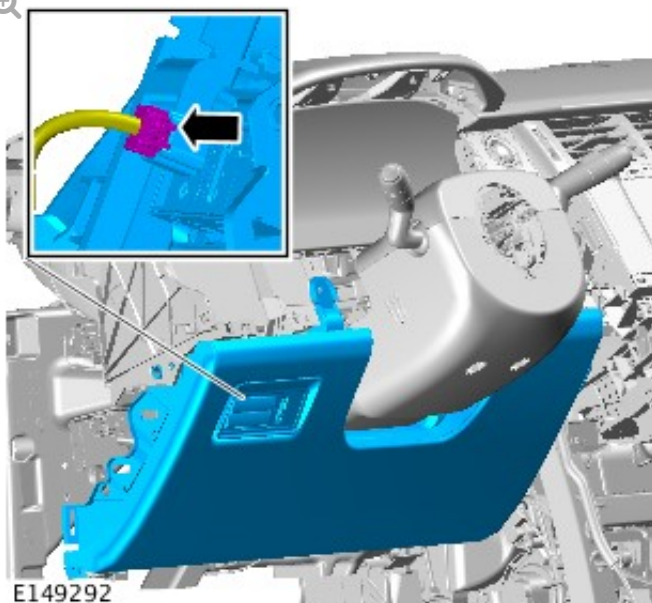


E149292

INSTALLATION

1.

NOTE:

Install new retaining clips.

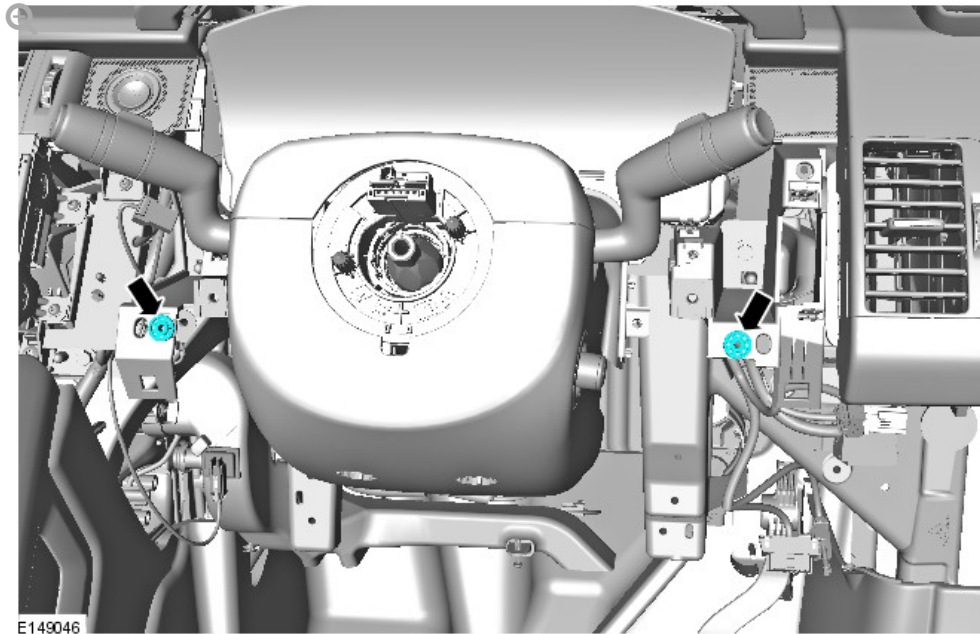

2.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.



E149095

3. To install, reverse the removal procedure.