

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - STANDARD WHEEL BASE

FLOOR CONSOLE (G1551593)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.



All vehicles

1. Refer to: [Floor Console Upper Section](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).




Vehicles with business seats

2.

NOTE:

Repeat the procedure for the other side.

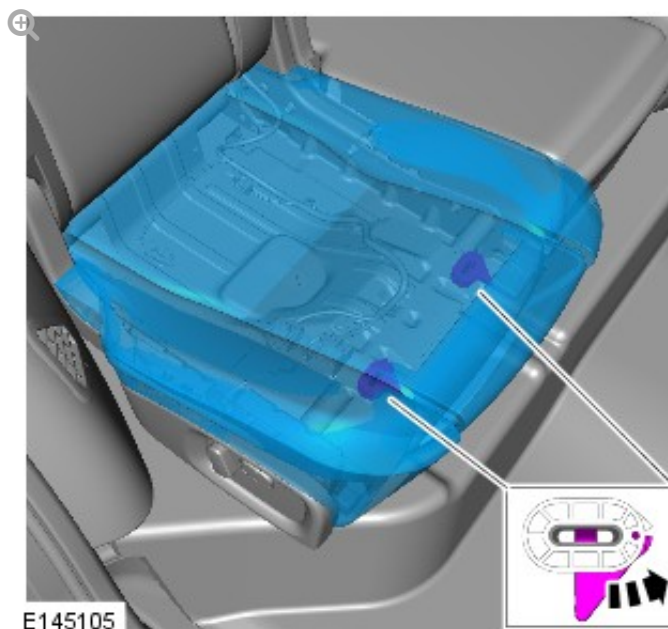

3.

NOTE:


Repeat the procedure for the other side.



4.

NOTE:

Repeat the procedure for the other side.

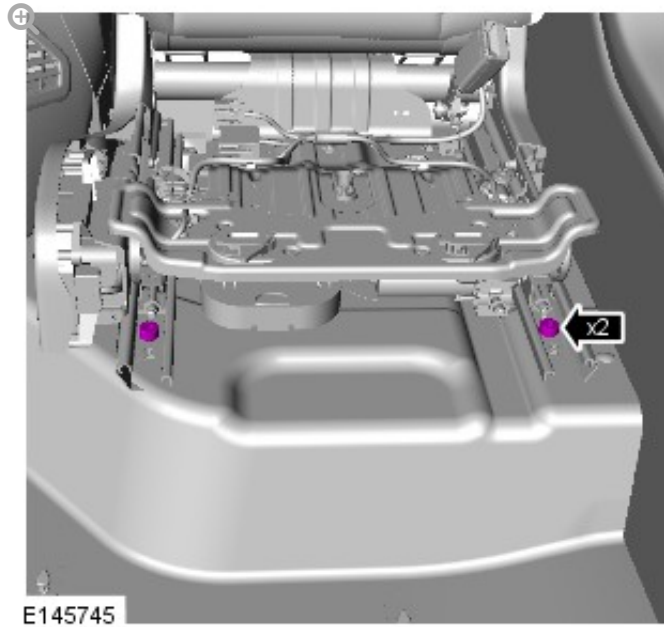


Torque: 50 Nm

5.

NOTE:

Repeat the procedure for the other side.

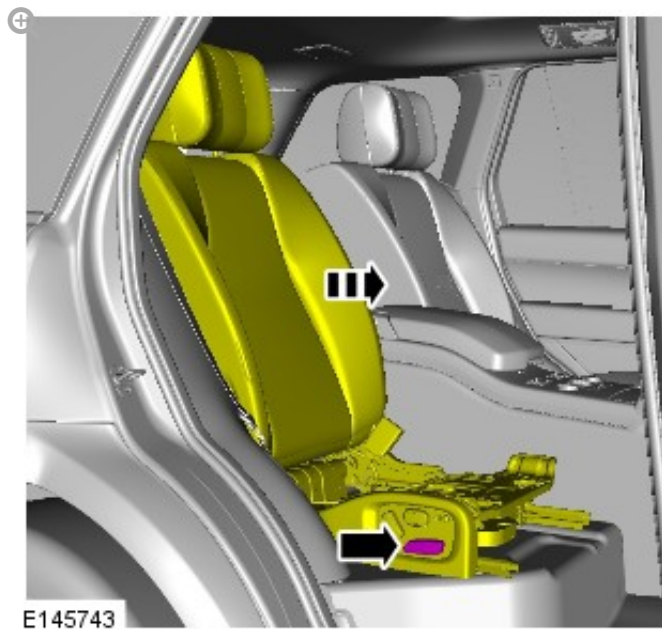

6.

NOTE:

Repeat the procedure for the other side.




Torque: 50 Nm

7.


NOTE:

Repeat the procedure for the other side.

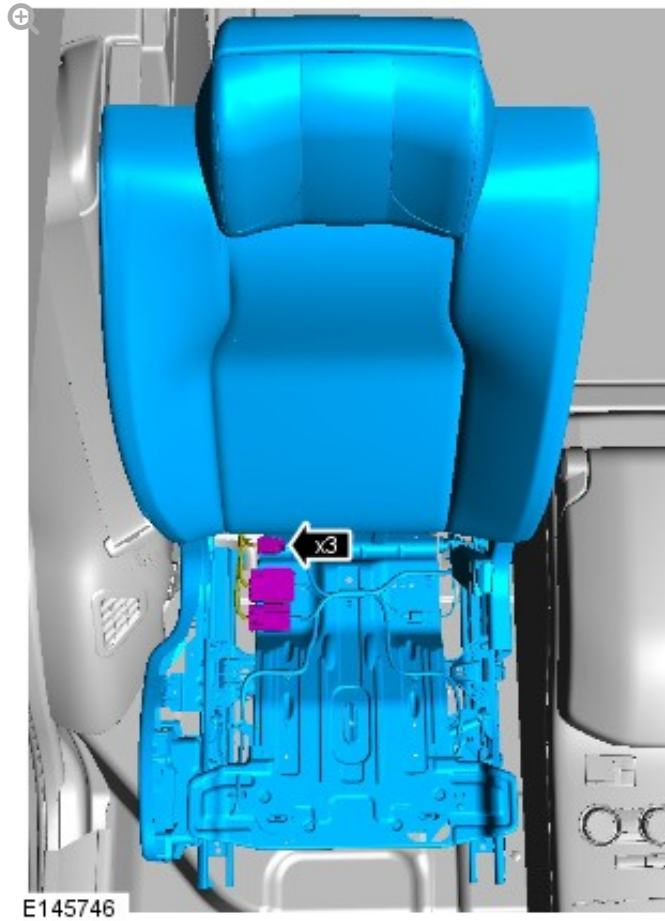

8. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

9.

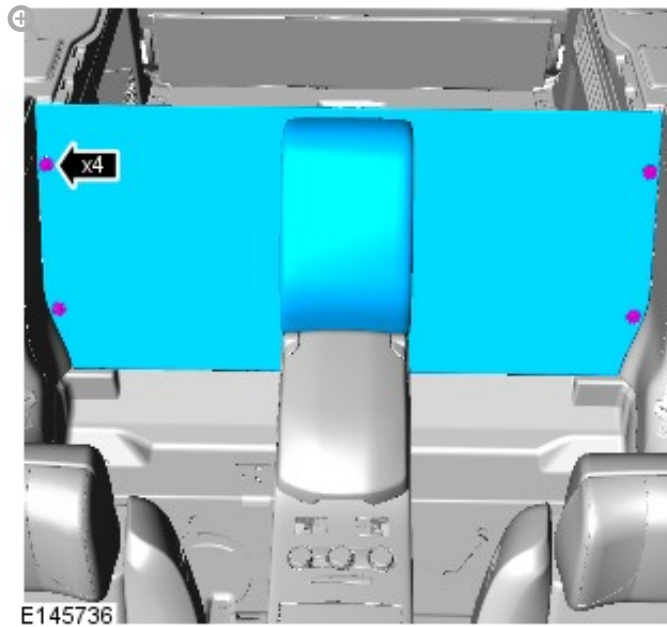


Torque: 10 Nm


10.

NOTE:

Repeat the procedure for the other side.

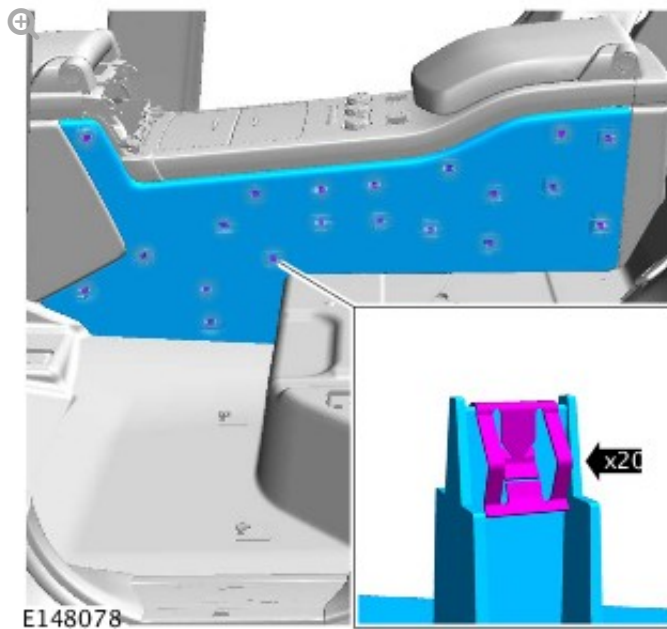


11.

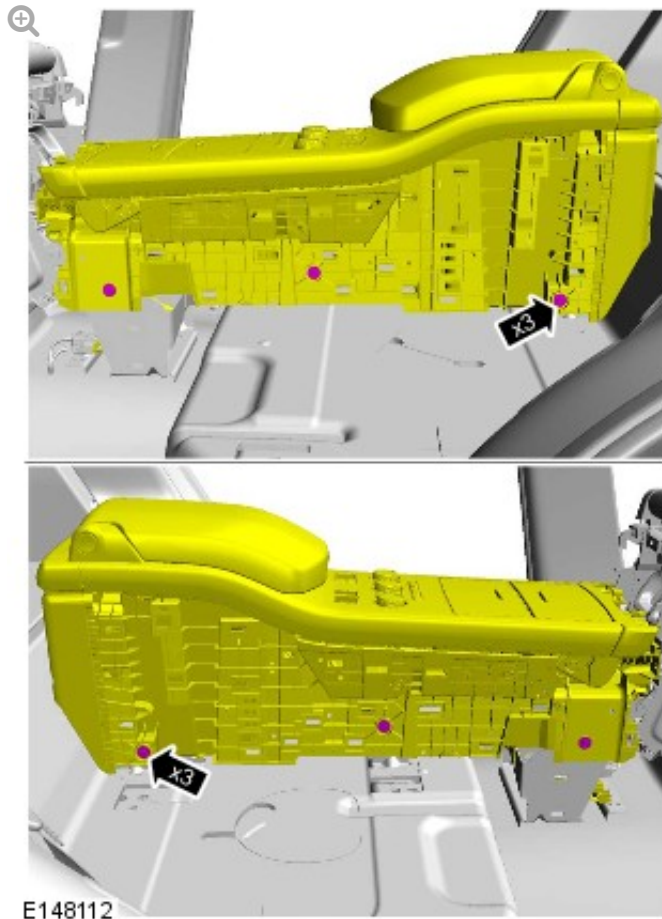

E148112


Torque: 9 Nm

12.

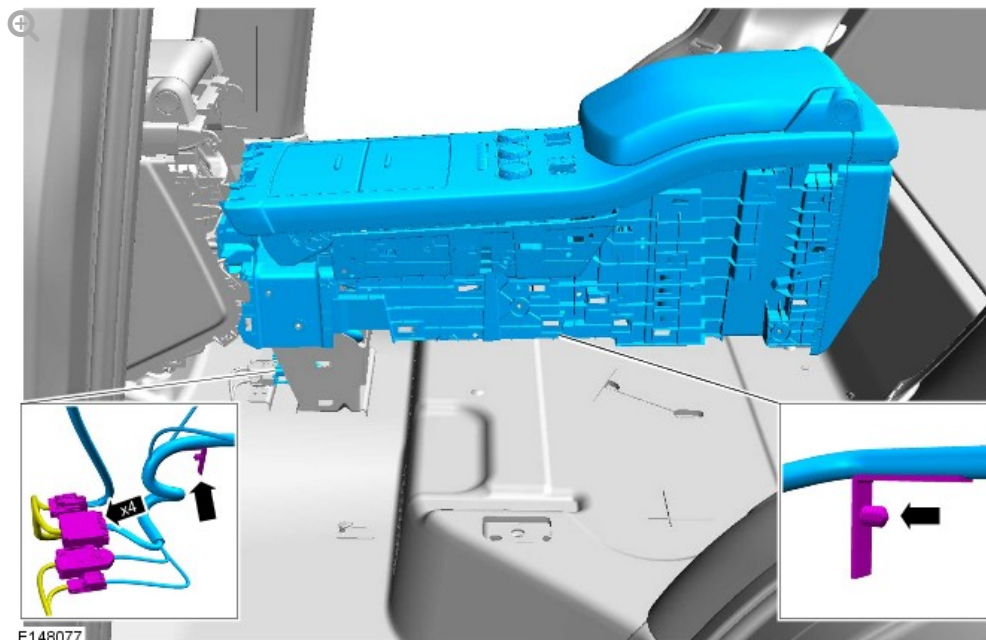

E148077

13.

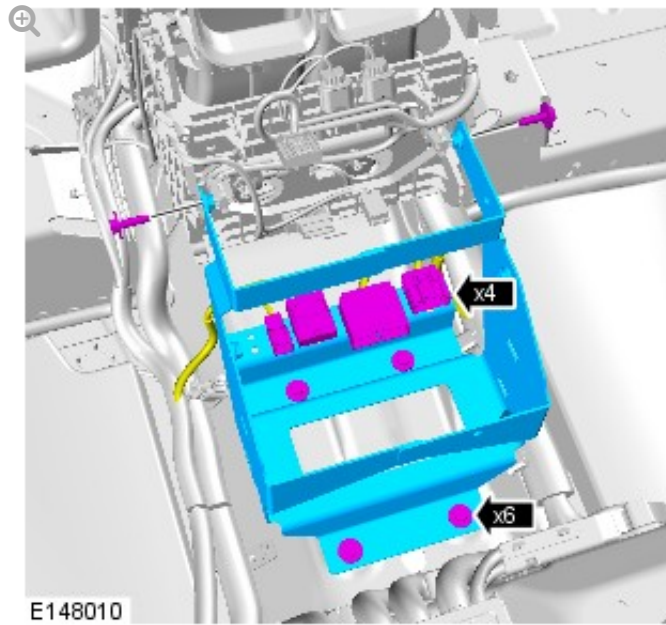


Torque: 9 Nm




All vehicles

14.

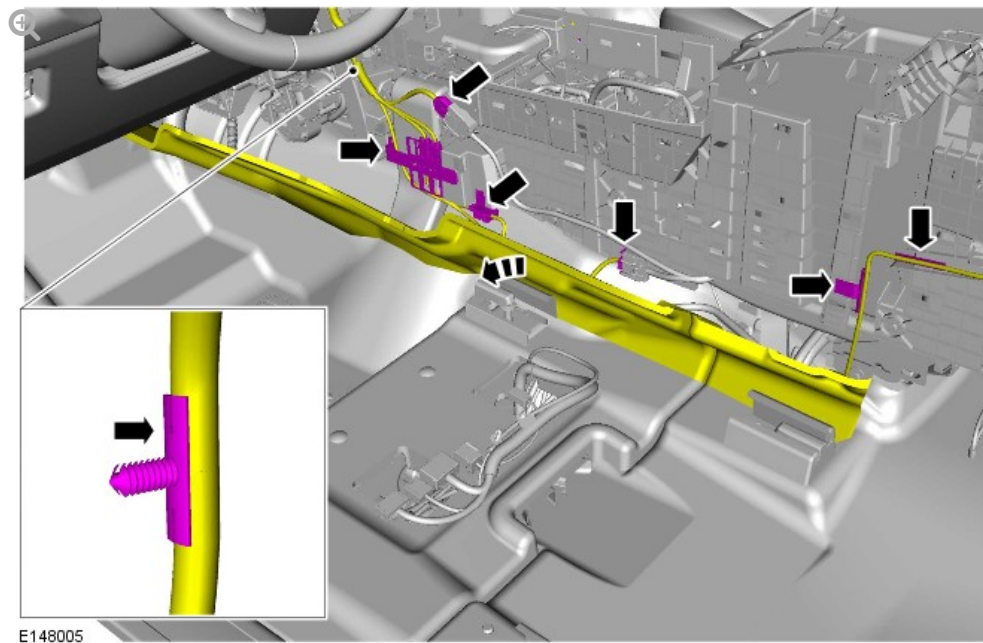


15.

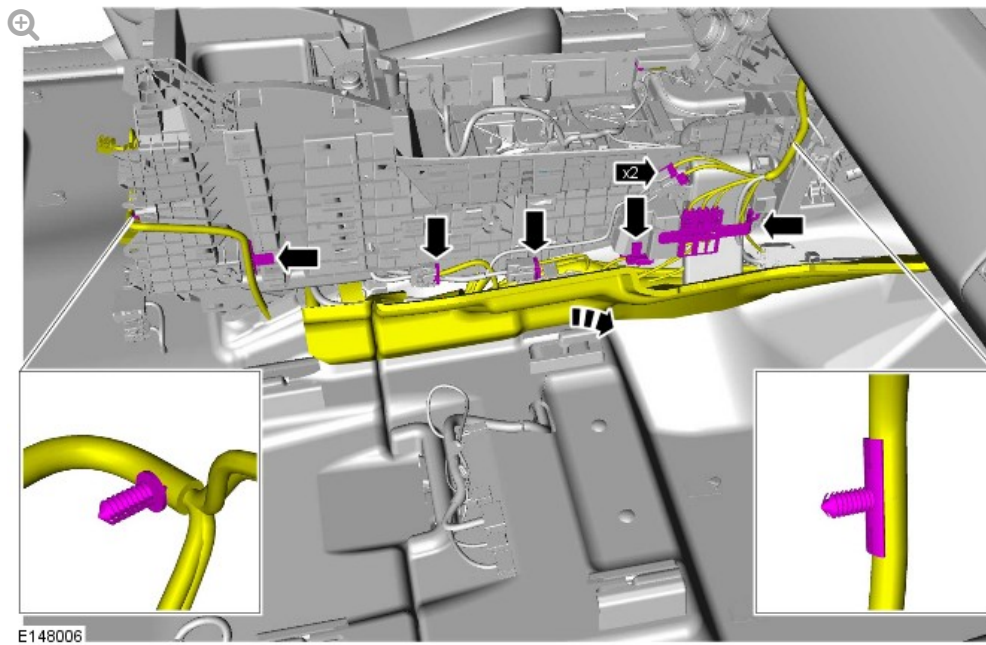


16.

NOTE:


Repeat the procedure for the other side.

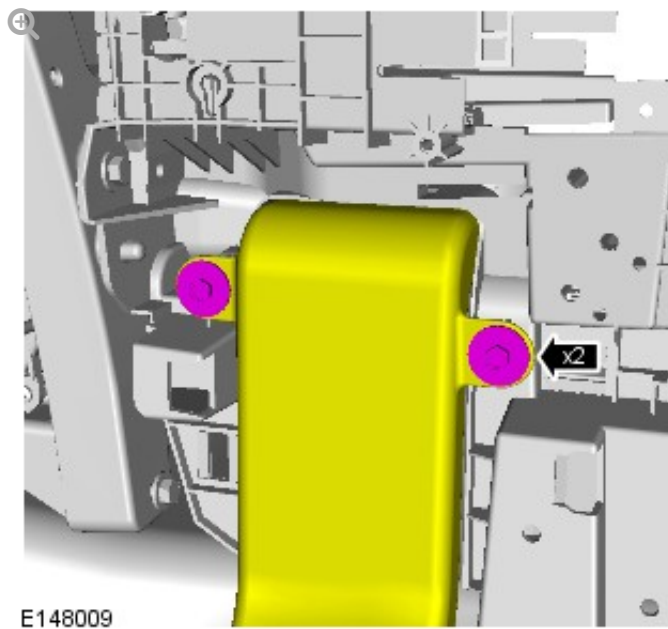

17.

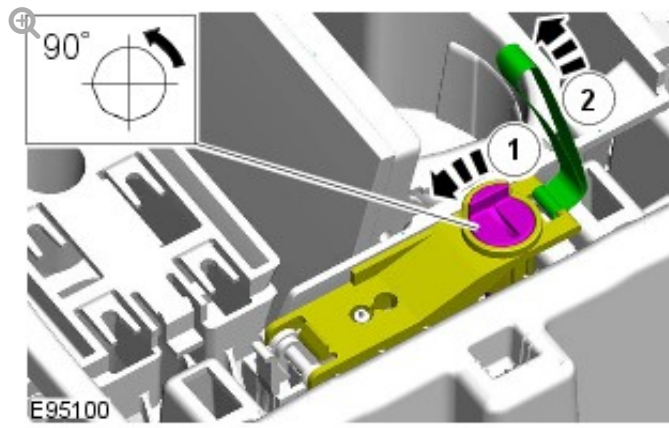


18.

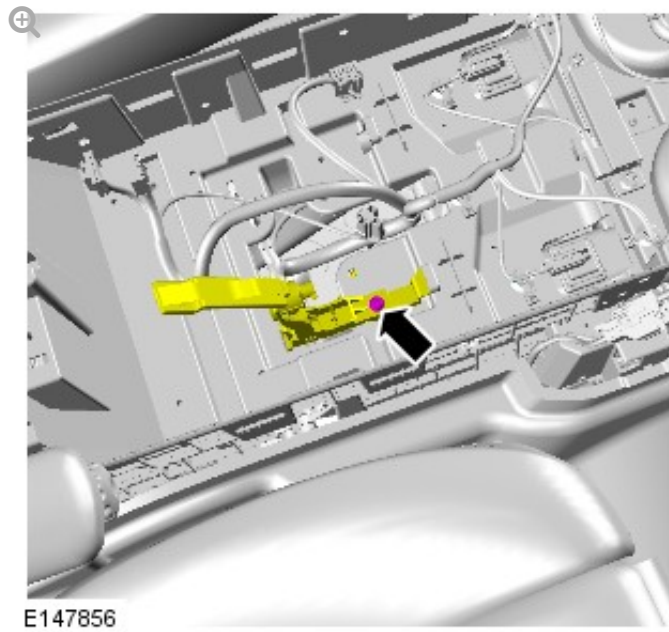

Torque: 3 Nm

19.


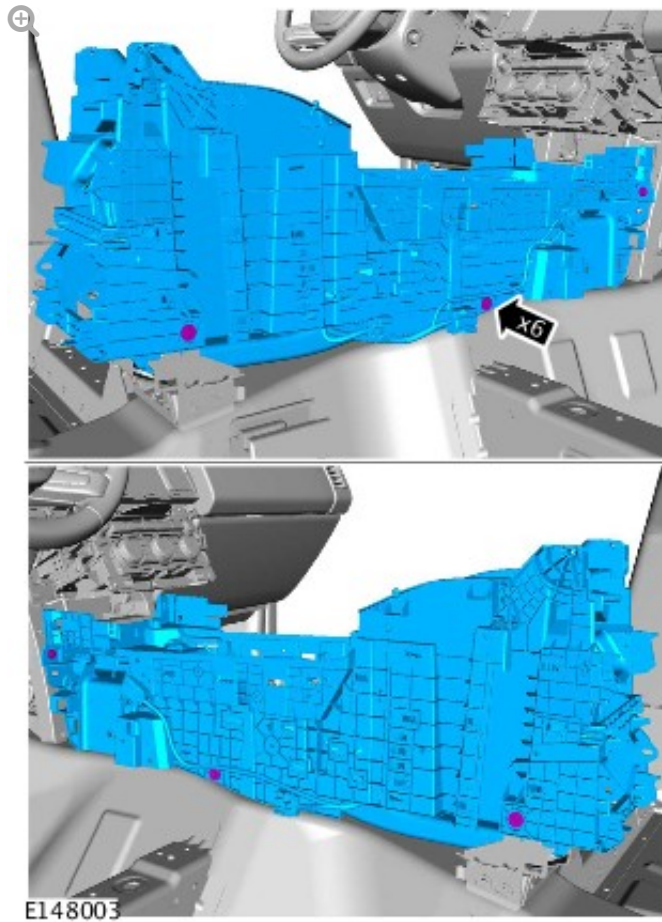


Torque: 9 Nm

20.



NOTE:

Do not disassemble further if the component is removed for access only.

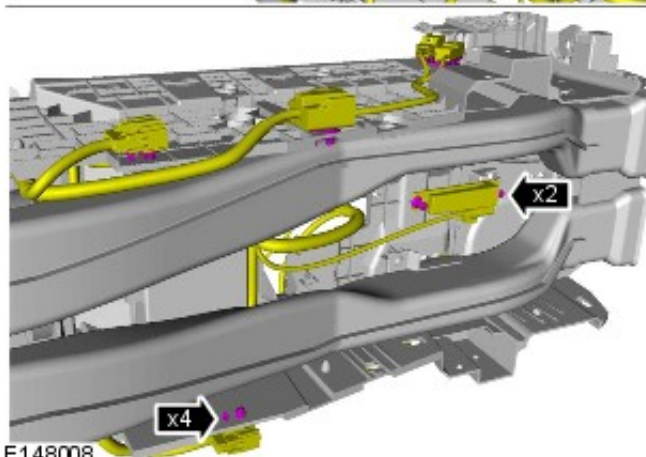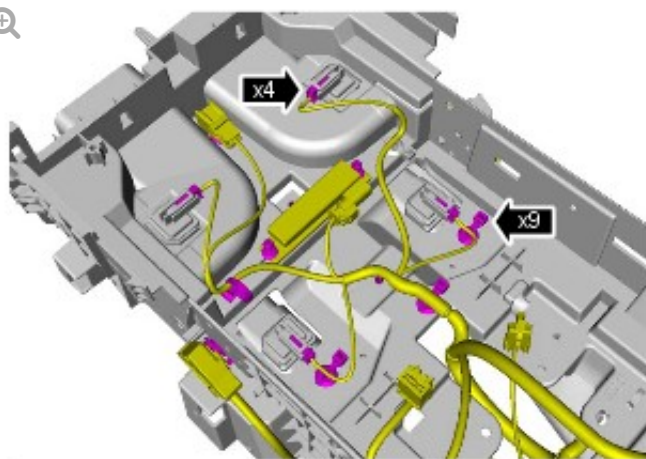


E148008

21.

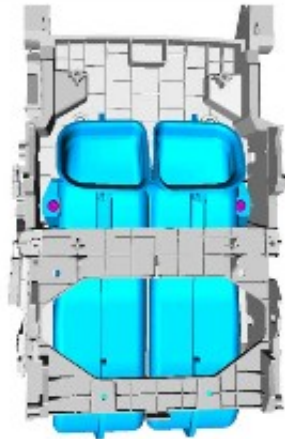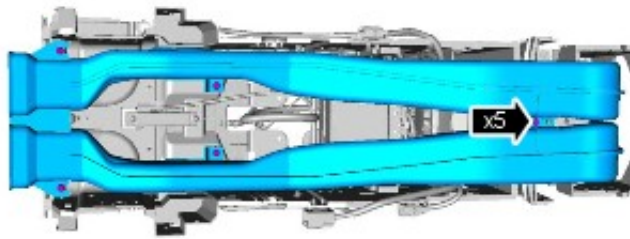


E148000

22.

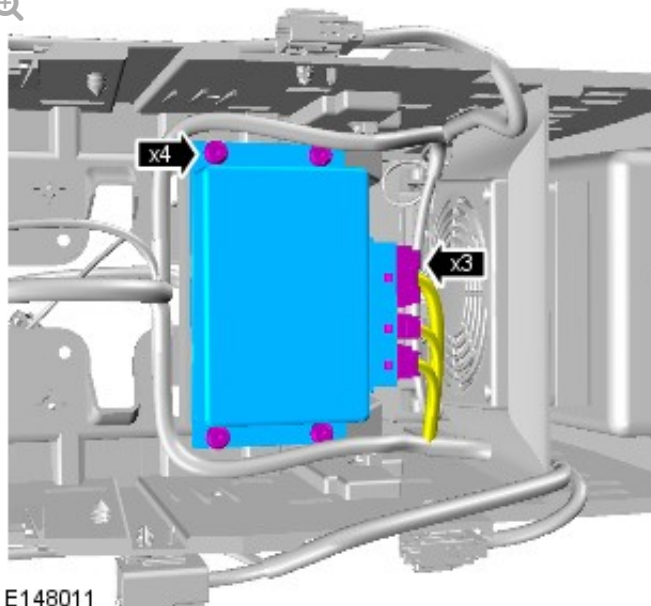


E148011

23.

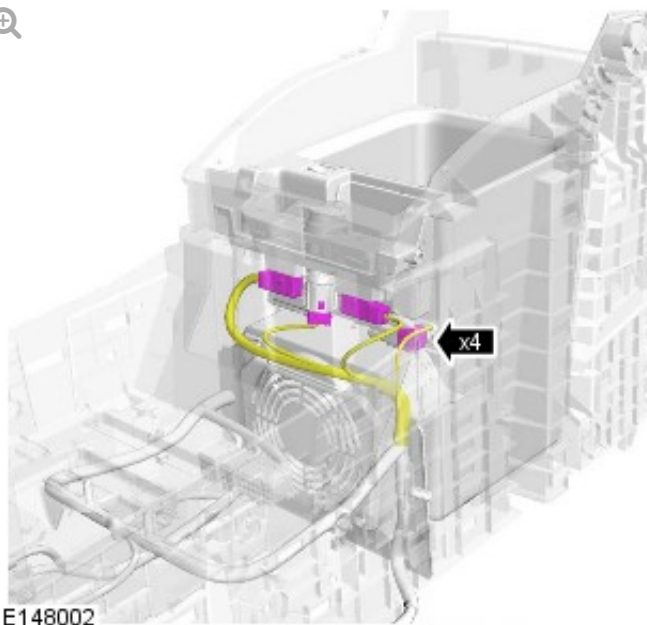


E148002

24.

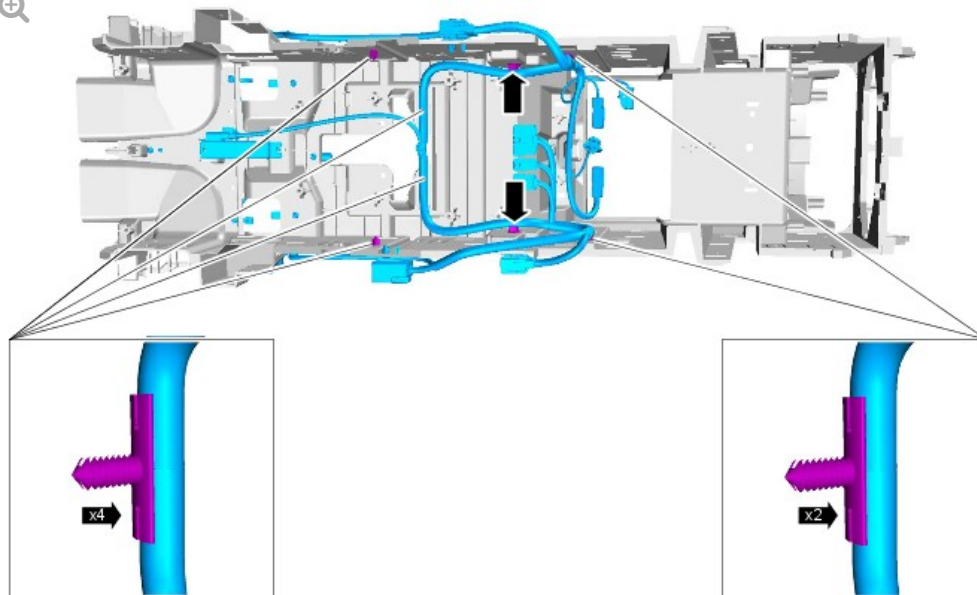


E148004

25.

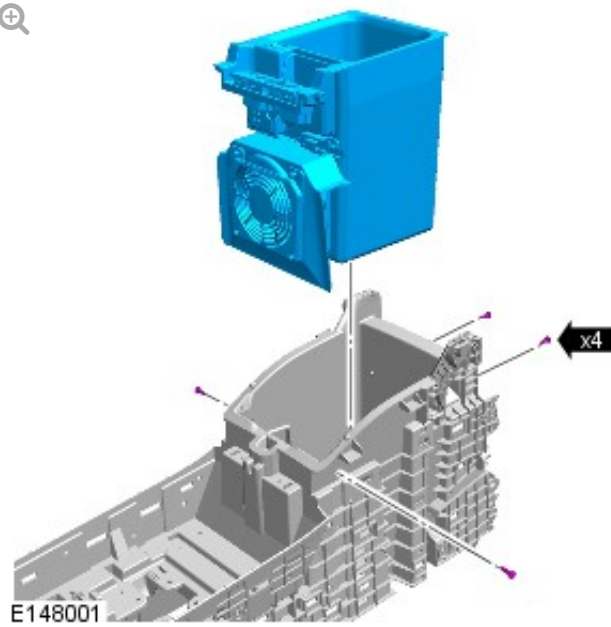

26.

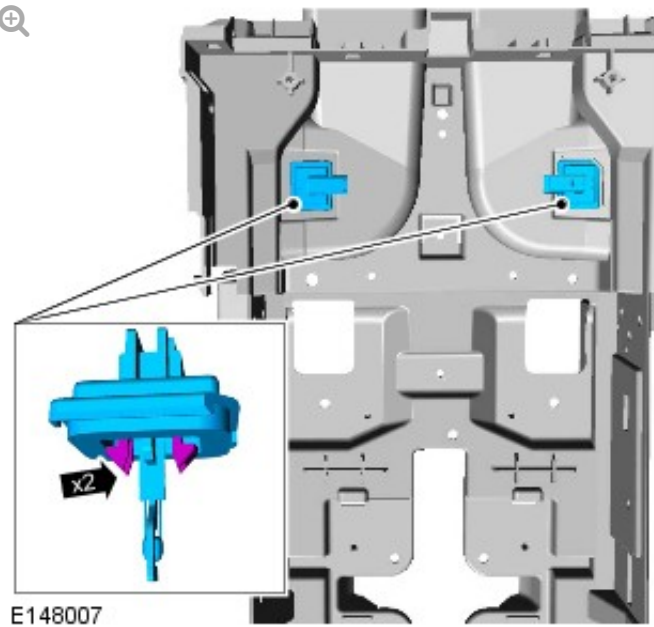


INSTALLATION

1.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

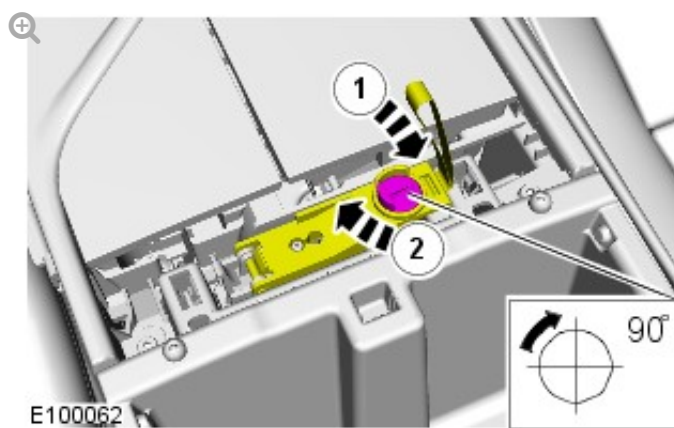

2. To install, reverse the removal procedure.