

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - STANDARD WHEEL BASE

INSTRUMENT PANEL REINFORCEMENT (G1236450)


REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:


- Persons working on the supplemental restraint system (SRS) must be fully trained and have been issued with the safety guidelines.
- Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on the SRS.
- The SRS electrical connectors are unique. DO NOT force, or attempt to connect electrical connectors to the wrong sockets.
- The correct procedures must always be used when working on SRS components.
- It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.
- Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.
- Take extra care when handling SRS components.

1. Make the air bag supplemental restraint system (SRS) safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
3. Refer to: [Clockspring](#) (501-20B Supplemental Restraint System, Removal and Installation).
4. Refer to: [Floor Console Upper Section](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).

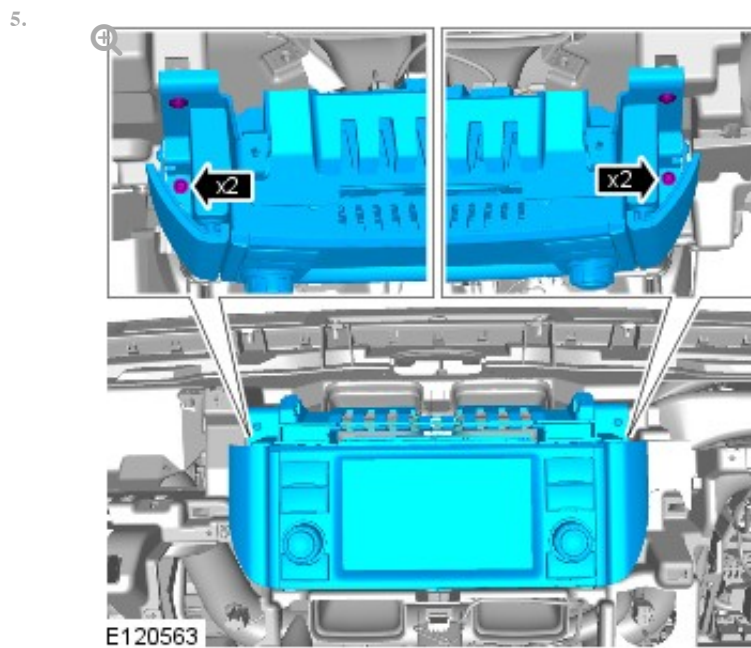


Torque: 2 Nm

6.

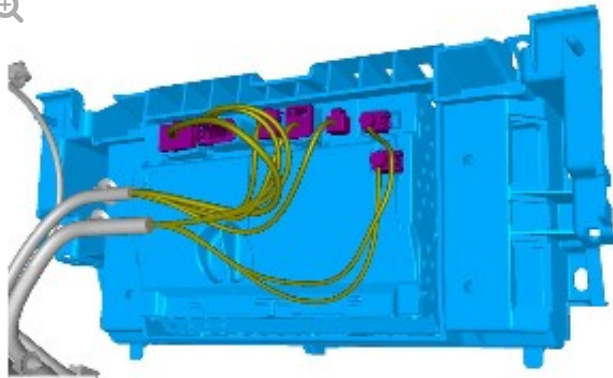


E120564

7.

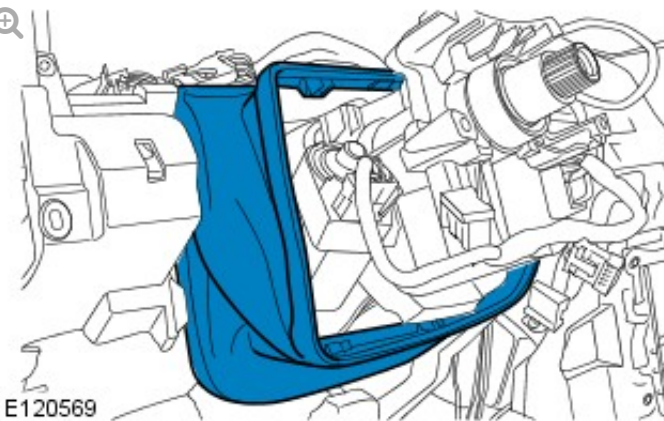

E120569


8.

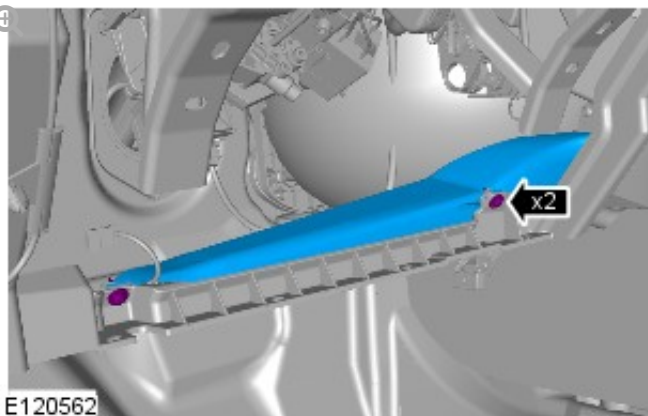


E120562

Torque: 3 Nm


9.

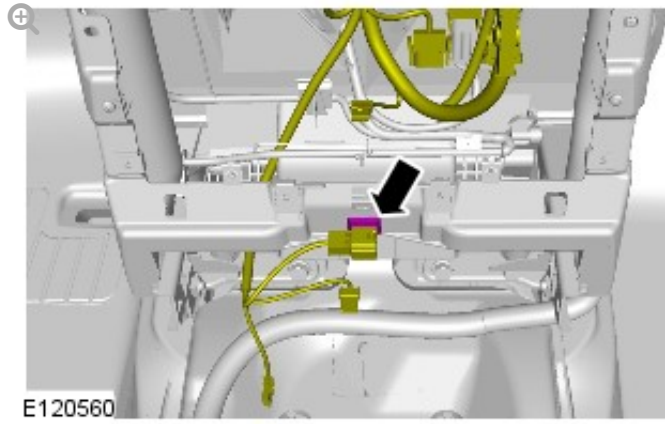

10.

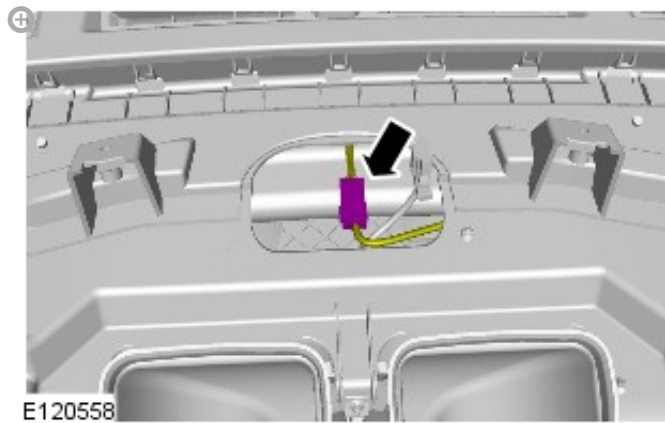


11.

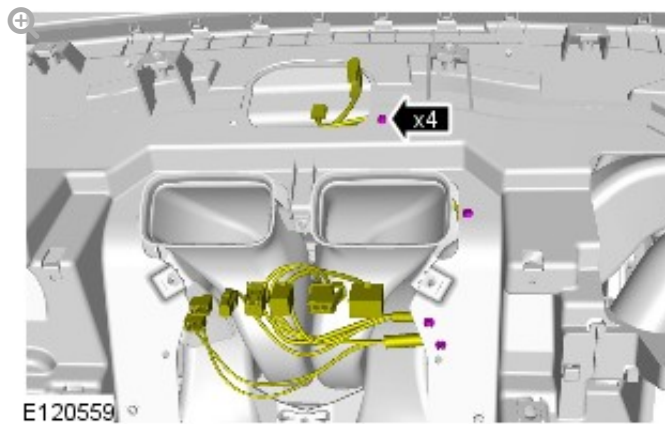

12.

NOTE:

Note the position of the wiring harnesses to aid installation.

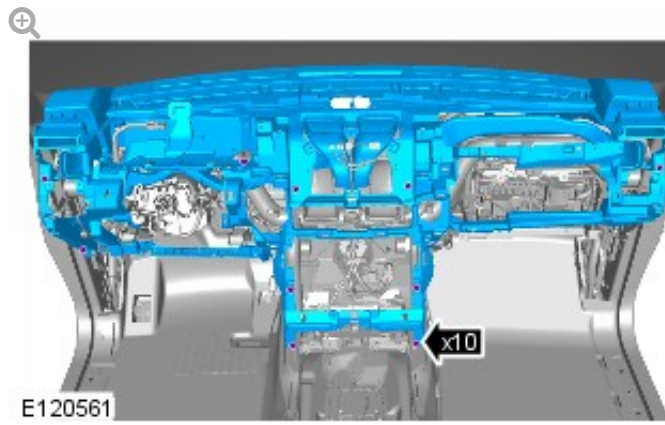


Torque: 3 Nm


13.

NOTE:

Do not disassemble further if the component is removed for access only.

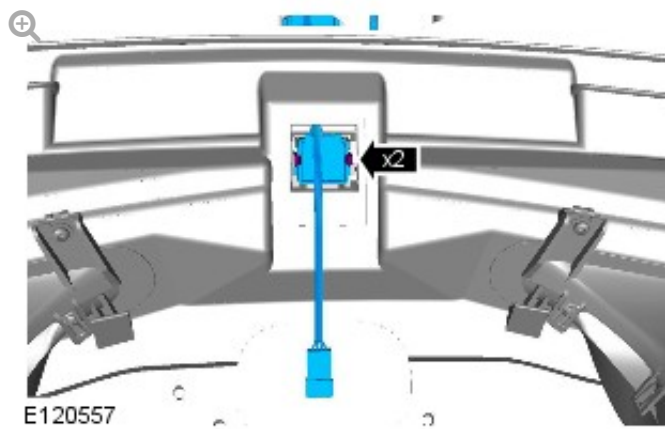


14.

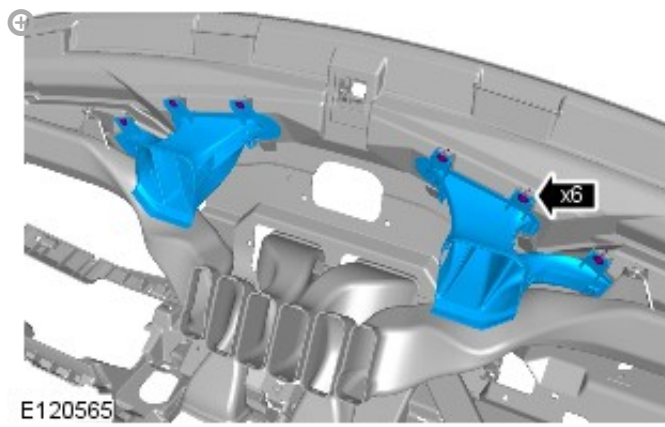


Torque: 3 Nm

15.

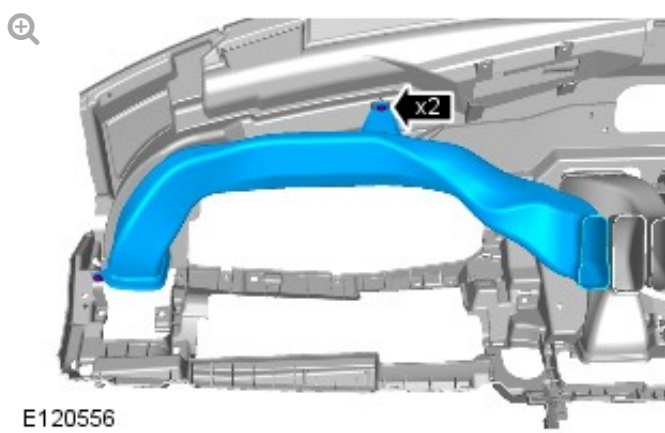


Torque: 3 Nm

16.

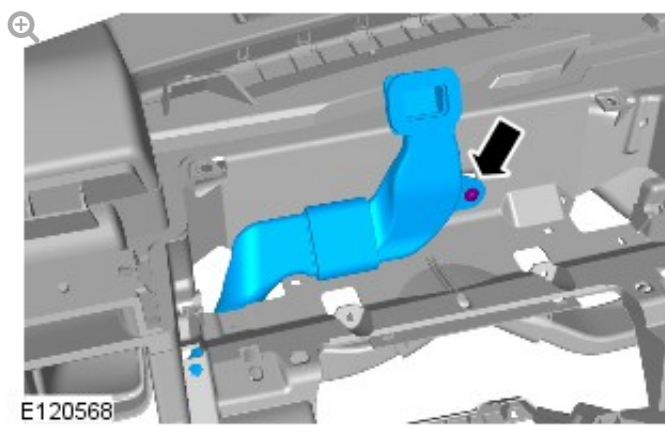


Torque: 3 Nm

17.

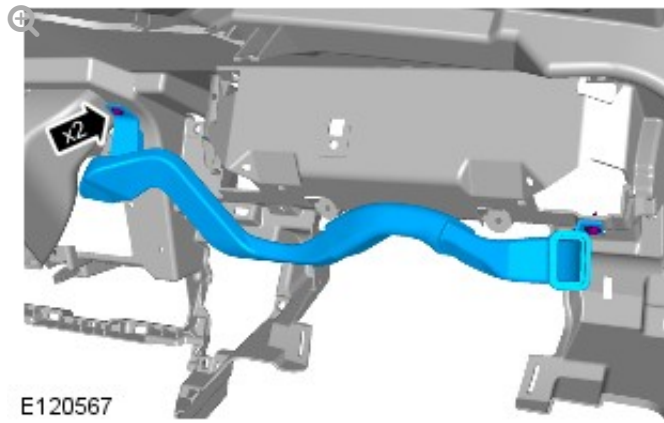

Torque: 3 Nm

18.

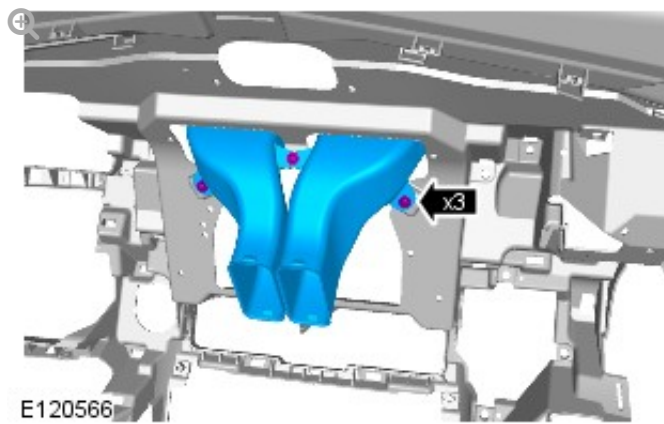

Torque: 3 Nm

INSTALLATION

1. To install, reverse the removal procedure.