

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - STANDARD WHEEL BASE

INSTRUMENT PANEL UPPER SECTION [G1775269]

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- Do not probe supplemental restraint system (SRS) electrical connectors.
- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplementary restraints system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait for one minute. Failure to follow this instruction may result in personal injury.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Using a suitable trim tool.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).
2. Refer to: Upper Glove Compartment (501-12, Removal and Installation).
3. Refer to: Lower Glove Compartment (501-12, Removal and Installation).
4. Refer to: Information and Entertainment Display (415-01, Removal and Installation).
5. Refer to: Audio Unit (415-01, Removal and Installation).
6. Refer to: Floor Console (501-12, Removal and Installation).

7.

NOTE:


Repeat the procedure for the other side.



8.

NOTE:

Repeat the procedure for the other side.

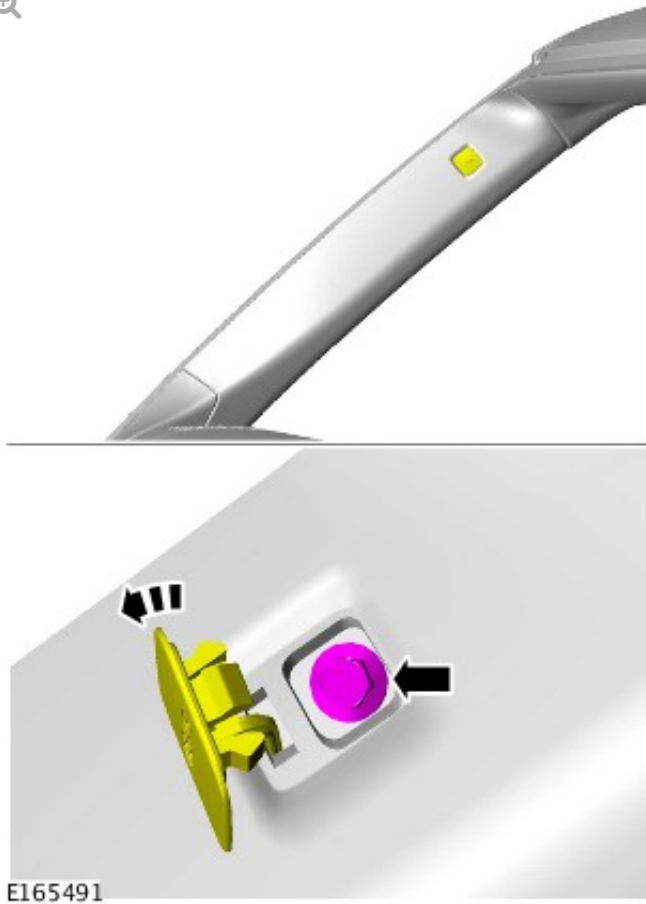



E165491

Torque: 6 Nm


9.

NOTE:

Repeat the procedure for the other side.

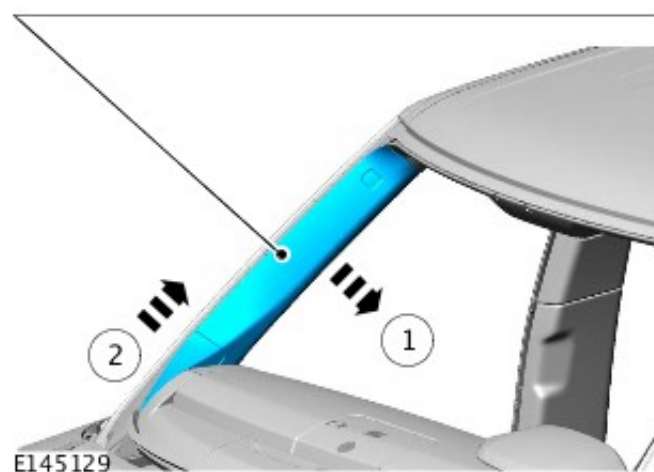
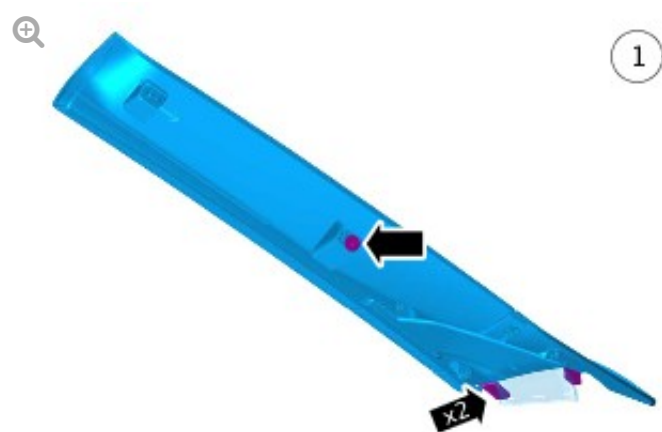


10.

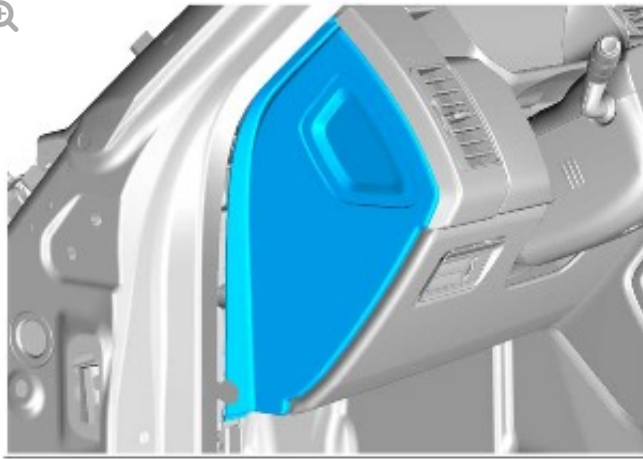

E166312

11.

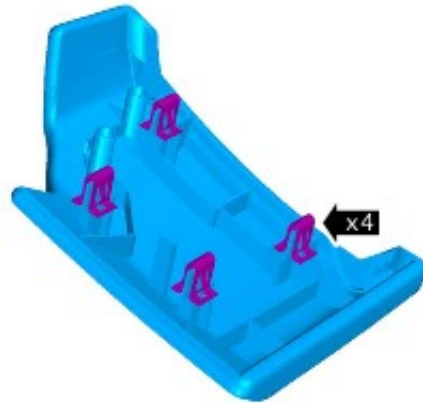
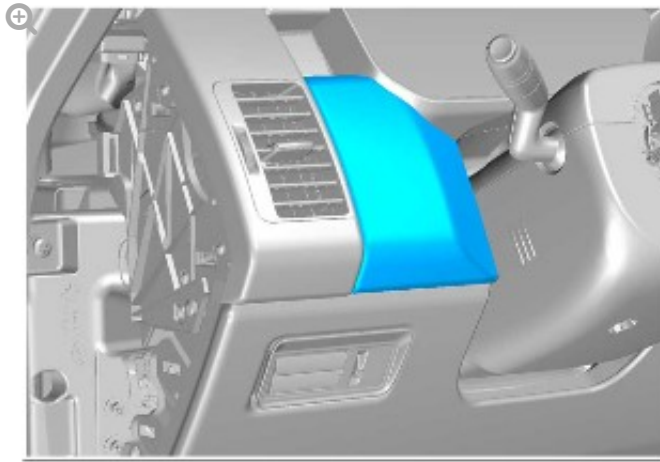


E166310

12.

NOTE:


Repeat the procedure for the other side.

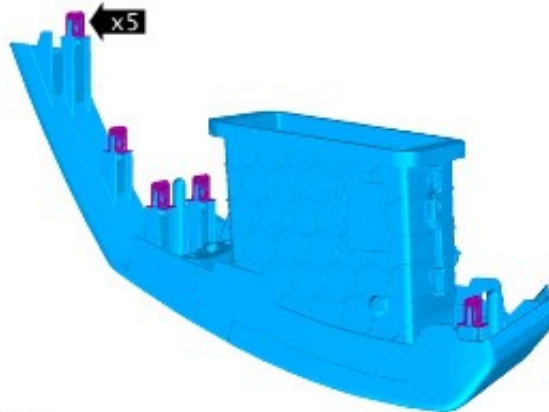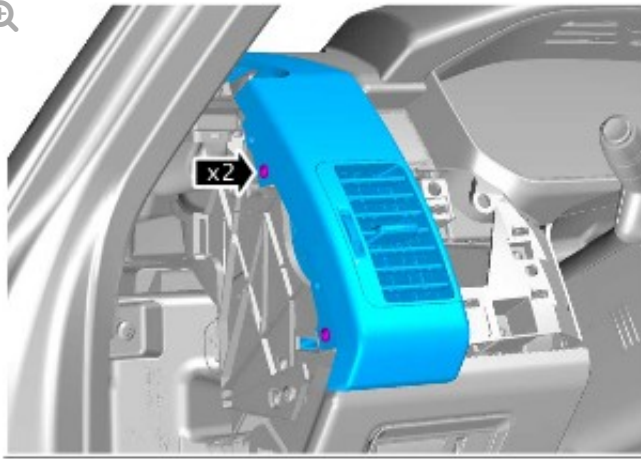

E166311


Torque: 1.7 Nm

13.

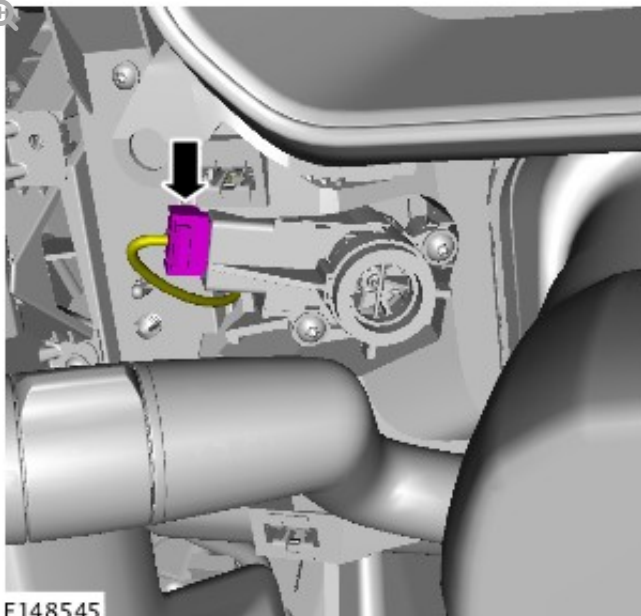


E148545

14.

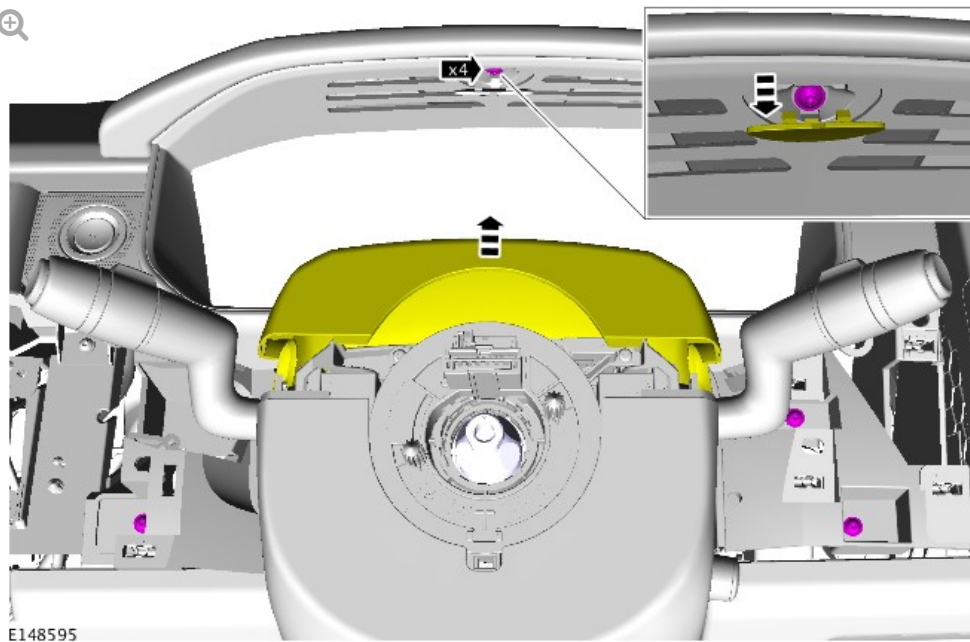


Torque: 1.7 Nm

15.

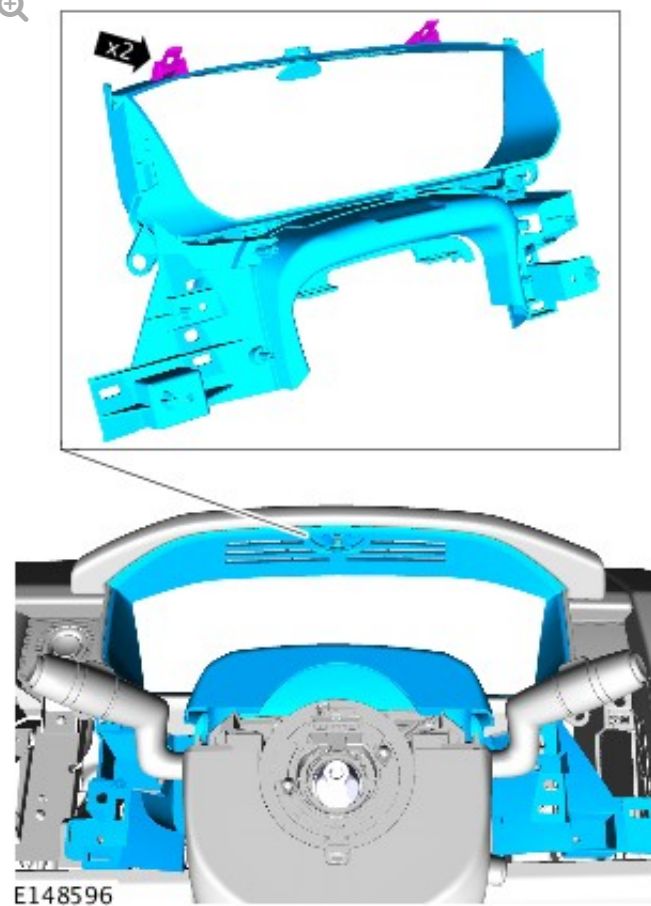


16.

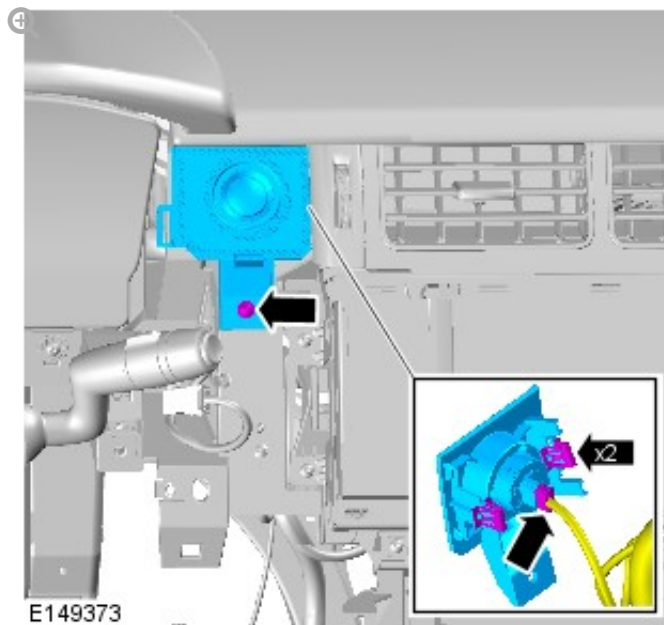


Torque: 1.7 Nm

17.

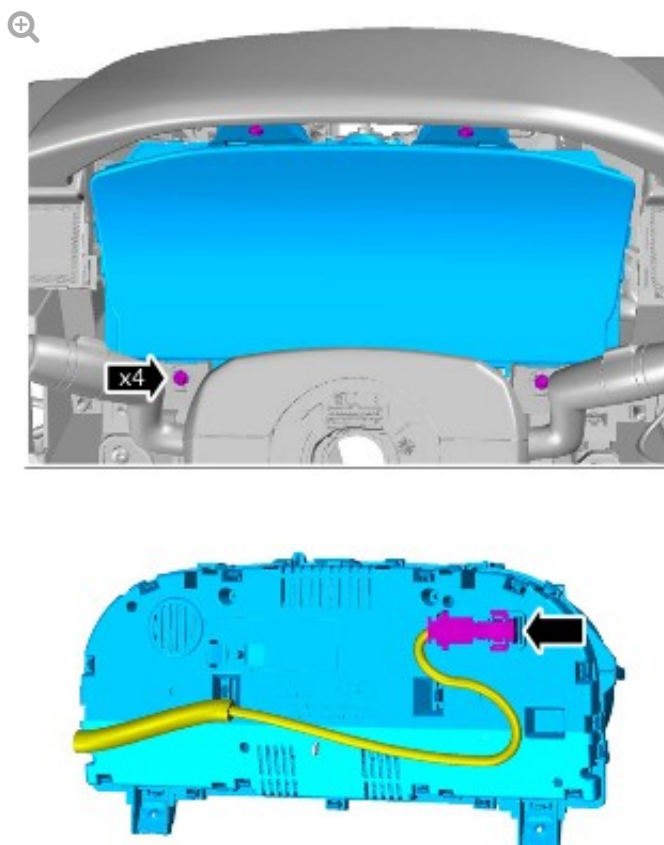


Torque: 1.7 Nm

18.

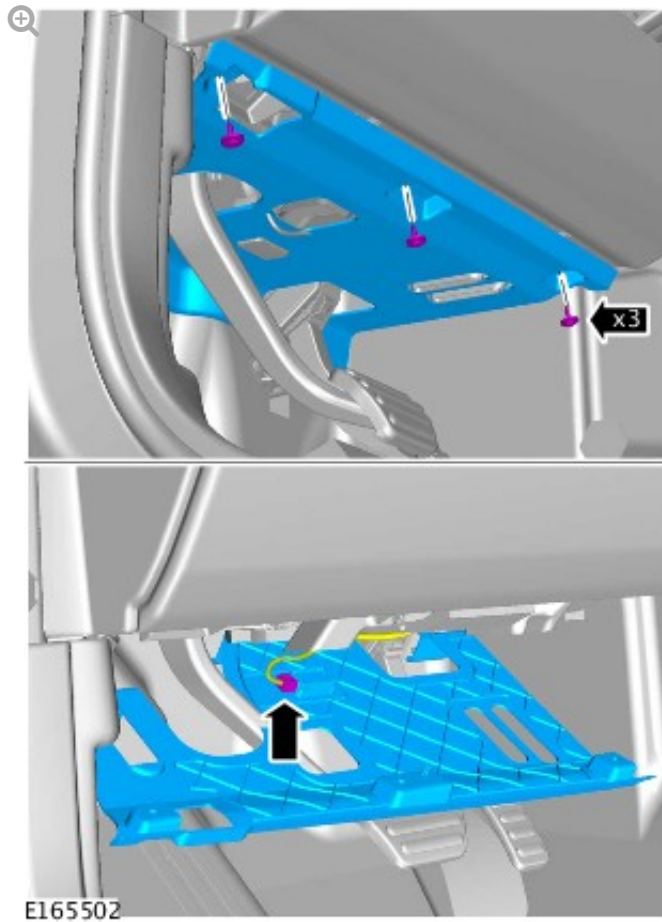

Torque: 1.7 Nm

19.

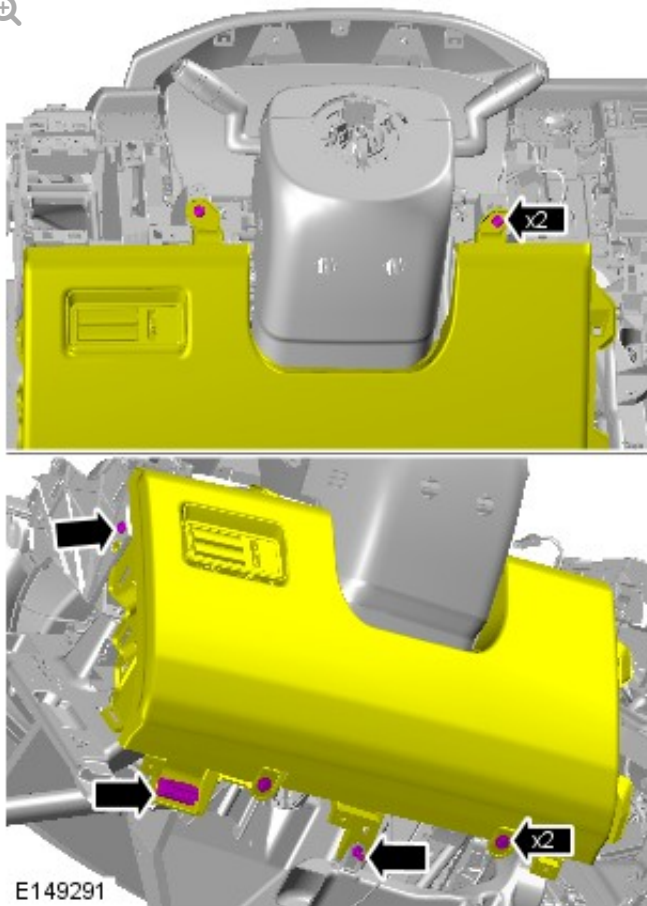


Torque:



Upper bolts M6 9 Nm

Lower bolts M6 2.5 Nm

20.

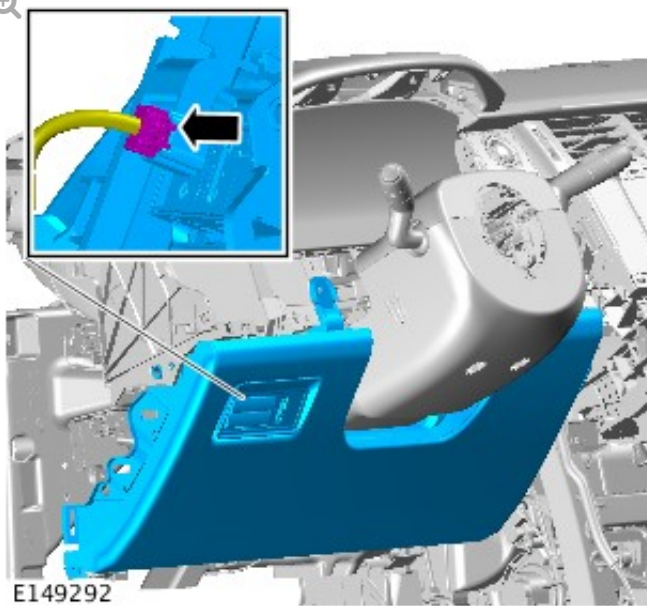


21.

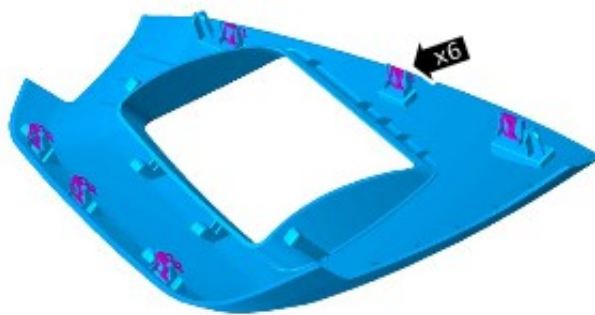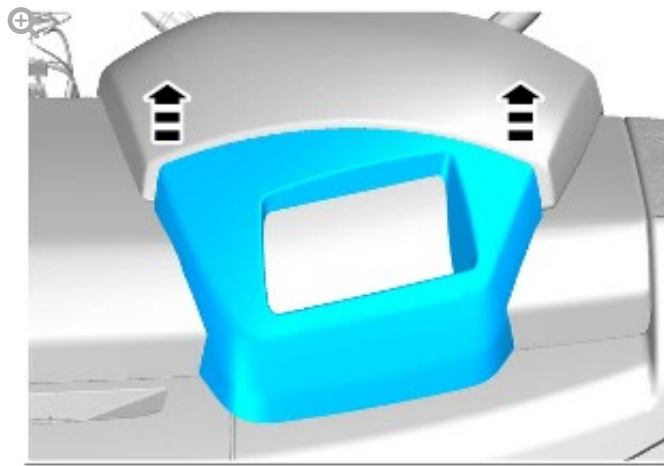


E165501

22.

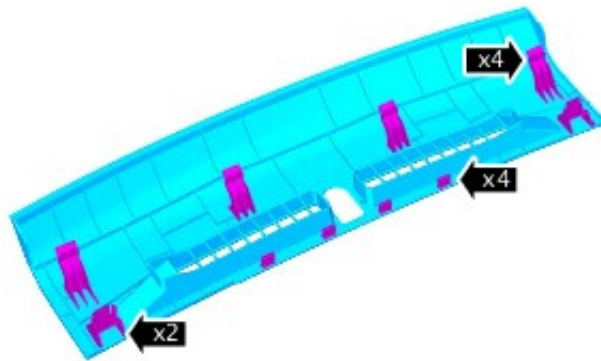

E165495


23.

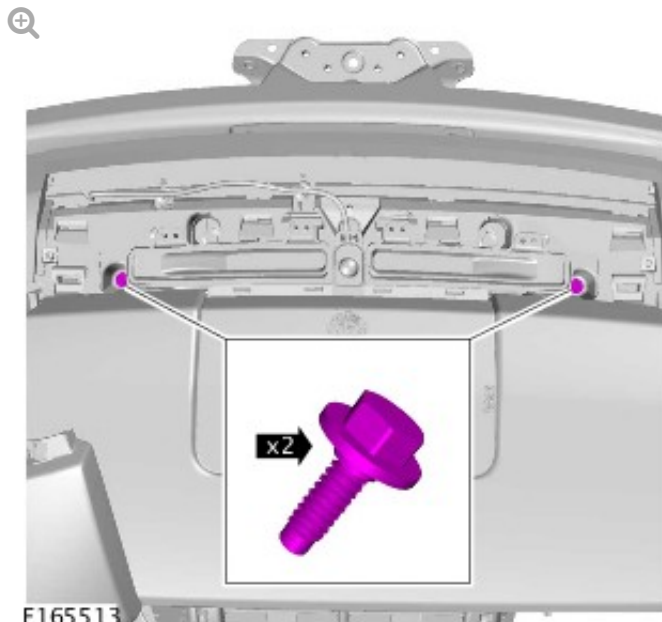


E165513

Torque: 9 Nm

24.

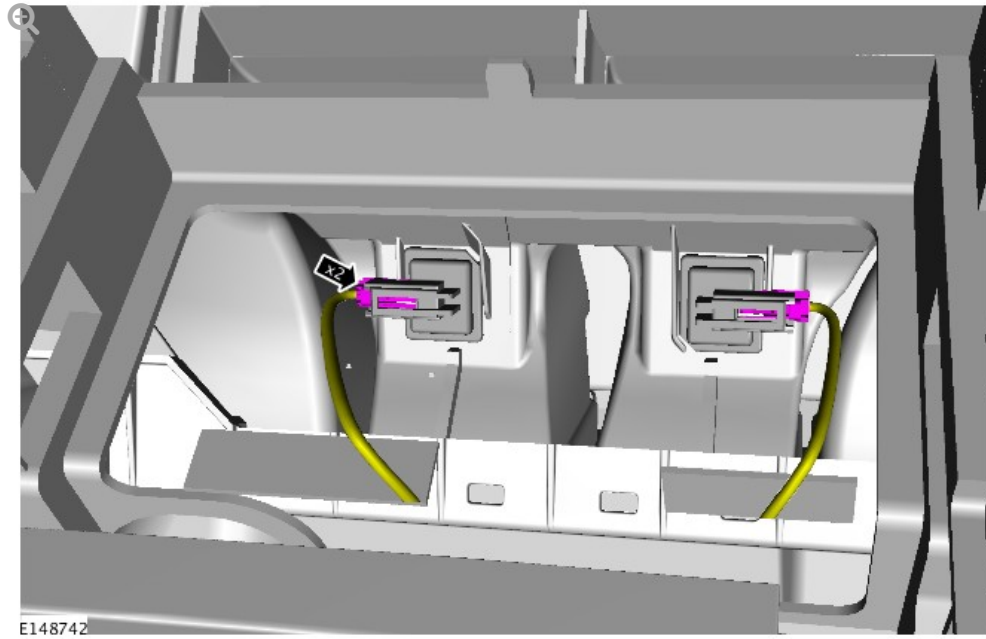


25.

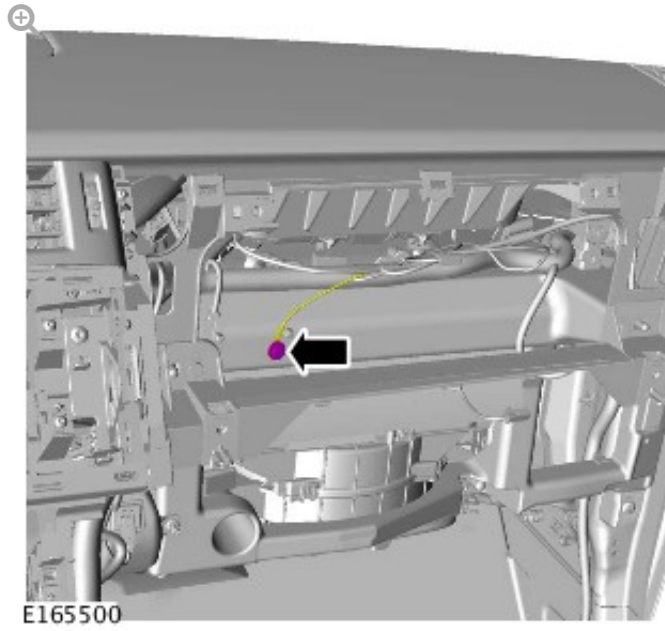


Torque: 9 Nm

26.

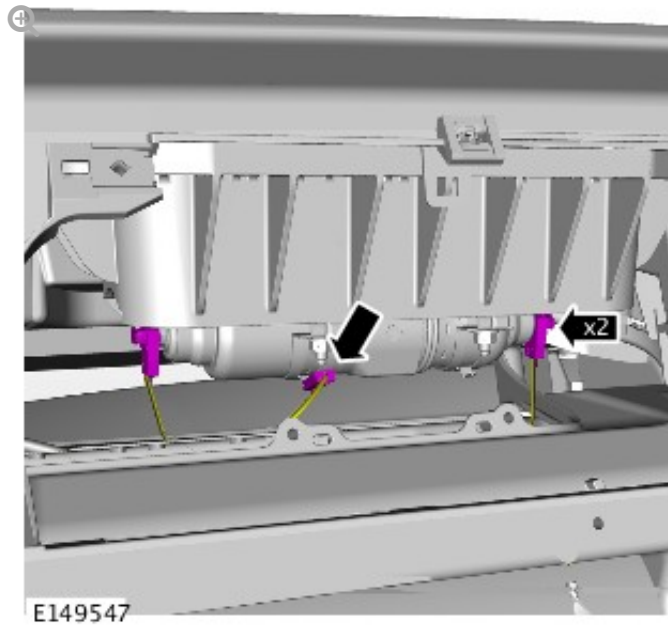


27.

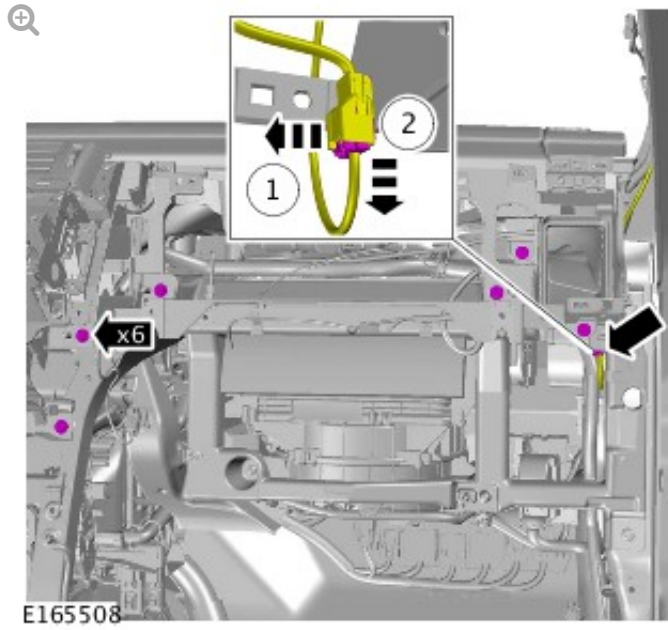


Torque: 9 Nm

28.

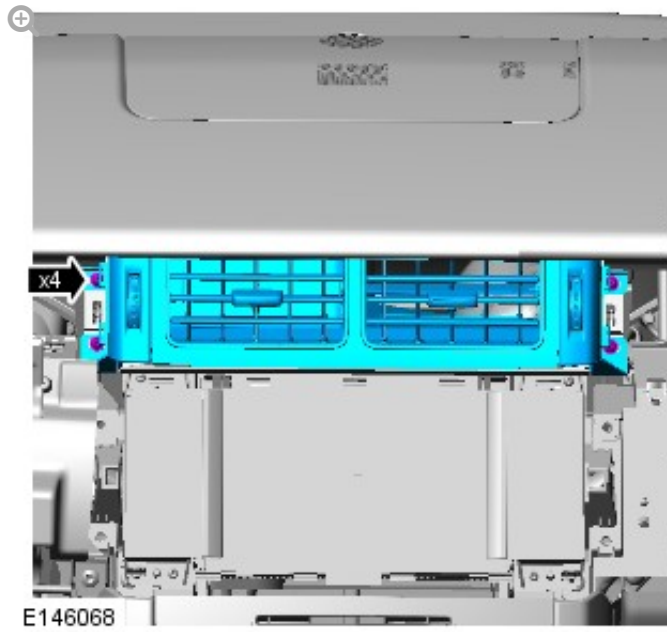


Torque: 1.7 Nm

29.

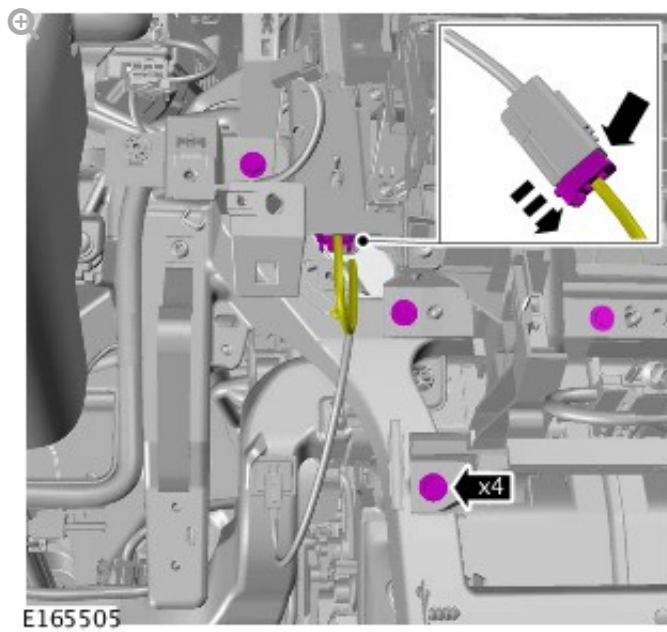

Torque: 9 Nm

30.

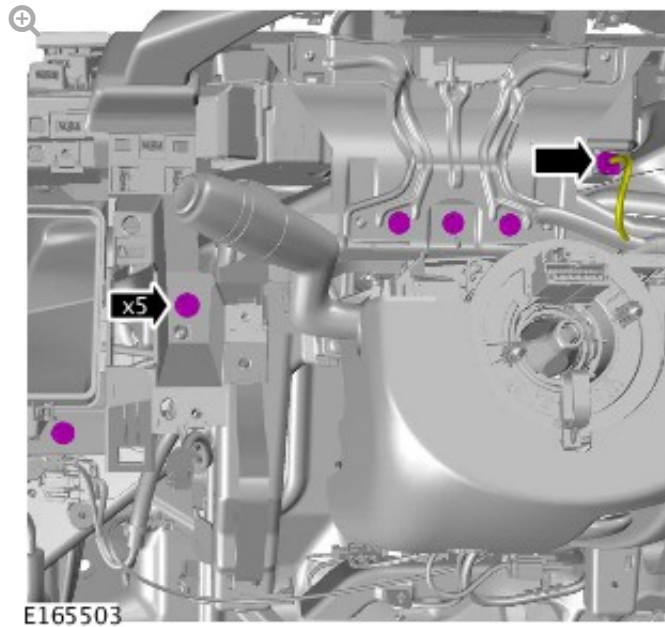


Torque: 9 Nm

31.

NOTE:


Discard the retaining clips.

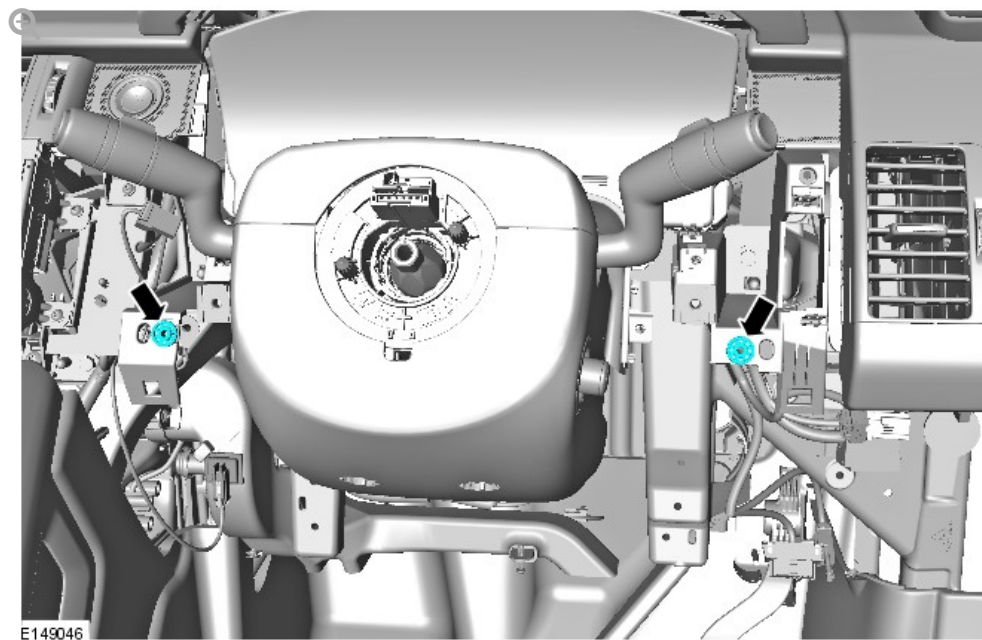

32.

WARNING:



This step requires the aid of another technician.

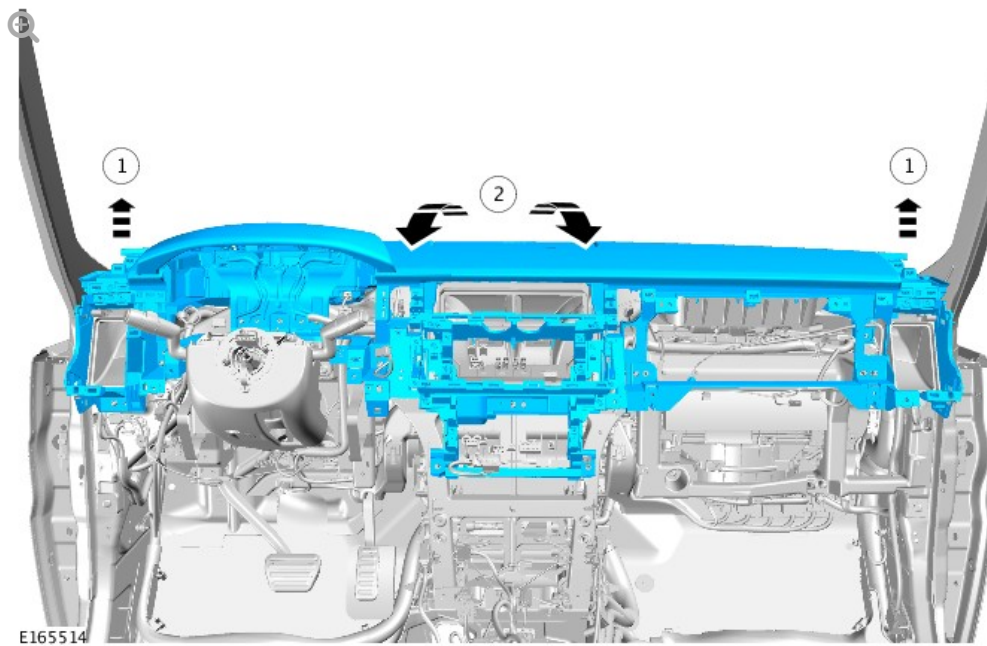

33.


NOTE:

Do not disassemble further if the component is removed for access only.

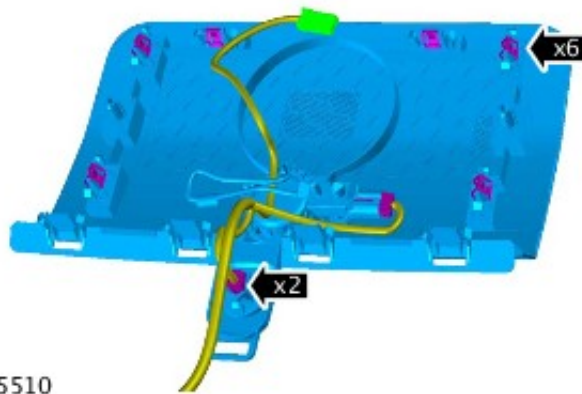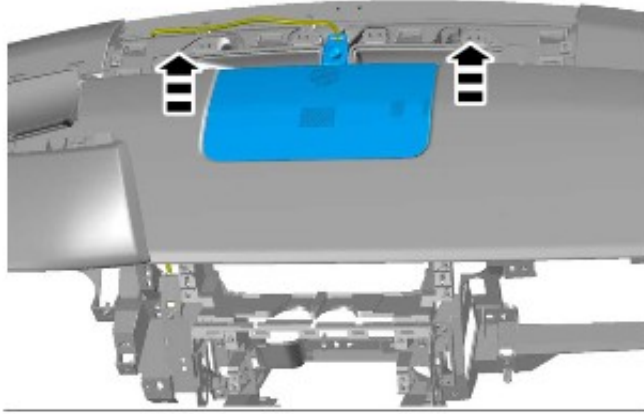

E165510



34.

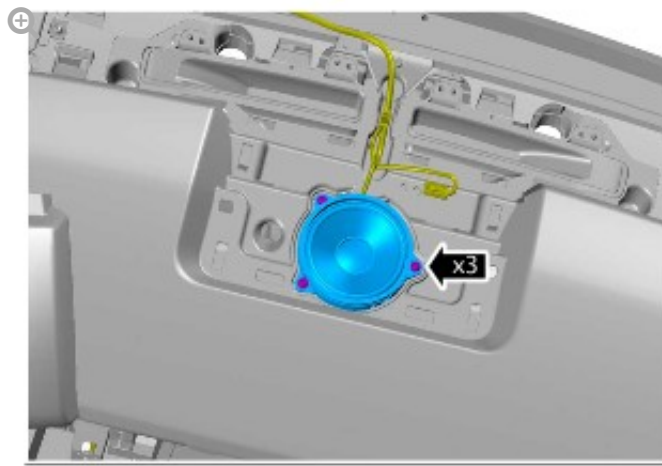

E165512


Torque: 1.7 Nm

35.

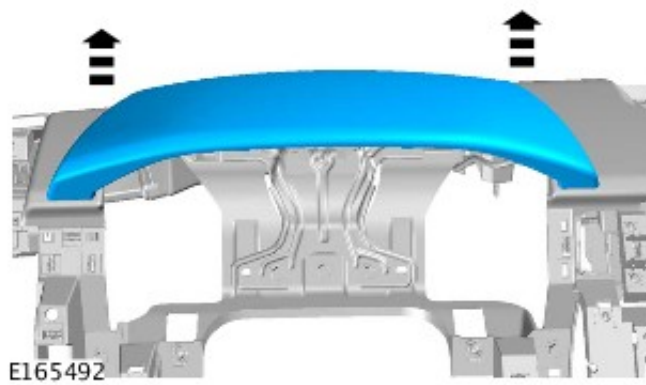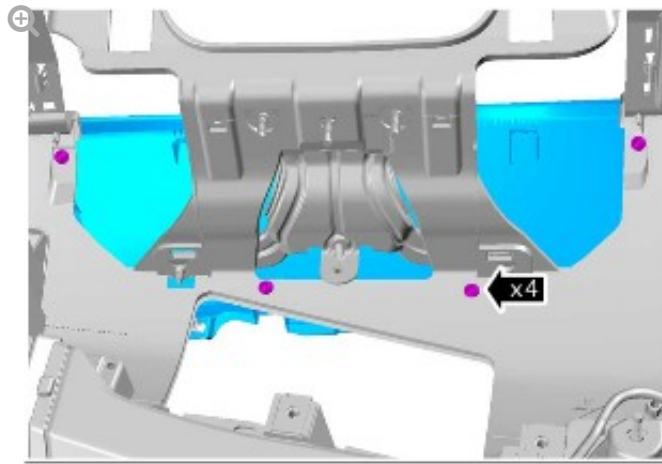



Torque: 1.7 Nm

36.

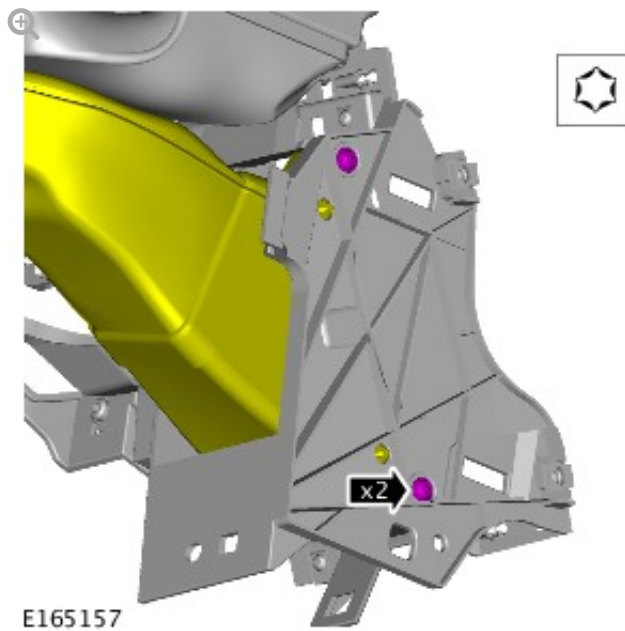


Torque: 1.7 Nm

37.

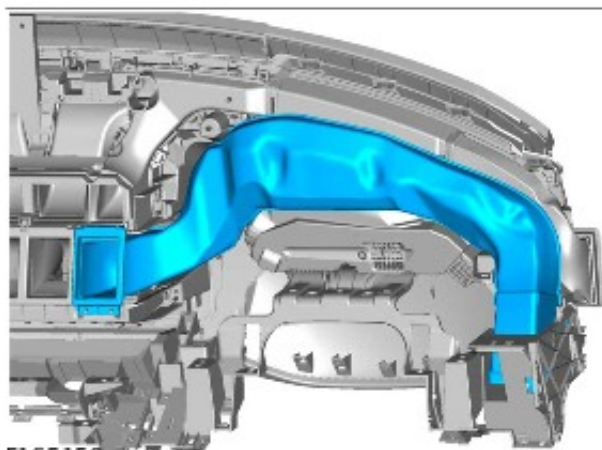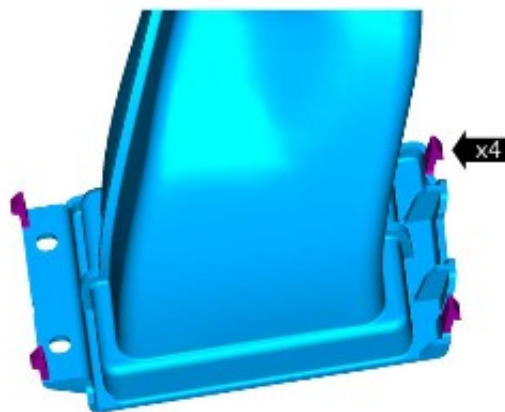

E165158


38.

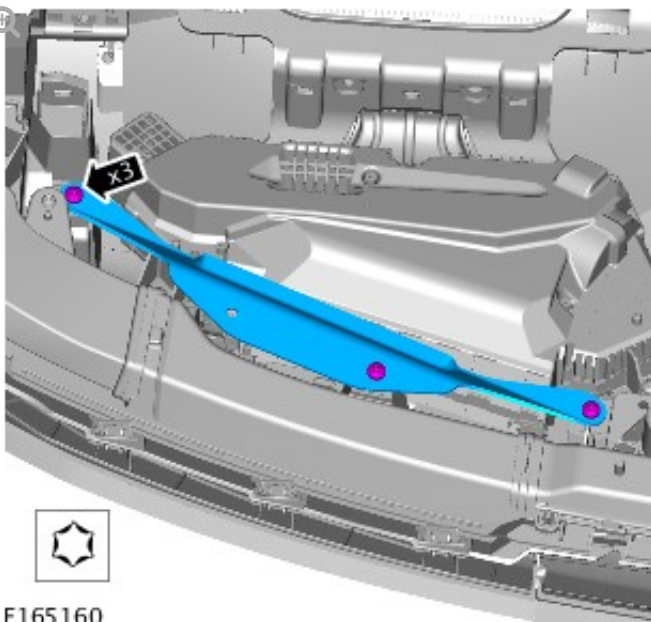

E165160

Torque: 1.7 Nm


39.

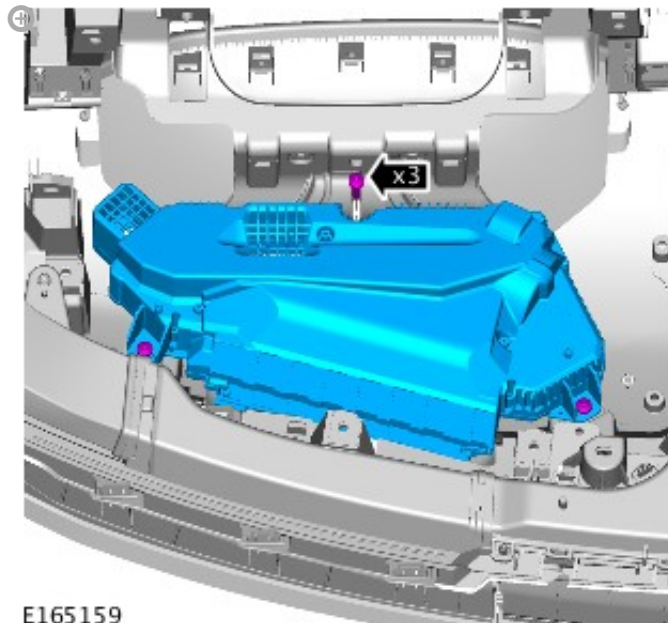

E165159

Torque: 5 Nm



40.

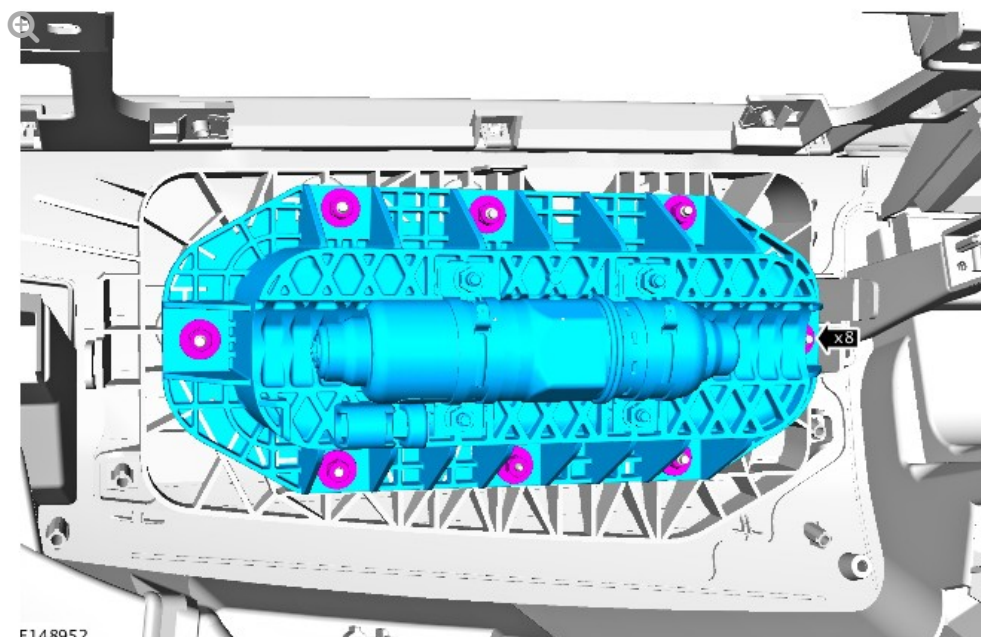

E148952


Torque: 4.5 Nm

41.

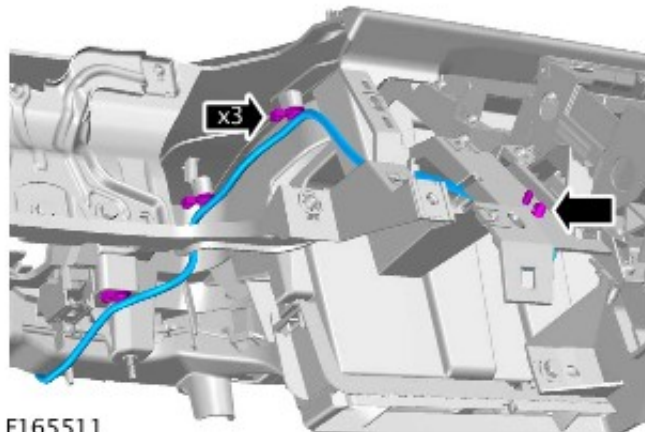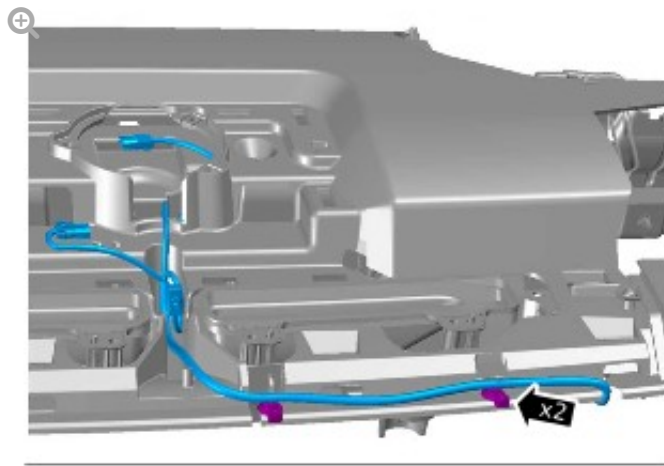

E165511


42.

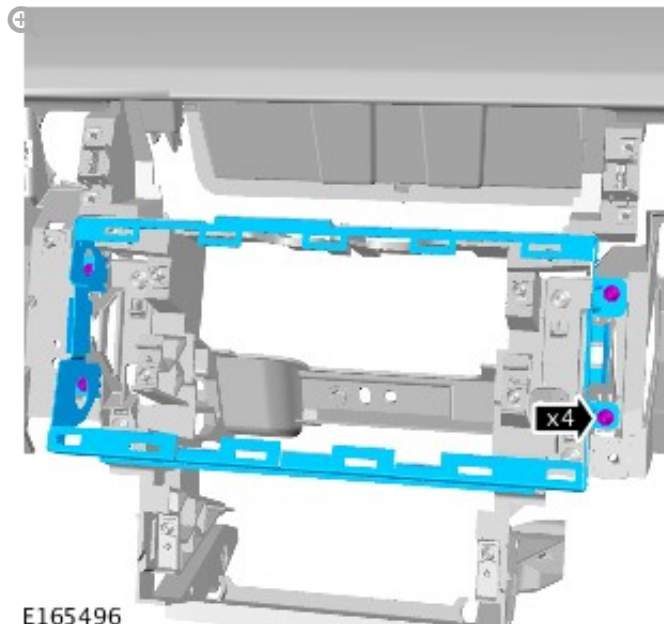

E165496

Torque: 1.7 Nm

43.

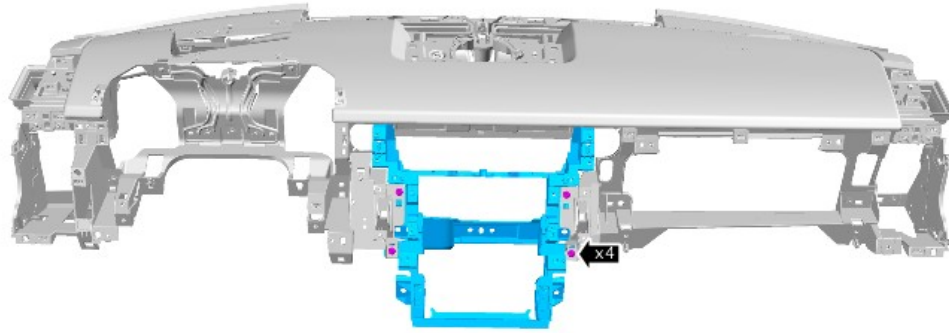

E165506

Torque: 9 Nm

INSTALLATION

1.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.



E149095

2. To install, reverse the removal procedure.