

2016.0 RANGE ROVER (LG), 501-12

INSTRUMENT PANEL AND CONSOLE - STANDARD WHEEL BASE

REAR FLOOR CONSOLE LOWER STOWAGE COMPARTMENT LID (G1707323)


REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1.

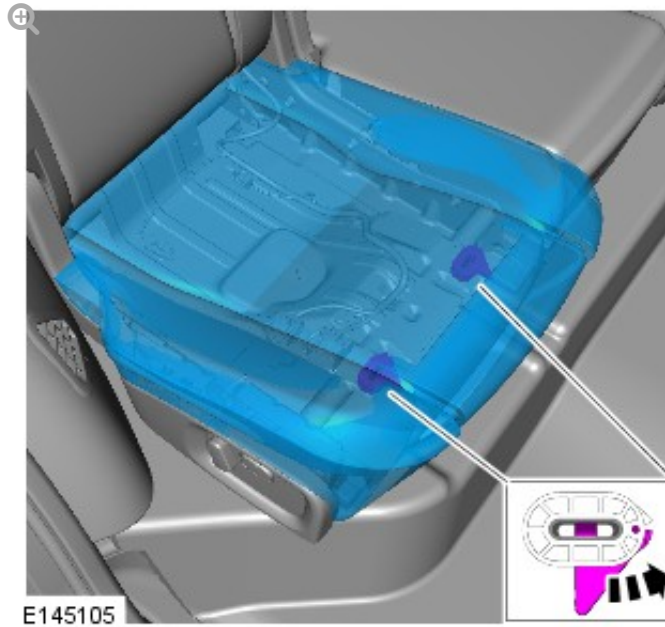


Repeat procedure for the other side.

2.



Repeat procedure for the other side.


3.

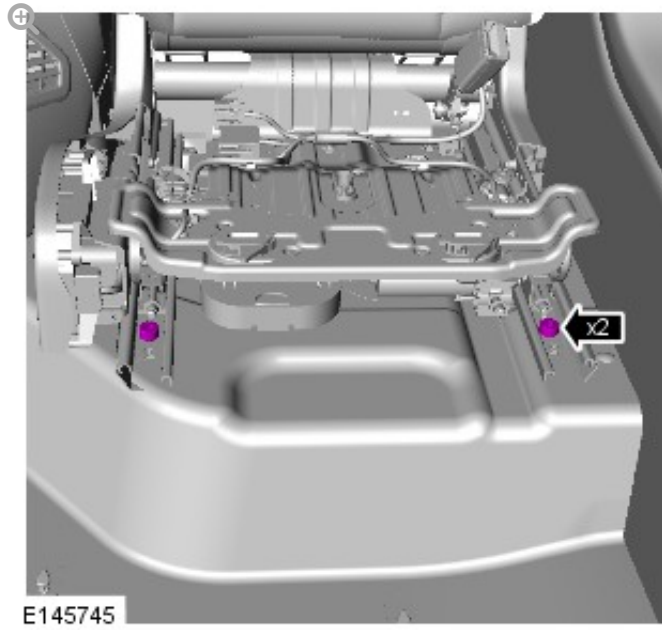

Repeat procedure for the other side.

Torque: 50 Nm

4.

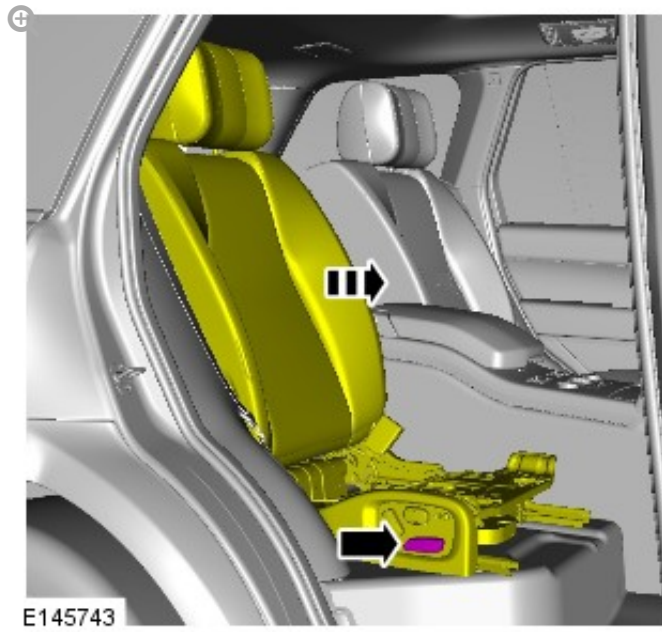

Repeat procedure for the other side.

5.




E146116

Repeat procedure for the other side.

Torque: 50 Nm


6.

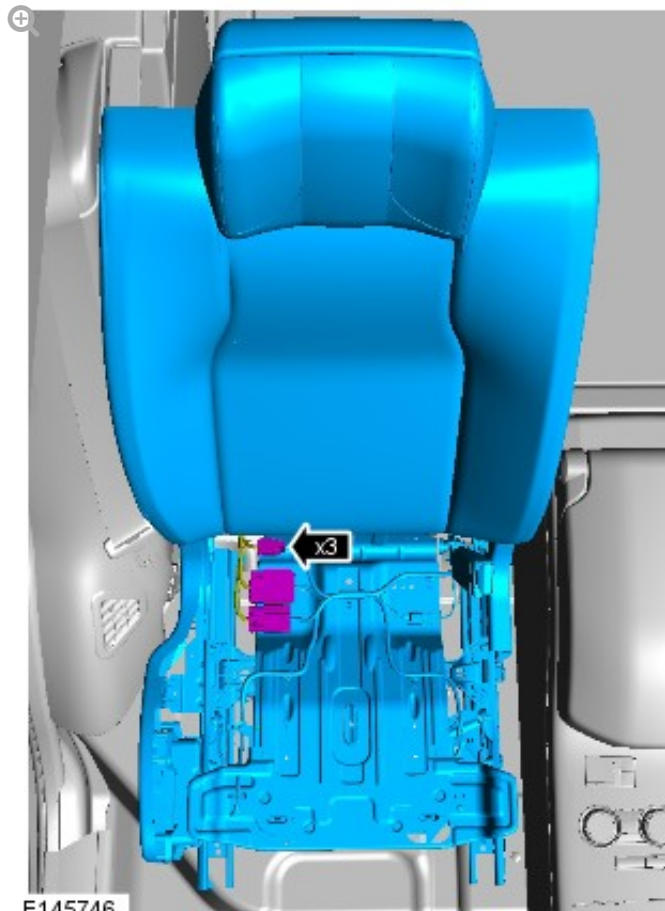


E145746

Repeat procedure for the other side.

7.

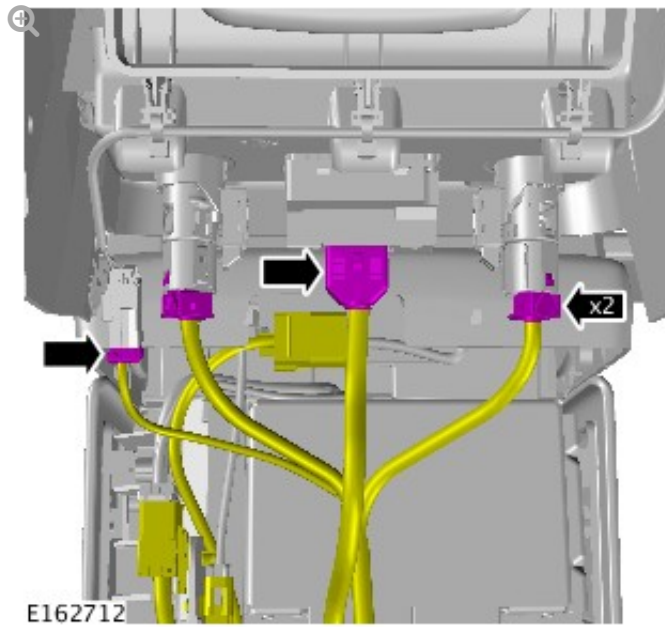


8.

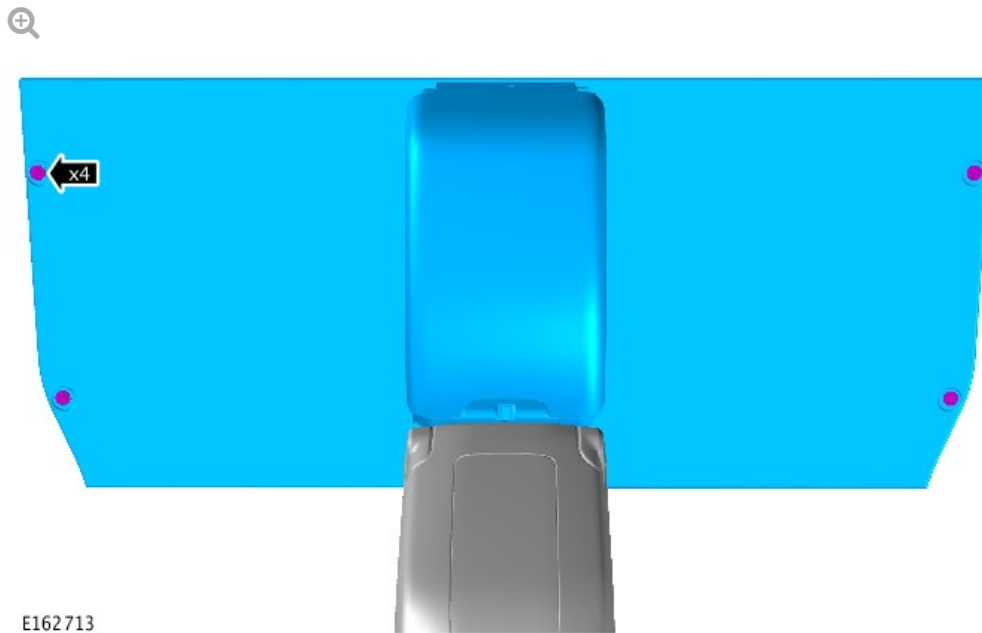

Torque: 10 Nm

9.

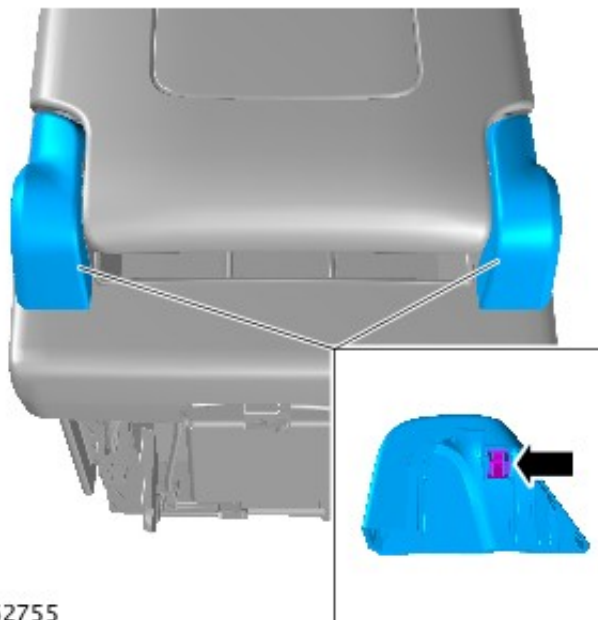


E162755

10.




E162756

11.

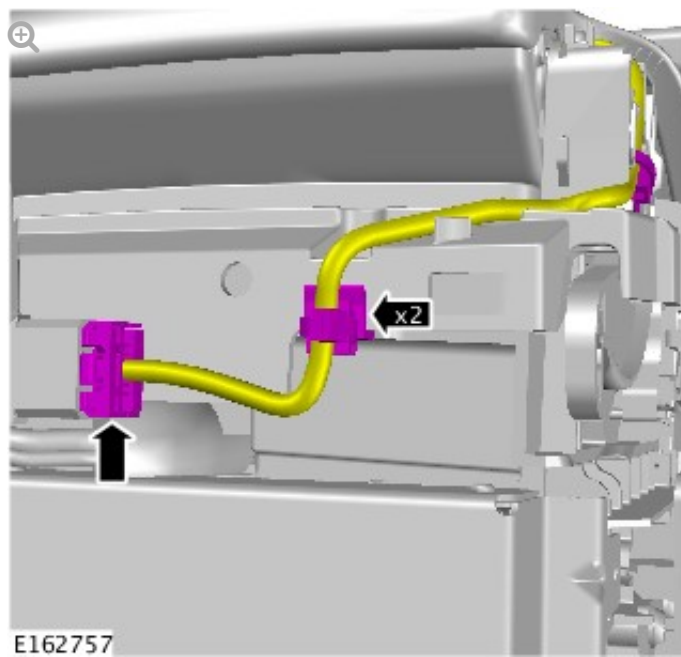


12.

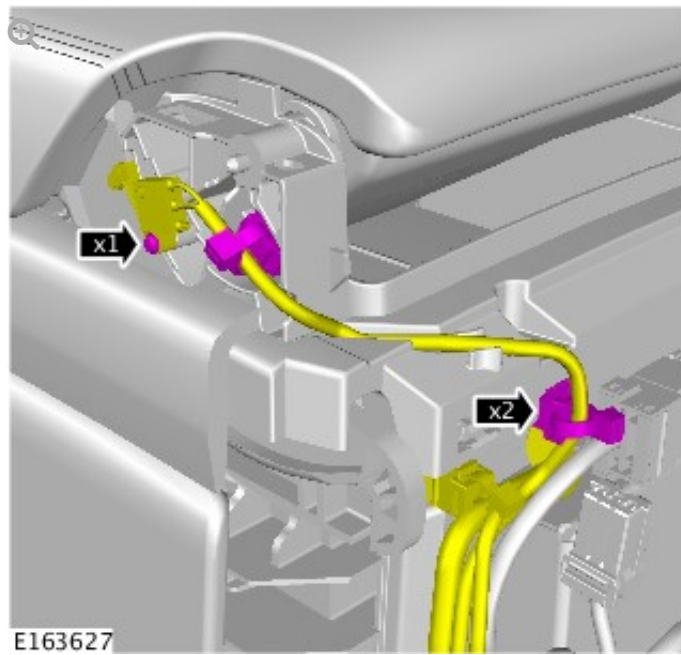

13.


NOTE:

Do not disassemble further if component is removed for access only.

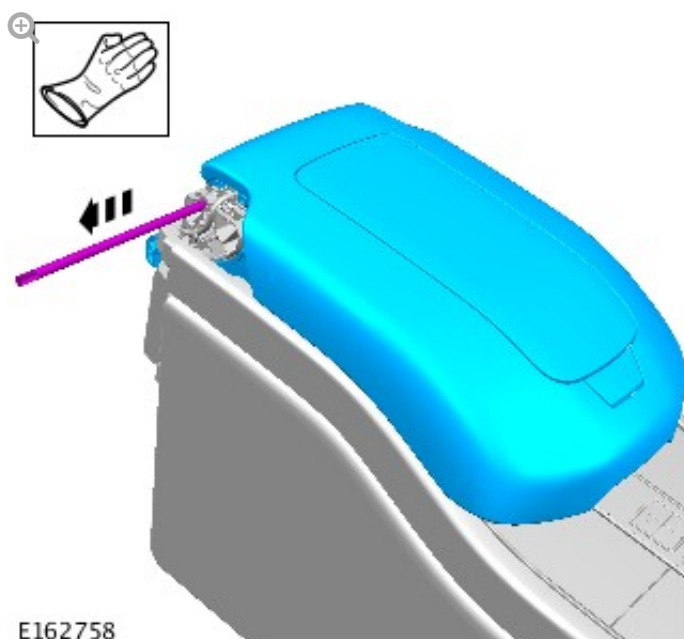

E162758


14.

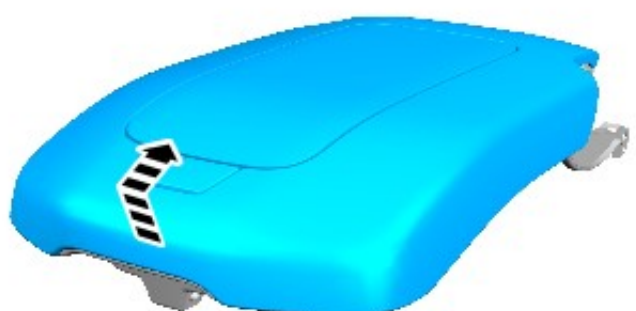


E162759

15.

①

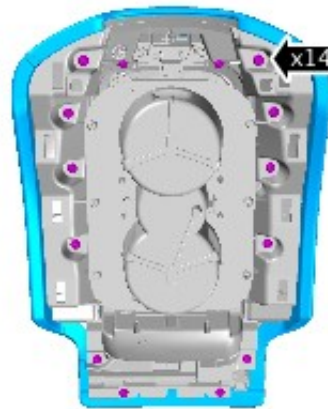

②

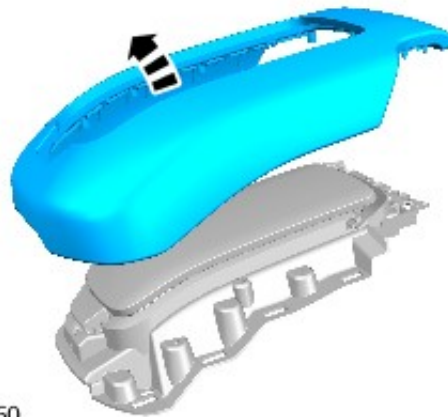


E162760

Torque: 1 Nm


16.

⊕

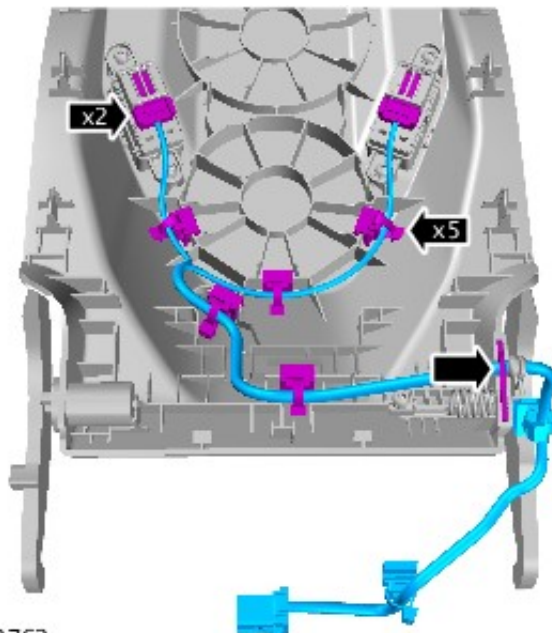


E162762

17.

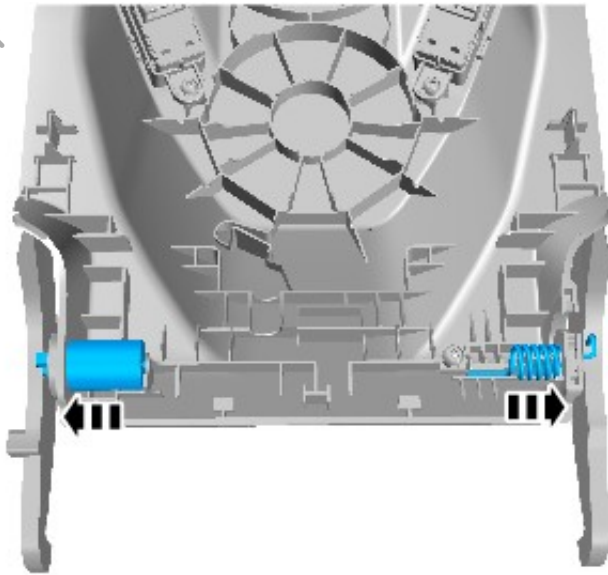

E162761

18.

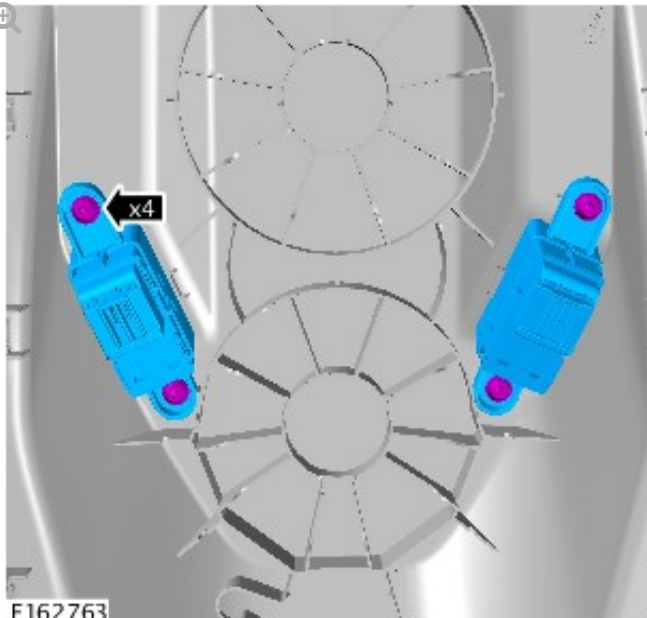



E162763

Torque: 1 Nm

19.


NOTE:

Check the operation of the switch on installation.

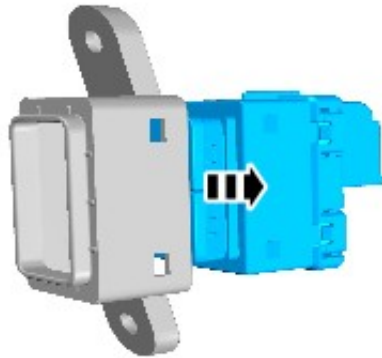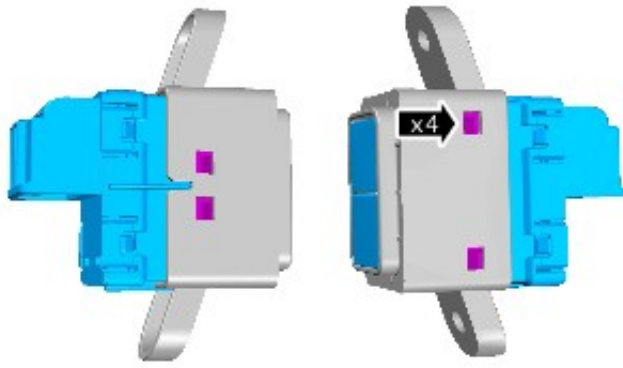

E163626

20.

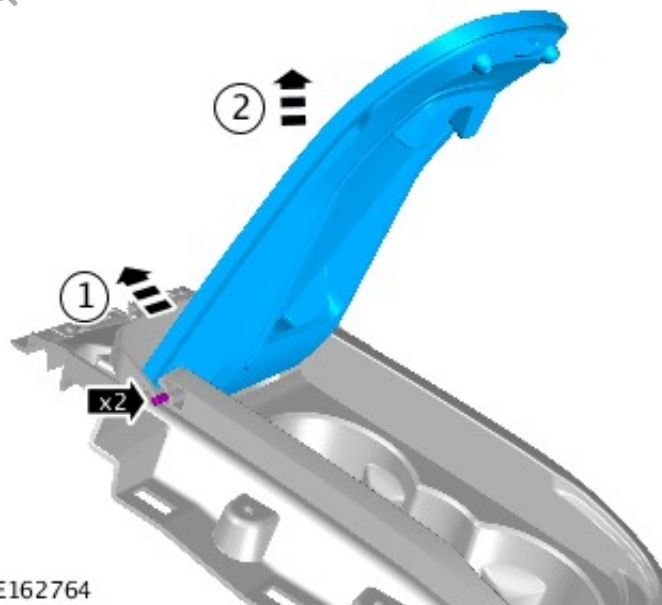

E162764

INSTALLATION

1.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.



E149095

2. To install, reverse the removal procedure.