

2016.0 RANGE ROVER (LG), 501-05

INTERIOR TRIM AND ORNAMENTATION

'C' PILLAR LOWER TRIM PANEL (G1509226)

REMOVAL AND INSTALLATION

REMOVAL


NOTE:

Removal steps in this procedure may contain installation details.

1.

CAUTION:

Apply heatshrink or protective tape to the end of a suitable tool to protect the interior components.

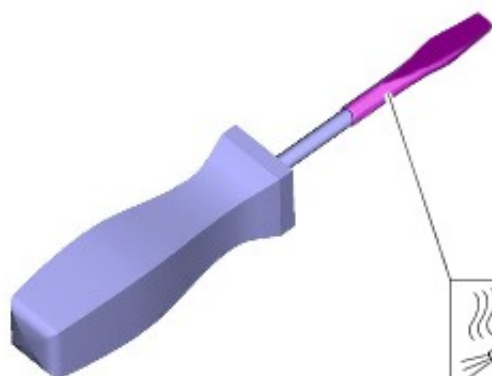


E92956



Vehicles without business seats


2.

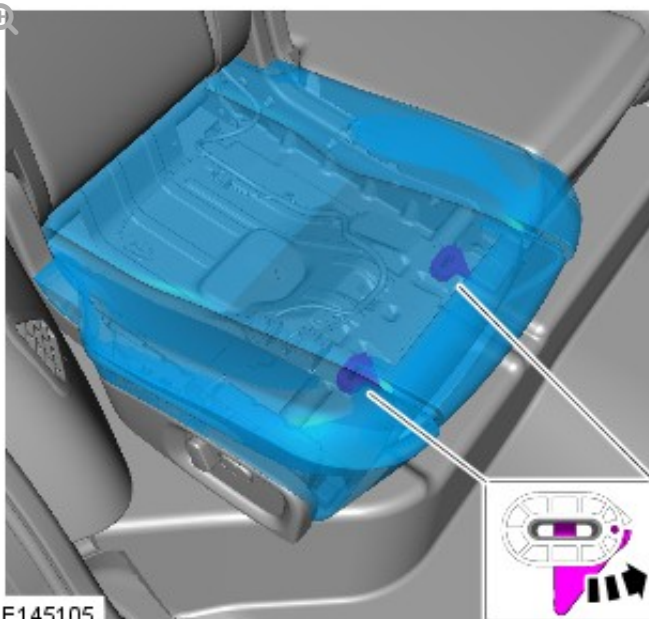


E145105




3.

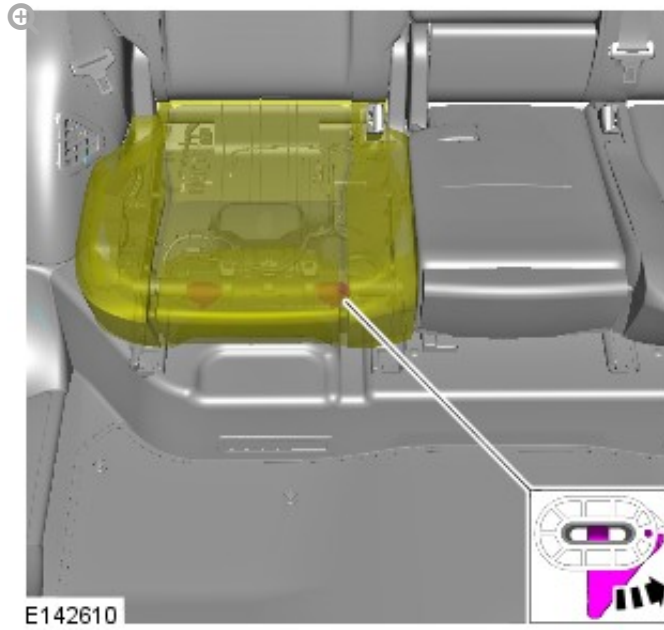


4.

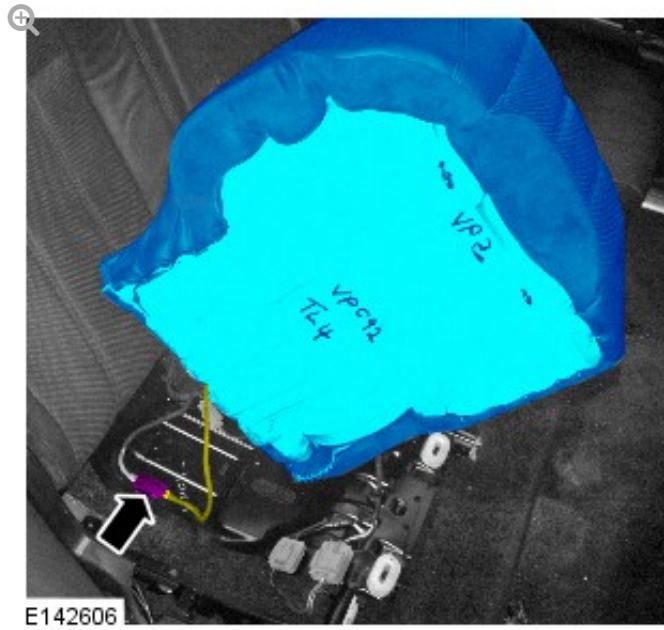

5.

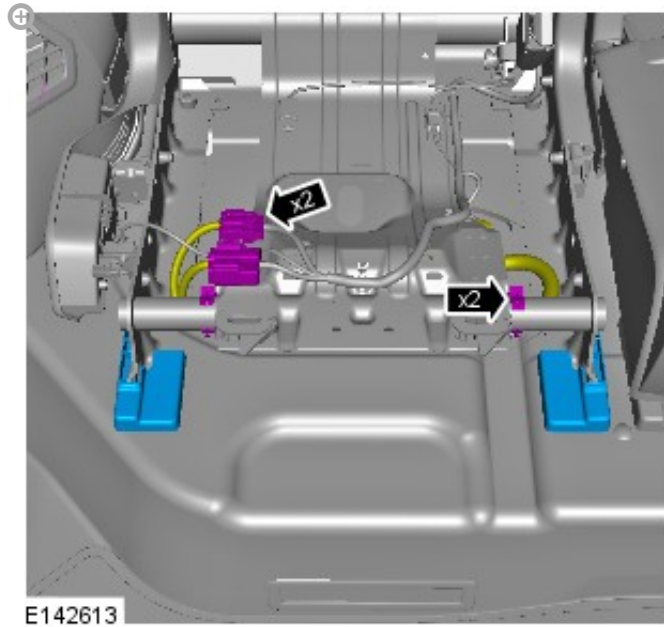


6.

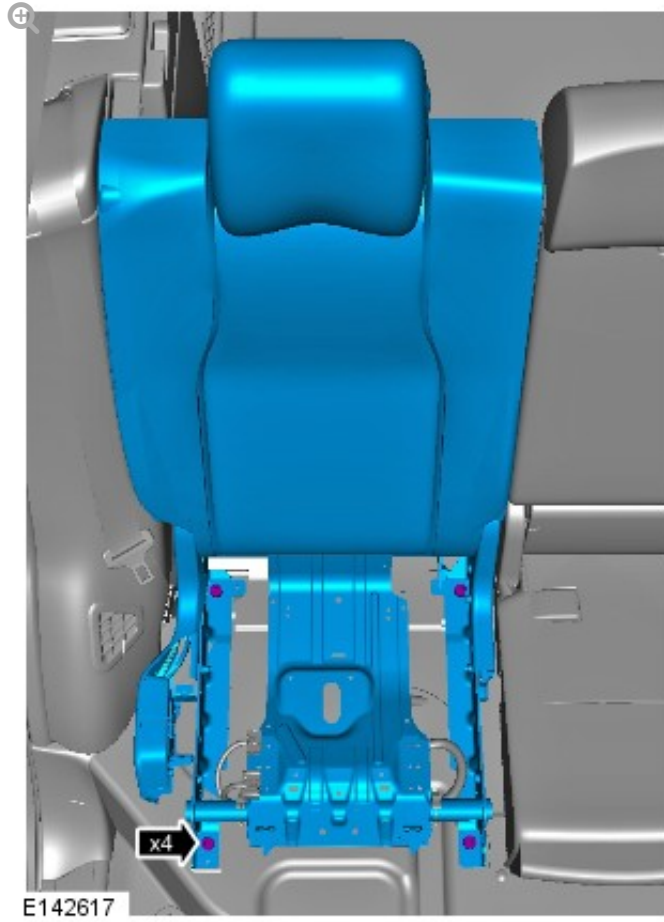

Torque: 50 Nm

Vehicles with business seats


7.

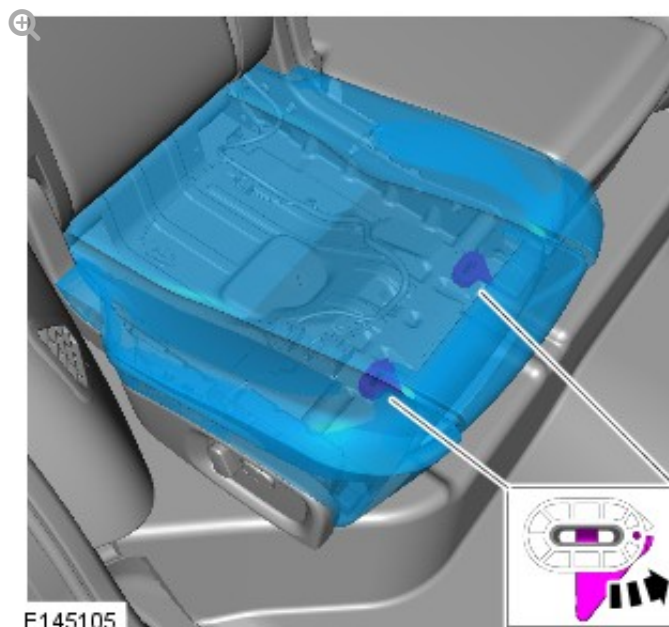

8.



9.

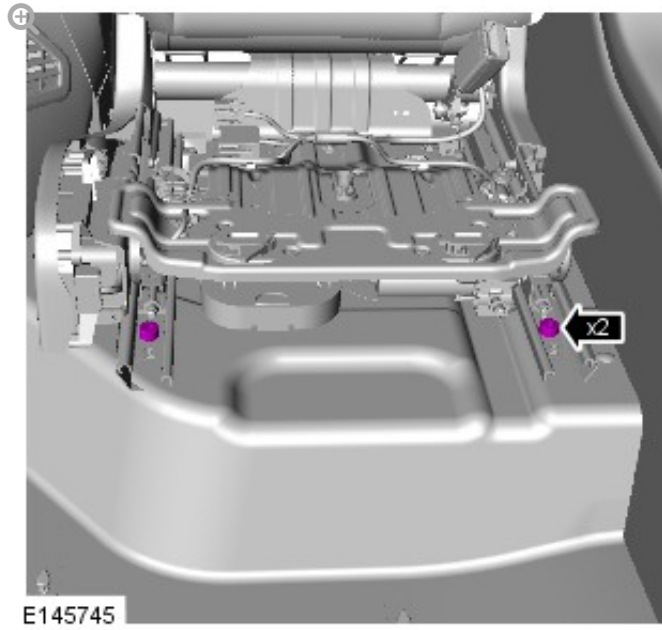

Torque: 50 Nm

10.




11.



E146116


Torque: 50 Nm

12.

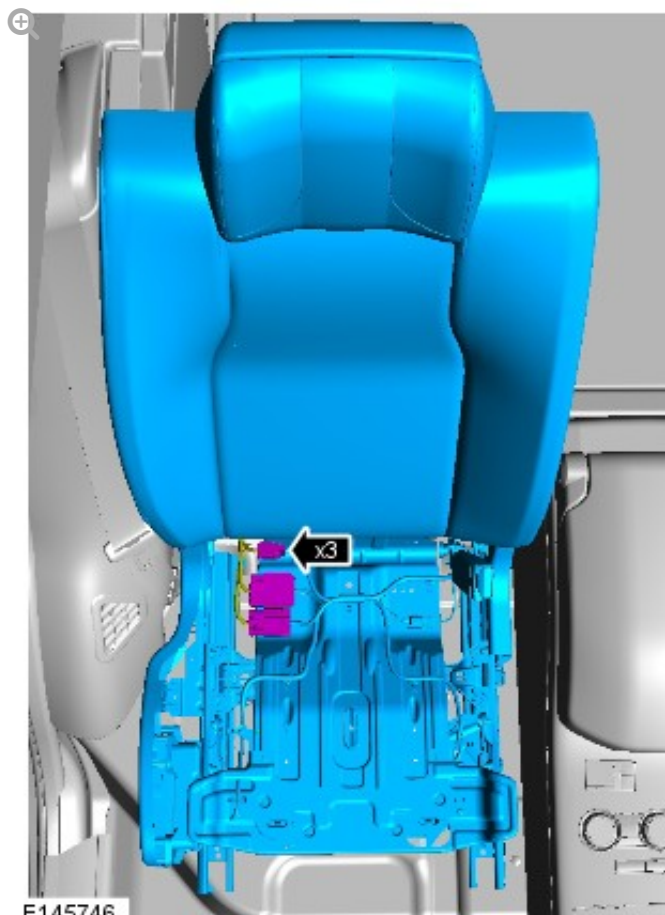


E145746

13.

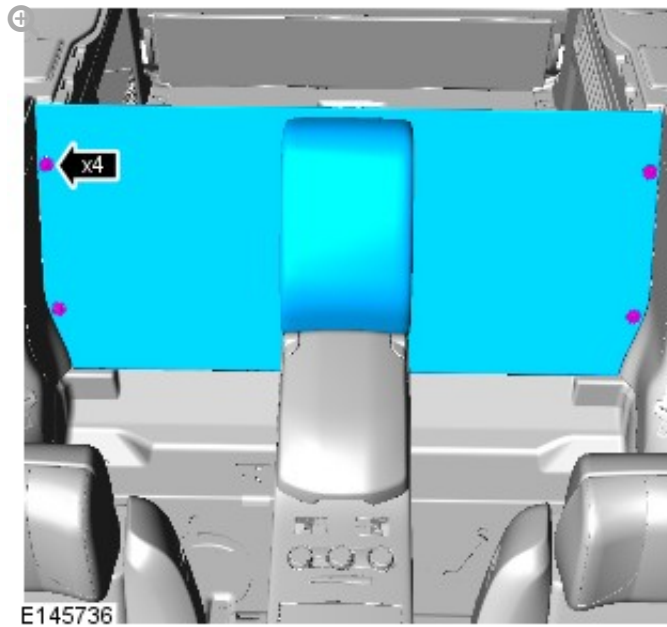

All vehicles

14.


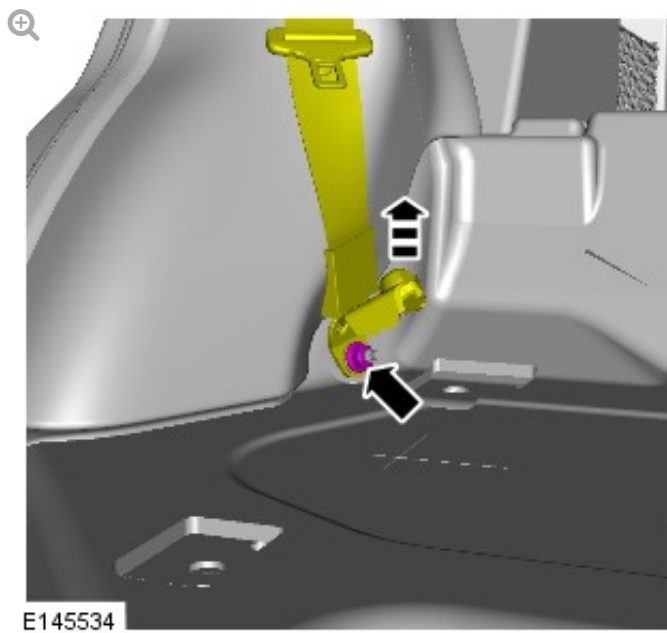


Torque: 45 Nm

15.

NOTE:

RH illustration shown, LH is similar.

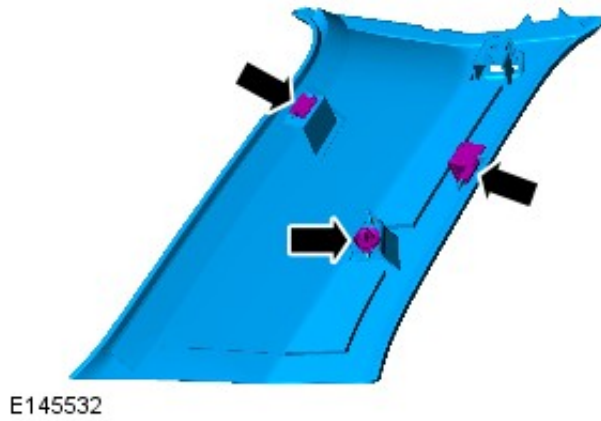
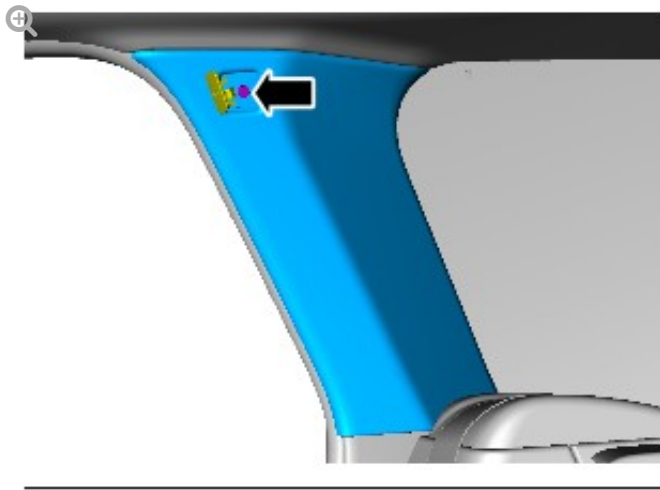


Torque: 6 Nm

16.

NOTE:

RH illustration shown, LH is similar.

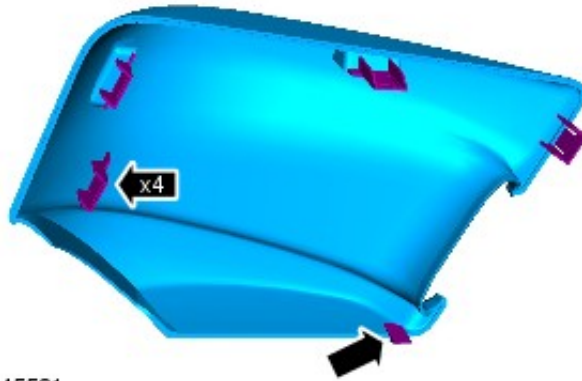
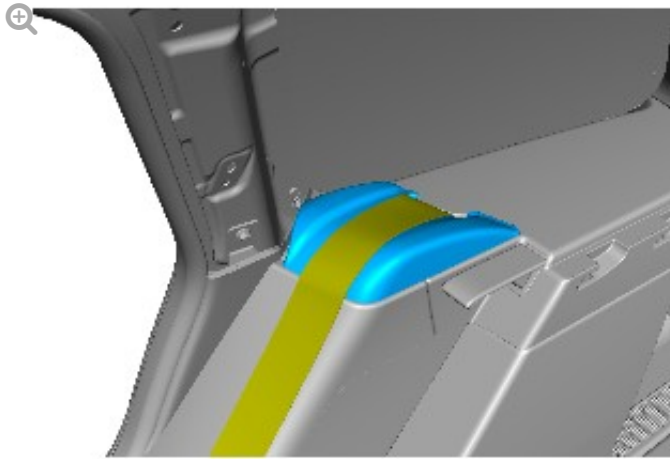


E145531

17.

NOTE:

RH side only.

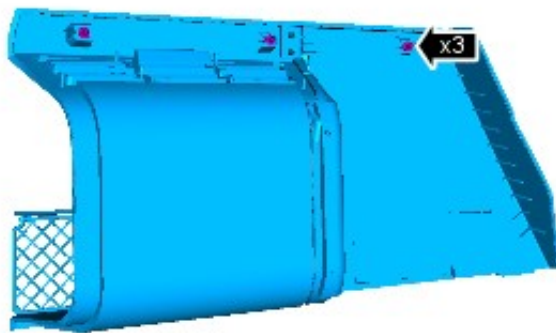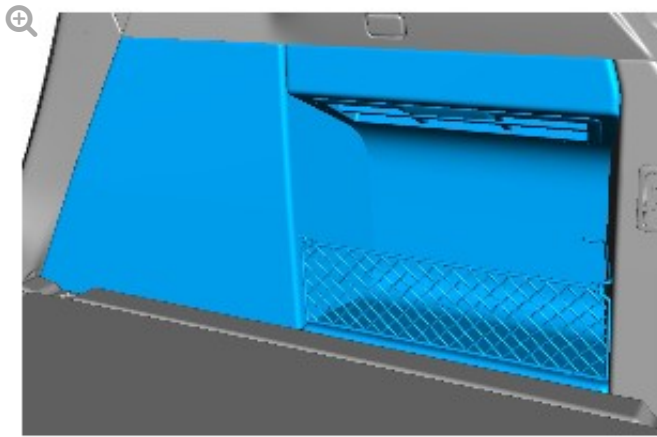

E145529

18.

NOTE:


LH side only.

Refer to: Loadspace Trim Panel (501-05, Removal and Installation).

19.

NOTE:

LH illustration shown, RH is similar.

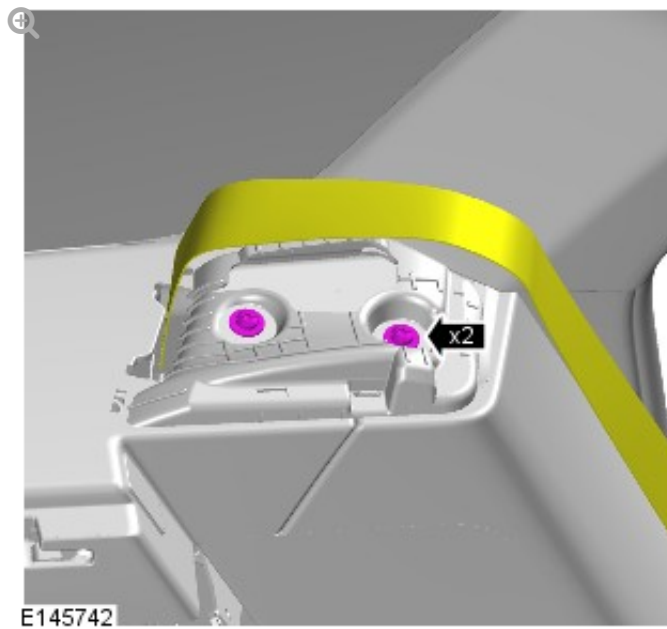


Torque: 5 Nm

20.

NOTE:


LH illustration shown, RH is similar.

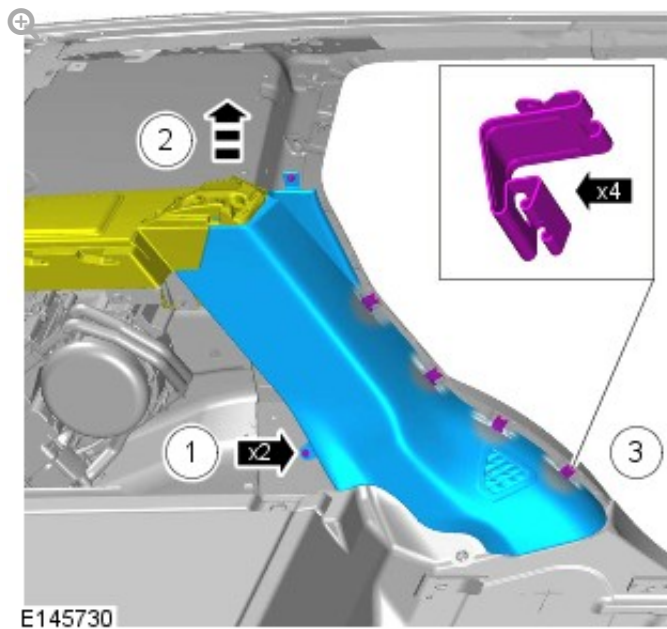

21.

NOTE:

LH illustration shown, RH is similar.

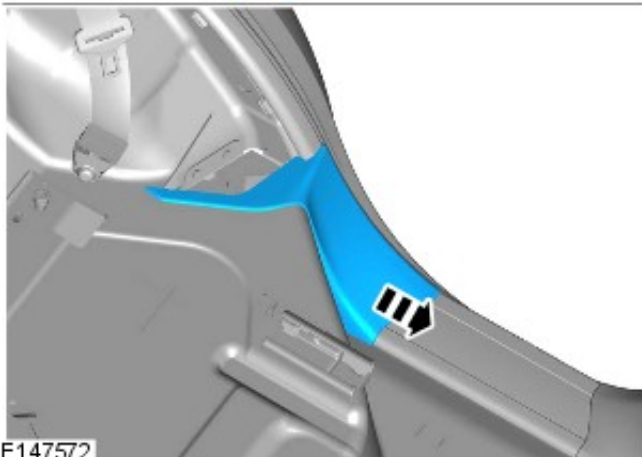


E147572




Vehicles without business seats


2.

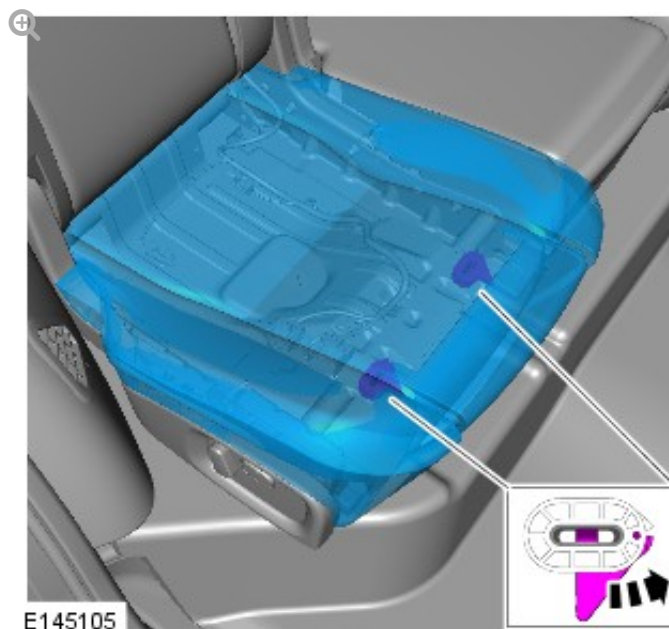


3.

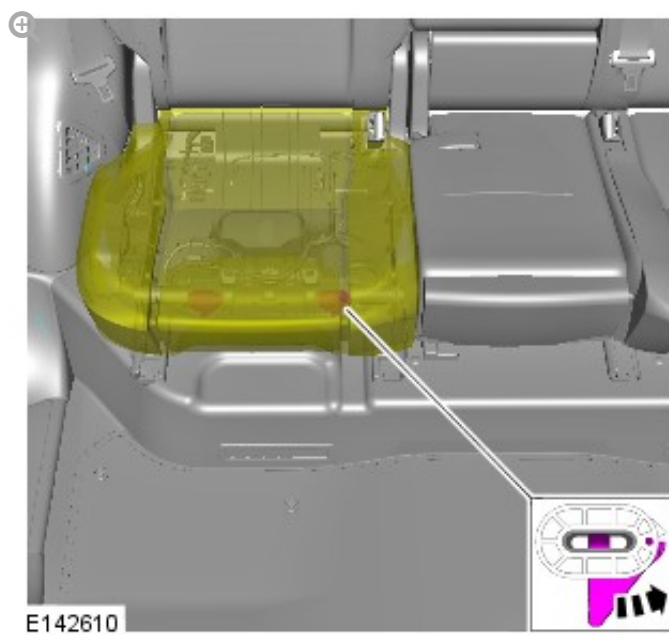


4.

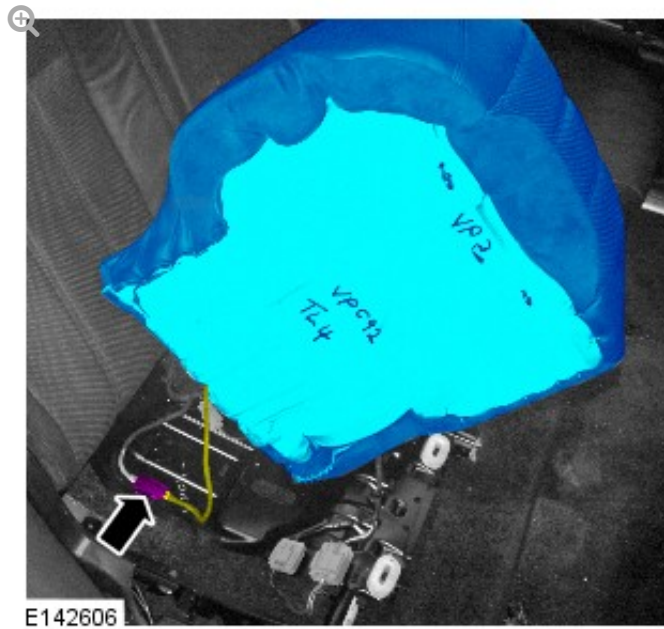

5.

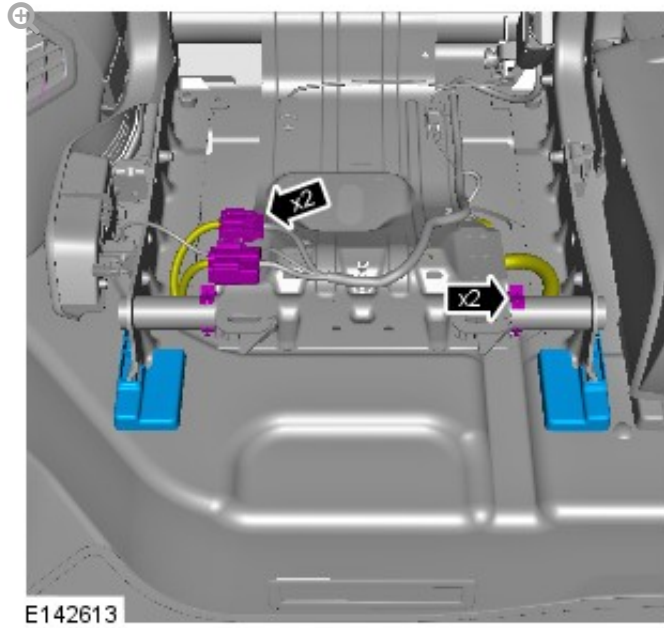

6.

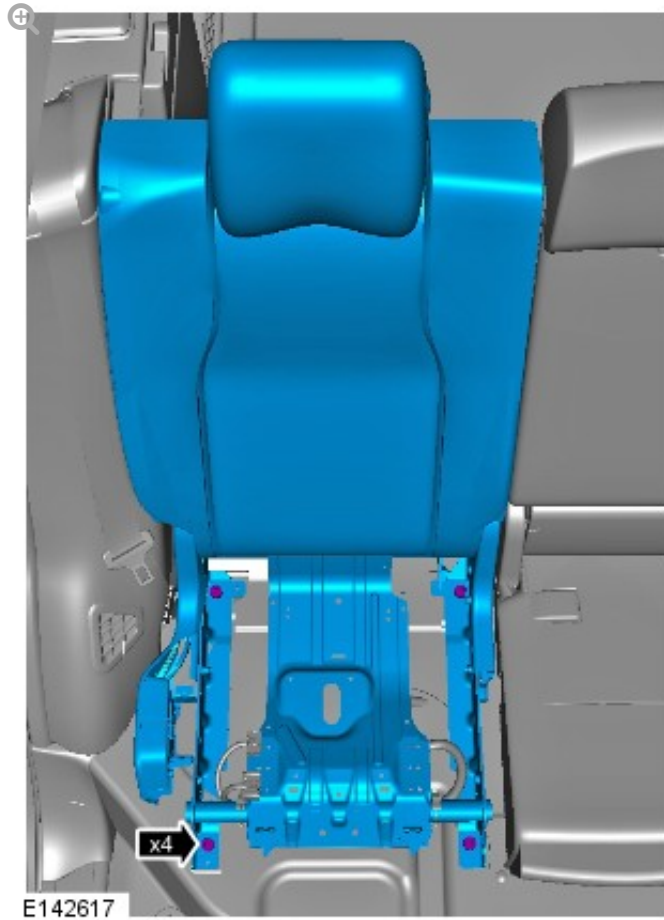


Torque: 50 Nm



Vehicles with business seats


7.

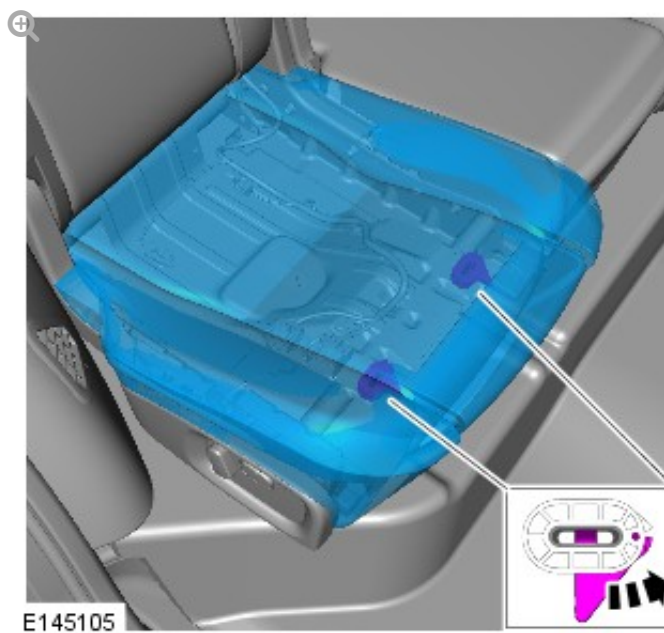

8.




9.

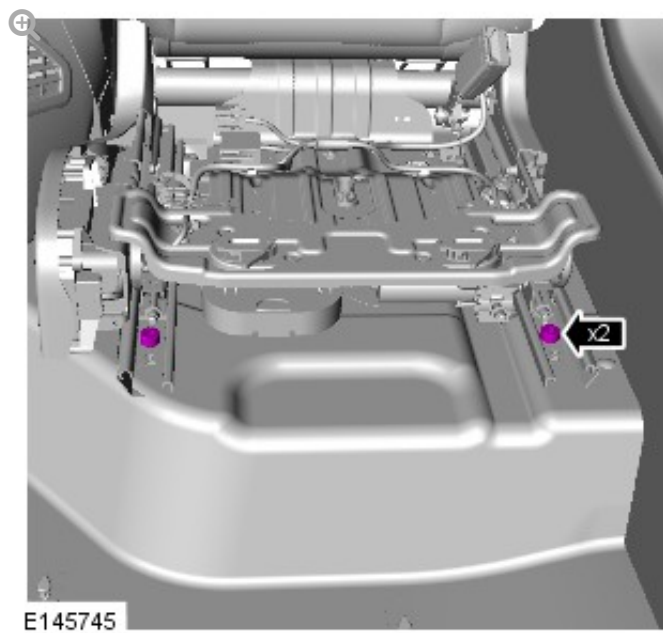

Torque: 50 Nm

10.

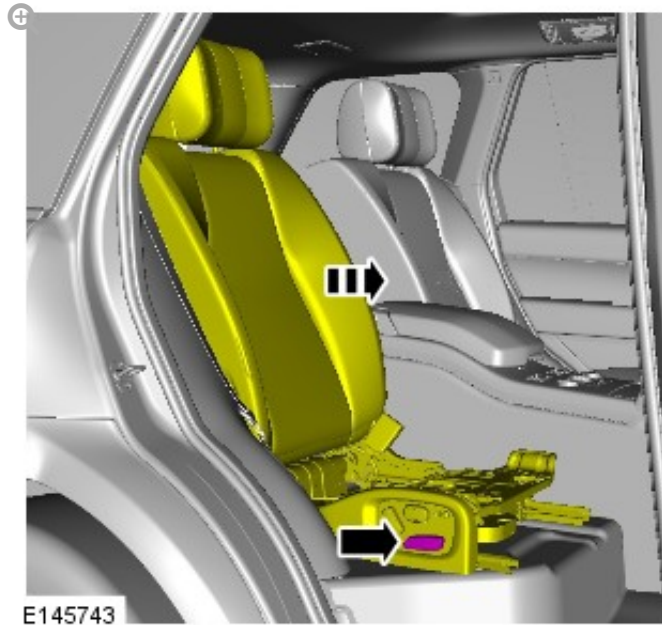


11.




Torque: 50 Nm

12.

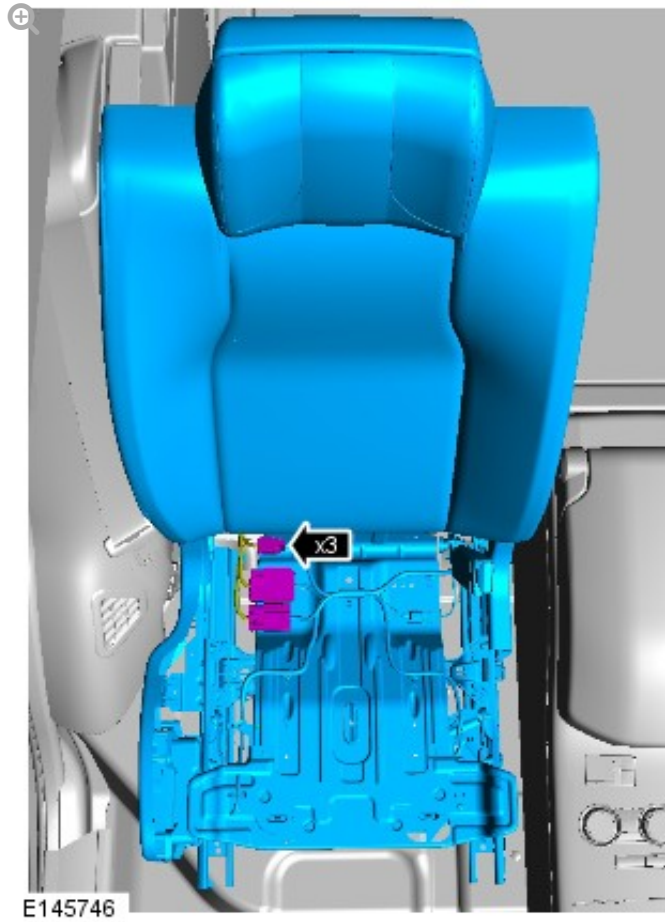


13.

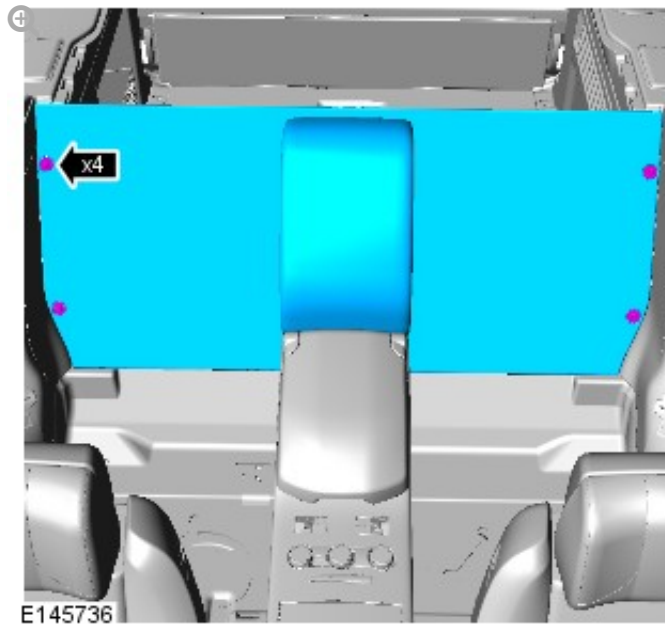

All vehicles

14.

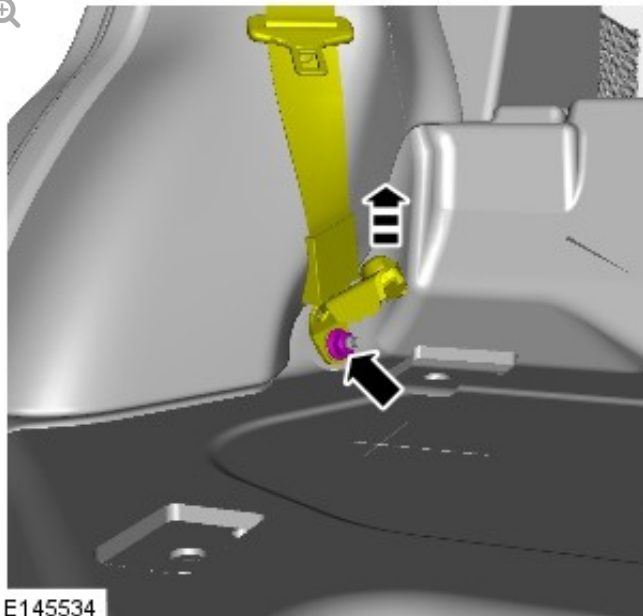



E145534

Torque: 45 Nm

15.

NOTE:

RH illustration shown, LH is similar.

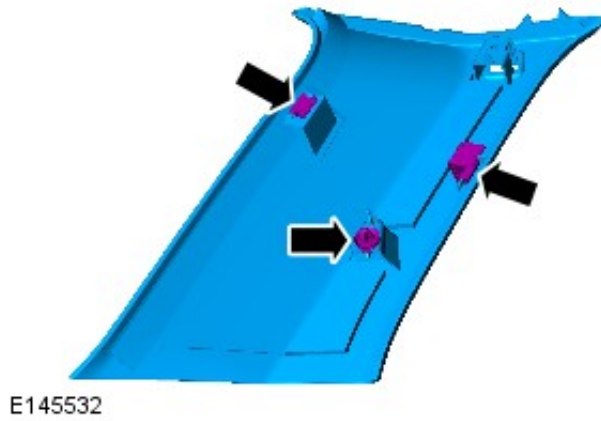
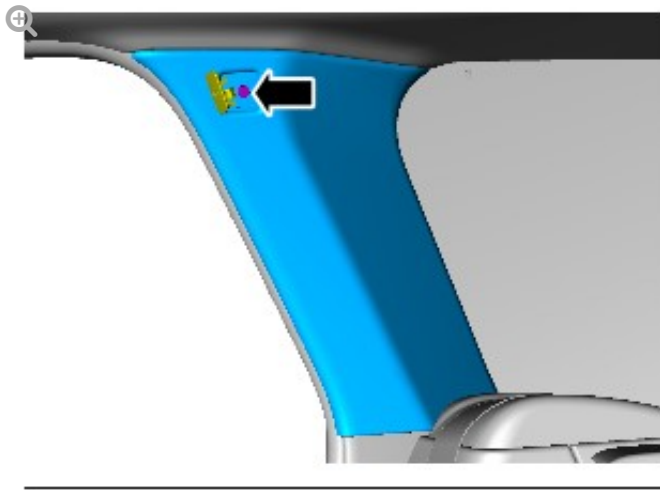


Torque: 6 Nm

16.

NOTE:

RH illustration shown, LH is similar.

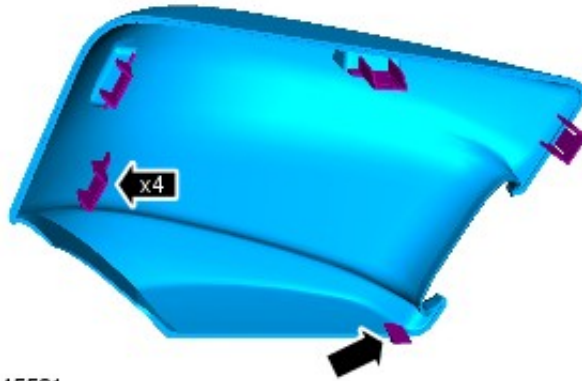
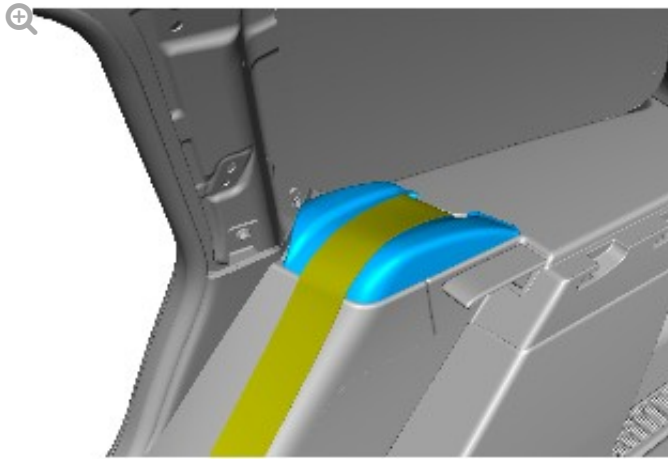


E145531

17.

NOTE:

RH side only.

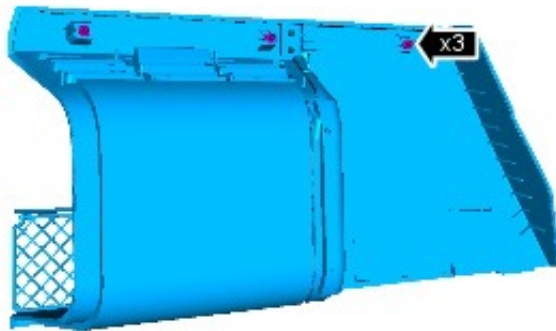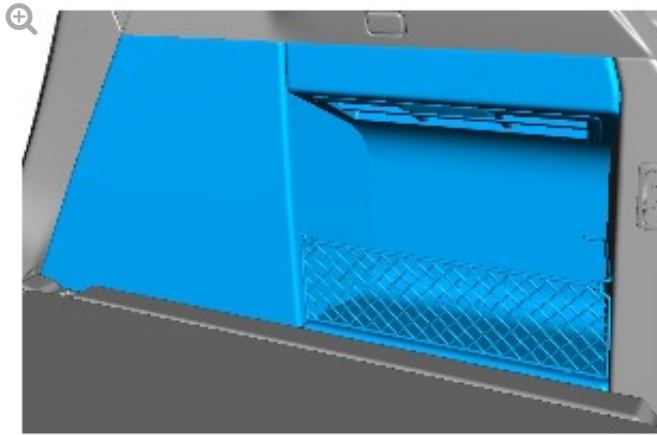

E145529

18.

NOTE:


LH side only.

Refer to: Loadspace Trim Panel (501-05, Removal and Installation).

19.

NOTE:

LH illustration shown, RH is similar.

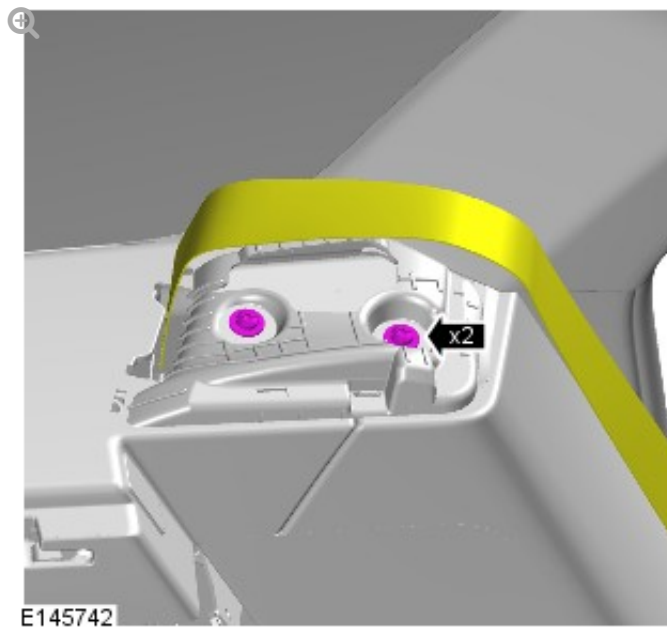


Torque: 5 Nm

20.

NOTE:


LH illustration shown, RH is similar.

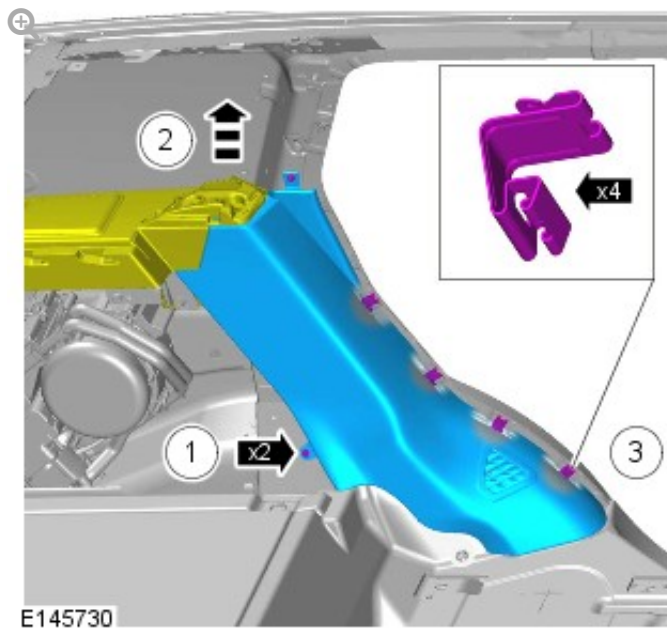

21.

NOTE:

LH illustration shown, RH is similar.

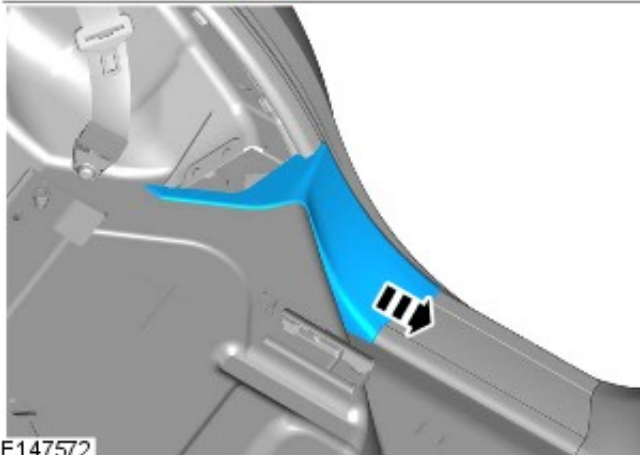

E147572

INSTALLATION

1. To install, reverse the removal procedure.