

2016.0 RANGE ROVER (LG), 501-05

INTERIOR TRIM AND ORNAMENTATION

ELECTRIC REAR DOOR BLIND INITIALIZATION (G1706873)

GENERAL PROCEDURES

INITIALIZATION

NOTE:

New blinds, will come in a fully rested position.

1.


CAUTION:

This operation requires the rear door window glass regulators to be initialised and fully up prior to carrying out this procedure.

Make sure that the door window glass is initialized. That is window glass raises and lowers in one touch/automatic.


Refer to: [Door Window Motor Initialization](#) (501-11 Glass, Frames and Mechanisms, General Procedures).

2.

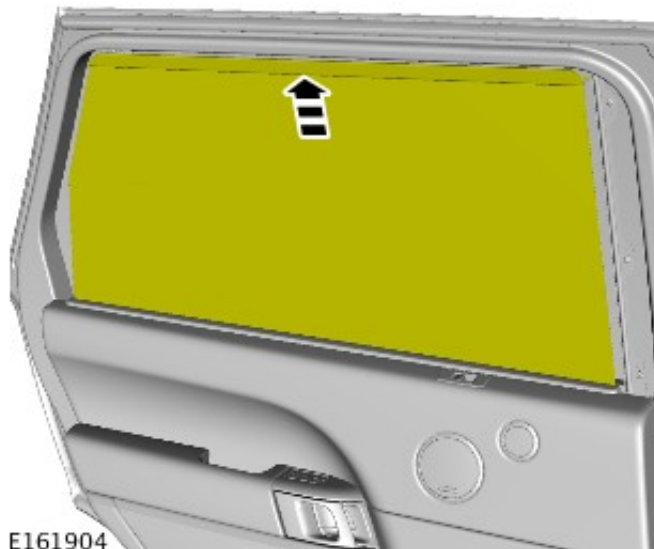

Pull the switch (up) and raise the blind to its fully up position, release the switch.


3.

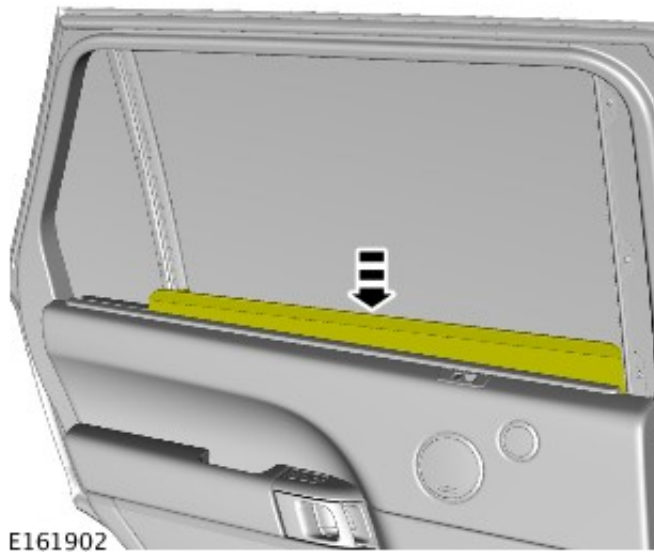

Press the switch (down) and send the blind to its rest position. When the blind is at its lowest position keep holding the switch down for 15 seconds then release.

4. Press down again until you see the header bar drop further.

5.

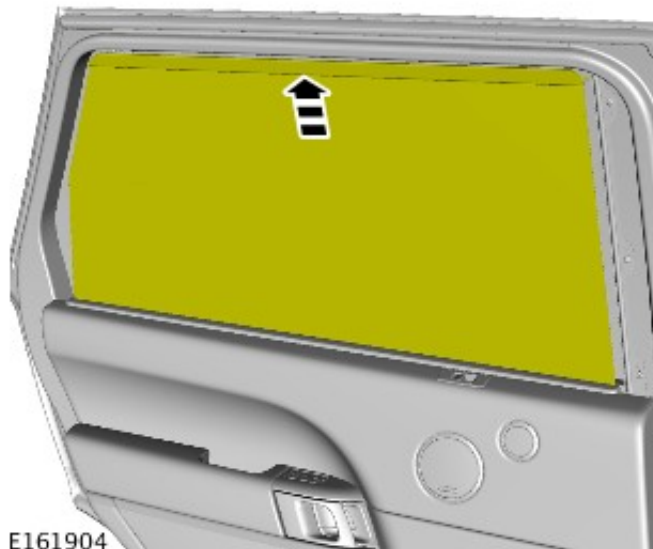


Pull the switch (up) and raise the blind to its fully up position then release.

6.

NOTES:

- If the door window blind motor initialization has been completed correctly, the blind will be in automatic mode (one touch up/down). The blind will then only stop if an obstruction is found (anti pinch function).
- If the rear door window blind does not operate automatically, repeat the procedure.

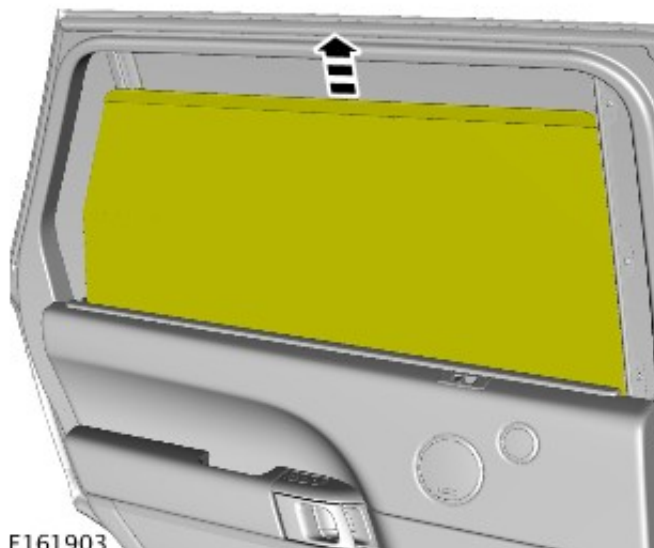

E161903

Repeat the initialization for each new blind that is installed.