

2016.0 RANGE ROVER (LG), 501-05

INTERIOR TRIM AND ORNAMENTATION

HEADLINER (G1531969)

REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1.

CAUTION:

Apply heatshrink or protective tape to the end of a suitable tool to protect the interior components.

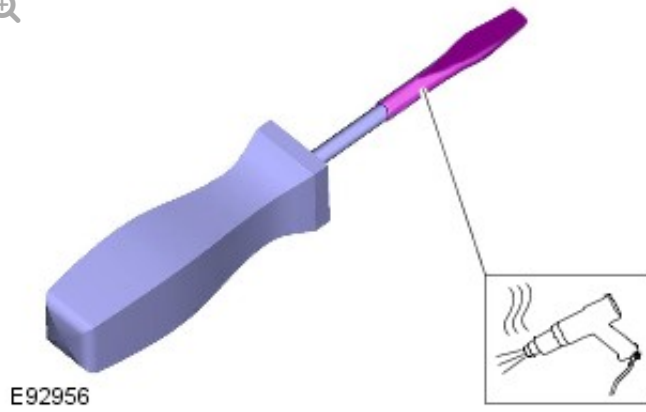

2. Refer to: [Windshield Glass](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

3.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['B' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['C' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

5.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['D' Pillar Trim Panel](#) (501-05 Interior Trim and

Ornamentation, Removal and Installation).

6.

NOTE:

The procedure must be carried out on both sides.

Refer to: [Sun Visor](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


7.

Refer to: [Overhead Console](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).

8.

NOTE:


Note the orientation of the seal prior to detaching.

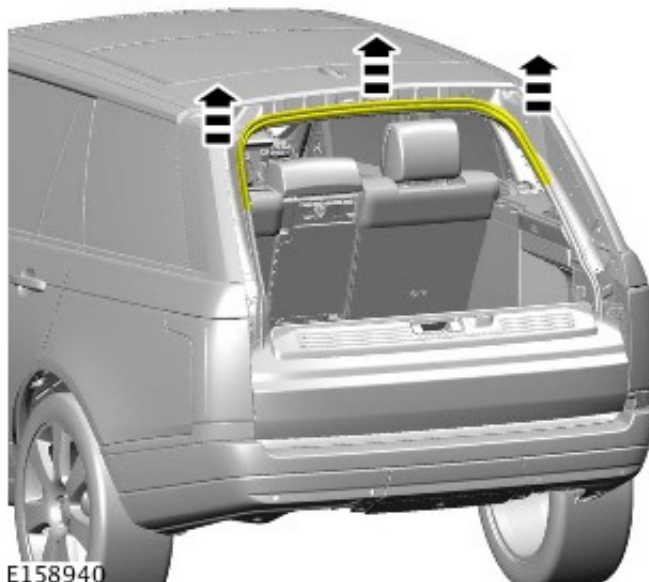

9.

NOTE:

The step must be carried out on both sides.

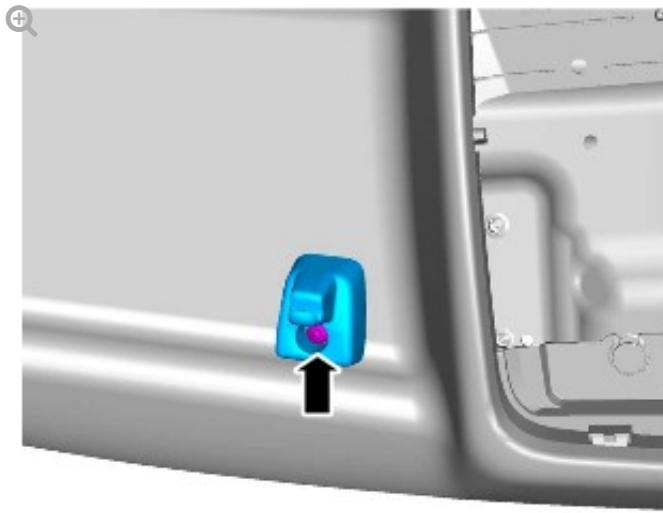


E156547

Torque: 6 Nm

10.

NOTE:

The step must be carried out on both sides.

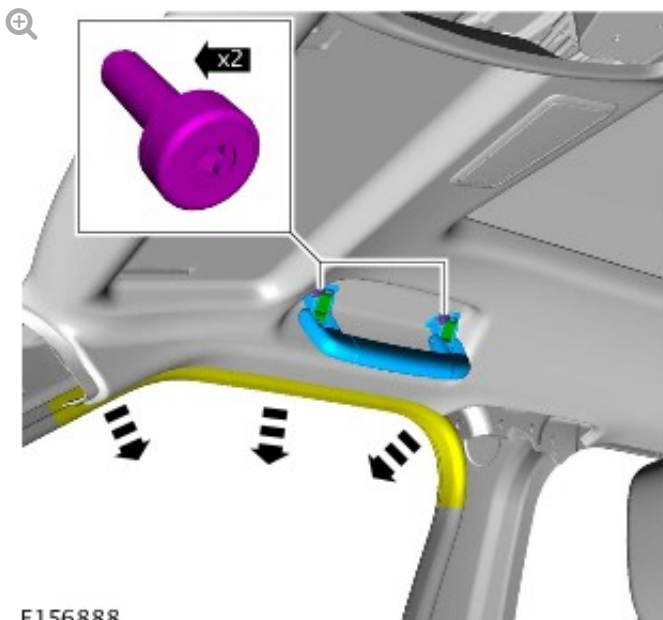


E156888

Torque: 6 Nm

11.

NOTE:

The step must be carried out on both sides.

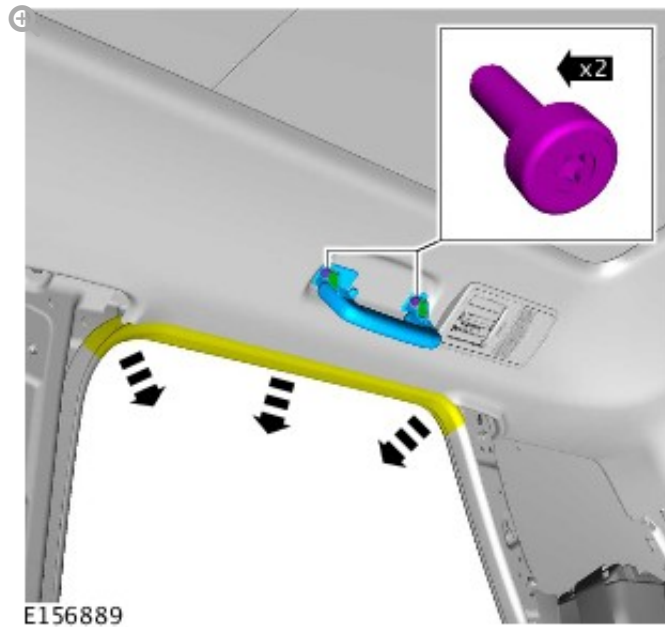


Torque: 6 Nm

12.

NOTE:

The step must be carried out on both sides.

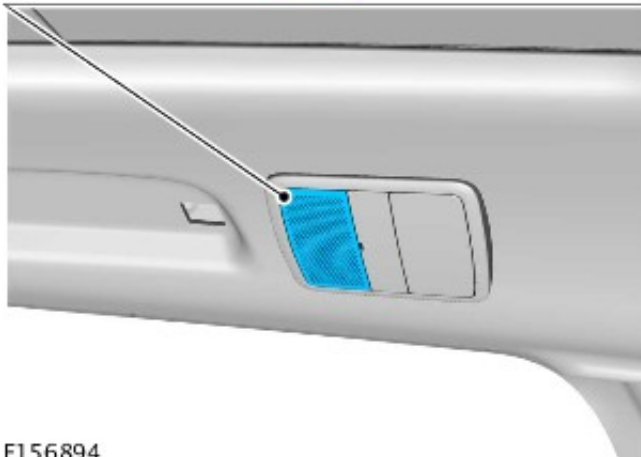


E156894

13.

NOTE:

The step must be carried out on both sides.

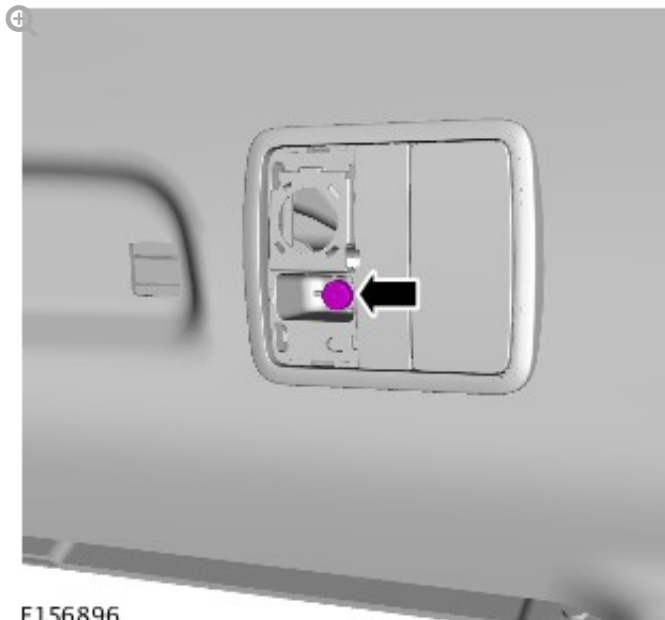


E156896

Torque: 6 Nm

14.

NOTES:

- The step must be carried out on both sides.
- If equipped.

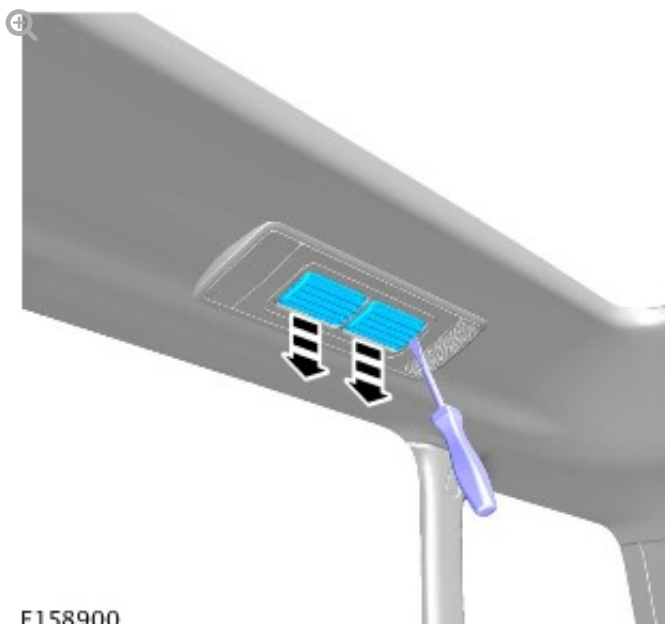

E158900

15.


NOTES:

- The step must be carried out on both sides.
- If equipped.




Torque: 6 Nm

16.

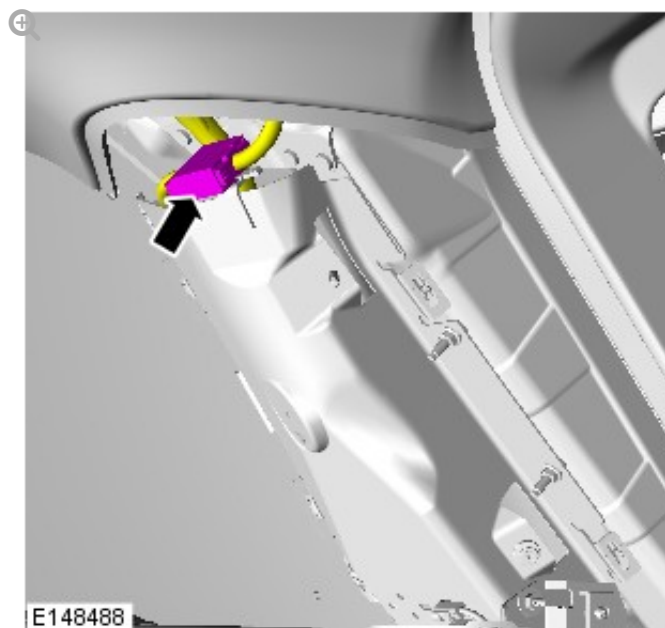


17.

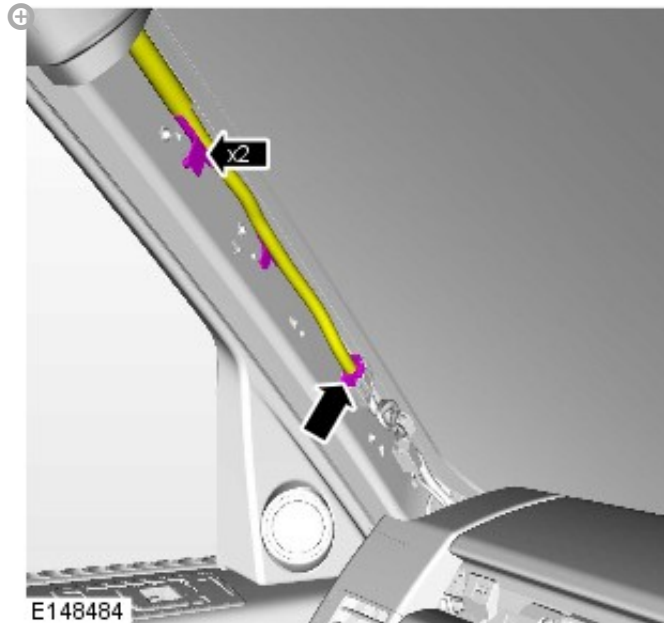

18.

CAUTIONS:

- Take extra care not to damage the component.
- Using a suitable plastic trim tool, release the magnetic fixings.
- Make sure that there is at least 50mm clearance between the magnetic fixings and the headliner during the removal procedure. The fixings will engage if too close to each other.

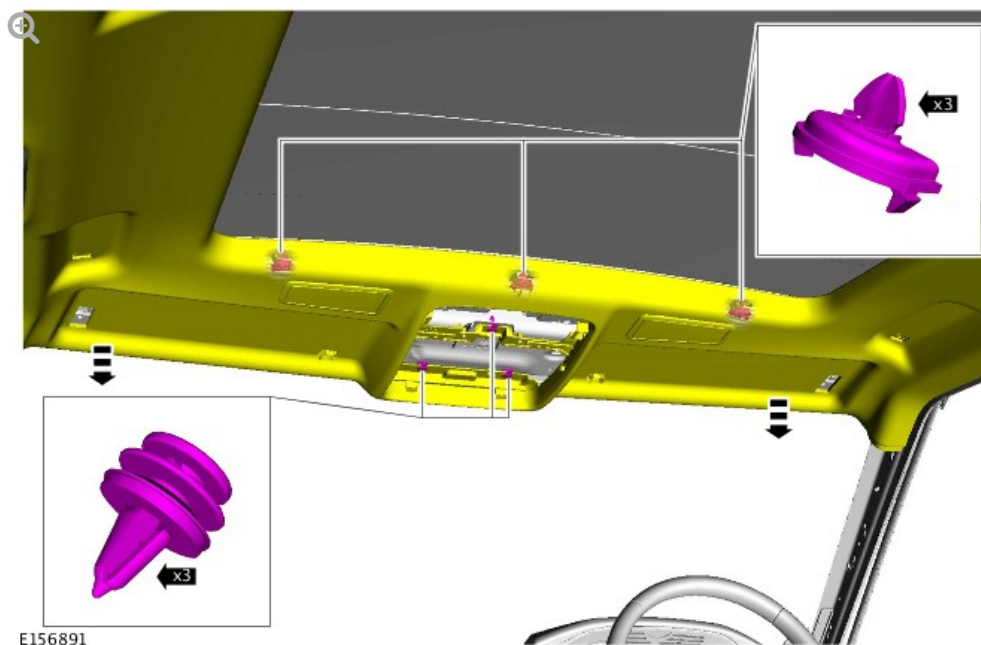


19.

CAUTION:

Take extra care not to damage the component.

NOTE:

The step must be carried out on both sides.

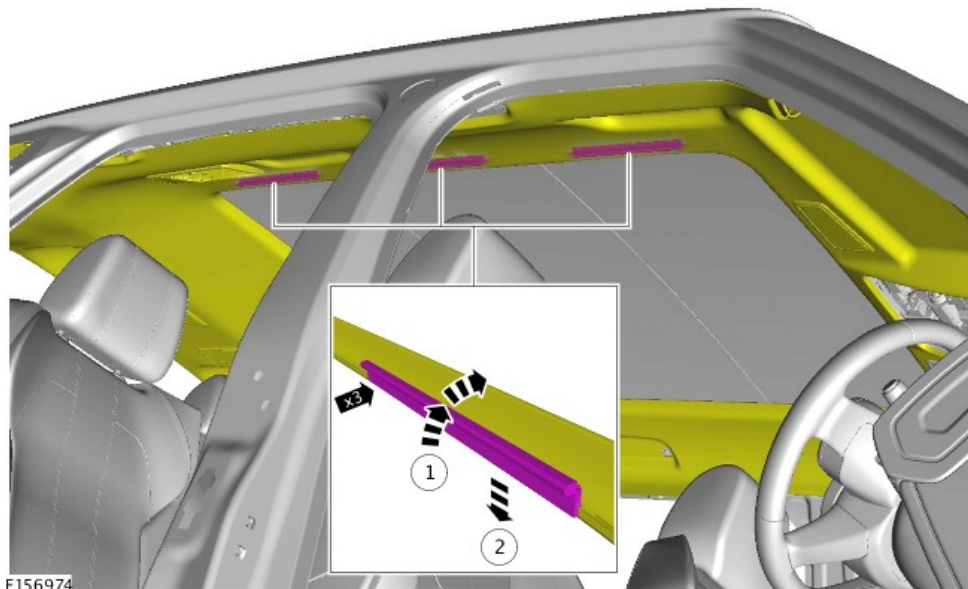


E156974


20.

CAUTIONS:

- Take extra care not to damage the component.
- Using a suitable plastic trim tool, release the magnetic fixings.
- Make sure that there is at least 50mm clearance between the magnetic fixings and the headliner during the removal procedure. The fixings will engage if too close to each other.

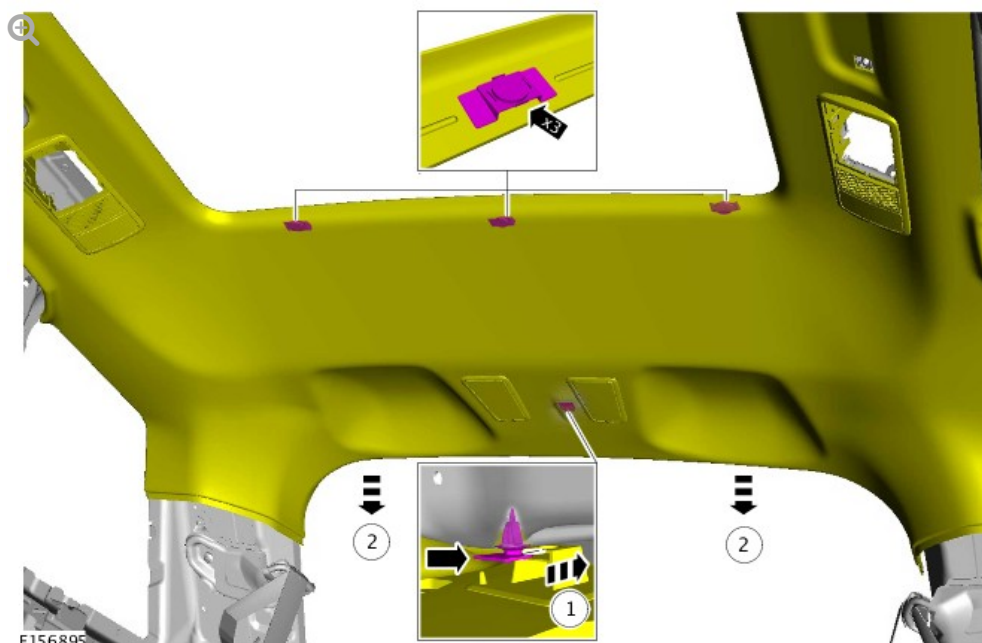


21.

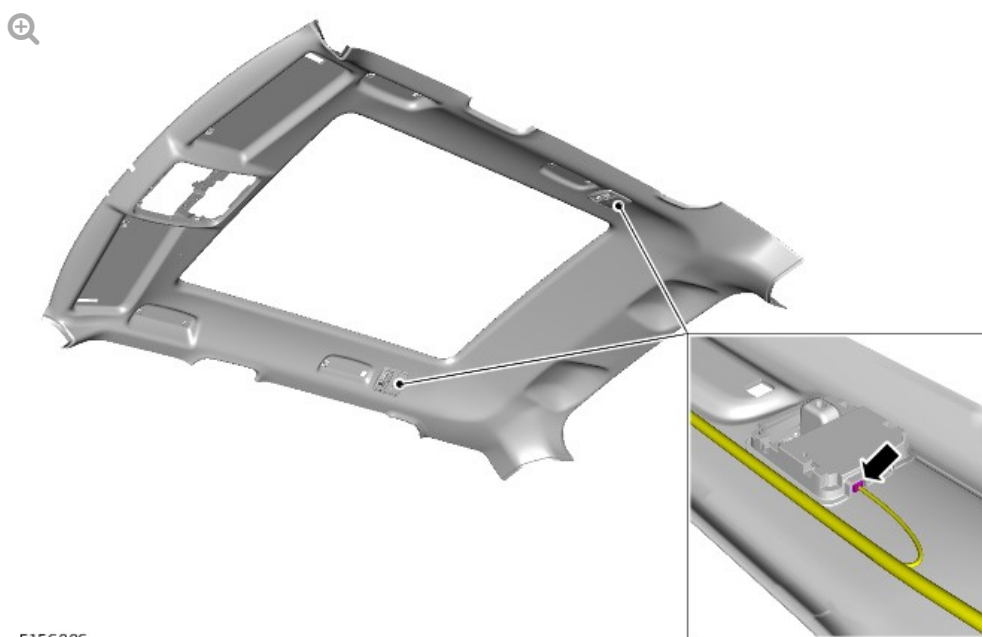

22.

NOTE:

If equipped.

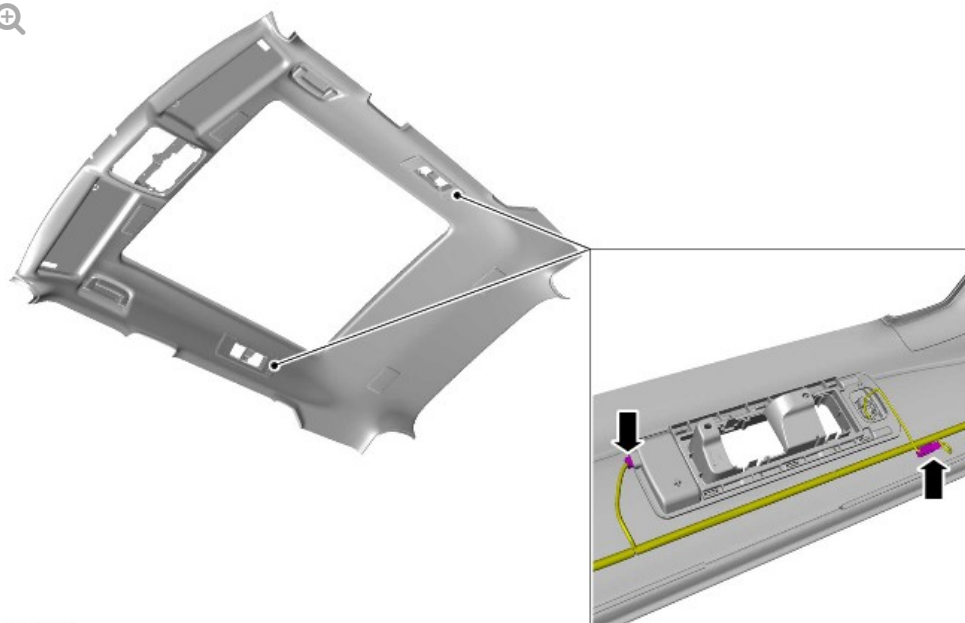


E158897

23.

NOTE:

If equipped.

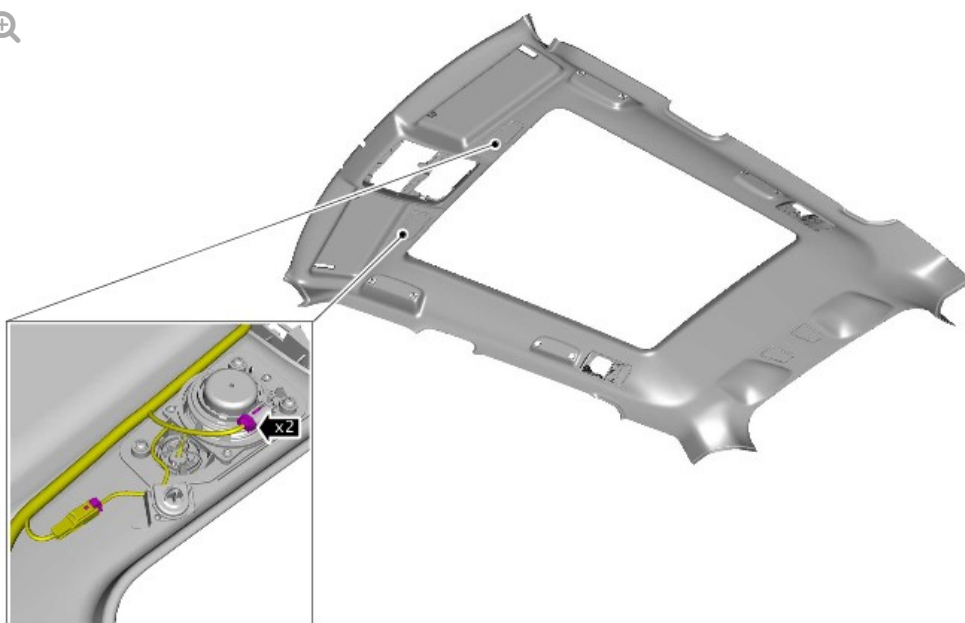


E156887

24.

NOTE:

If equipped.

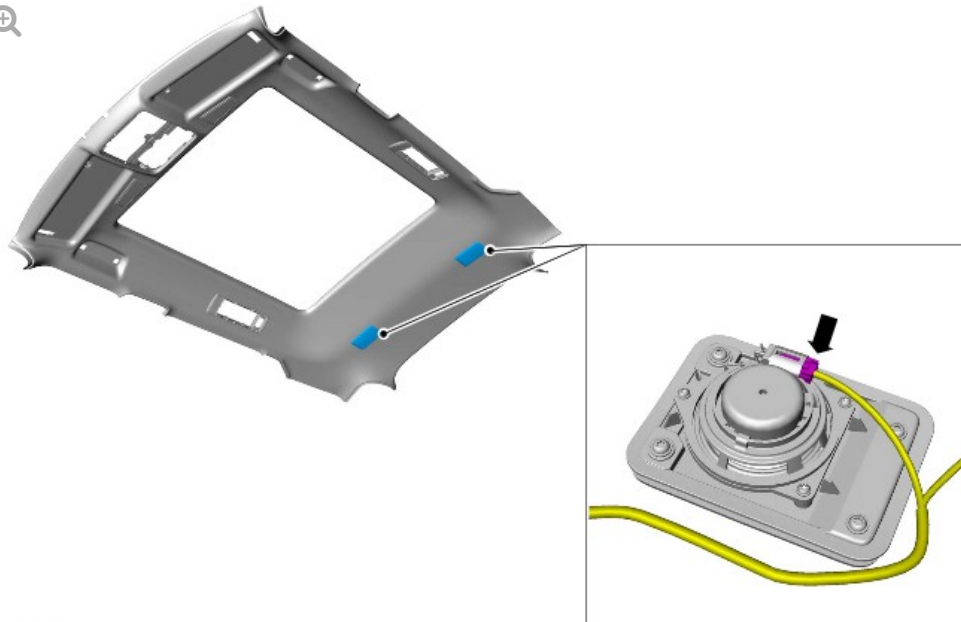


E158898


25.

NOTE:

This step requires the aid of another technician.

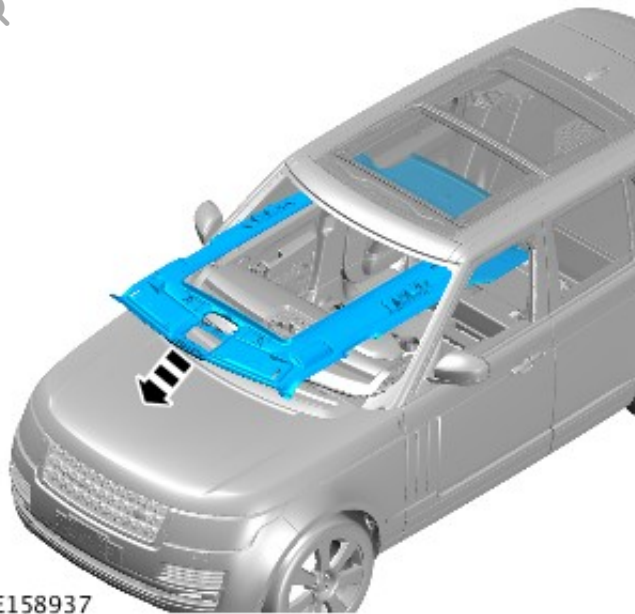


26.

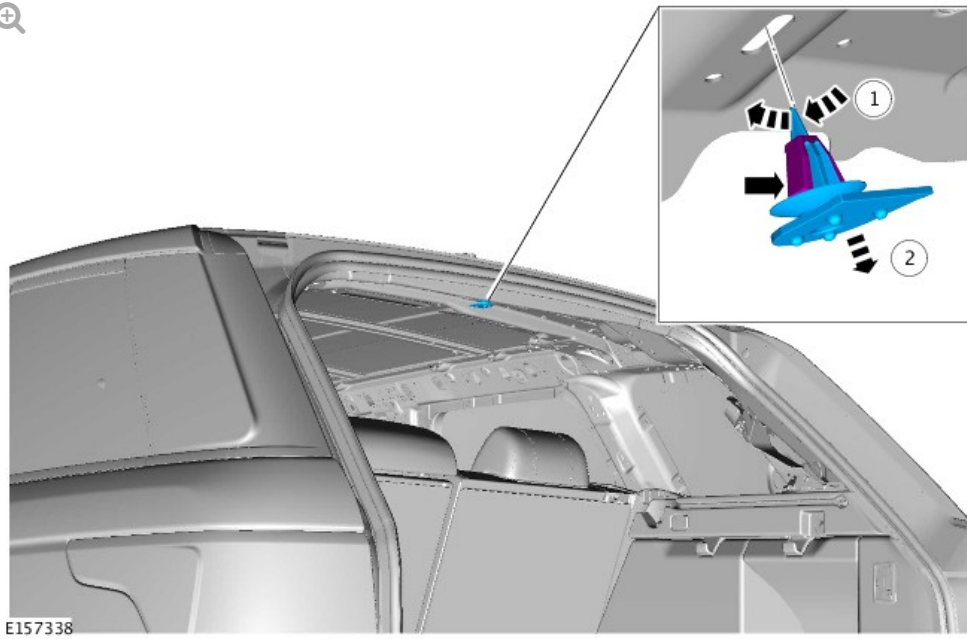

27.

NOTE:

Do not disassemble further if the component is removed for access only.


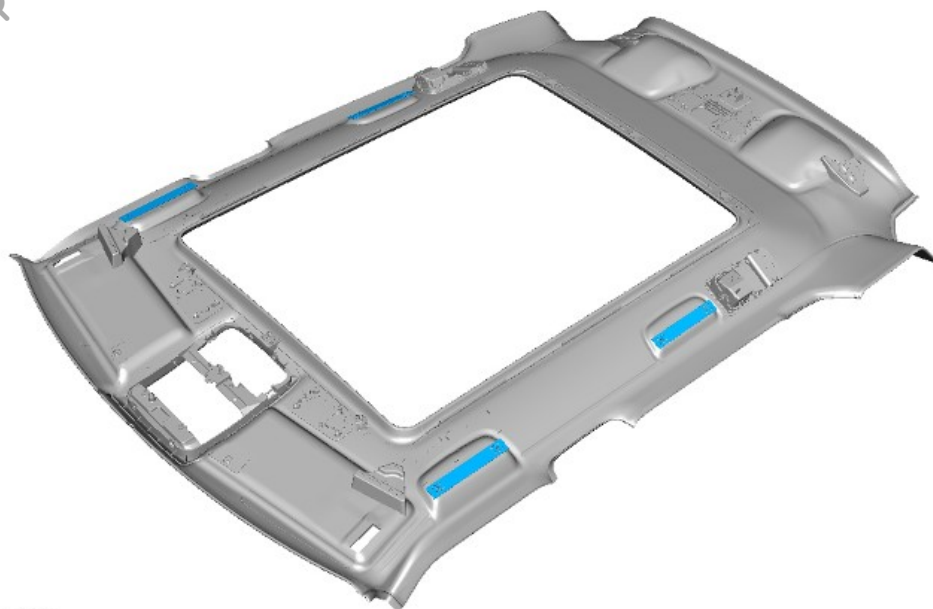


E156899

28.

NOTE:

The step must be carried out on both sides.

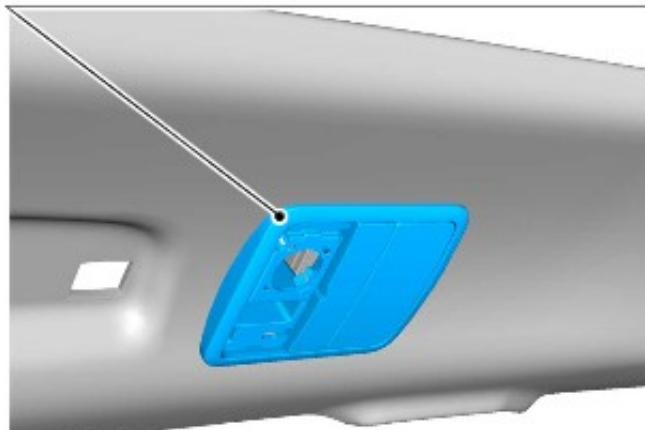
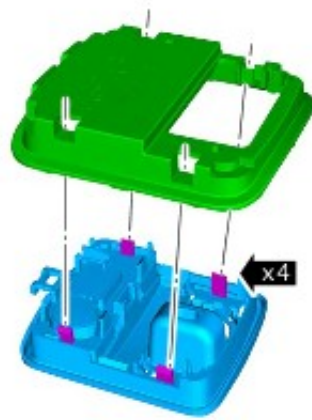


E156902

29.

NOTES:


- If equipped.
- The step must be carried out on both sides.

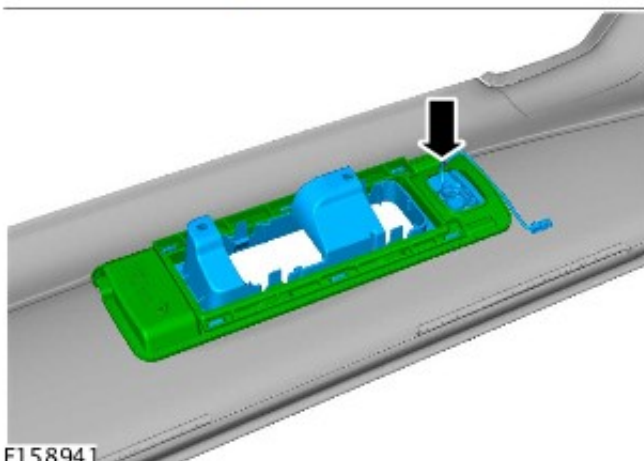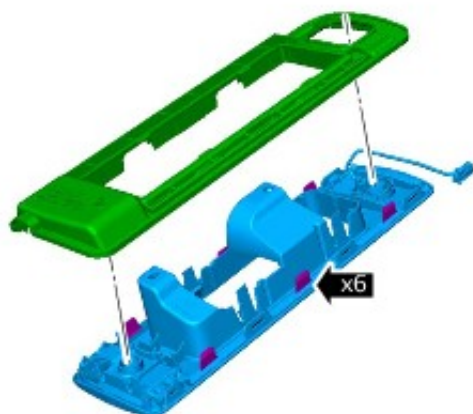

30.

NOTE:

If equipped.

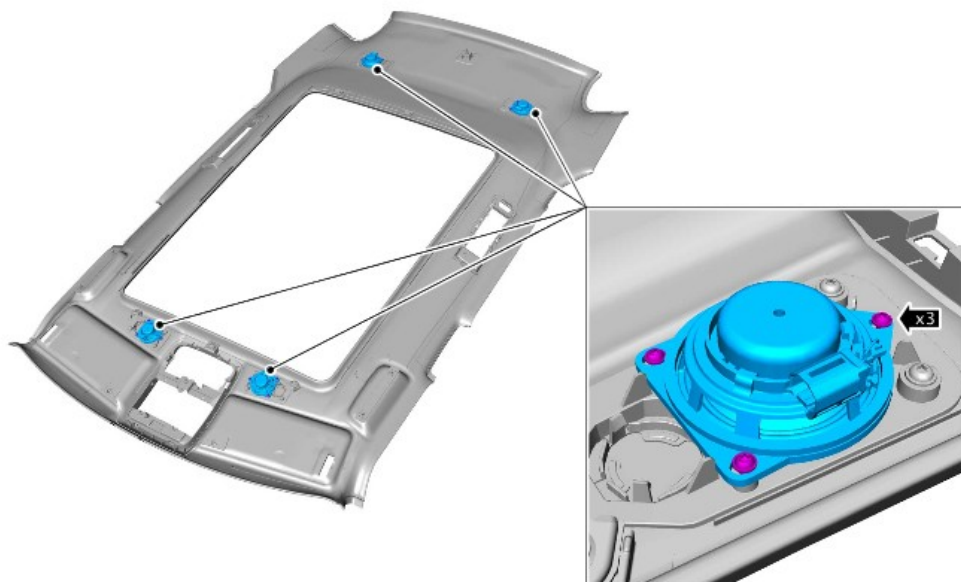


E158901

Torque: 1.9 Nm

31.

NOTE:

If equipped.

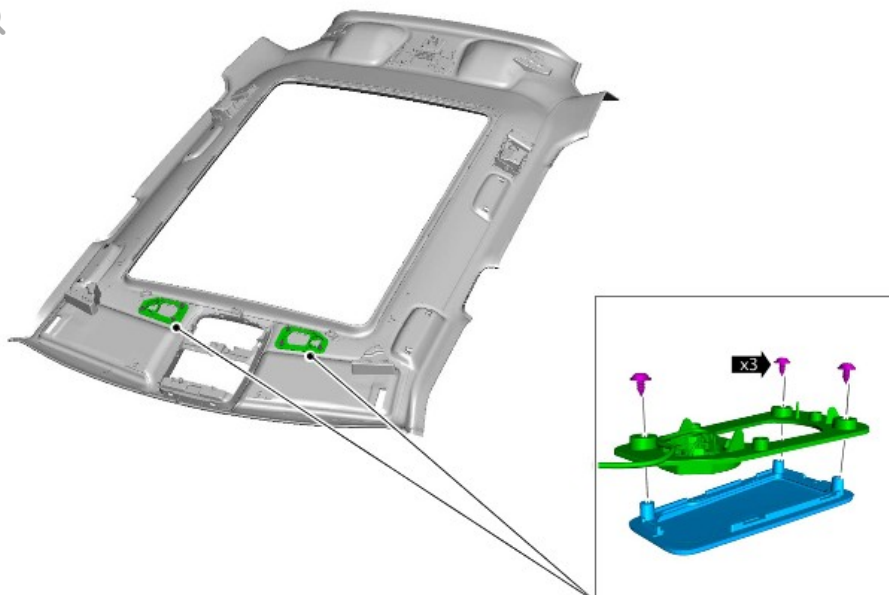


E156898

Torque: 1.9 Nm

32.

NOTE:

If equipped.

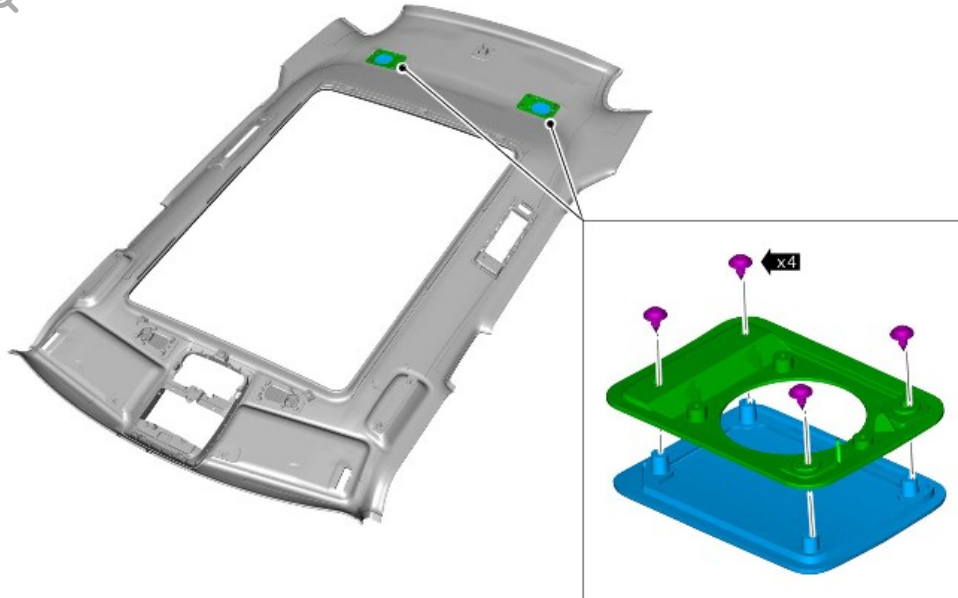


E158899

Torque: 1.9 Nm

INSTALLATION

1.

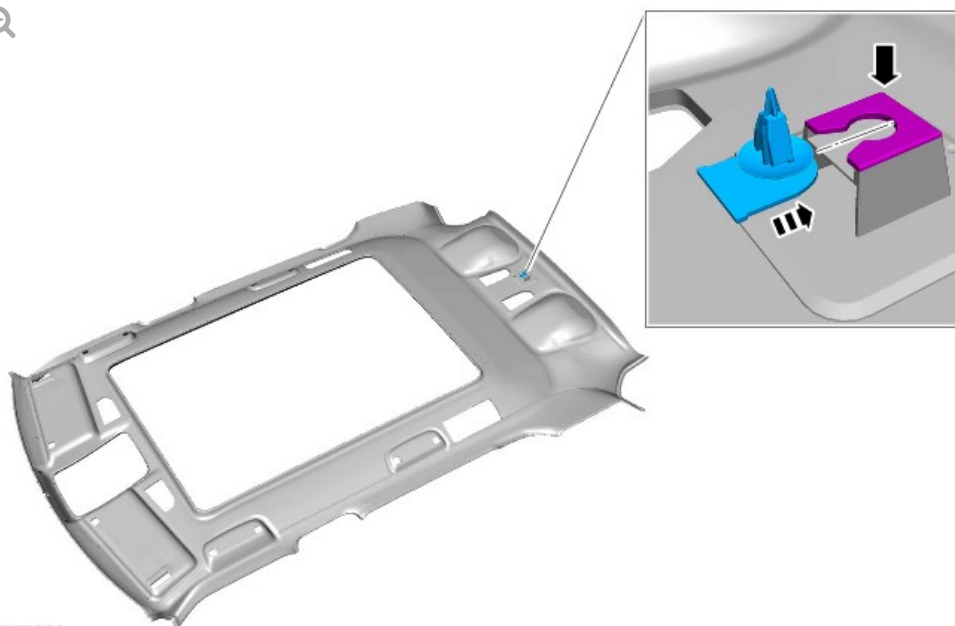

E157336

2. To install reverse the removal procedure.

3.

CAUTION:

Make sure that the seal is installed to the correct orientation as noted in the removal procedure. Failure to follow this instruction may result in damage to the headliner.

