

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

BACK PANEL INNER (G1532031)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The back panel inner is installed in conjunction with:

- Rear bumper cover
 - Rear bumper
 - Back panel outer
-

1.



E143549

The back panel inner is serviced as indicated.


-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.


4. For additional information, refer to: [Rear Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
5. For additional information, refer to: [Rear Bumper](#) (501-19 Bumpers, Removal and Installation).
6. For additional information, refer to: [Back Panel Outer](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

7.

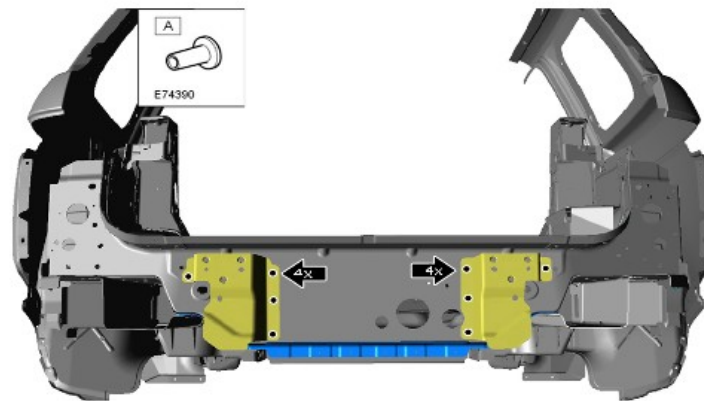


Remove the SPR's as indicated.

8.

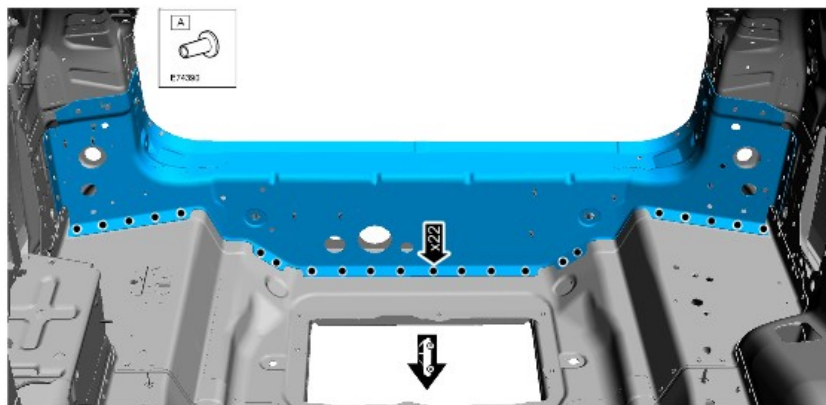

Remove the SPR's as indicated.

9.

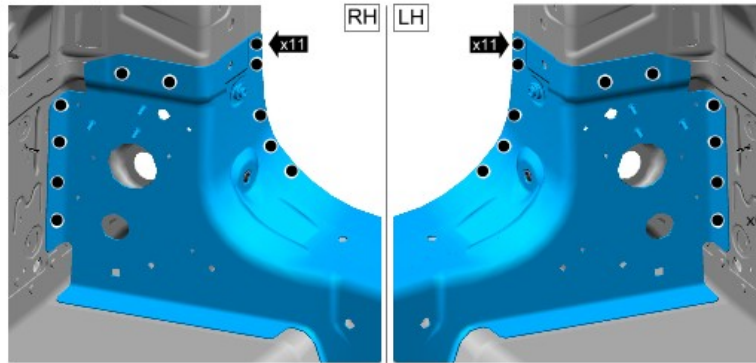


E143553

Remove the SPR's as indicated.

10.

NOTE:

If there is any evidence of damage or cracks to the battery tray a new component must be installed.

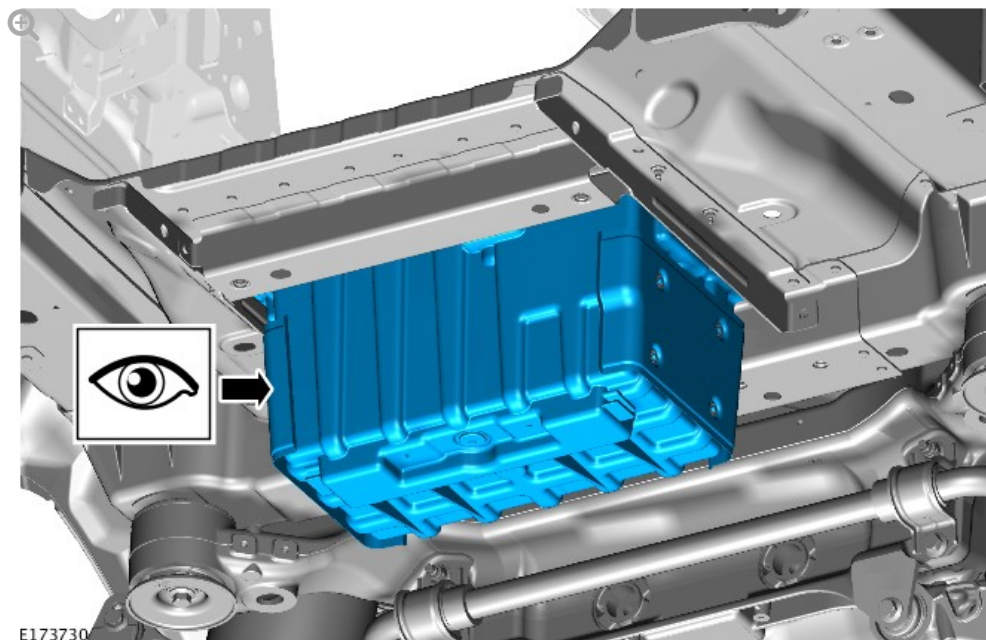

Check the integrity of the battery tray as indicated.

11. Separate the joints and remove the back panel inner.

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.
2. Using a fine bristle disc, remove any adhesive residue.
3. Dress flanges where necessary.
4. Offer up the new back panel inner and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.


5.

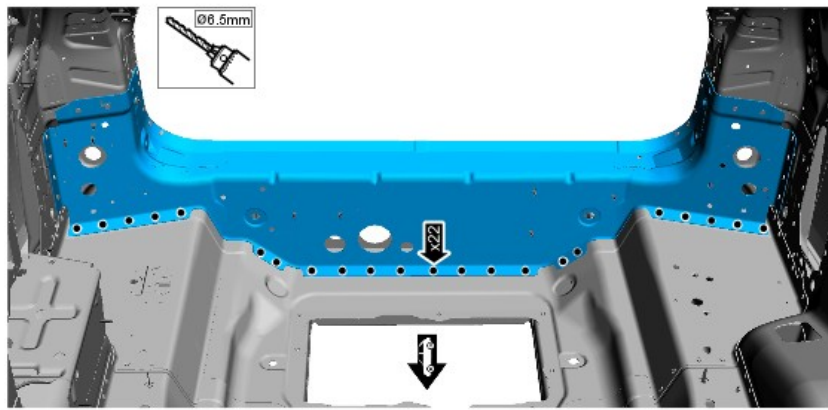

E143554

Drill holes through the old back panel inner into the new back panel inner where BSF's are to be installed as indicated.

6.

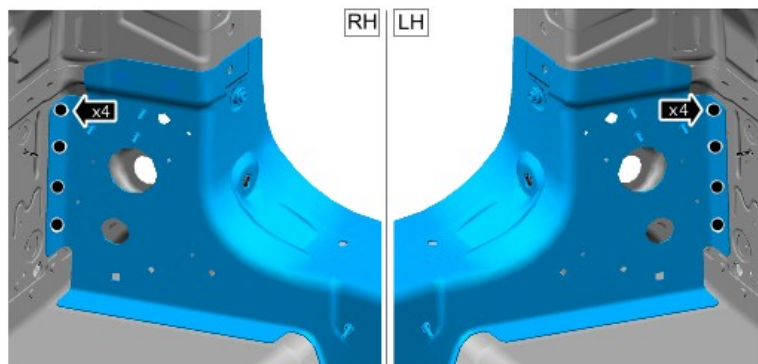

E143555

Drill holes through the old back panel inner into the new back panel inner where BSF's are to be installed as indicated.

7. Prepare the new back panel inner for the installation of new weld studs. Using the old back panel inner measure the locations of the weld studs and install new weld studs on the new back panel inner. The components that are located/fixed to these weld studs must be offered up and cross checked for alignment prior to the installation of the weld studs to the new panel.
8. Remove the new panel.
9. Deburr the drilled holes.


10. Using a fine bristle disc, clean and prepare the panel surfaces.

11. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

12.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

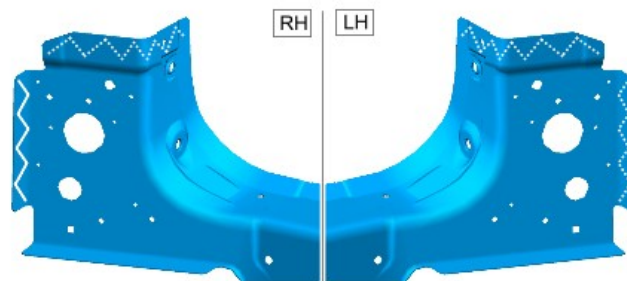


E143556

Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the areas as indicated.

13. Offer up the new back panel inner and clamp into position. Check alignment, if correct, proceed to the next step, if not rectify before proceeding.


14.

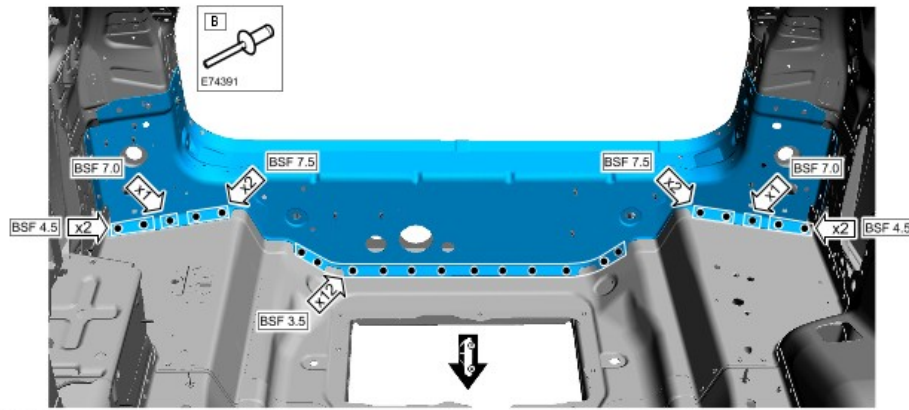

E143557

Install the BSF's as indicated.

15.

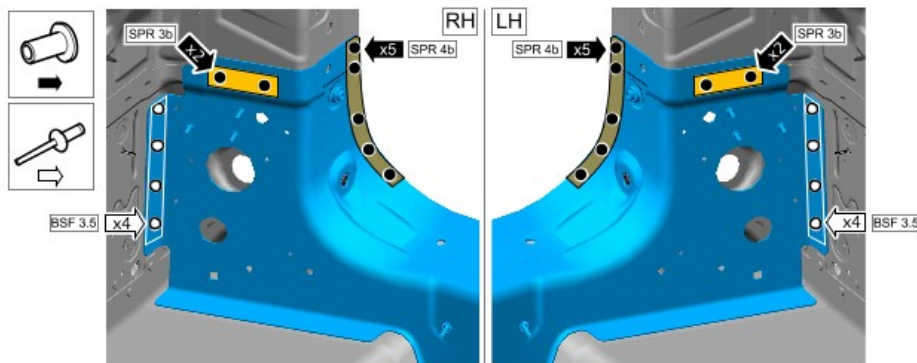


E143558

Install the SPR's and the BSF's as indicated.

16. Remove any excess adhesive.

17. Offer up the back panel supporting panels and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

18.

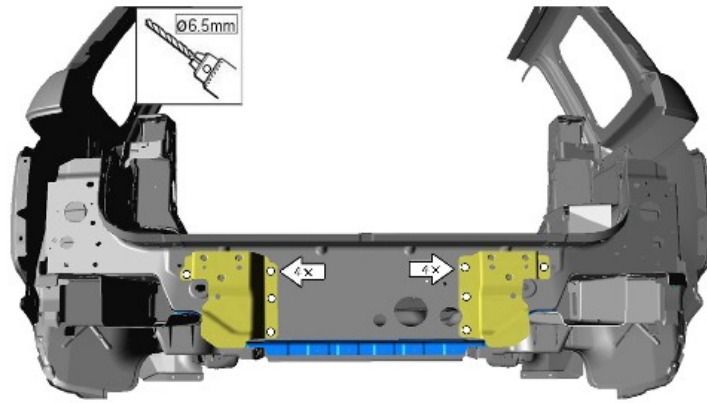

E144512

Drill holes through the old back panel supporting panel panels into the new panel at points where BSF's are to be installed as indicated.

19. Remove the back panel supporting panels.


20. Deburr the drilled holes.

21. Offer up the back panel supporting panels and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

22.

NOTE:

Make sure that the BSF's are installed from the inside outwards.

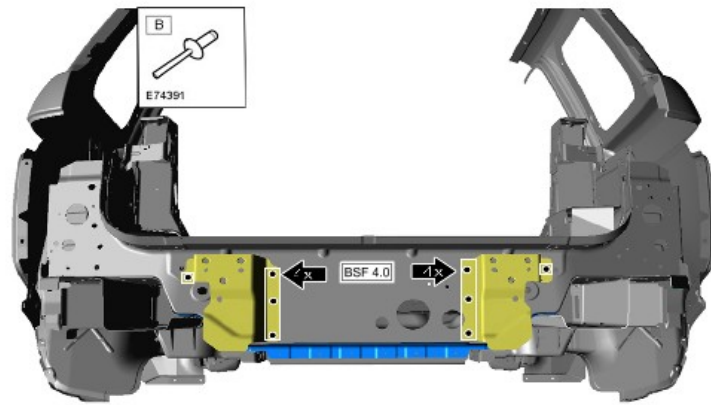

E144510

Install the BSF's as indicated.

-
23. Make sure that any open or exposed panel joints are correctly sealed.
-
24. Make sure corrosion protection is applied to all areas affected by repair.
-
25. The installation of associated panels and components is the reversal of removal procedure.