

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

INNER QUARTER PANEL LOWER (G1548939)


REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- The inner quarter panel lower is installed in conjunction with:
 - Quarter panel
 - Rear lamp panel outer
 - Rear lamp panel inner
 - Quarter panel reinforcement
 - Rear wheelhouse extension
 - **Right hand indicated, left hand similar.**
-

1.

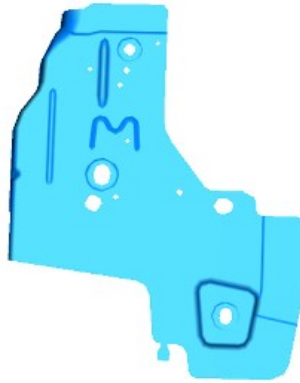

E145898

The inner quarter panel lower is serviced as indicated.


-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. For additional information, refer to: Health and Safety Precautions (100-00 General Information, Description and Operation).
-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: Quarter Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
5. For additional information, refer to: Rear Lamp Panel Outer (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
6. For additional information, refer to: Rear Lamp Panel Inner (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
7. For additional information, refer to: Quarter Panel Reinforcement (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
8. For additional information, refer to: Rear Wheelhouse Extension (501-30 Rear End Sheet Metal Repairs, Removal and Installation).


9.

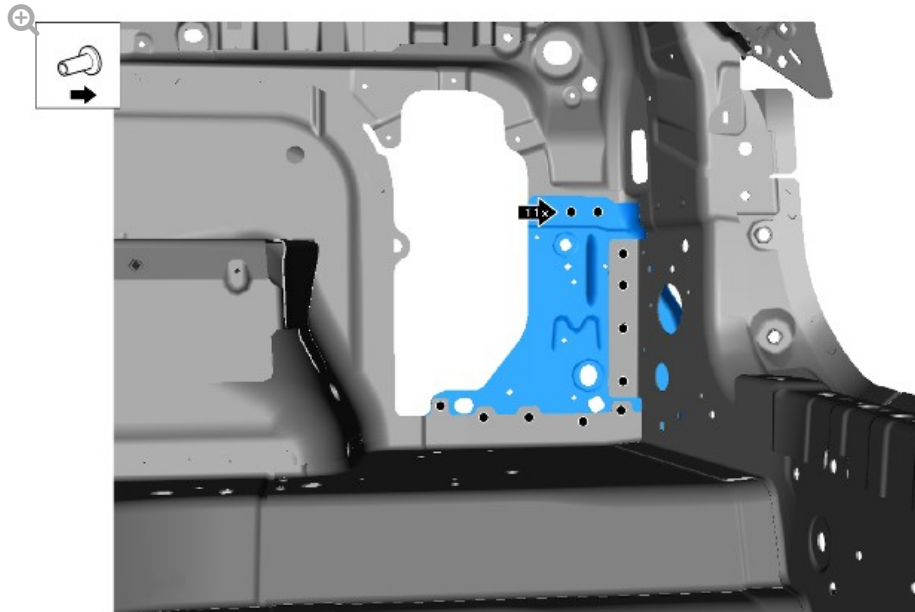

E 145899

Remove the SPR's as indicated.

10.

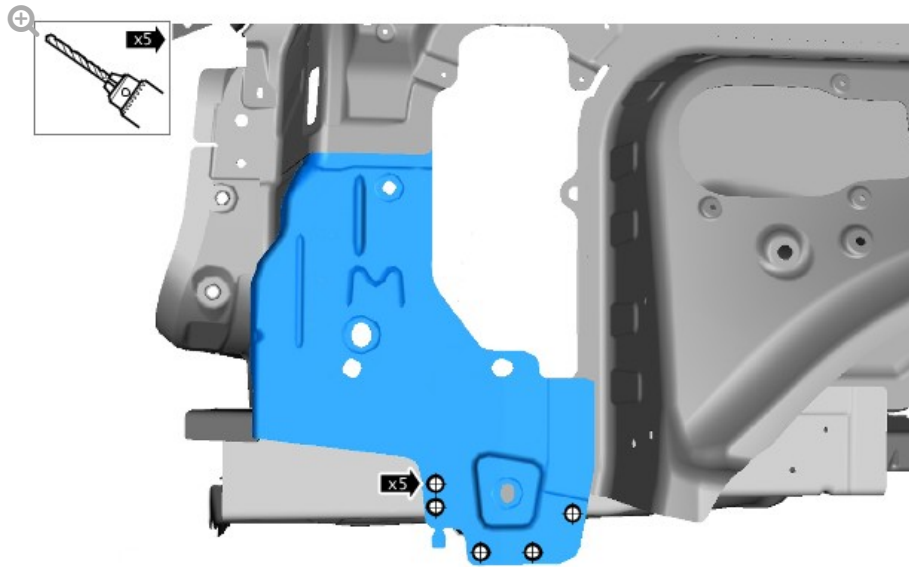

E159616

Remove the SPR's as indicated.

-
11. Separate the joints and remove the inner quarter panel lower.
-

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

-
1. Remove the rivet remnants.

2. Dress the flanges where necessary.
3. Offer up the new inner quarter panel lower and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

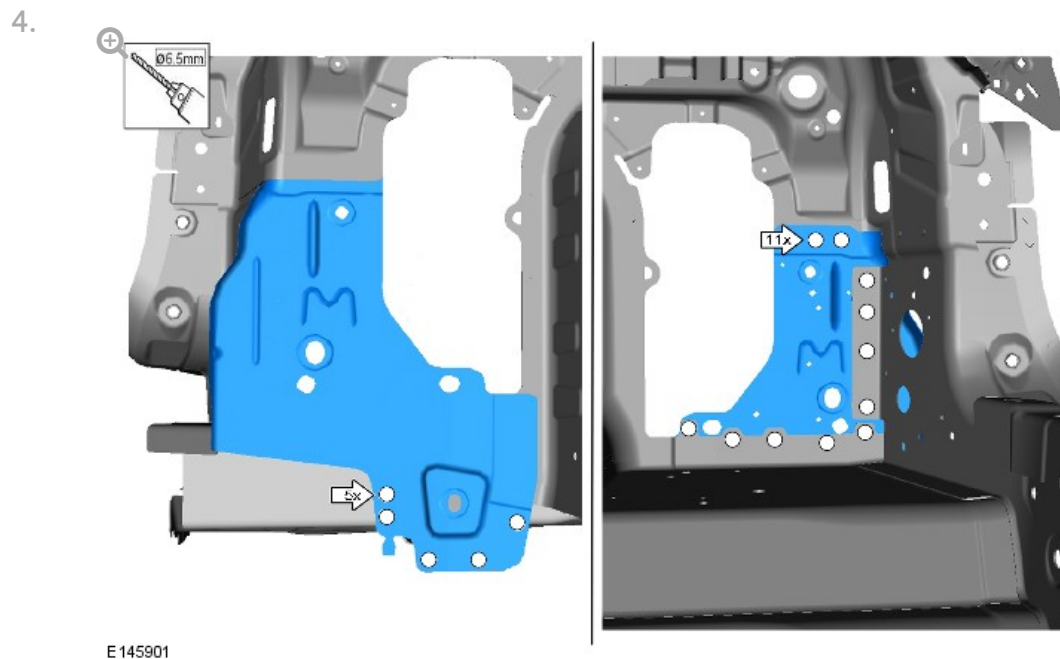


Drill holes through the old inner quarter panel lower into the new inner quarter panel lower where BSF's are to be installed as indicated.

5. Remove the new inner quarter panel lower.
6. Deburr the drilled holes.
7. Using a fine bristle disc, clean and prepare the panel surfaces.
8. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

9.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

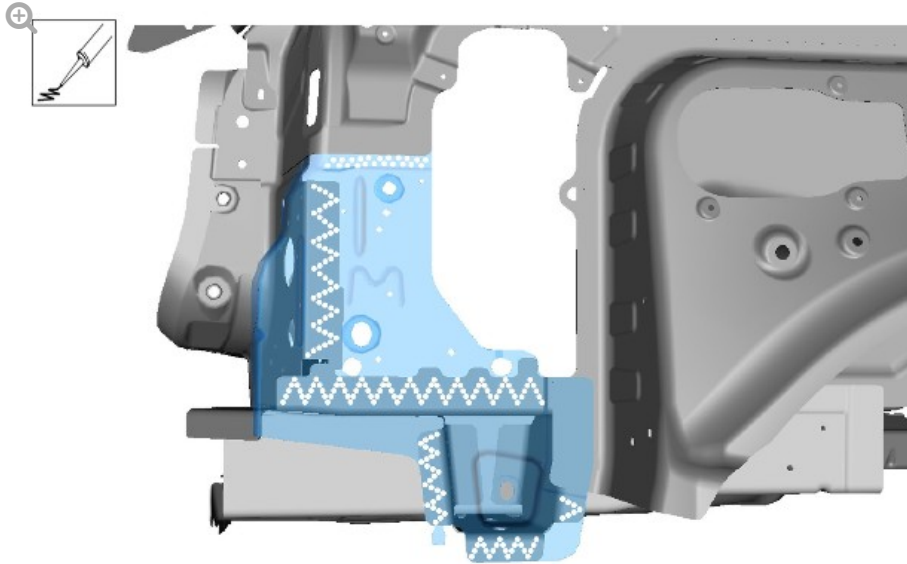

E145902


Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the area as indicated.

-
10. Offer up the new inner quarter panel lower and clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.
-

11.

CAUTION:


Make sure that the formed end of the installed BSF's does not interfere with the vehicle package.

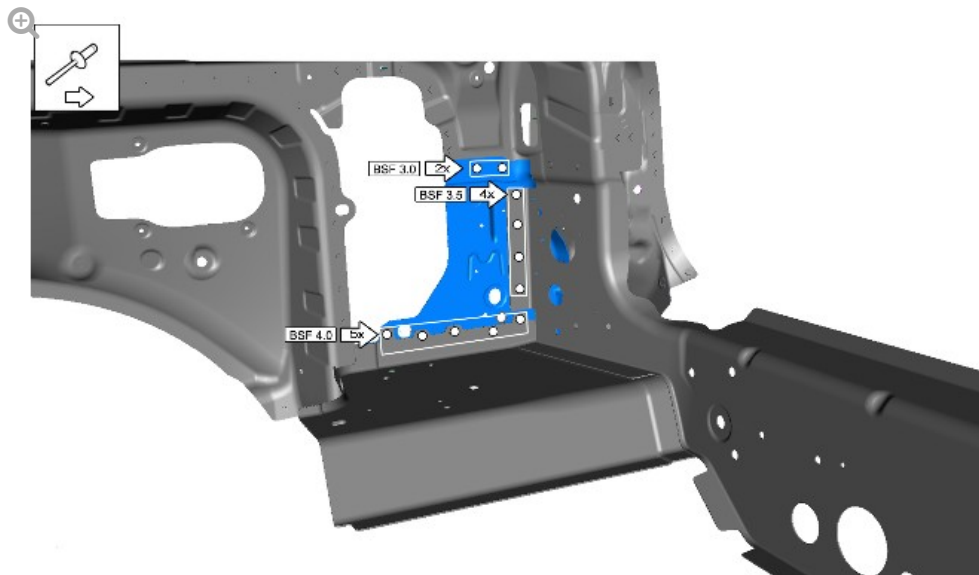

E145903

Install the BSF's as indicated.

12.

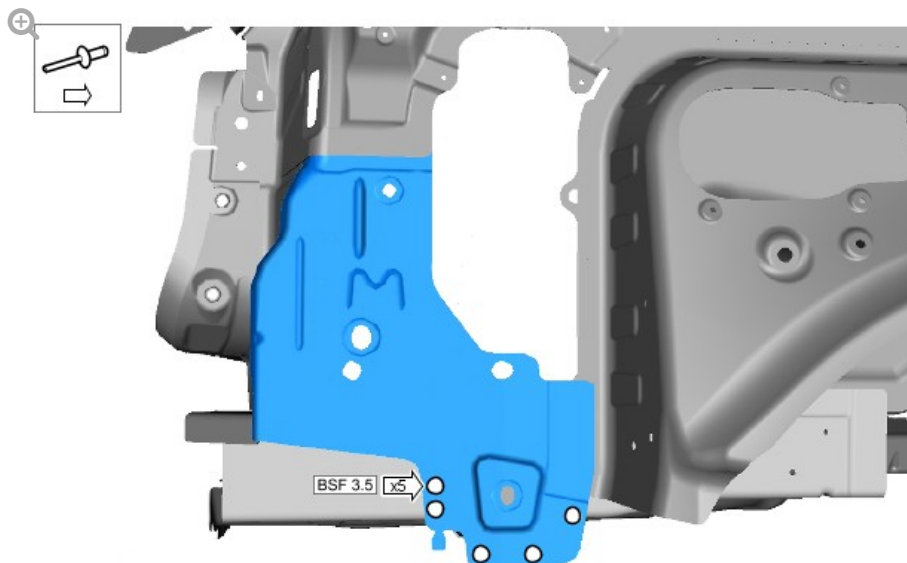

E145900

Install the BSF's as indicated.

13. Remove any excess adhesive.

14. Make sure that any open or exposed panel joints are correctly sealed.

15. Make sure corrosion protection is applied to all areas affected by repair.

16. The installation of associated panels and components is the reversal of removal procedure.