

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR FLOOR PANEL SECTION (G1454658)

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rear floor panel section is installed in conjunction with:

- Rear bumper
 - Back panel outer
 - Back panel inner
 - Battery tray
-

1.

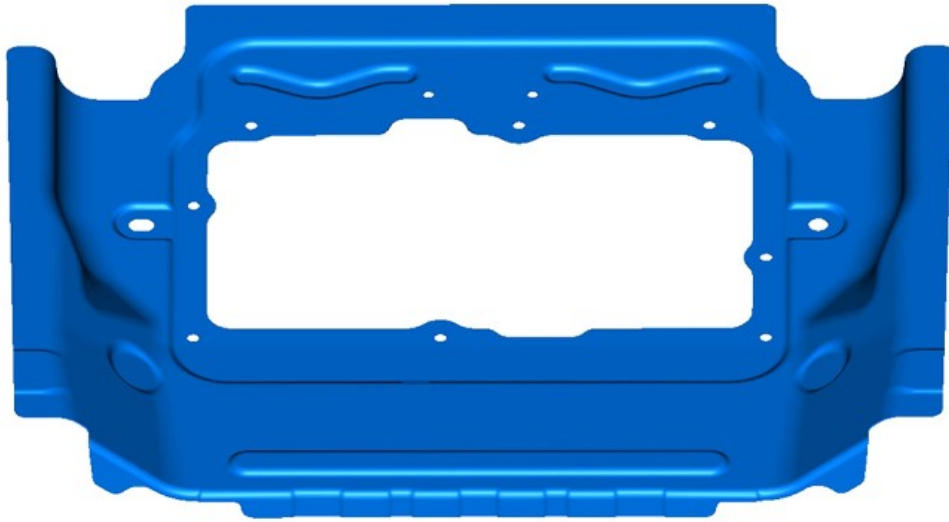

E143559

The rear floor panel section is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- This procedure is for the replacement of the rear floor panel.


However if there is damage to the rear floor panel reinforcements this is also covered in step seventeen.

4. For additional information, refer to: [Rear Bumper](#) (501-19 Bumpers, Removal and Installation).
5. For additional information, refer to: [Back Panel Outer](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
6. For additional information, refer to: [Back Panel Inner](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
7. For additional information, refer to: [Battery Tray](#) (414-01 Battery, Mounting and Cables, Removal and Installation).

8.

NOTE:


If there is any evidence of damage or cracks to the battery tray a new component must be installed.

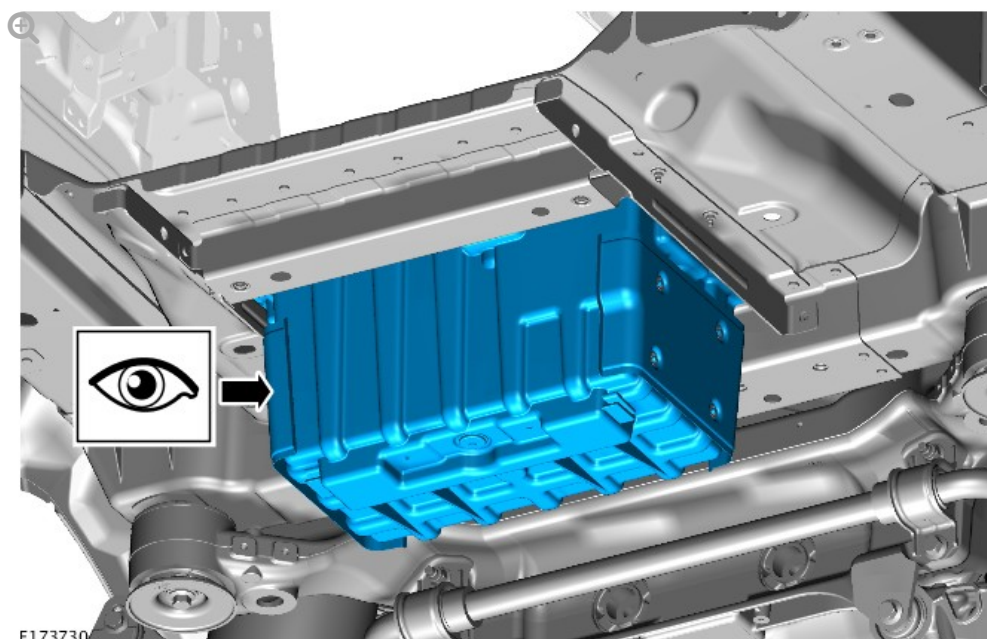

E173730


Check the integrity of the battery tray as indicated.

9.

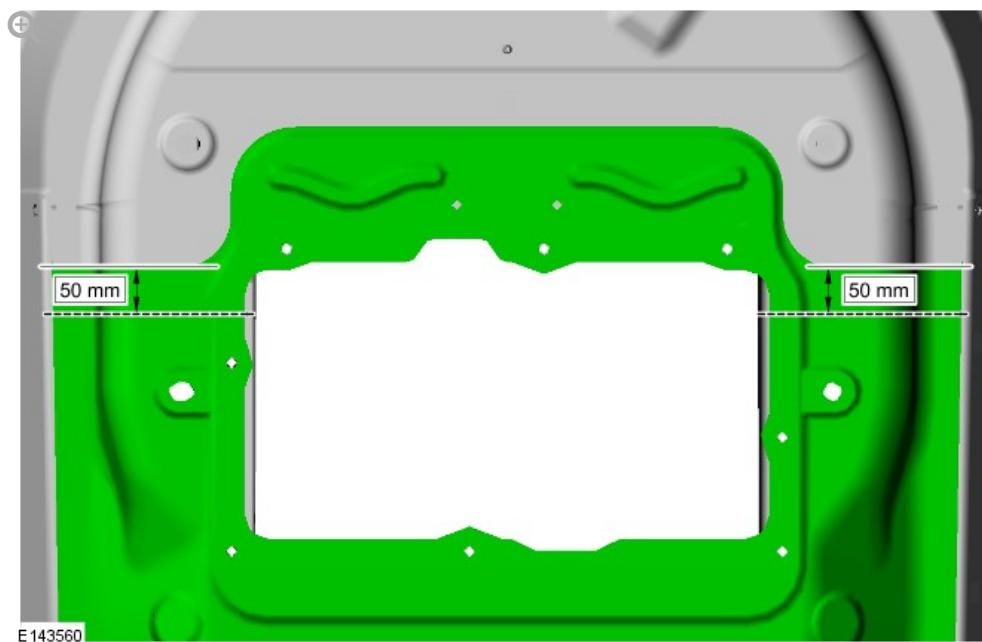

Mark onto the rear floor panel section that is installed on the vehicle the cut lines as indicated.

10.

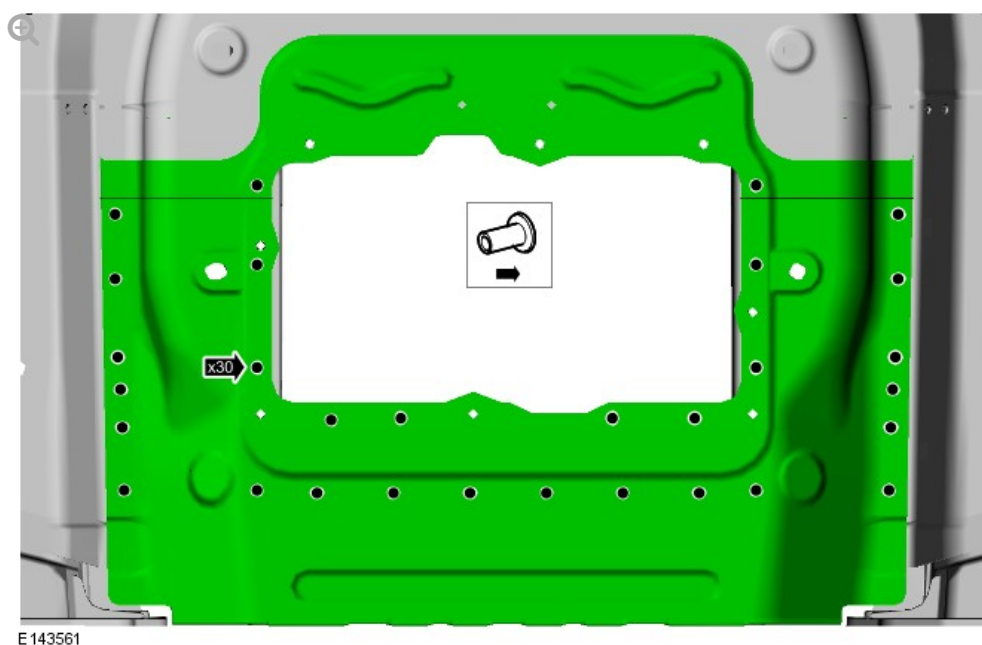

Remove the SPR's as indicated.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.

2. Dress flanges where necessary.

3. Using a fine bristle disc, clean and prepare the panel surfaces.

4.

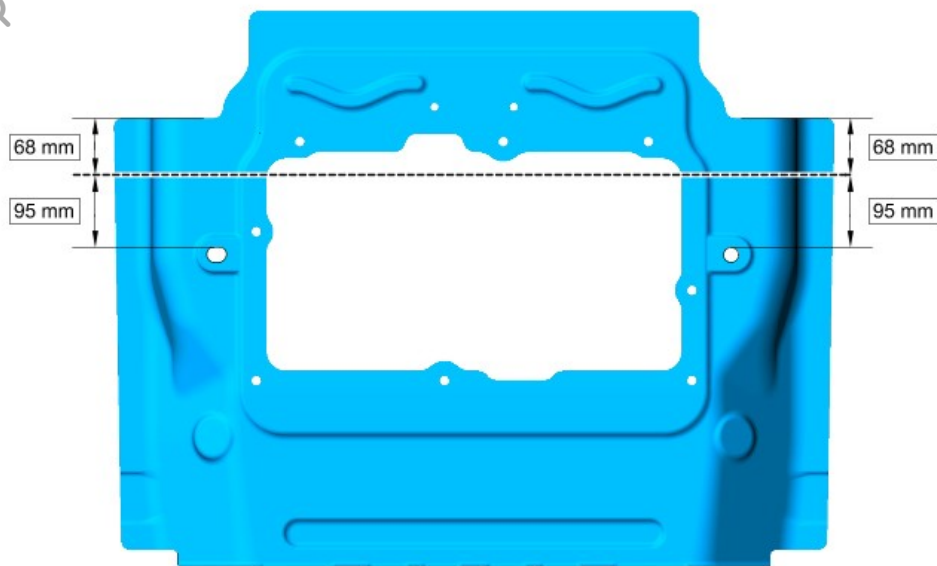


E 143562

Mark onto the new rear floor panel section the cut lines as

indicated.


5.

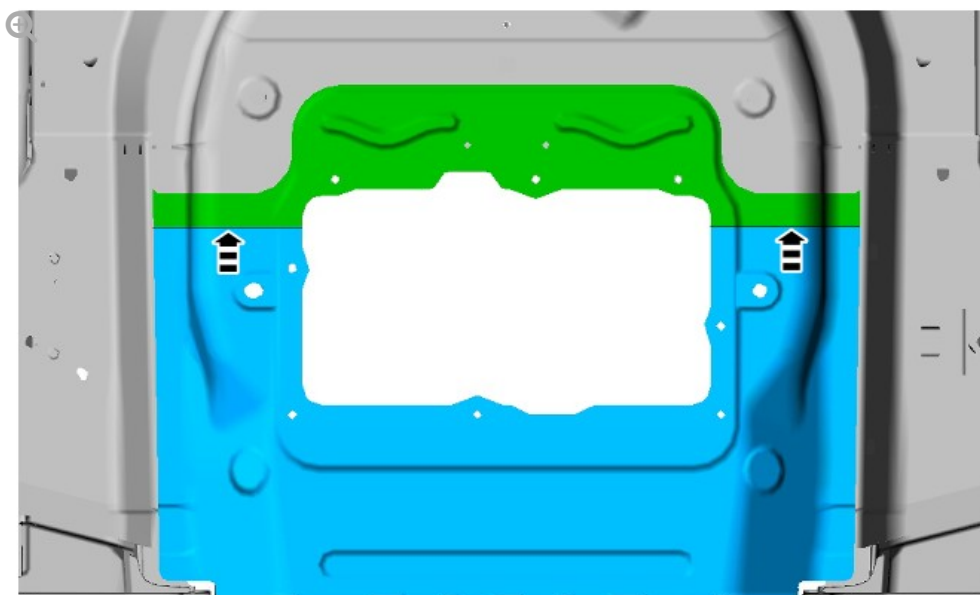

E 143563

Slide the new rear floor panel section underneath original floor panel and create an overlap. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

6.

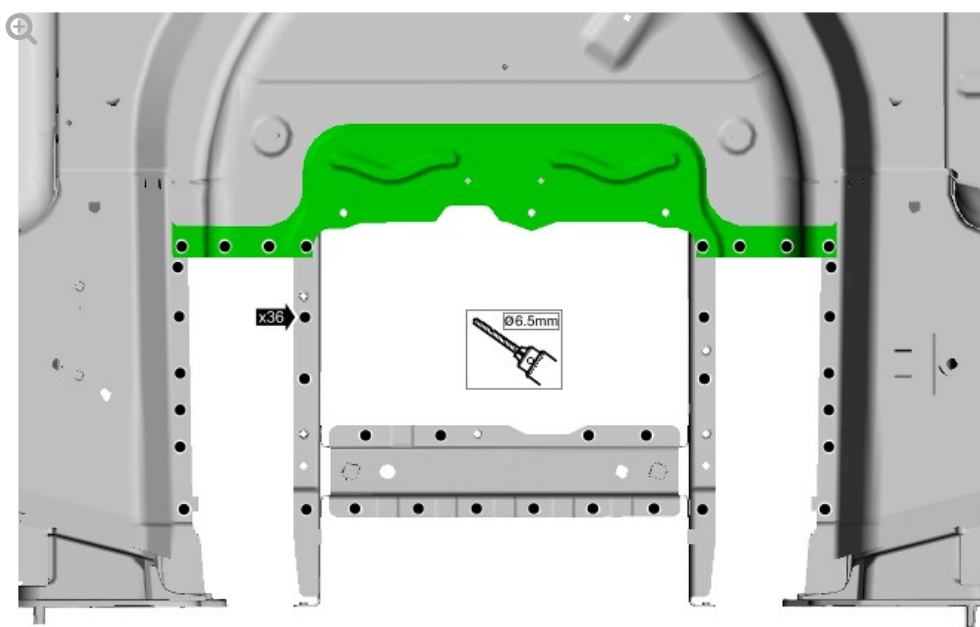

E 143564

Drill holes through the panels where the BSF's are to be installed as indicated.

7. Remove the new rear floor panel section.

8. Deburr the drilled holes.


9. Using a fine bristle disc, clean and prepare the panel surfaces.

10. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

11.

NOTES:

- Make sure a continuous bead of adhesive surrounds fixing.
- Make sure that sealer is applied between the overlapped joint of the new and the old rear floor panels.

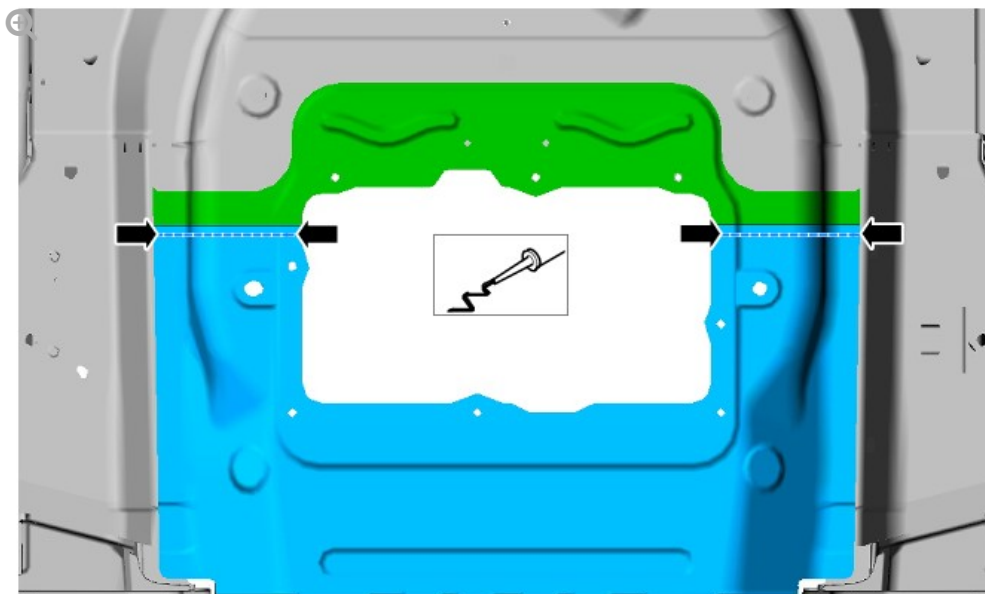


E144518

Apply a 5mm zig zag bead of the Land Rover recommended bonding material adhesive as indicated.

12.

NOTE:


Make sure a continuous bead of adhesive surrounds fixing holes.

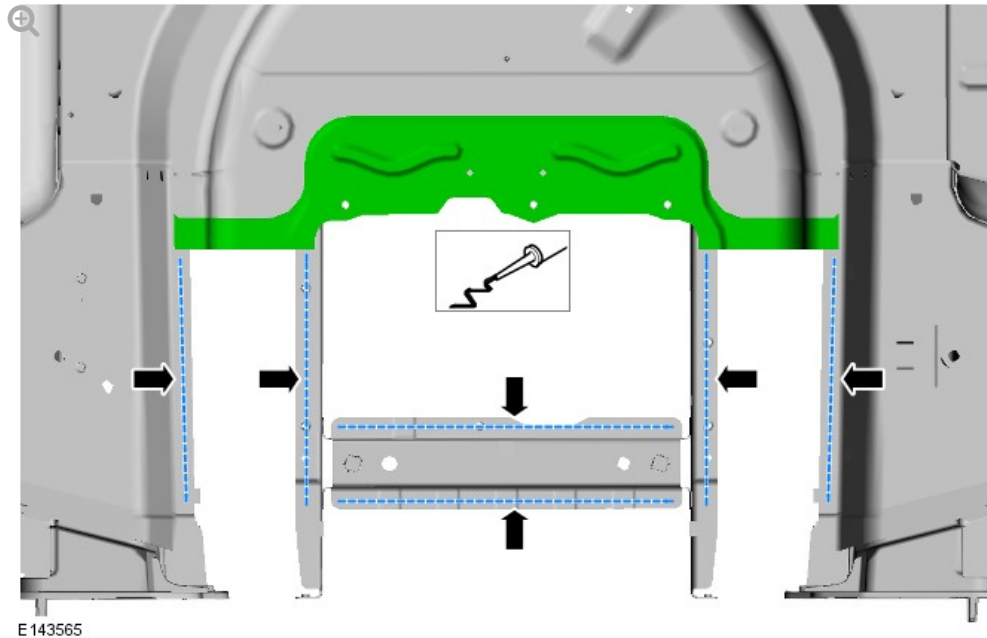

Apply a 5mm zig zag bead of the Land Rover recommended bonding material adhesive as indicated.

-
13. Offer up the new rear floor panel section and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

14.

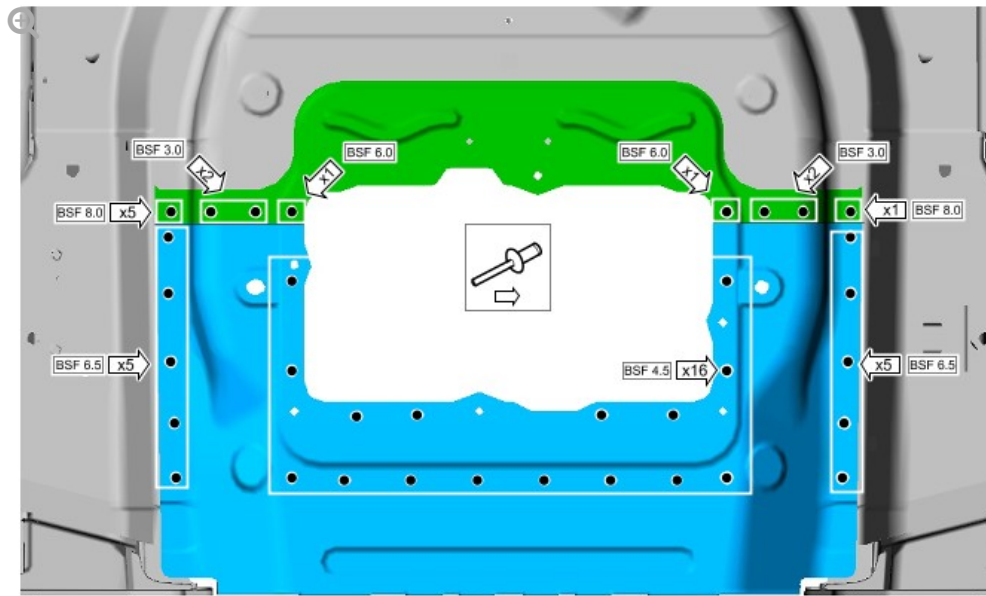


E 143566

Install the BSF's as indicated.

15. Offer up the rear floor panel reinforcement and clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

16.

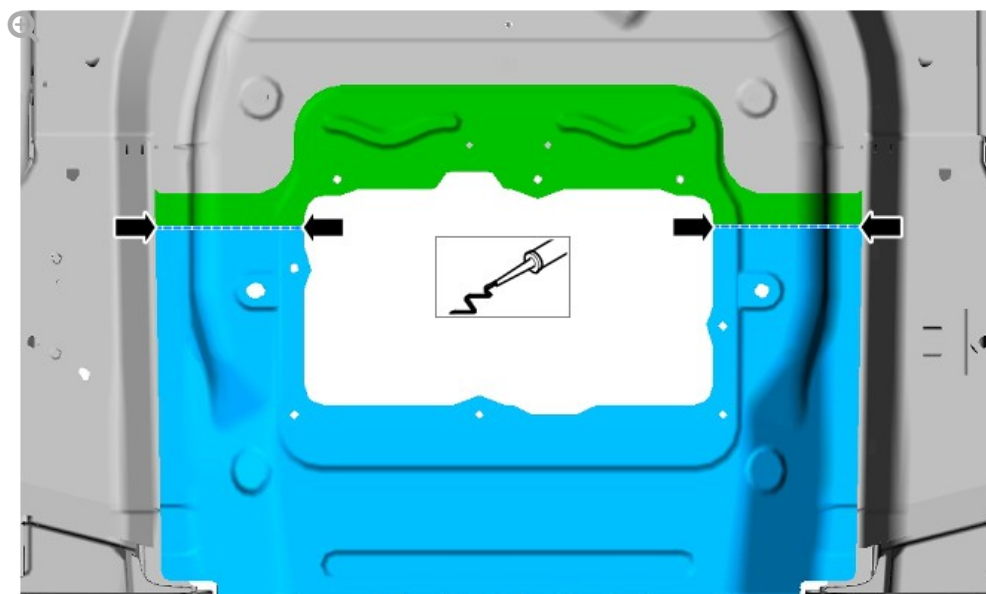


E 143567

Apply a bead of Land Rover recommended sealer to the overlapped joint as indicated.

17.

NOTE:

If the rear floor panel reinforcements are damaged this step will need to be carried out.

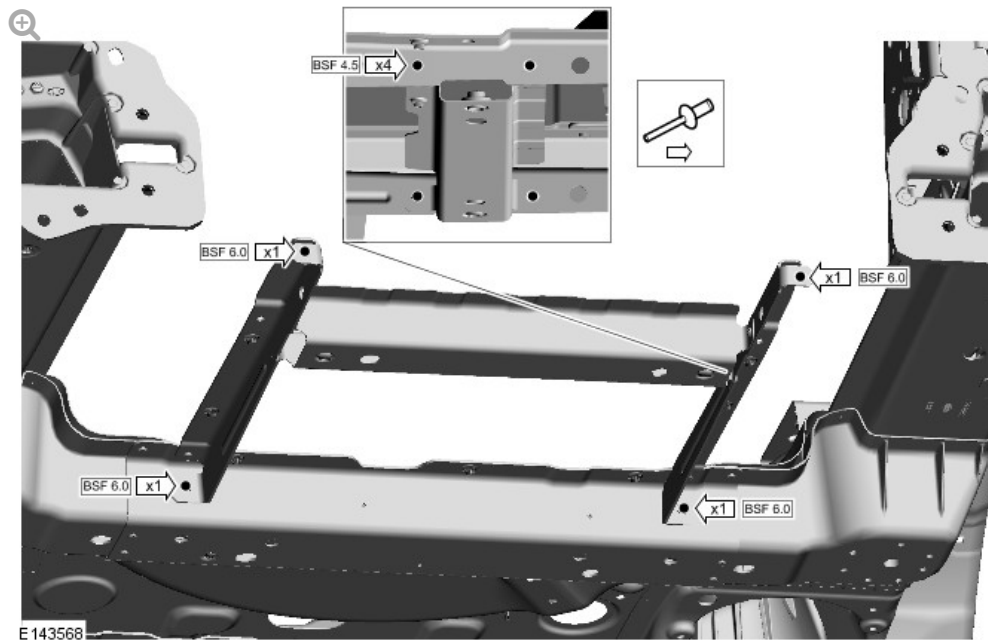

Install the rear floor panel reinforcement as indicated.

18. Remove any excess adhesive.

19. Make sure that any open or exposed panel joints are suitably sealed.

20. Make sure corrosion protection is applied to all areas affected by repair.

21. The installation of associated panels and components is the reversal of removal procedure.