

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR FLOOR SIDE EXTENSION (G1548940)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The rear floor side extension is installed in conjunction with:

- Rear side member section
 - Battery tray
-

1. 



E145908

The rear floor side extension is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Rear Side Member Section](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
5. For additional information, refer to: [Battery Tray](#) (414-01 Battery, Mounting and Cables, Removal and Installation).



6.

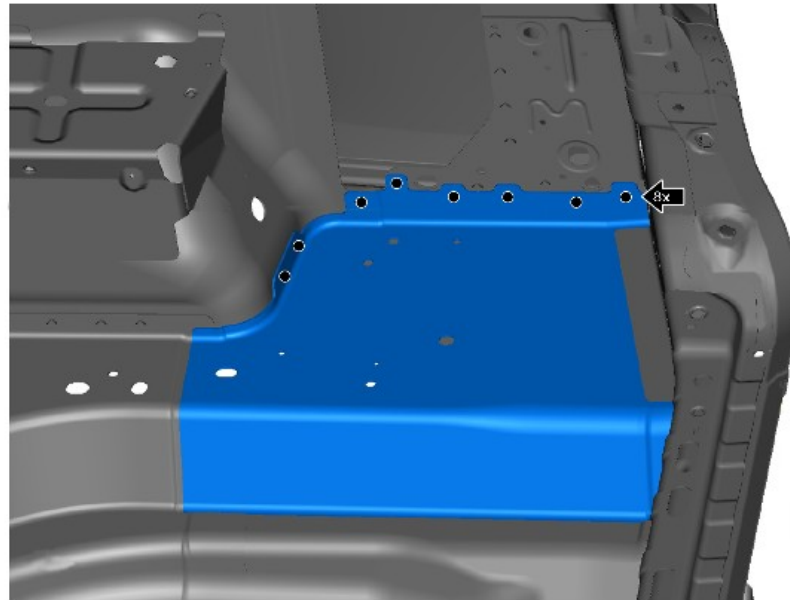

E 145909

Remove the SPR's as indicated.


7.

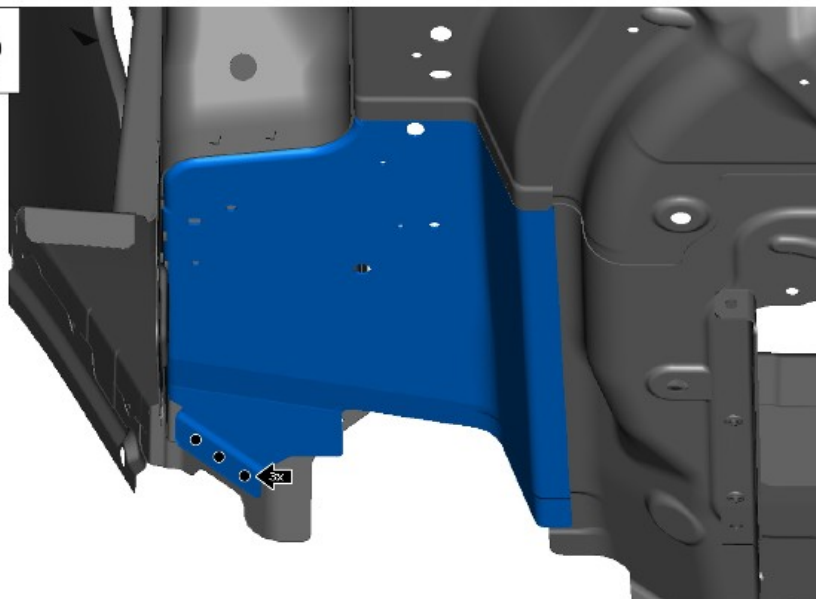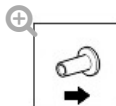

E 145910

Remove the SPR's as indicated.

8.

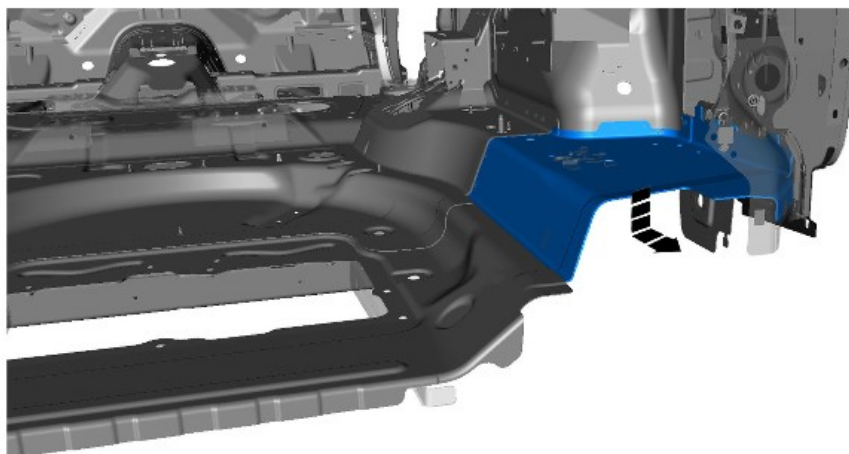

E145911

Separate the joints, pull down on the rear floor side extension and remove it to the rear as indicated.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

-
1. Remove rivet remnants.
-

2. Dress flanges where necessary.

3. Offer up the new rear floor side extension and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.


4.

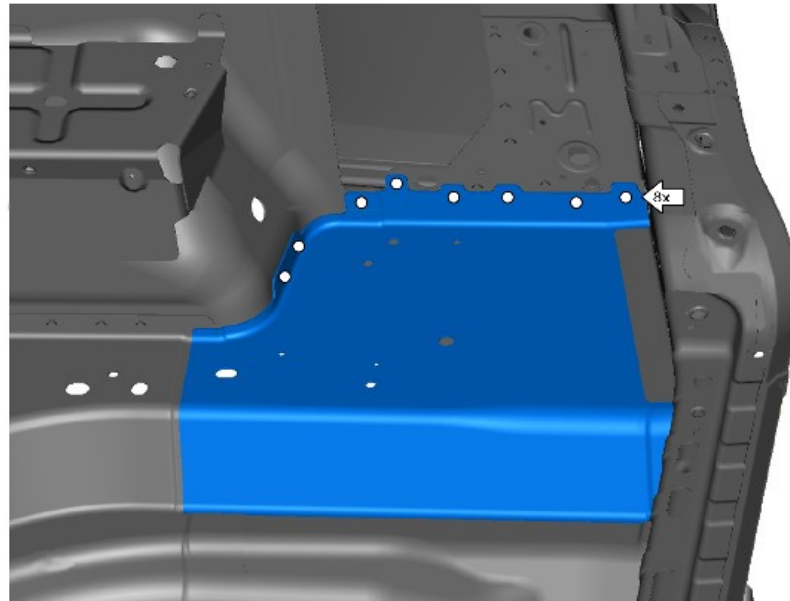

E 145912

Drill holes through the old rear floor side extension into the new rear floor side extension panel where BSF's are to be installed as indicated.

5.

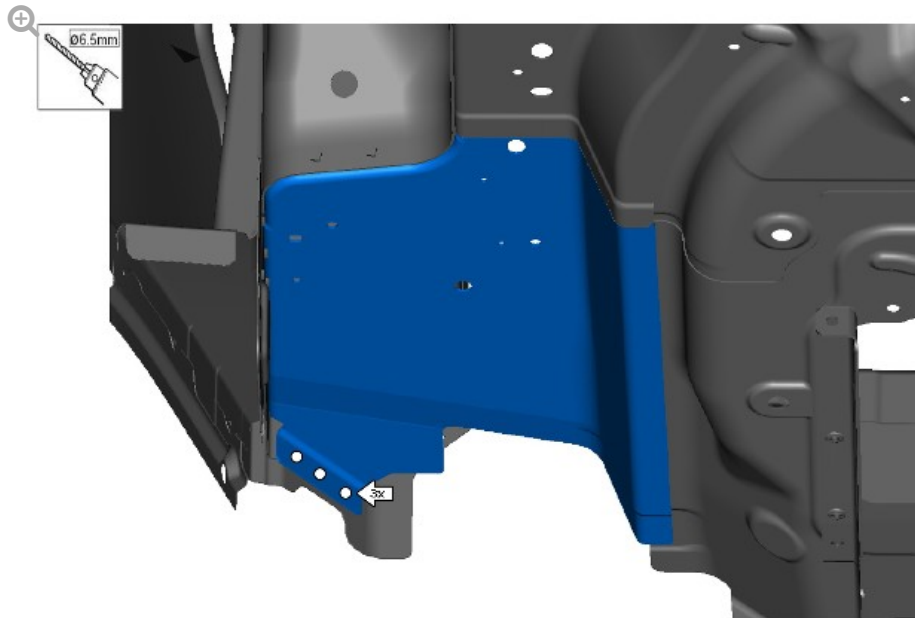

E145916

Drill holes through the old rear floor side extension into the new rear floor side extension panel where BSF's are to be installed as indicated.

6. Remove the new rear floor side extension.

7. Deburr the drilled holes.


8. Using a fine bristle disc, clean and prepare the panel surfaces.

9. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

10.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

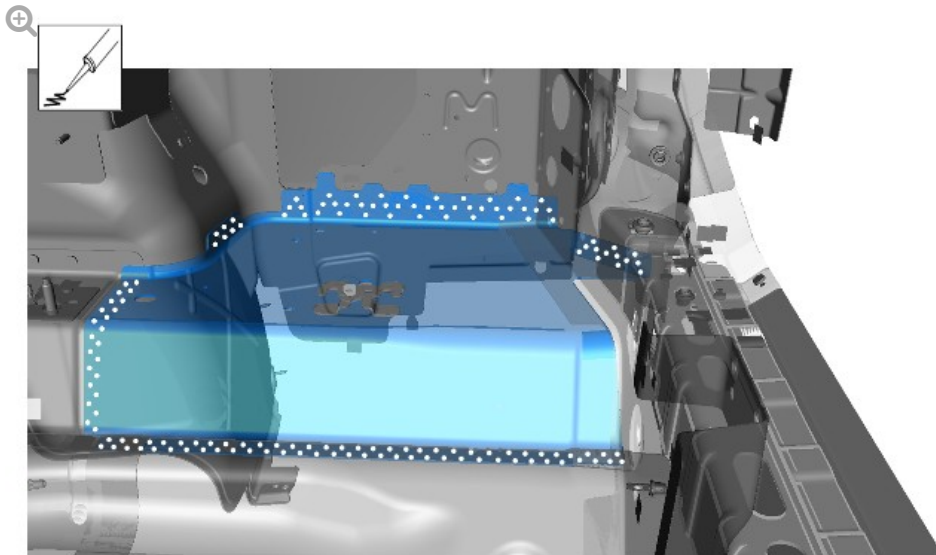


E145913

Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the area as indicated.

11. Offer up the new rear floor side extension panel, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.


12.

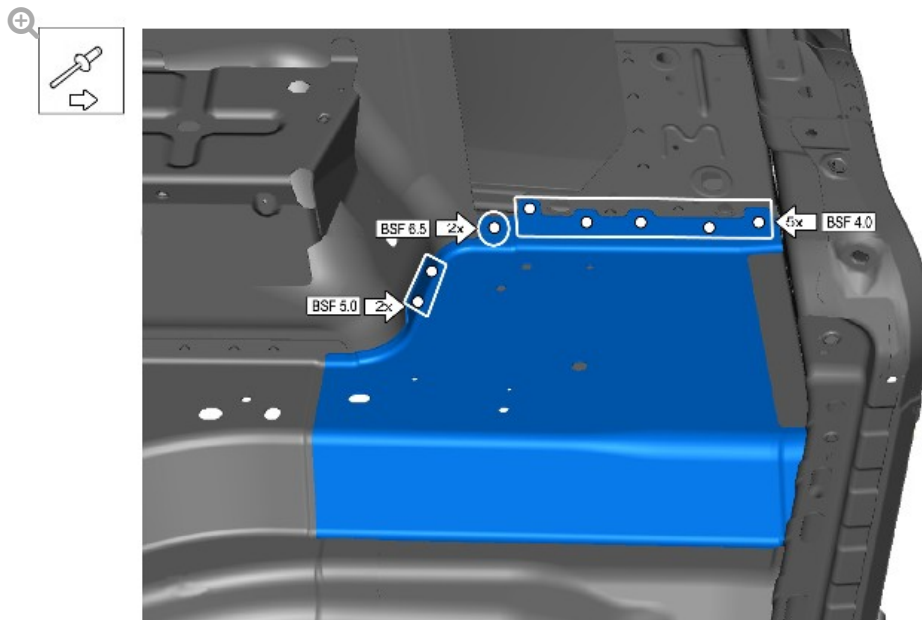

E145914

Install the BSF's as indicated.

13.

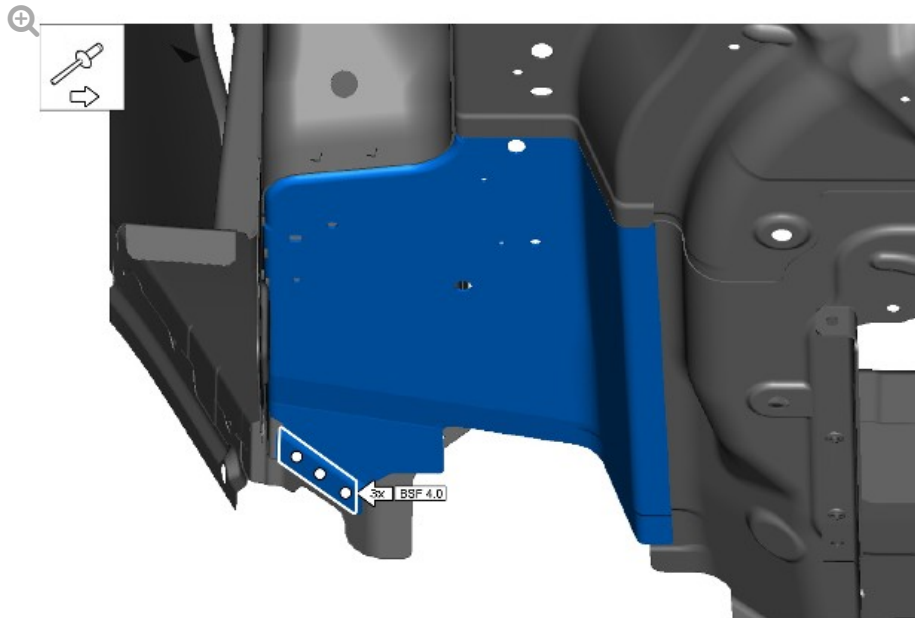

E145915

Install the BSF's as indicated.

14. Remove any excess adhesive.

15. Make sure that any open or exposed panel joints are correctly sealed.

16. Make sure corrosion protection is applied to all areas affected by repair.

17. The installation of associated panels and components is the reversal of removal procedure.