

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR LAMP PANEL INNER

[G1478832]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The rear lamp panel inner is installed in conjunction with:

- Quarter panel
 - Rear lamp panel outer
-

1.



E143569

The rear lamp panel inner is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Quarter Panel](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
5. For additional information, refer to: [Rear Lamp Panel Outer](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).


6.

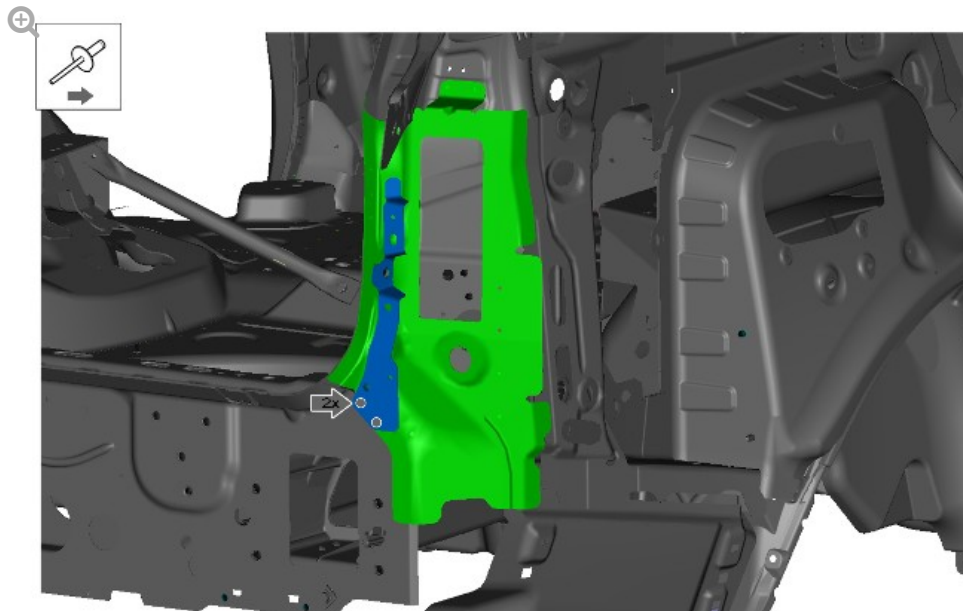

E143571

Remove the BSF's and the supporting bracket as indicated.


7.

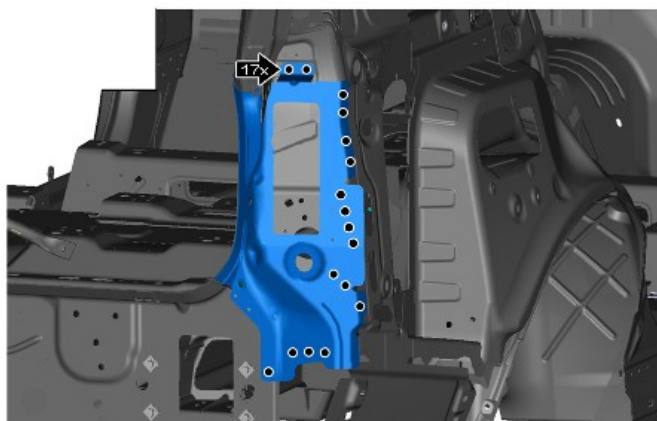

E143570

Remove the SPR's as indicated.


8.

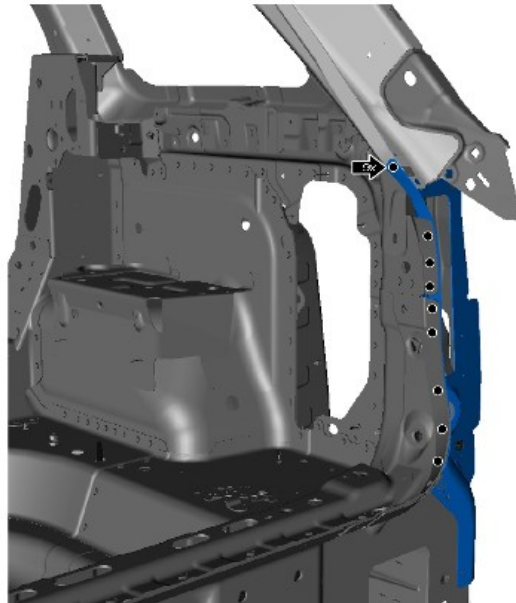

E143572

Remove the SPR's as indicated.

9.

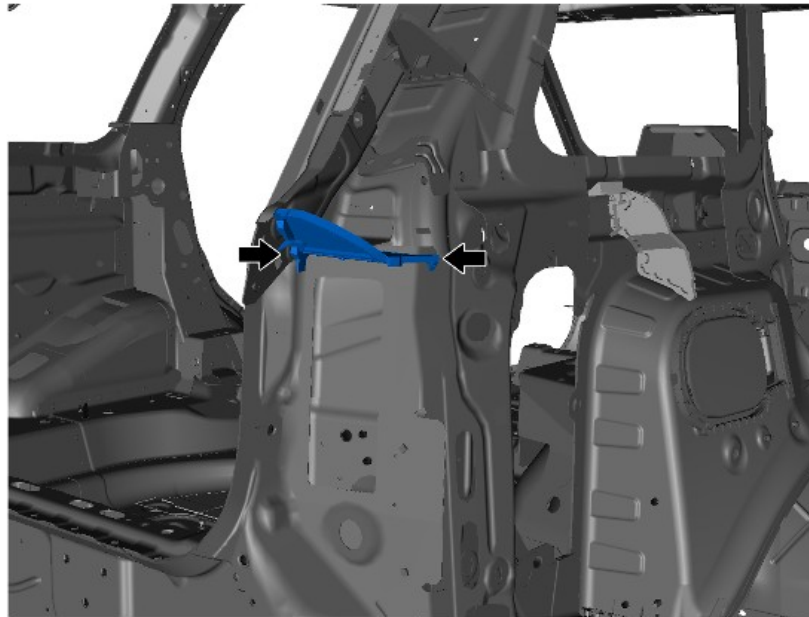


E144528

Remove the noise, vibration and harshness (NVH) component as indicated.

10.

CAUTION:

Take extra care when pulling the panels apart as adhesive will be present.

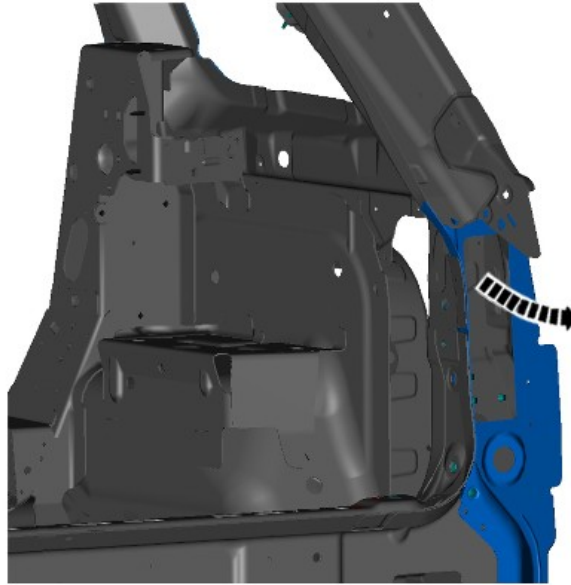

E143574

Separate the joints and pull down the rear lamp panel inner to release and remove it from the vehicle assembly as indicated.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.
2. Dress flanges where necessary.
3. Offer up the new rear lamp panel inner, clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

4.

CAUTION:

Make sure that the four highlighted holes are not drilled until the installation of the rear lamp panel outer.

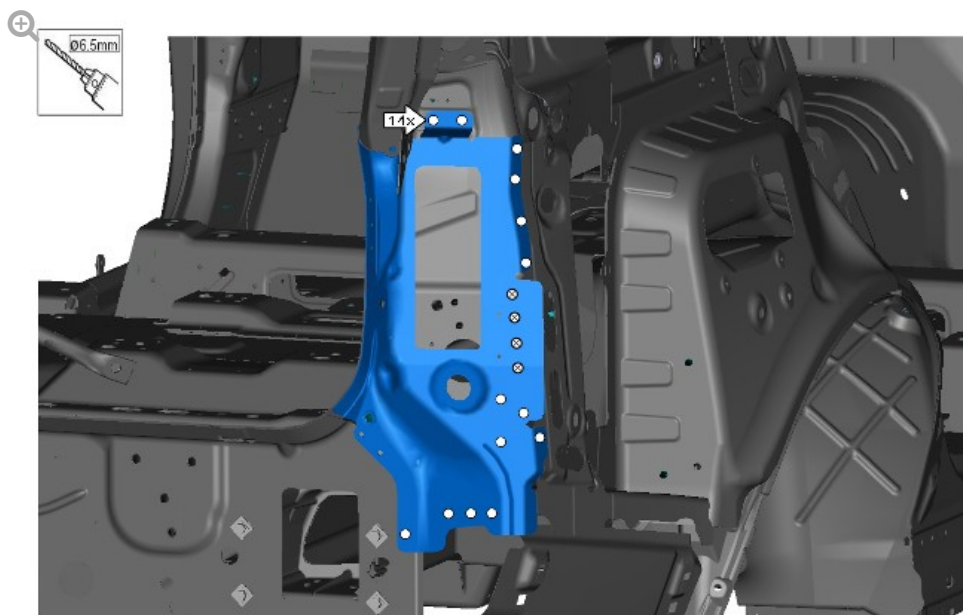

E 143576

Drill holes through the old rear lamp panel inner into the new rear lamp panel inner panel where BSF's are to be installed as indicated.

5. Remove the new rear lamp panel inner.

6. Deburr the drilled holes.


7. Using a fine bristle disc, clean and prepare the panel surfaces.

8. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

9.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

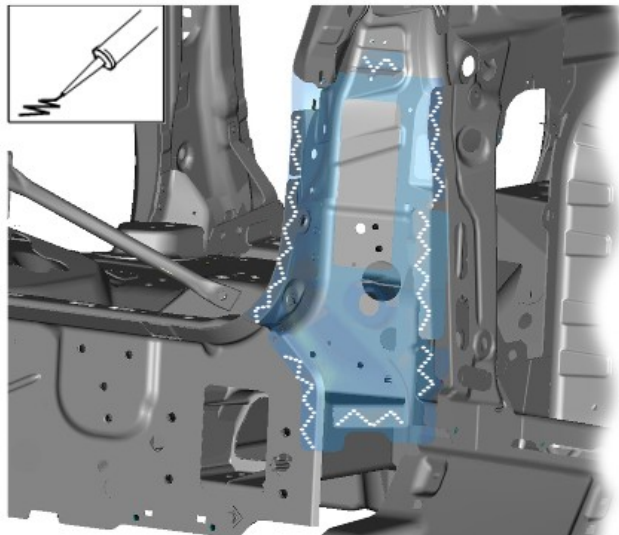

E143573

Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the area as indicated.


10. Offer up the new rear lamp panel inner, clamp into position. Check

alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

11.


CAUTION:

Make sure that the four highlighted BSF's are not installed as they are installed in conjunction with the rear lamp panel outer.

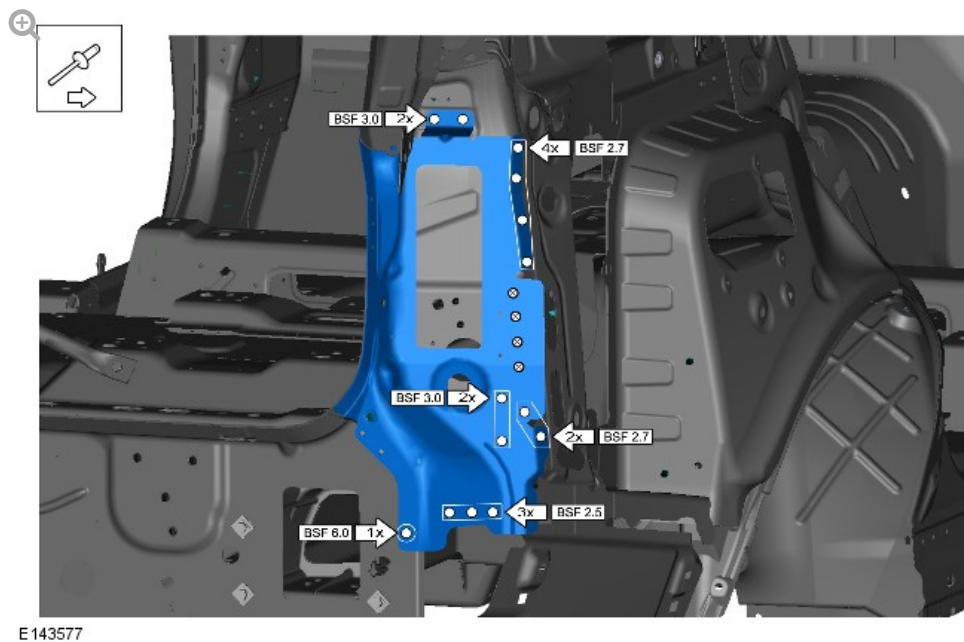

Install the BSF's as indicated.


12.

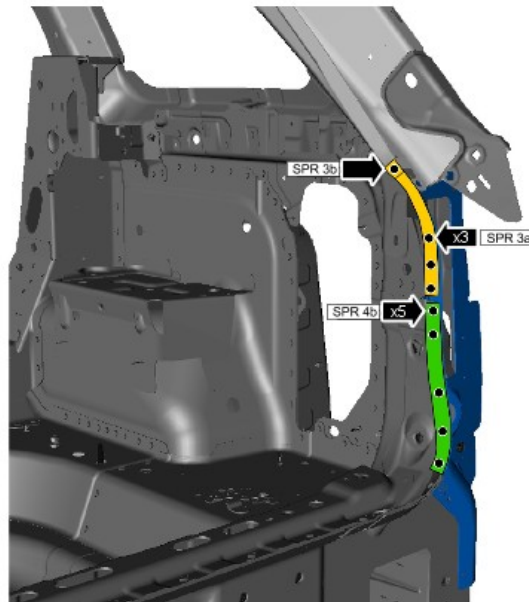

E143578

Install the SPR's as indicated.


13.

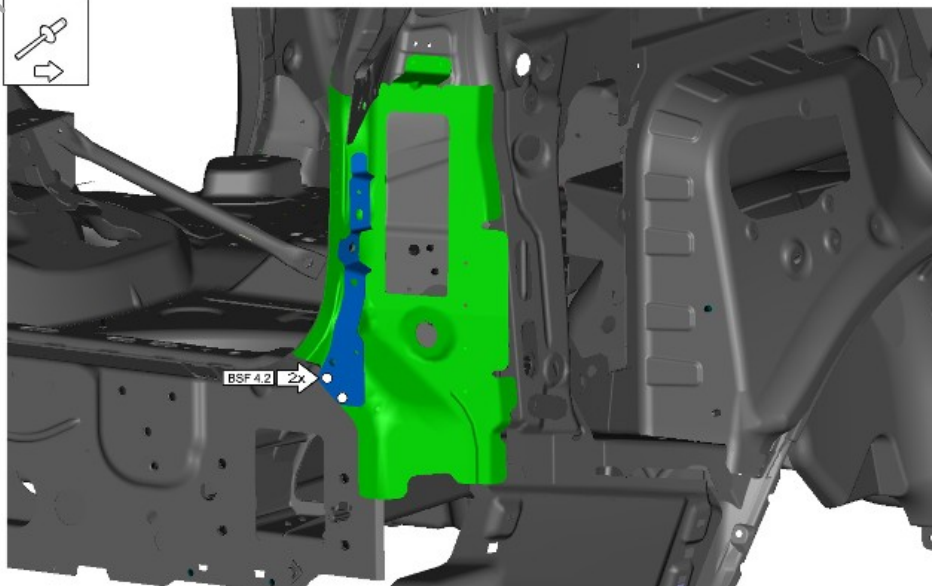

E143575

Install the supporting bracket and the BSF's as indicated.

14.

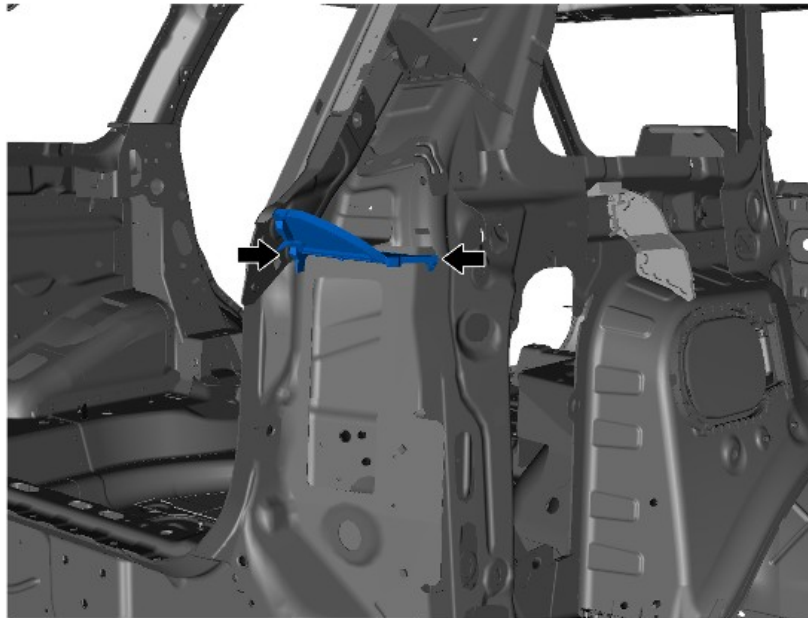

E144528

Install the NVH component as indicated.

15. Remove any excess adhesive.

16. Make sure that any open or exposed panel joints are suitably sealed.

17. Make sure corrosion protection is applied to all areas affected by repair.

18. The installation of associated panels and components is the reversal of removal procedure.