

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR LAMP PANEL OUTER

[G1478833]

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rear lamp outer panel is installed in conjunction with:

- Quarter panel
-

1.

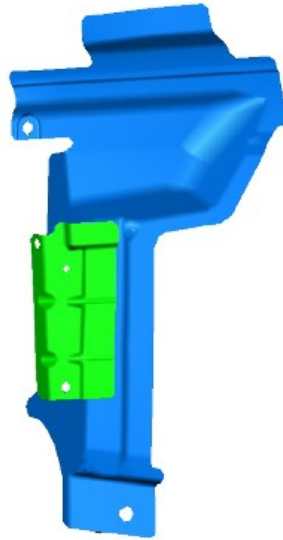

E143579

The rear lamp panel outer is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: Health and Safety Precautions (100-00, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

-
4. For additional information, refer to: Quarter Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
-
5. **This procedure is to cover fixings for the rear lamp panel outer only. To remove the rear lamp panel outer, it is necessary to dismantle the quarter panel.**
-

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

-
1. Offer up the bracket on the new panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

2.

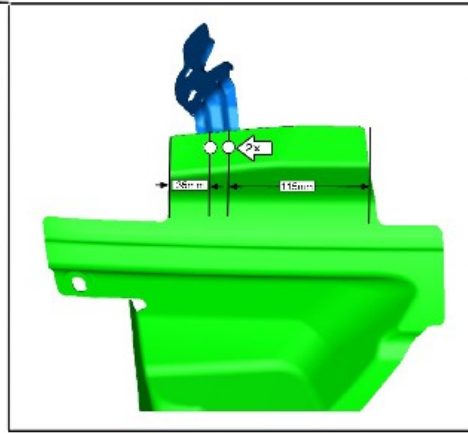

E143584


Drill holes where BSF's are to be installed as indicated.

3. Deburr the drilled holes.

4.

NOTE:

Make sure that countersunk BSF's are used so the BSF's do not interfere with the installation of the Quarter Panel.

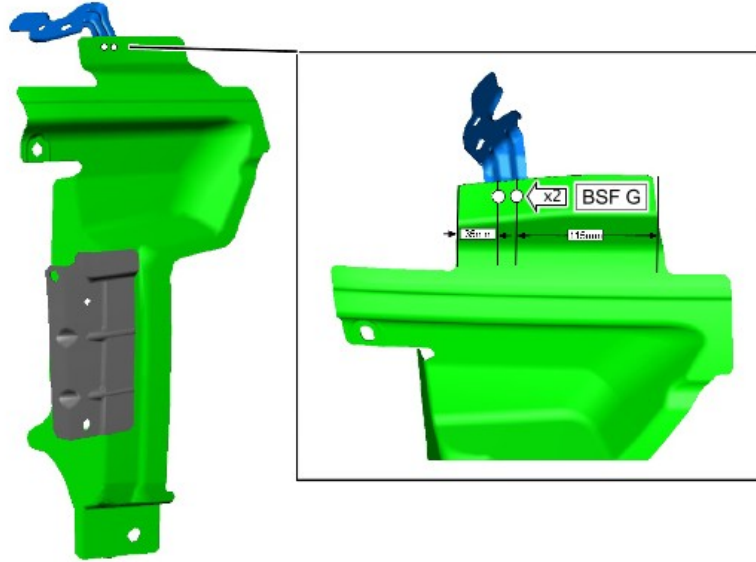

E143583

Install BSF'S as indicated.

-
5. Make sure that any open or exposed panel joints are correctly sealed.
-
6. Make sure corrosion protection is applied to all areas affected by repair.
-
7. The installation of associated panels and components is the reversal of removal procedure.