

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR SIDE MEMBER REINFORCEMENT PANEL (G1772327)

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rear side member reinforcement panel is installed in conjunction with:

- Rear subframe
 - Battery tray
-

1. 

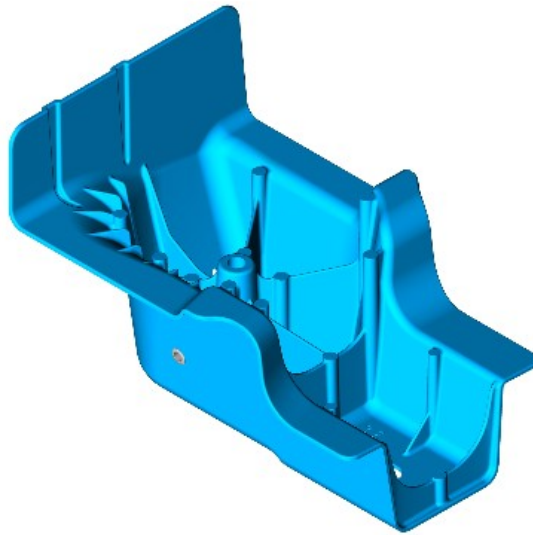

E165704

The rear side member reinforcement panel floor panel is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.


- To make sure the vehicle is correctly aligned it must be placed a Land Rover approved alignment jig.

4. For additional information, refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).
5. For additional information, refer to: [Battery Tray](#) (414-01 Battery, Mounting and Cables, Removal and Installation).

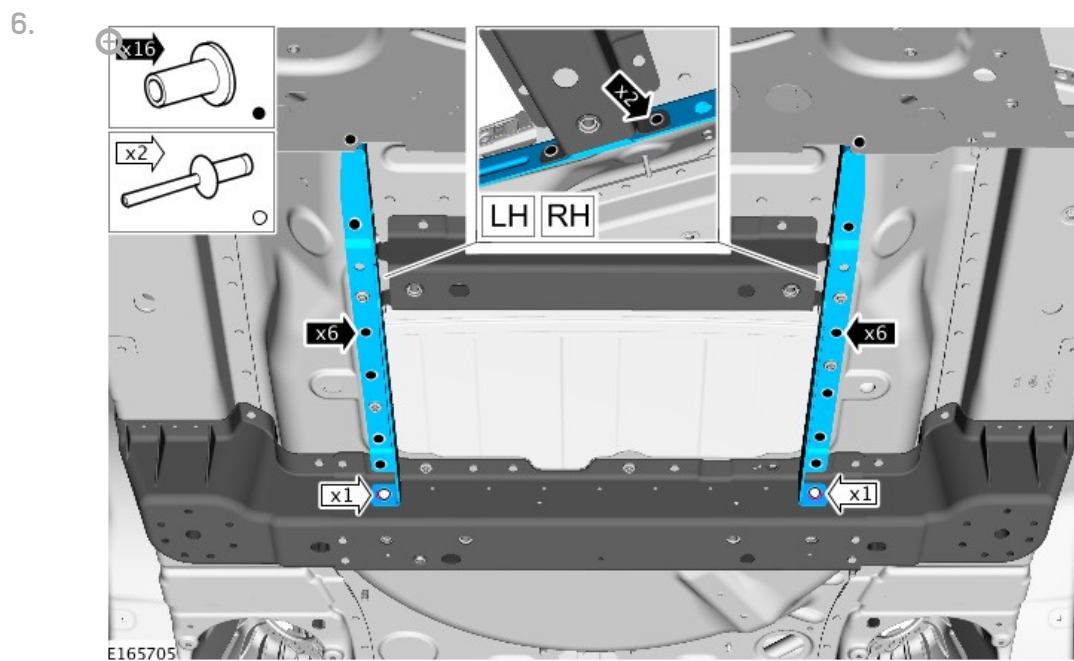


Remove the SPR's and the BSF's as indicated.

7.

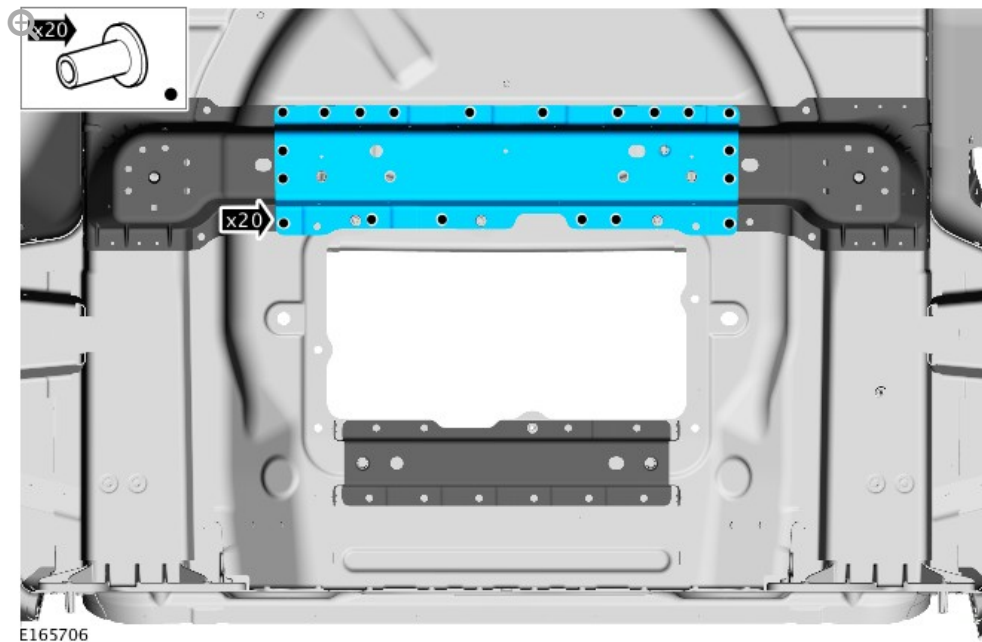

Remove the SPR's as indicated.

8.

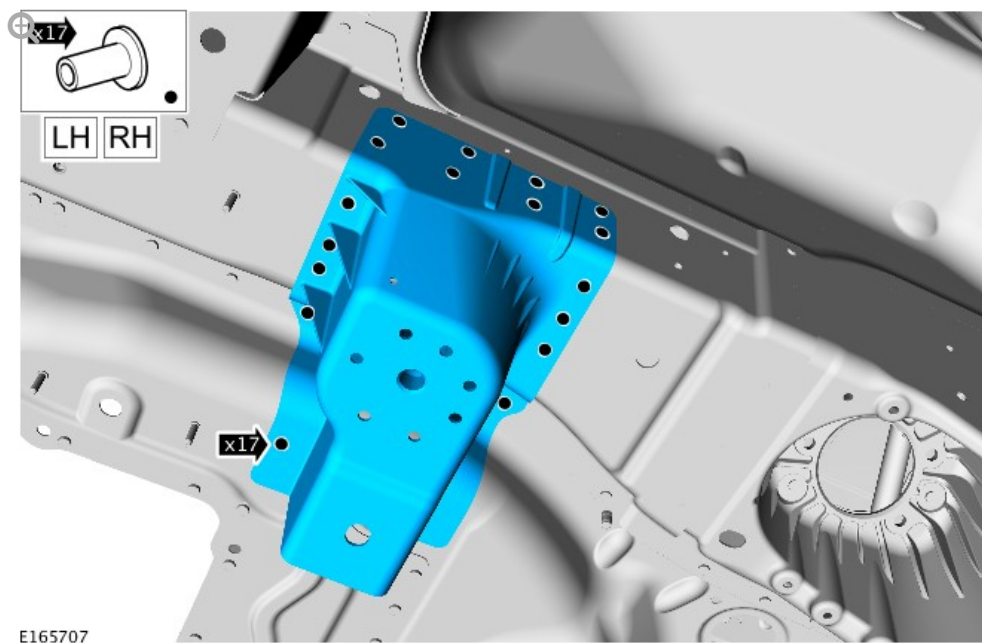

Remove the SPR's as indicated.

9. Separate the panels.

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.
2. Dress the flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces.
4. Offer up the new rear side member reinforcement panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

5.

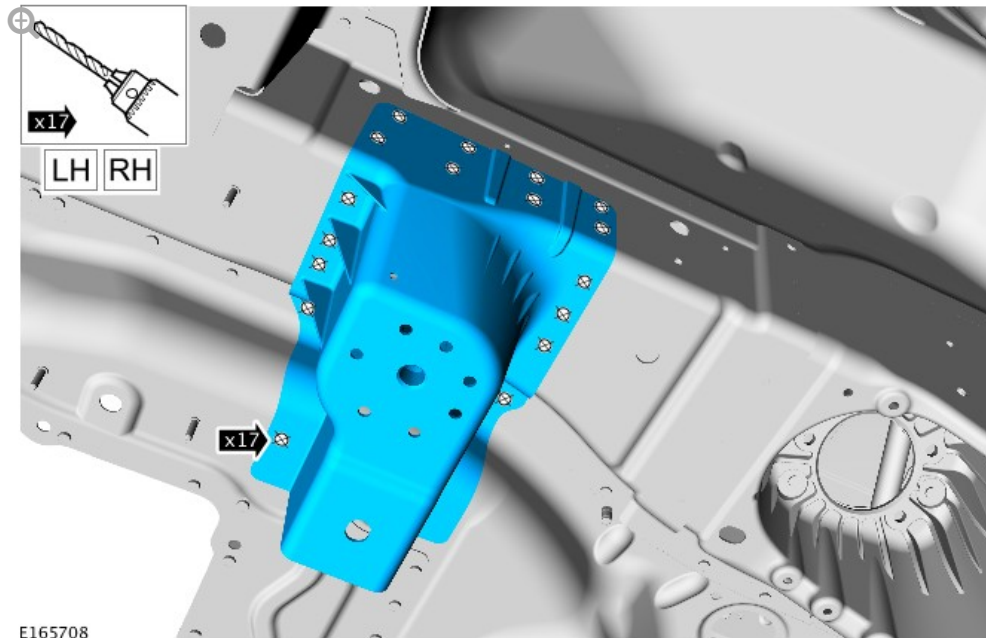

Drill holes where the BSF's are to be installed as indicated.

6. Remove the new rear side member reinforcement panel.

7. Deburr the drilled holes.


8. Using a fine bristle disc, clean and prepare the panel surfaces.

9. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

10.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

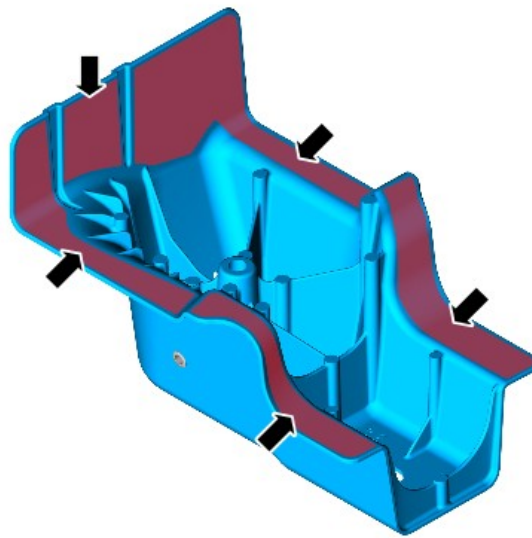


E165709

Apply a 5mm bead of Land Rover recommended bonding material to the rear side member reinforcement panel as indicated.

-
11. Offer up the new rear side member reinforcement panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

12.

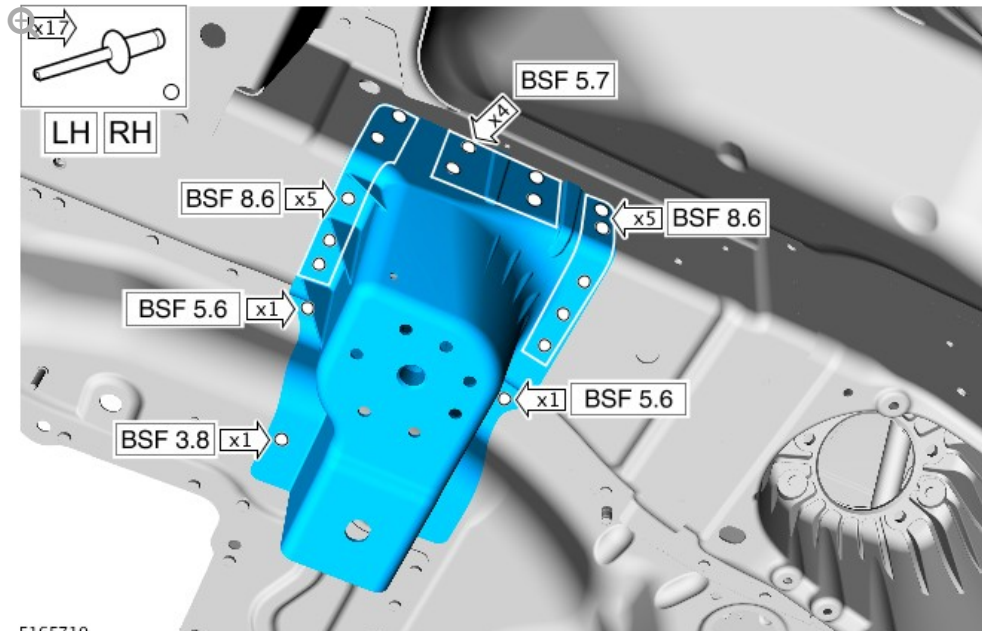


E165710

Install the BSF's as indicated.

-
13. Offer up the rear floor cross member and clamp into position.

Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

14.

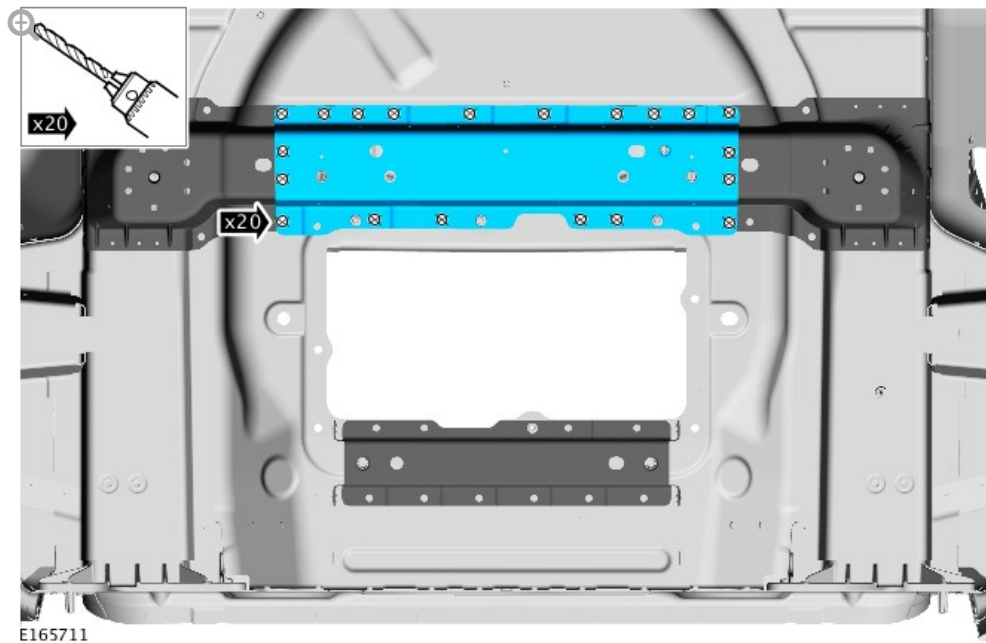

Drill holes where the BSF's are to be installed as indicated.

15. Remove the rear floor cross member.

16. Deburr the drilled holes.


17. Using a fine bristle disc, clean and prepare the panel surfaces.

18. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

19.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

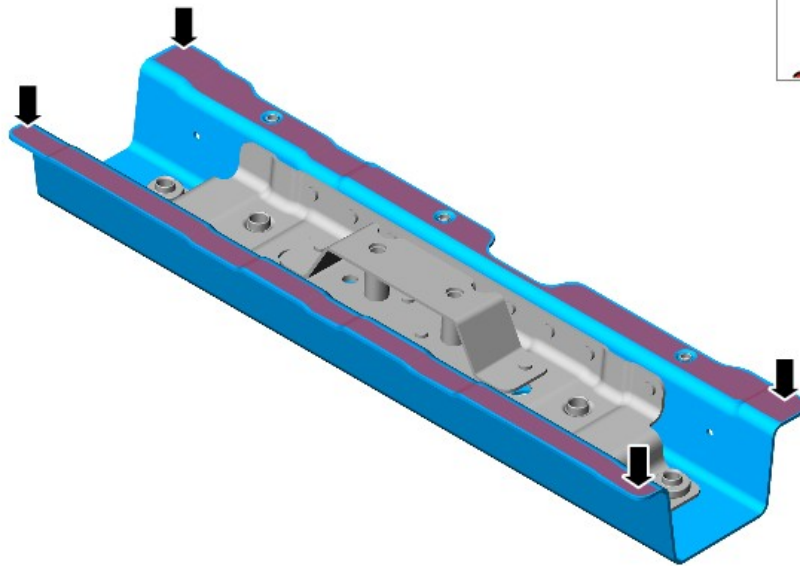


E165712

Apply a 5mm bead of Land Rover recommended bonding material to the rear floor cross member as indicated.

-
20. Offer up the rear floor cross member and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

21.

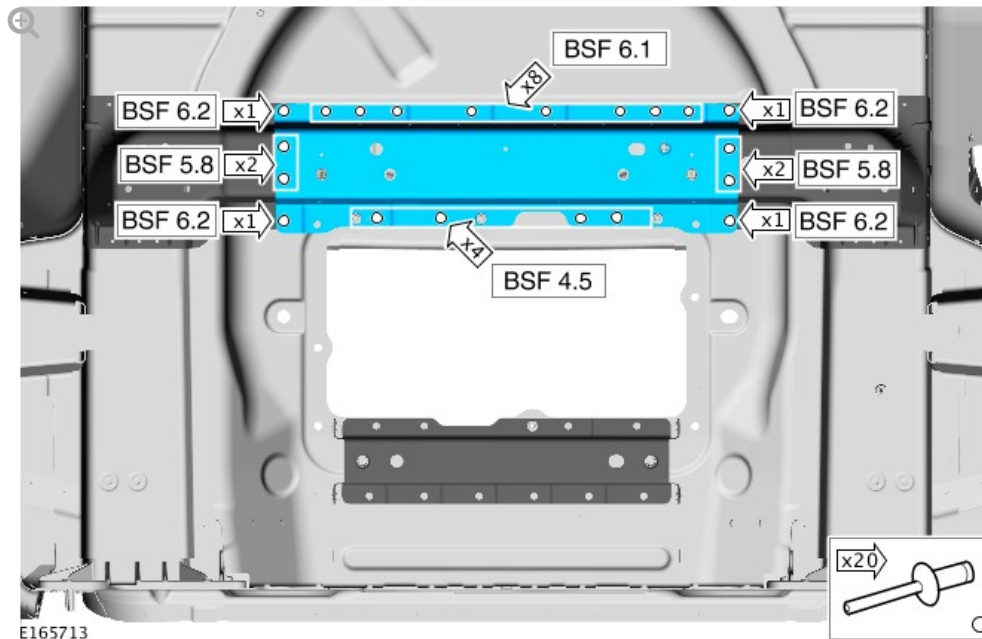


E165713

Install the BSF's as indicated.

-
22. Offer up the rear floor panel reinforcement and clamp into position.

Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

23.

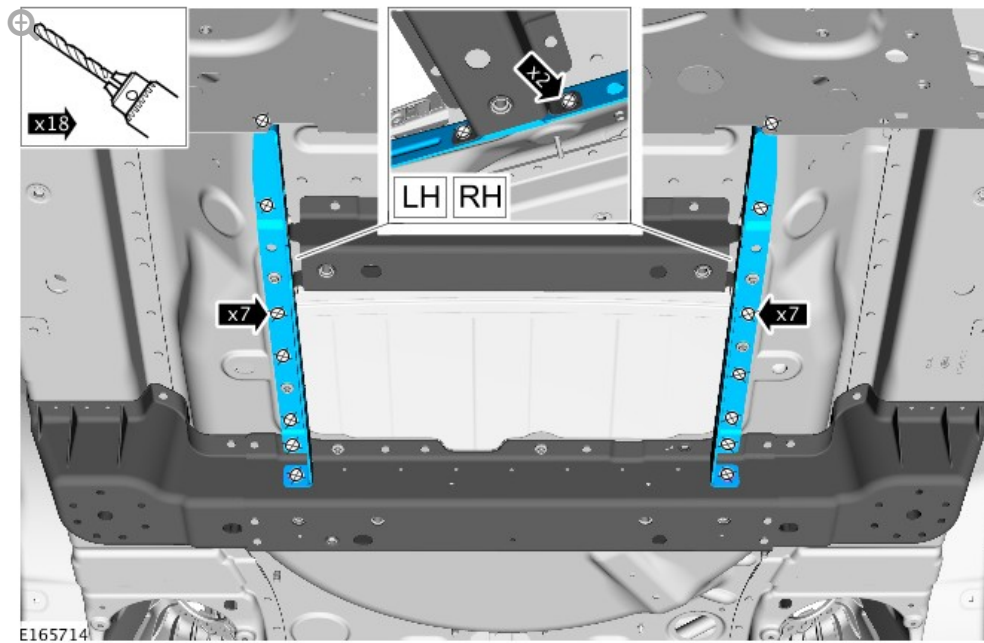

Drill holes where the BSF's are to be installed as indicated.

24. Remove the rear floor panel reinforcement.

25. Deburr the drilled holes.


26. Using a fine bristle disc, clean and prepare the panel surfaces.

27. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

28.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

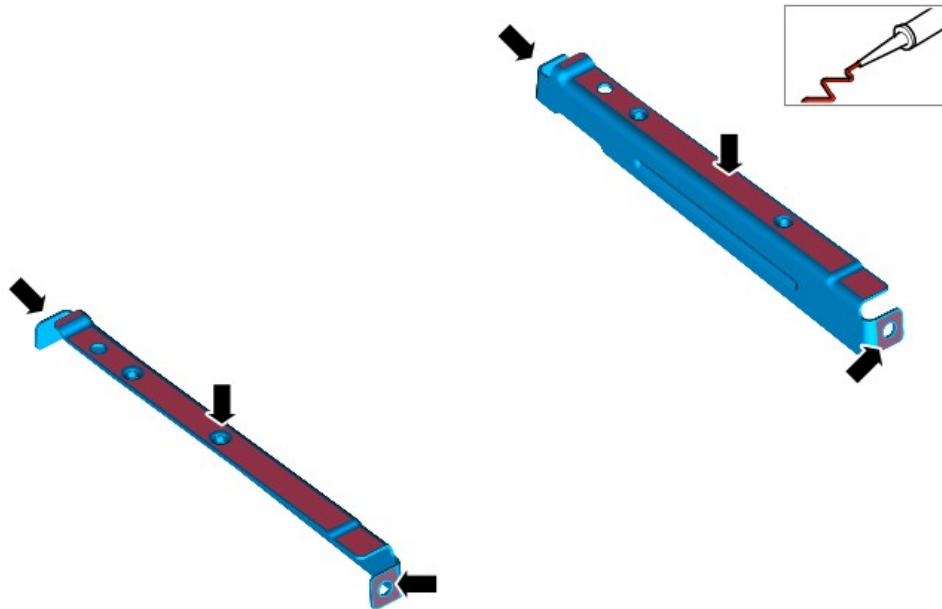


E165715

Apply a 5mm bead of Land Rover recommended bonding material to the rear floor panel reinforcements as indicated.

-
29. Offer up the floor panel reinforcement panels and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

30.

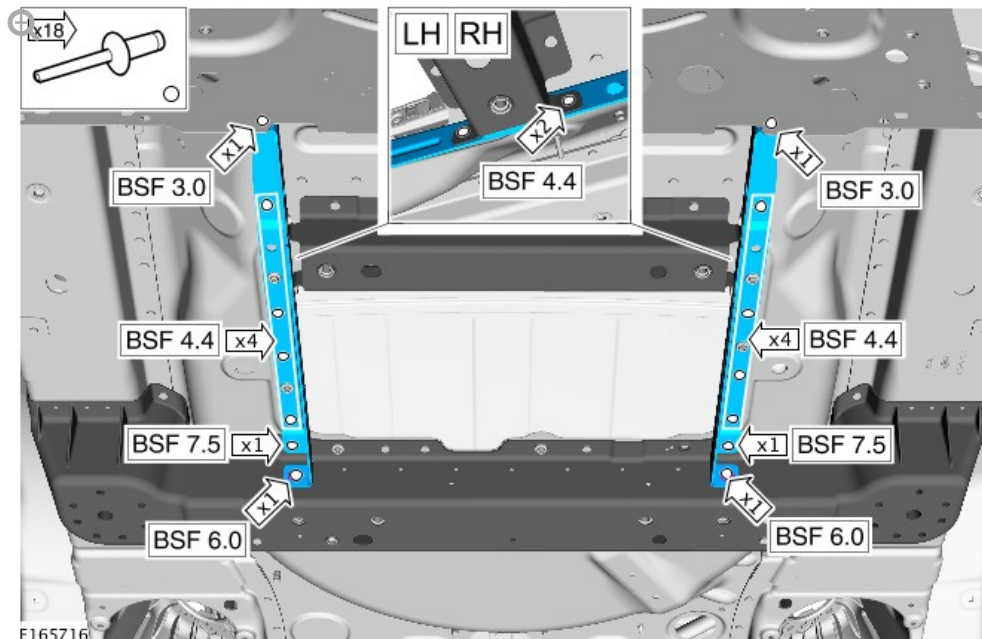

E165716

Install the BSF's as indicated.

-
31. Remove any excess adhesive.
-

-
32. Make sure that any open or exposed panel joints are suitably sealed.
-
33. Make sure corrosion protection is applied to all areas affected by repair.
-
34. The installation of associated panels and components is the reversal of removal procedure.