

2016.0 RANGE ROVER (LG), 501-30

REAR END SHEET METAL REPAIRS

REAR SIDE MEMBER (G1510203)

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rear side member is installed in conjunction with:

- Rear bumper
 - Back panel outer
 - Back Panel Inner
 - Rear floor side extension
 - Rear floor panel section
 - Rear subframe
 - Fuel tank
 - Rocker panel
 - Rocker panel inner reinforcement
-

1.

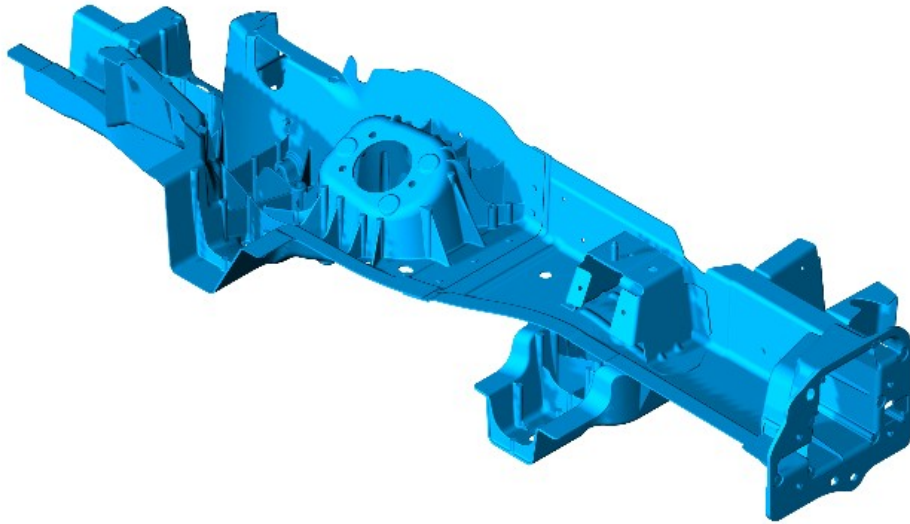

E165852

The rear side member is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:


- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- In this procedure, to make sure the vehicle is correctly aligned, it

must be placed on an approved alignment jig.


4. For additional information, refer to: [Rear Bumper](#) (501-19 Bumpers, Removal and Installation).
5. For additional information, refer to: [Back Panel Outer](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
6. For additional information, refer to: [Back Panel Inner](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
7. For additional information, refer to: [Rear Floor Side Extension](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
8. For additional information, refer to: [Rear Floor Panel Section](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
9. For additional information, refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).
10. For additional information, refer to: [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation) / [Fuel Tank](#) (310-01D Fuel Tank and Lines - TDV8 4.4L Diesel, Removal and Installation).
11. For additional information, refer to: [Rocker Panel](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
12. For additional information, refer to: [Rocker Panel Inner Reinforcement - Standard Wheel Base](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
13. Release the wiring harness and position it to one side.

14. Position the floor carpet to one side.

15. Position the floor noise, vibration, harshness (NVH) material to one side.

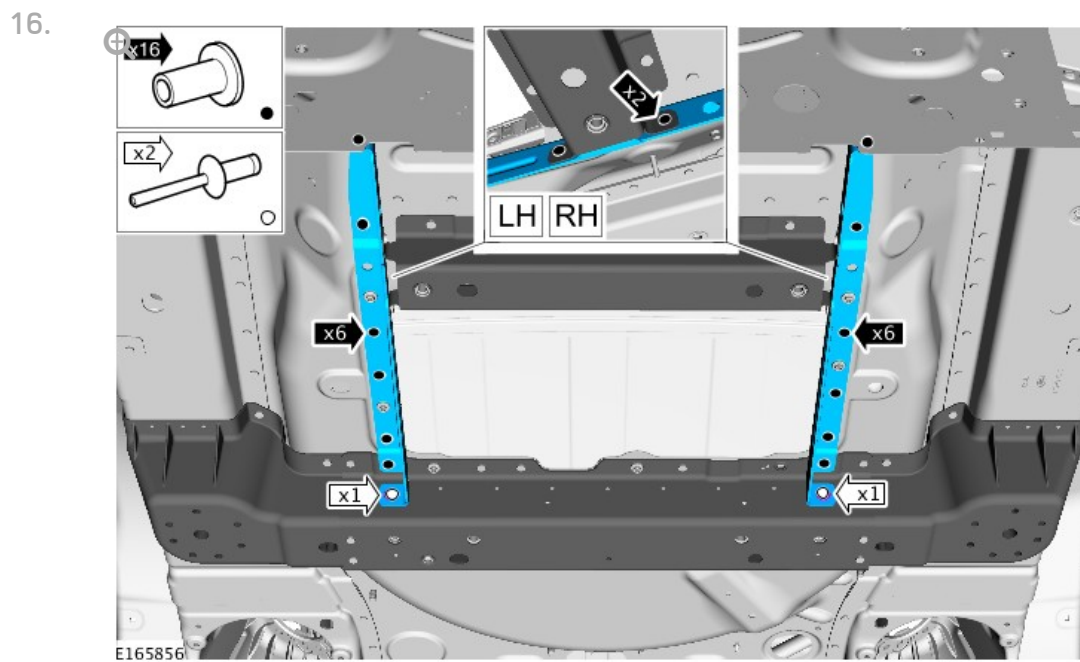


Remove the SPR's and the BSF's as indicated.

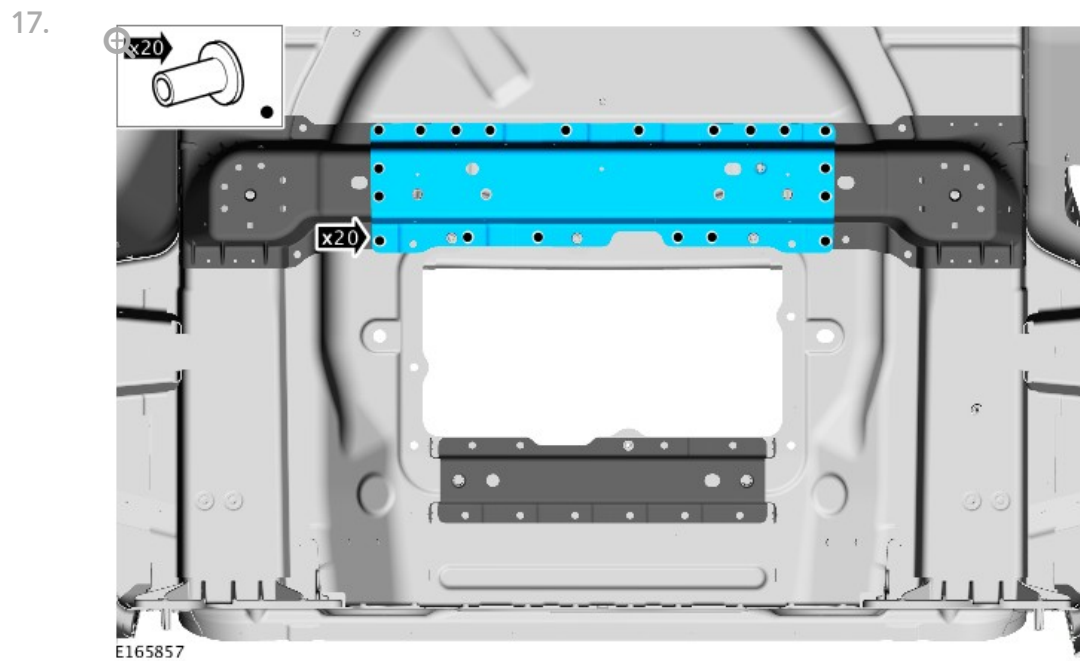

Remove the SPR's as indicated.


18.

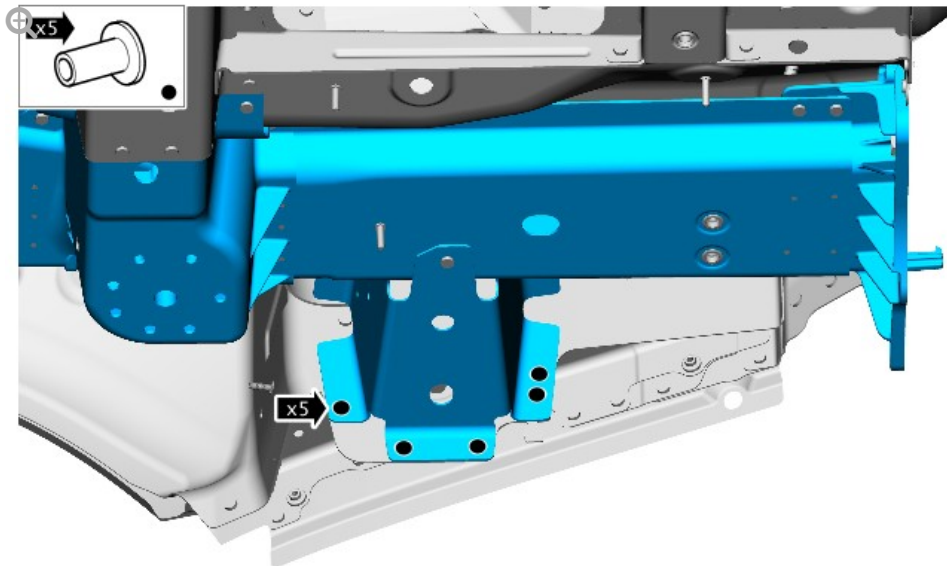

E165853

Remove the SPR's as indicated.


19.

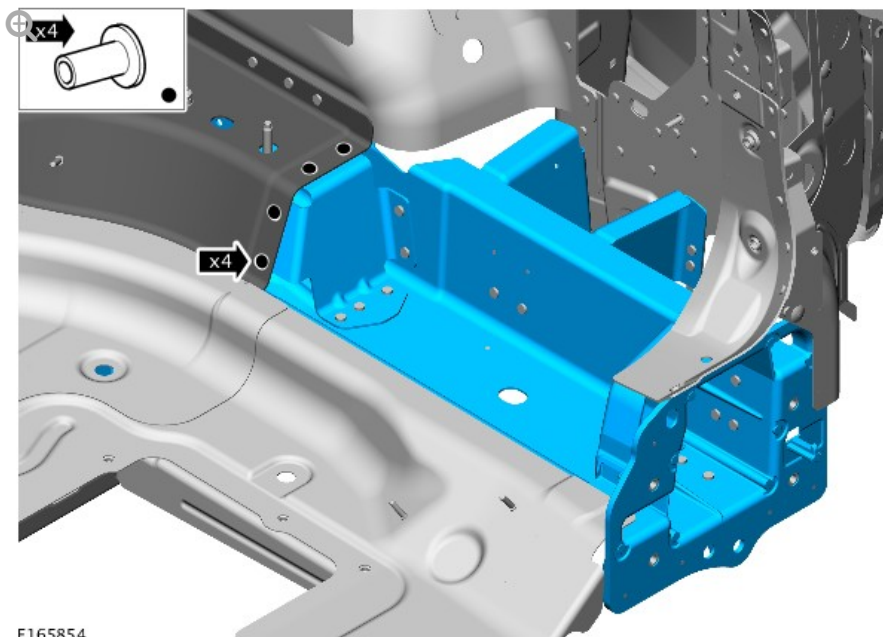

E165854


Remove the SPR's as indicated.

20.

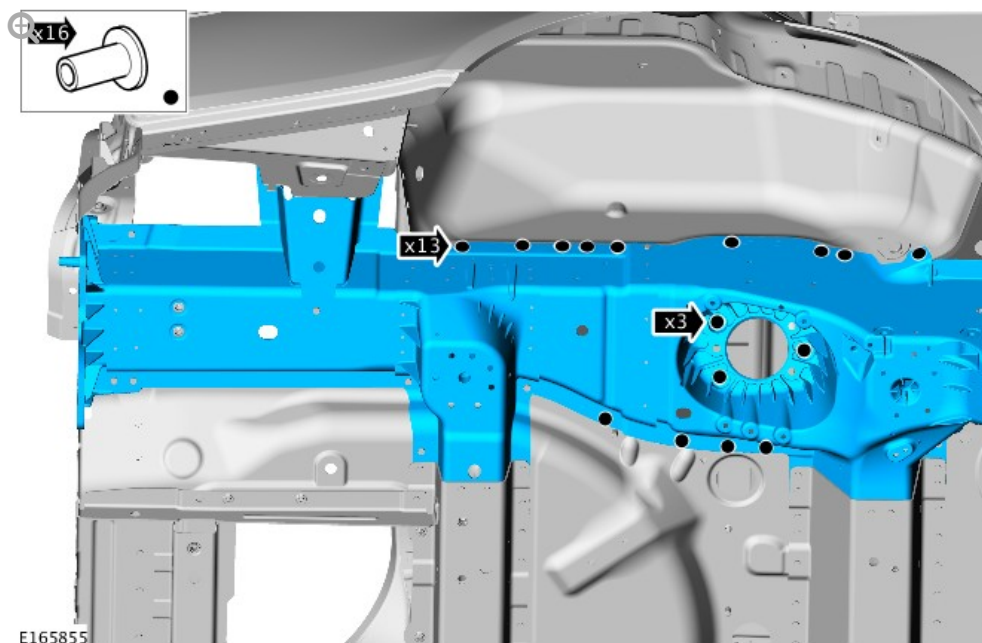


Remove the SPR's as indicated.

21.

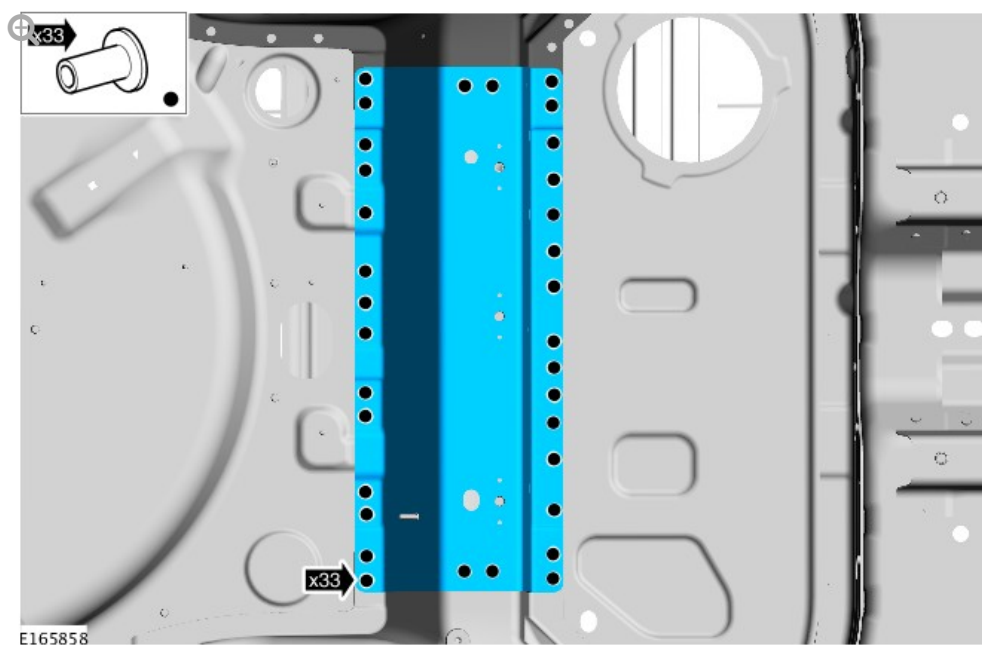

Remove the SPR's as indicated.

22.

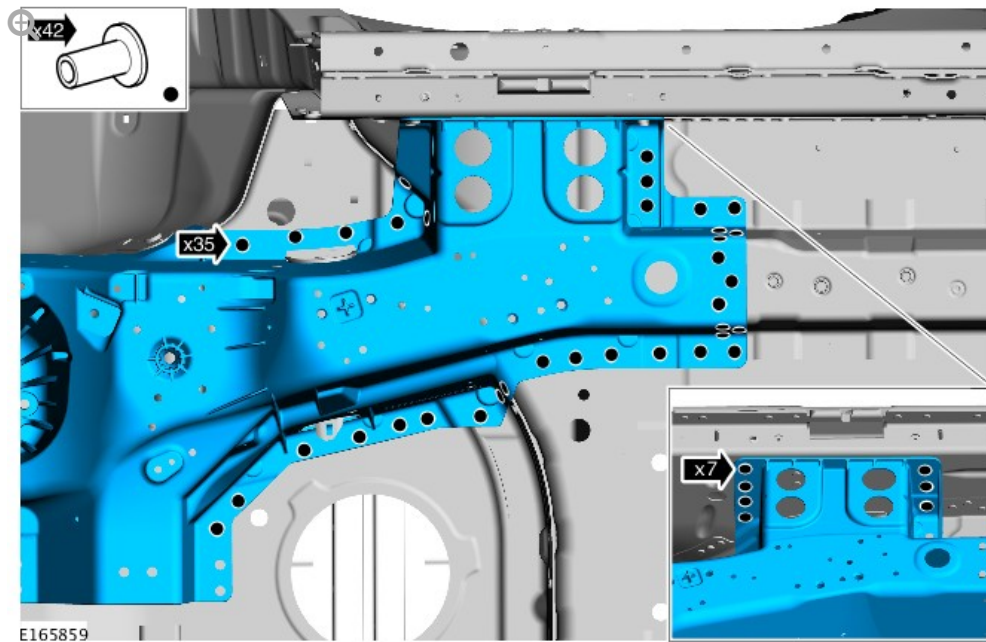

Remove the SPR's as indicated.

23.

CAUTION:

This step requires the aid of another technician as the rear side member is heavy.

Separate the joints and carefully remove the rear side member from the vehicle assembly.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove the rivet remnants.

2. Dress the flanges where necessary.


3.

CAUTION:

This step requires the aid of another technician as the rear side member is heavy.


Offer up the new rear side member and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

4.

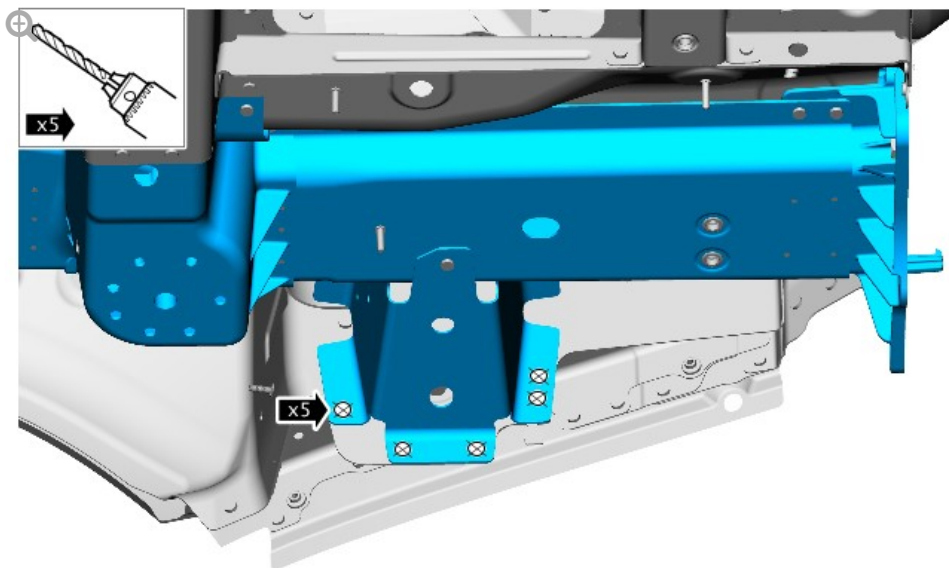


Drill holes where the BSF's are to be installed as indicated.

5.

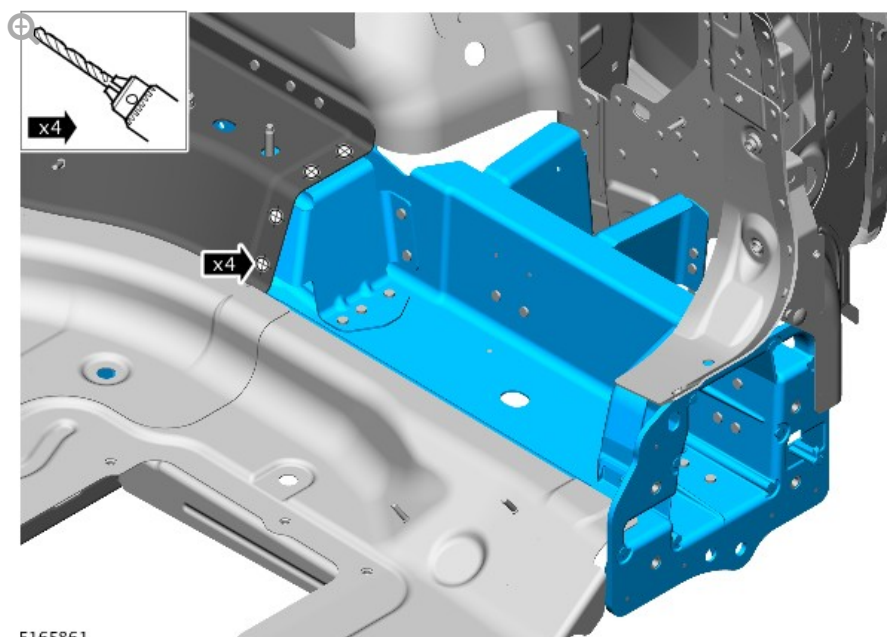

Drill holes where the BSF's are to be installed as indicated.

6.

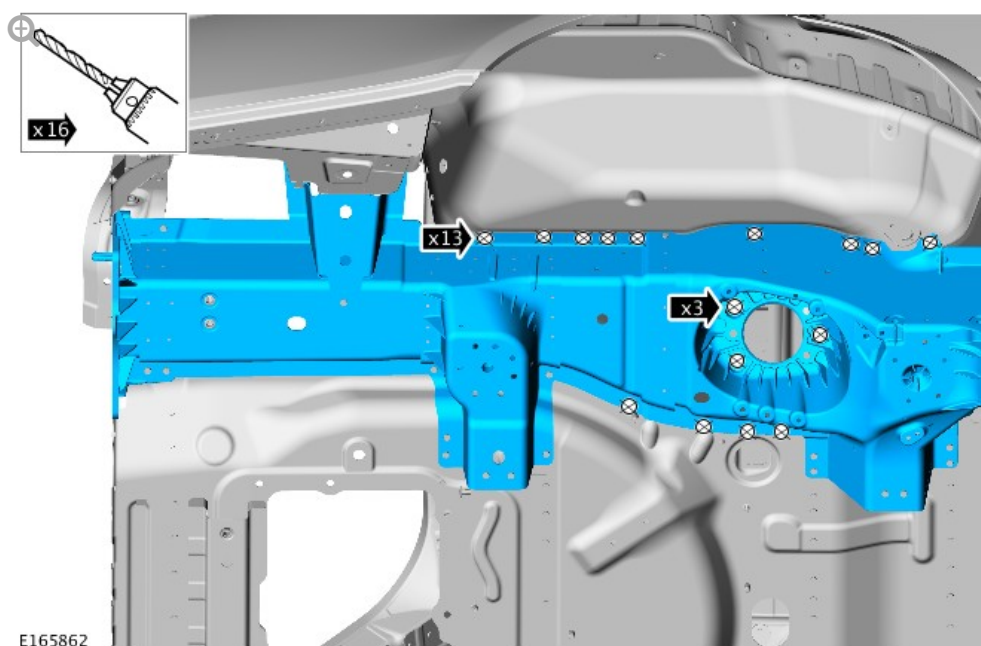


Drill holes where the BSF's are to be installed as indicated. **(amend graphic duplicated rivets from step 4)**

7.

NOTE:

Make sure that the holes that are drilled into the rocker panel inner reinforcement are drilled from the outside.

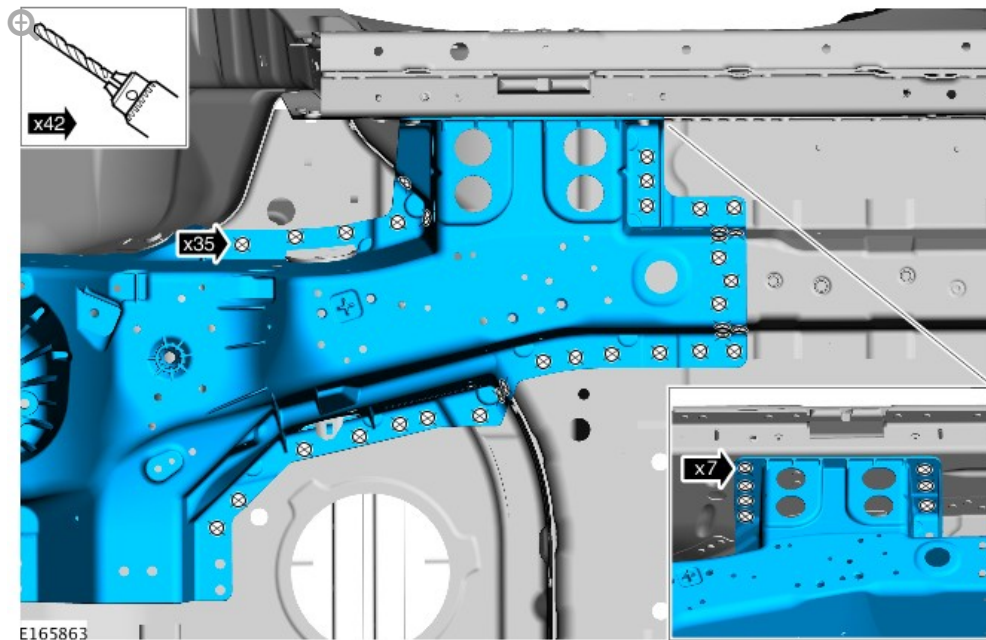

Drill holes where the BSF's are to be installed as indicated.

8.

CAUTION:

This step requires the aid of another technician as the rear side member is heavy.

Remove the new rear side member.

9. Deburr the drilled holes.

10. Remove all drill remnants.



11. Using a fine bristle disc, clean and prepare the rear side member panel surfaces.

12. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

13.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

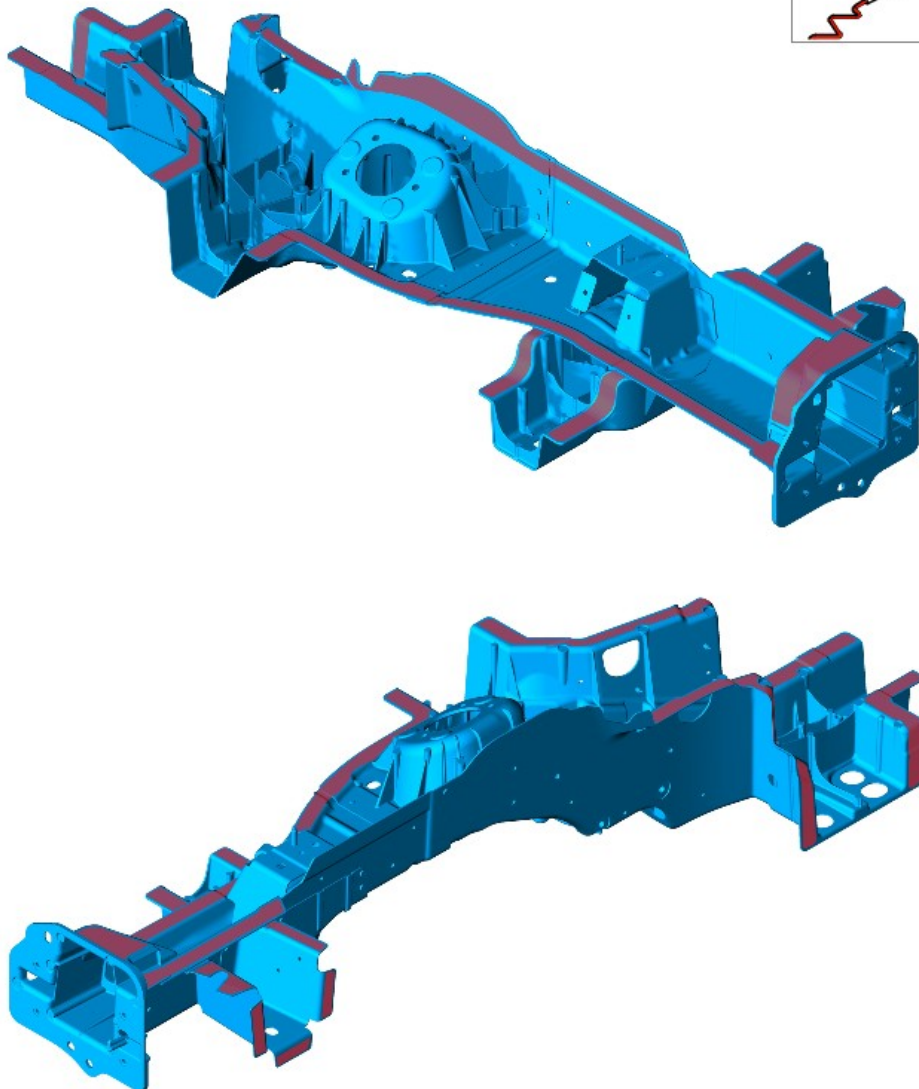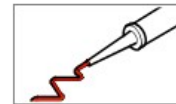

E165864

Apply a 5mm bead of Land Rover recommended bonding material to the rear side member section as indicated.


14.

CAUTION:

This step requires the aid of another technician as the rear side member is heavy.

Offer up the new rear side member and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.


15.

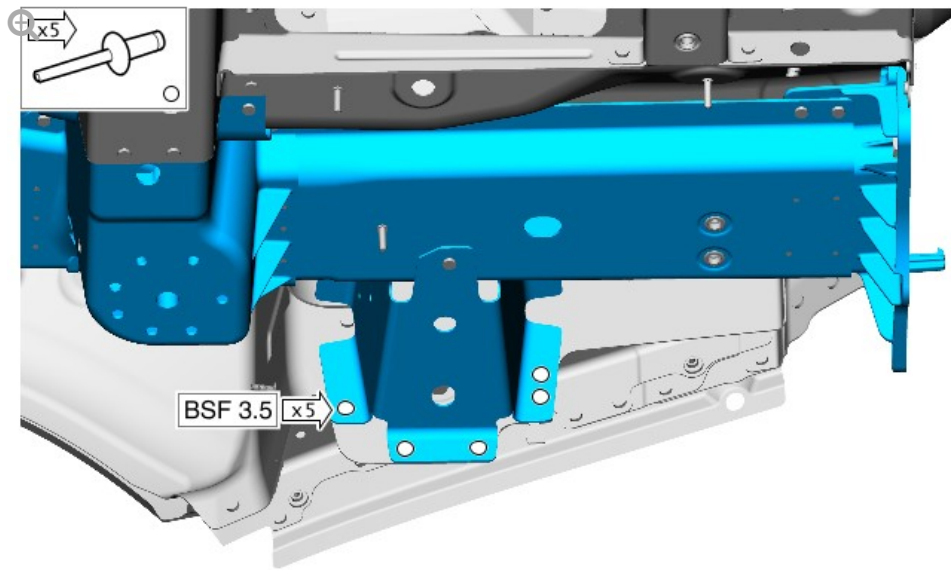

E165865

Install the BSF's as indicated.

16.

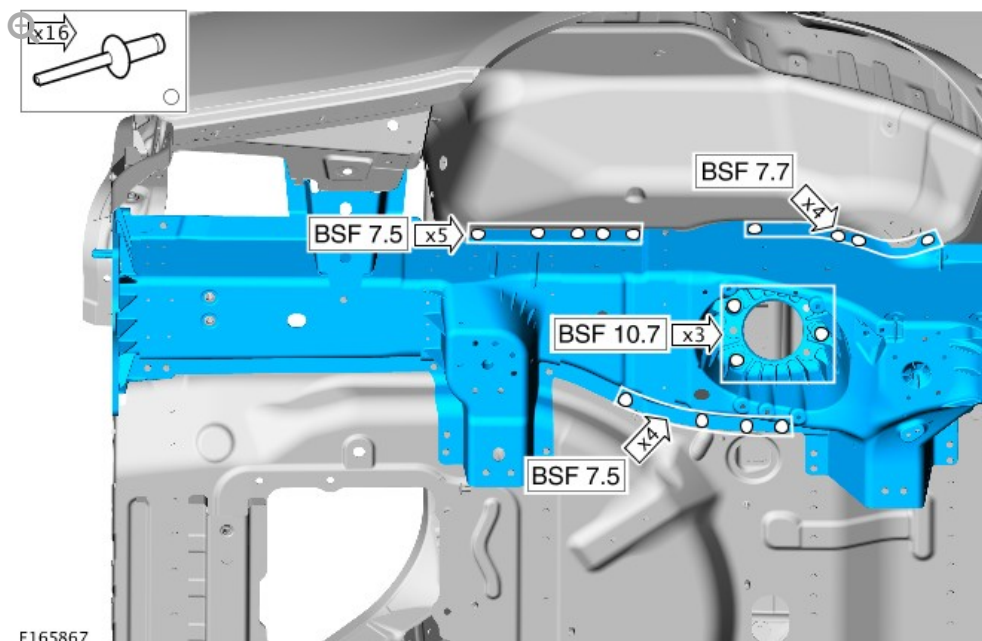


Install the BSF's as indicated. **(amend graphic duplicated rivets from step 17)**

17.


NOTE:

Make sure that the BSF's that are installed in the inner rocker panel reinforcement are installed from the outside.

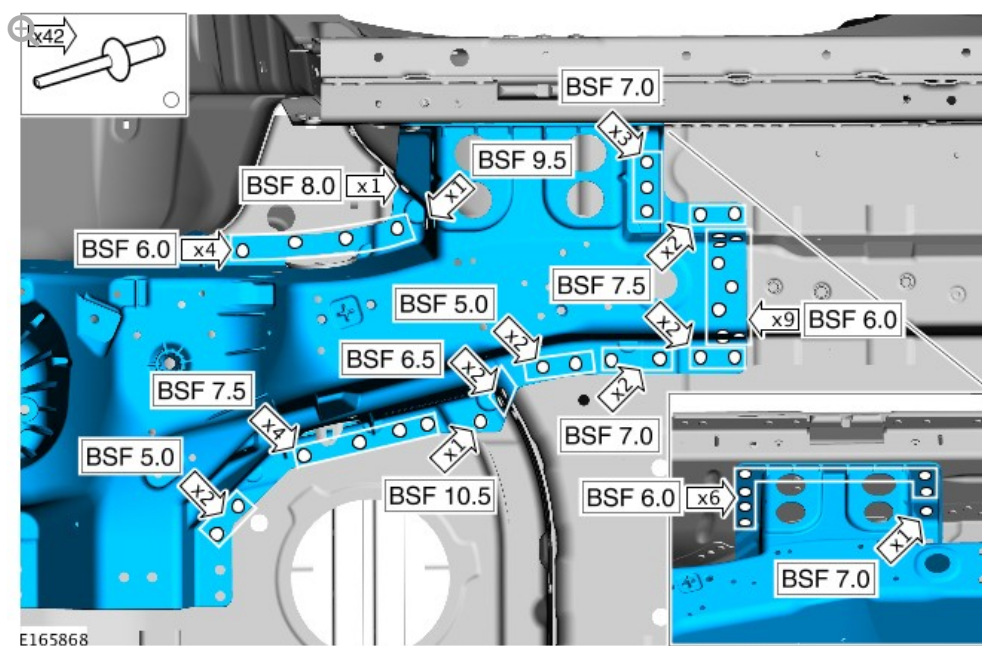

Install the BSF's as indicated.


18.

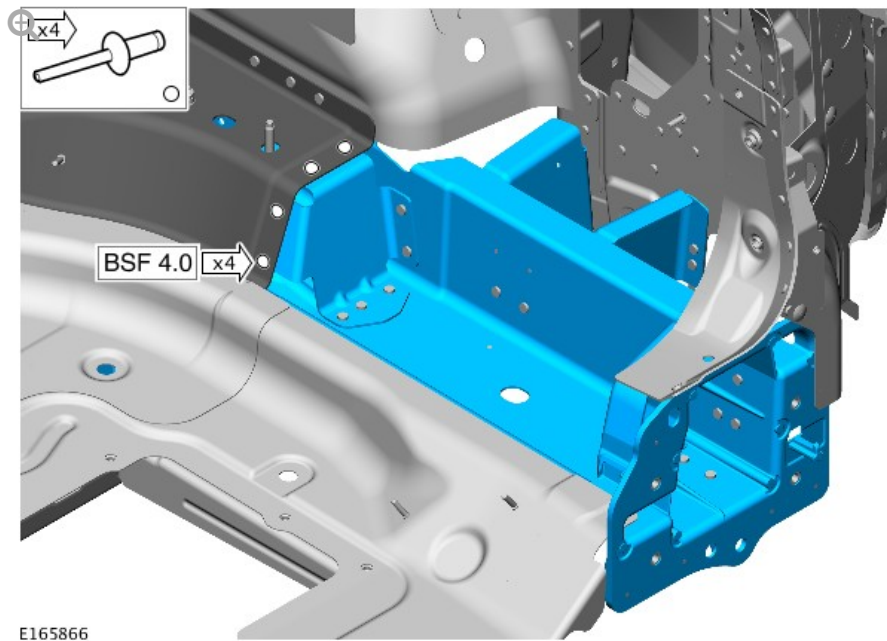

Install the BSF's as indicated.

19. Offer up the centre floor cross member and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

20.

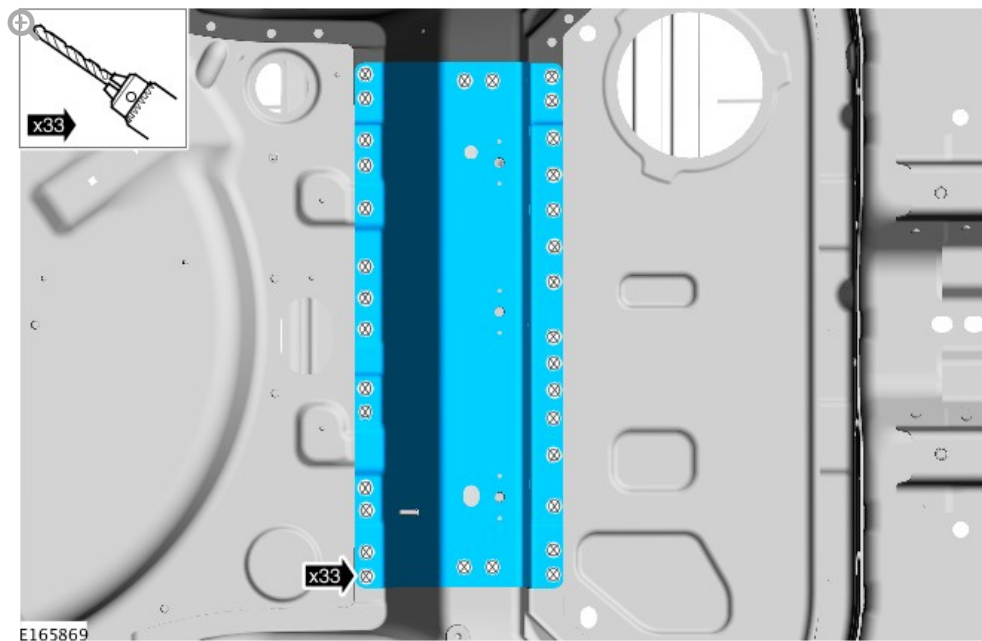

Drill holes where the BSF's are to be installed as indicated.

21. Remove the panel.

22. Deburr the drilled holes.

23. Remove all drill remnants.



24. Using a fine bristle disc, clean and prepare the rear side member panel surfaces.

25. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

26.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

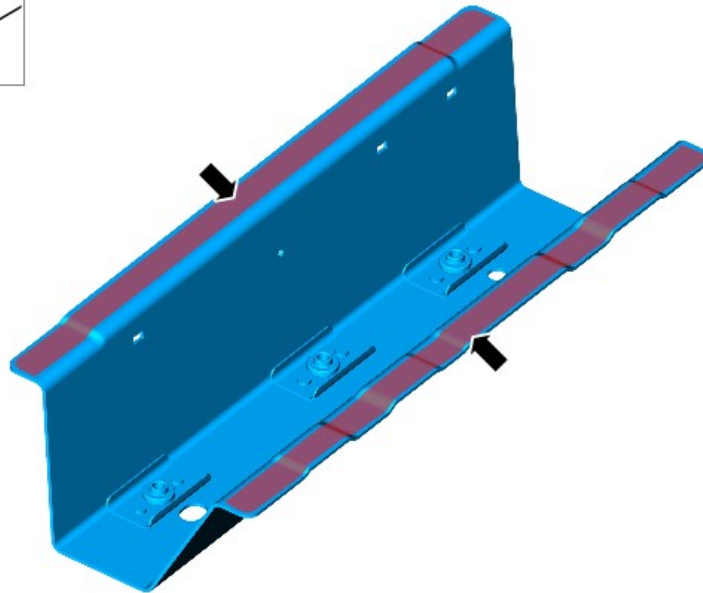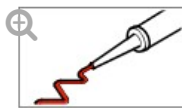


E165870

Apply a 5mm bead of Land Rover recommended bonding material to the centre floor cross member as indicated.

27. Offer up the centre floor cross member and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and

recheck before proceeding.


28.

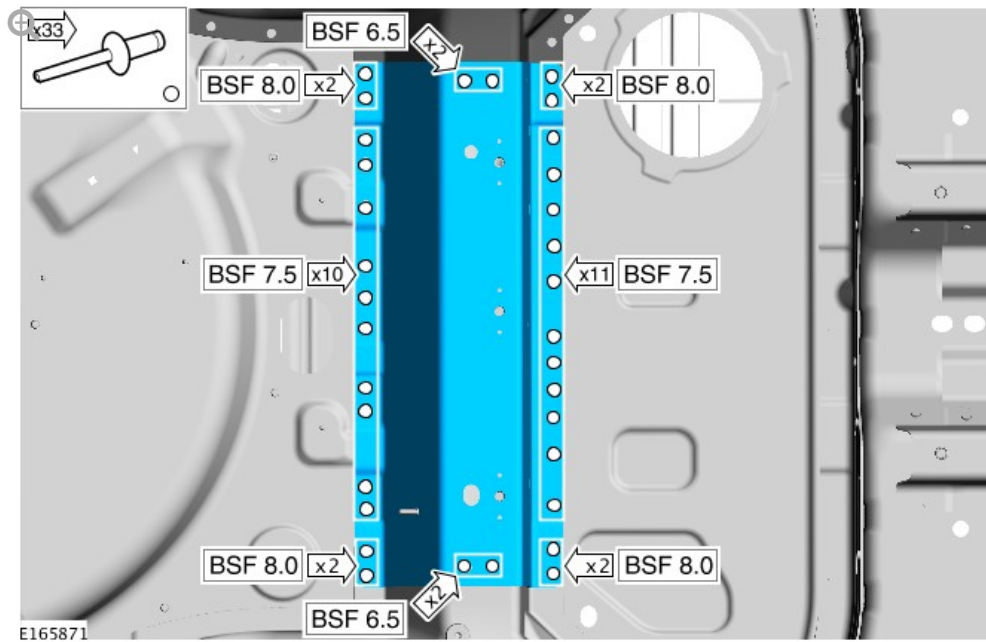

Install the BSF's as indicated.

29. Offer up the rear floor cross member and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

30.

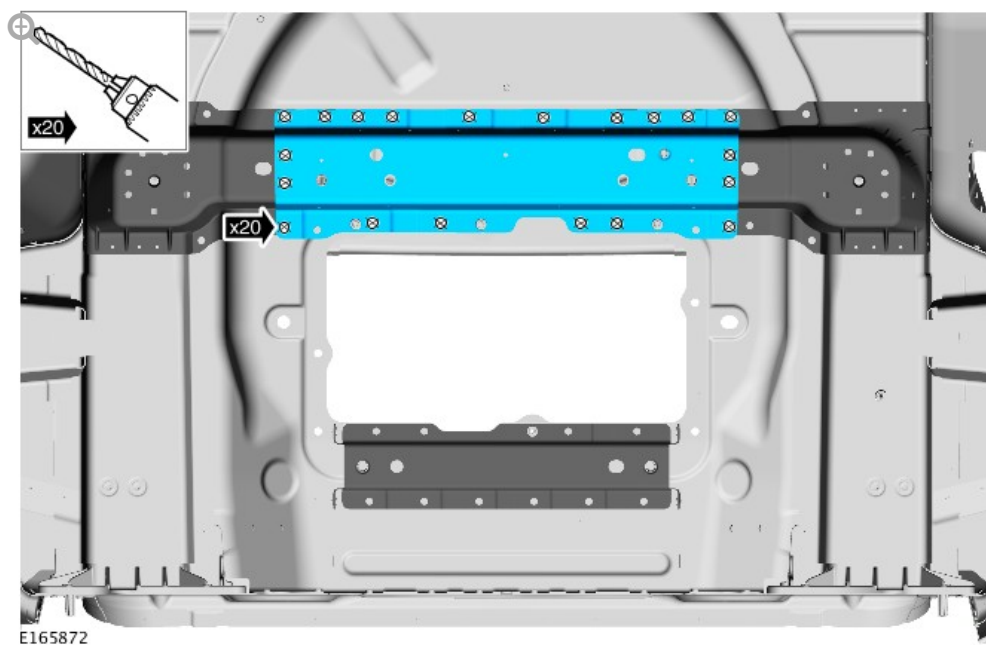

Drill holes where the BSF's are to be installed as indicated.

31. Remove the panel.

32. Deburr the drilled holes.

33. Remove all drill remnants.


34. Using a fine bristle disc, clean and prepare the rear side member panel surfaces.

35. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

36.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

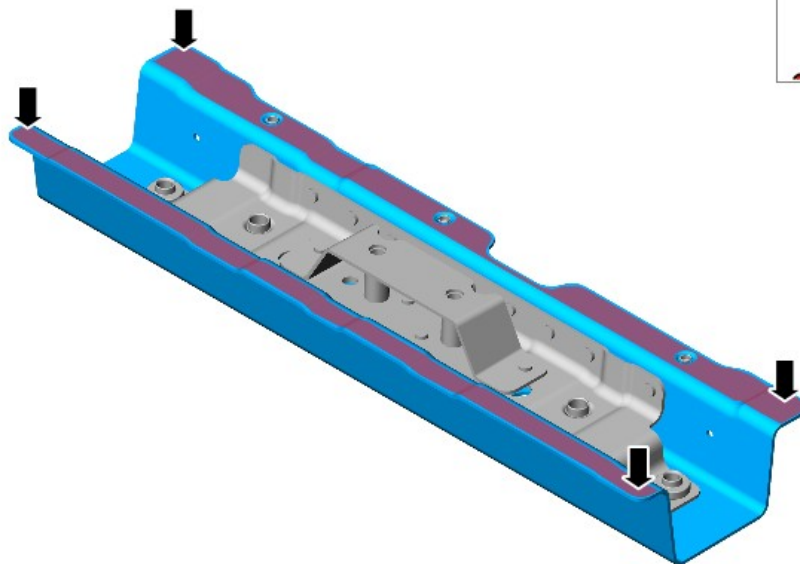


E165873

Apply a 5mm bead of Land Rover recommended bonding material to the rear floor cross member as indicated.

37. Offer up the rear floor cross member and clamp into position.

Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.


38.

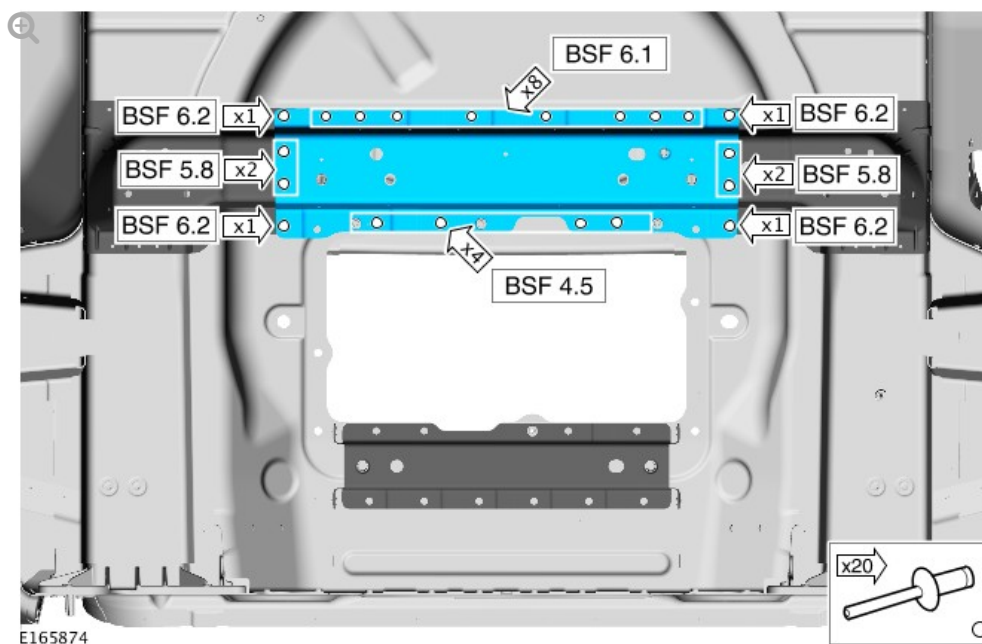

Install the BSF's as indicated.

39. Offer up the rear floor panel reinforcements and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

40.

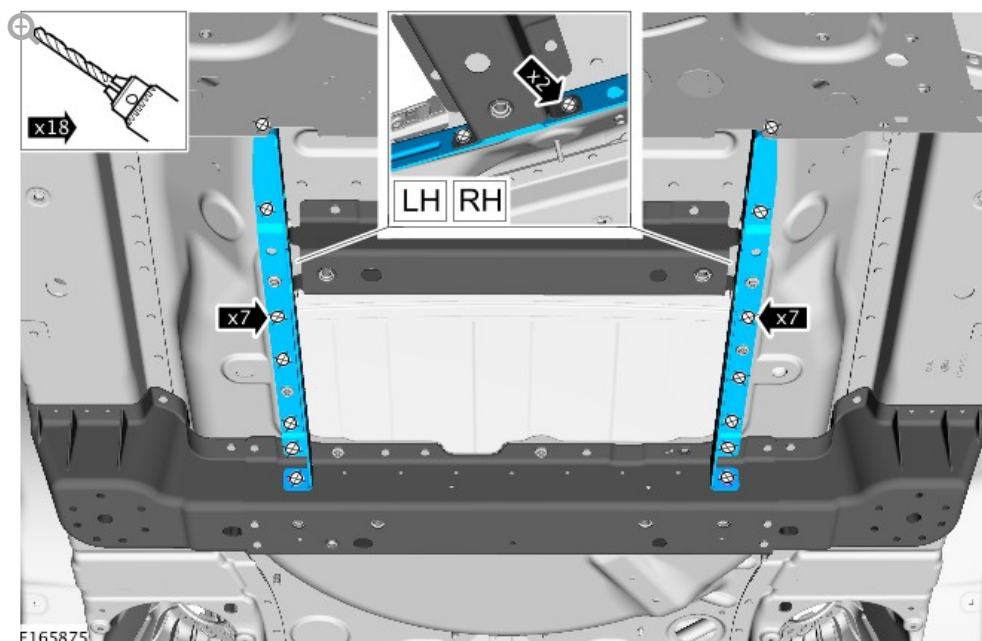

Drill holes where the BSF's are to be installed as indicated.

41. Remove the panels.

42. Deburr the drilled holes.

43. Remove all drill remnants.


44. Using a fine bristle disc, clean and prepare the rear side member panel surfaces.

45. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

46.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

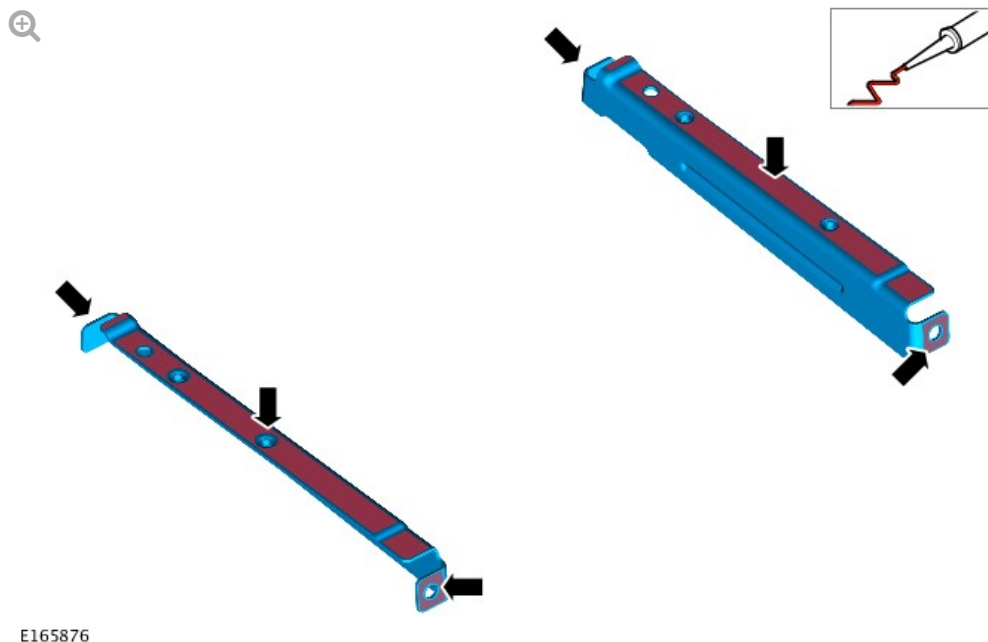


Apply a 5mm bead of Land Rover recommended bonding material to the rear floor panel reinforcements as indicated.

47. Offer up the rear floor panel reinforcements and clamp into

position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

48.

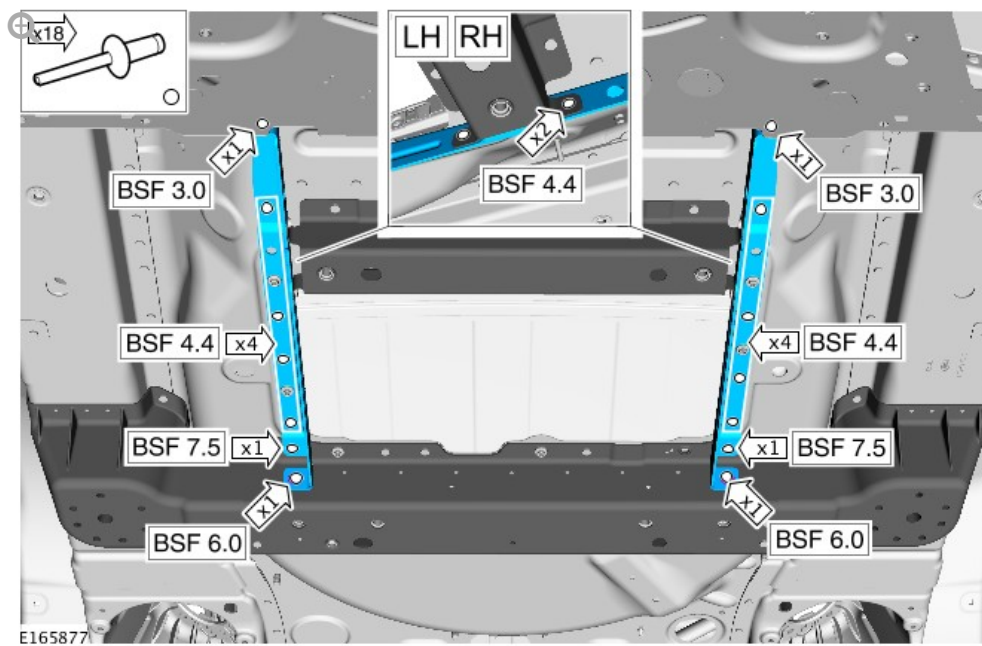

Install the BSF's as indicated.

49. Remove any excess adhesive.

50. Make sure that any open or exposed panel joints are suitably sealed.

51. Make sure corrosion protection is applied to all areas affected by repair.

52. The installation of associated panels and components is the reversal of removal procedure.