

2016.0 RANGE ROVER (LG), 501-17

ROOF OPENING PANEL

ROOF OPENING PANEL BLIND

[G1551675]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.

NOTE:

The procedure must be carried out on both sides.

Refer to: '[A' Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['B' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['C' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['D' Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


5. Refer to: [Overhead Console](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).

6. Refer to: [Sun Visor](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


7.

WARNING:


Be prepared to collect escaping fluid.

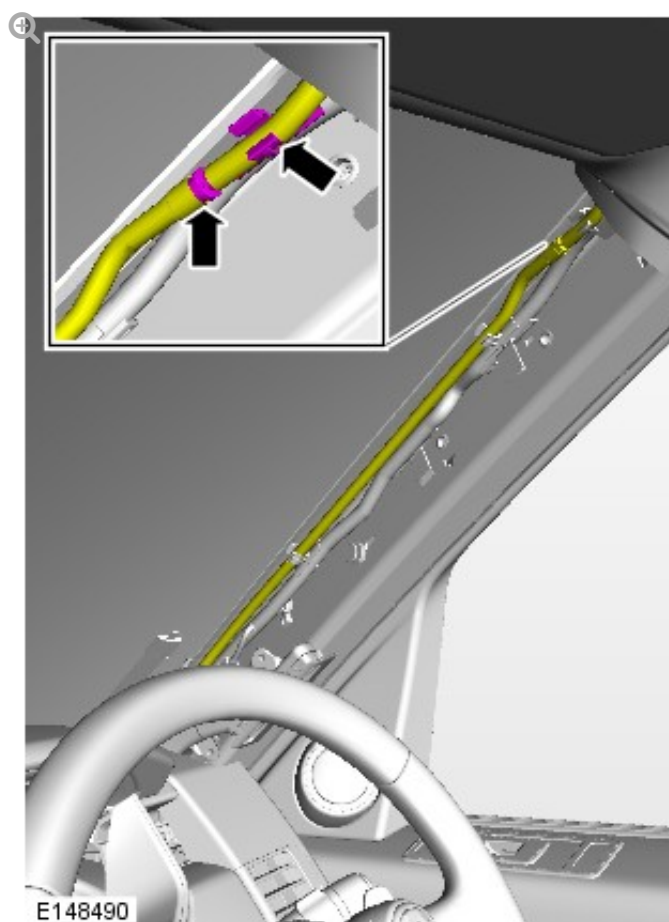

8.

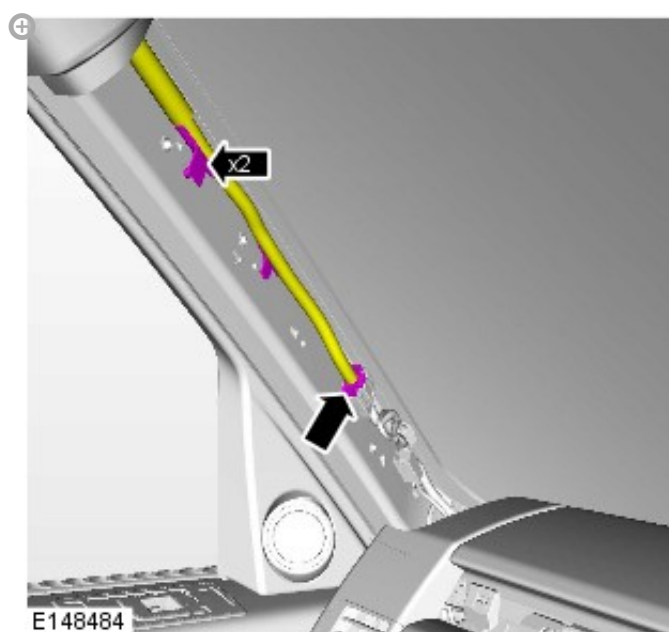


9.

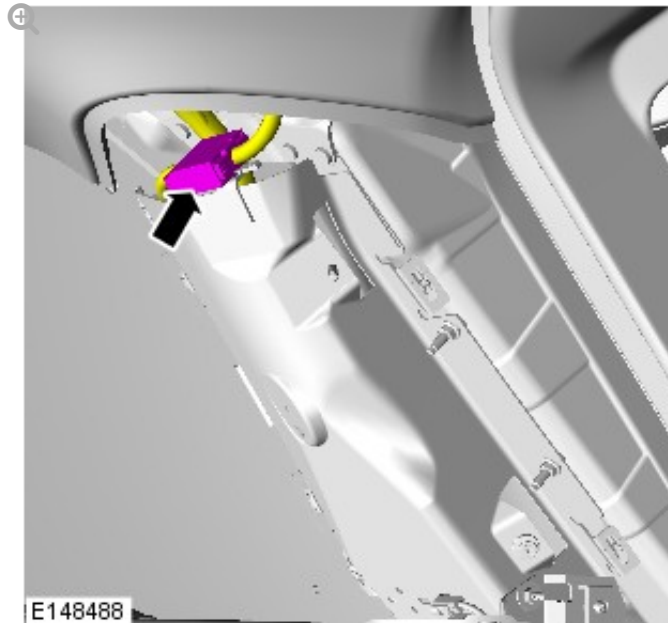

10.

NOTES:

- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.

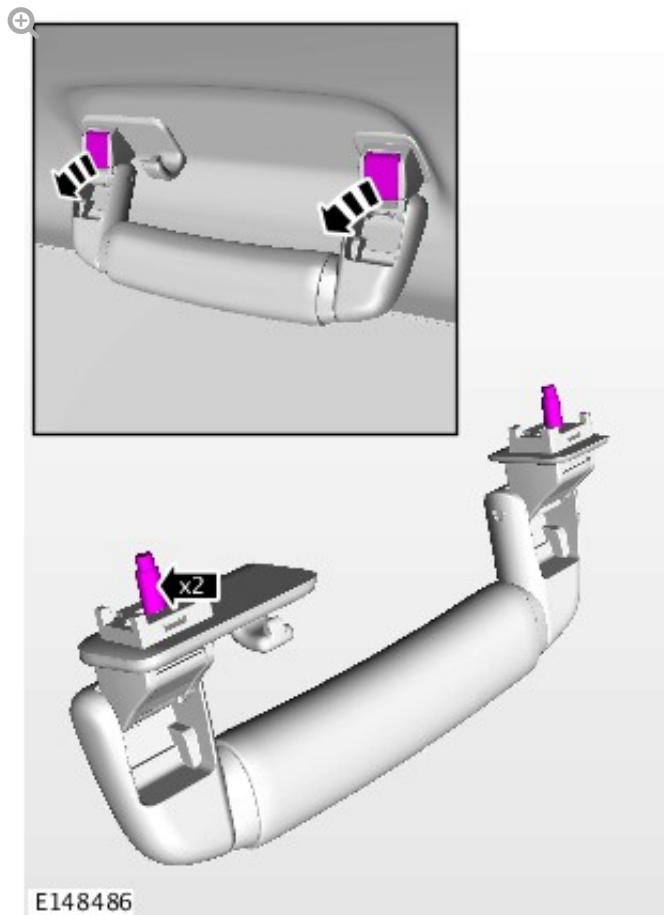

11.

NOTE:

Repeat the procedure for the other side.


12.

CAUTION:

Make sure the magnetic fixings are attached to the headliner and not the roof opening panel blind to make sure of the correct installation.


NOTE:

This step requires the aid of another technician.

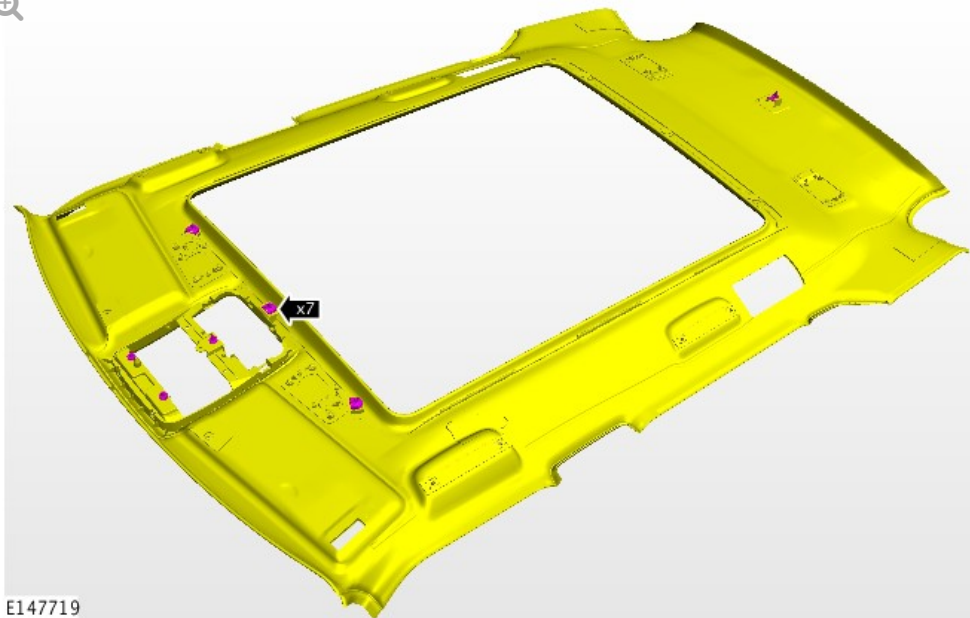

E147719

13.

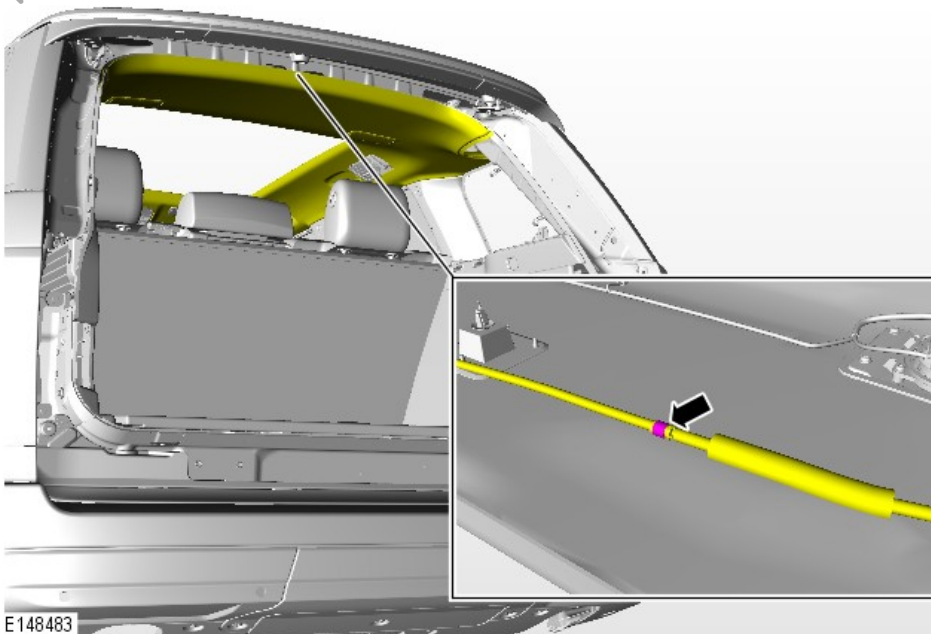

E148483


14.

CAUTION:


The headliner must be lowered as a complete unit to gain access, partial lowering of the headliner may cause damage.

NOTE:


Lower and reposition the headliner to aid access.

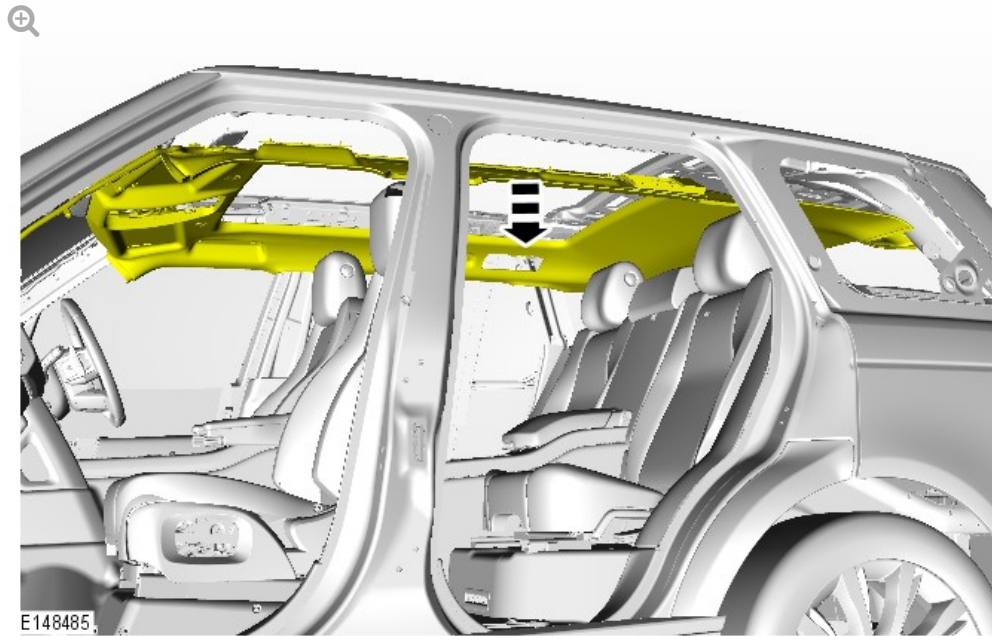


15.

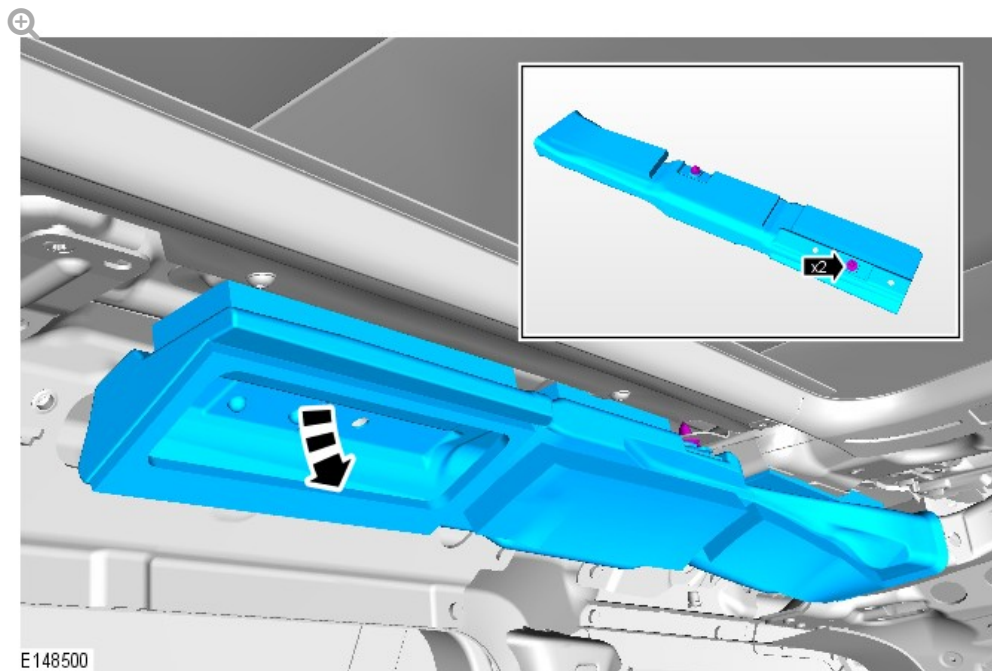

16.

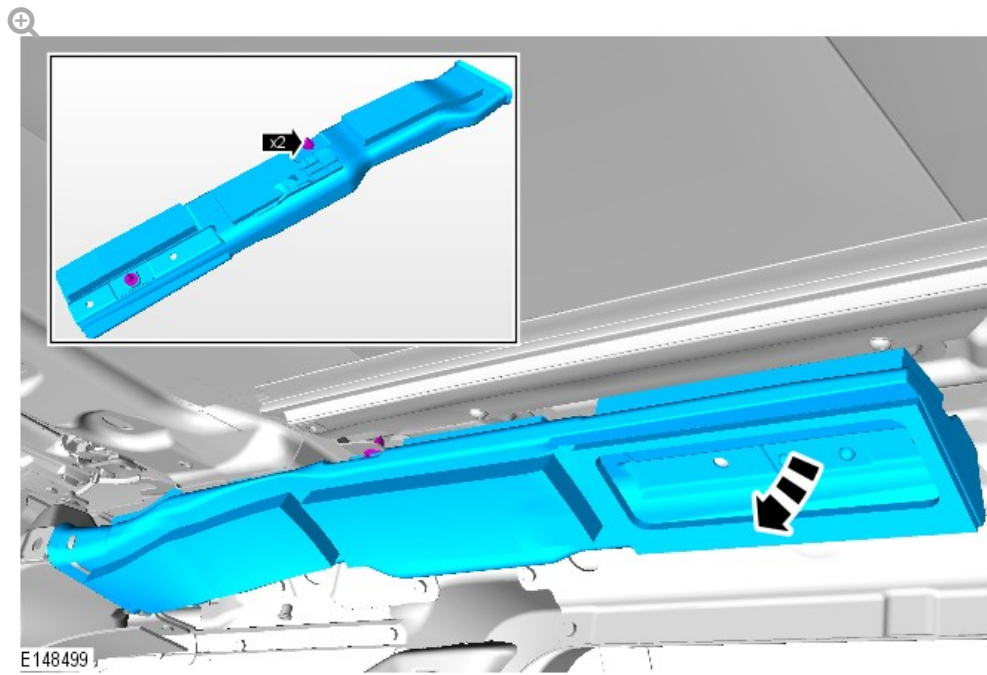


17.

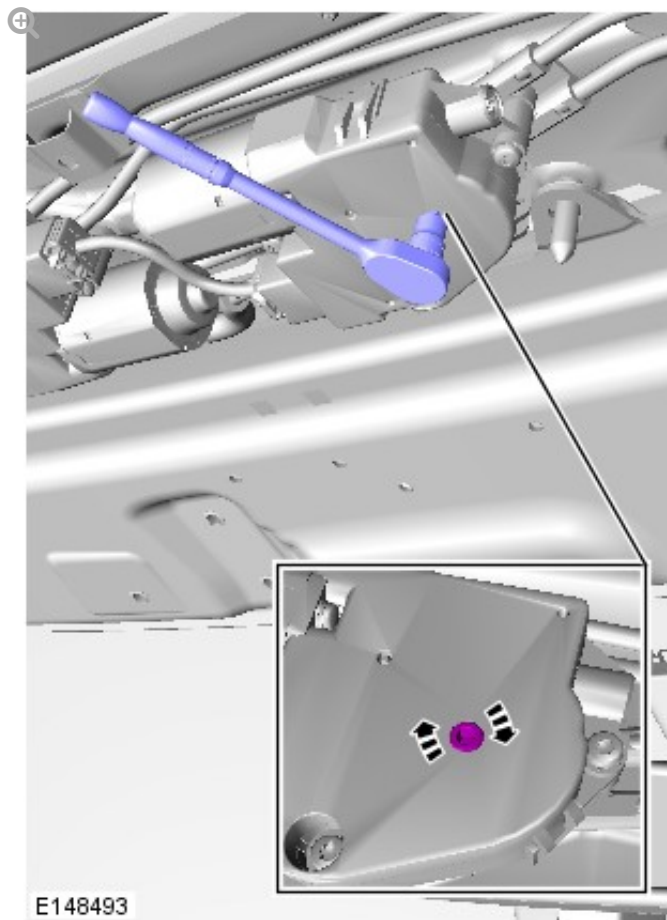


Manually initialize the roof opening panel motor.

18.

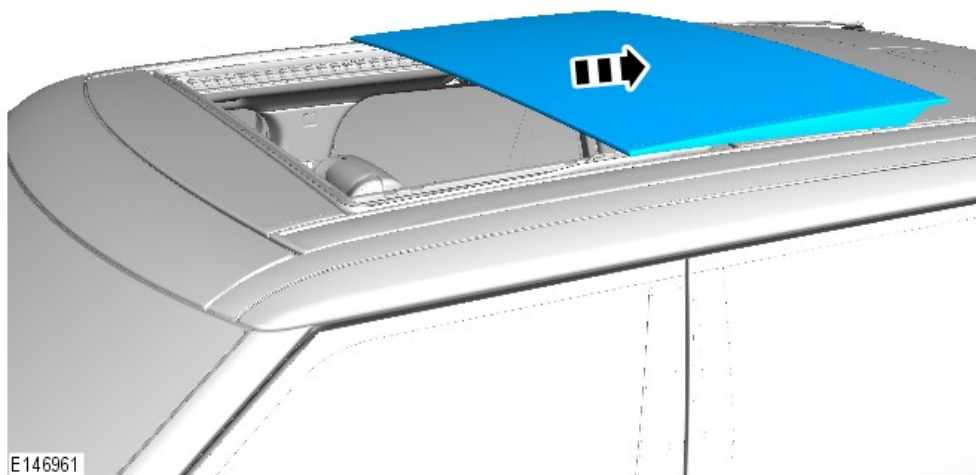

Open the roof opening panel glass.

19.

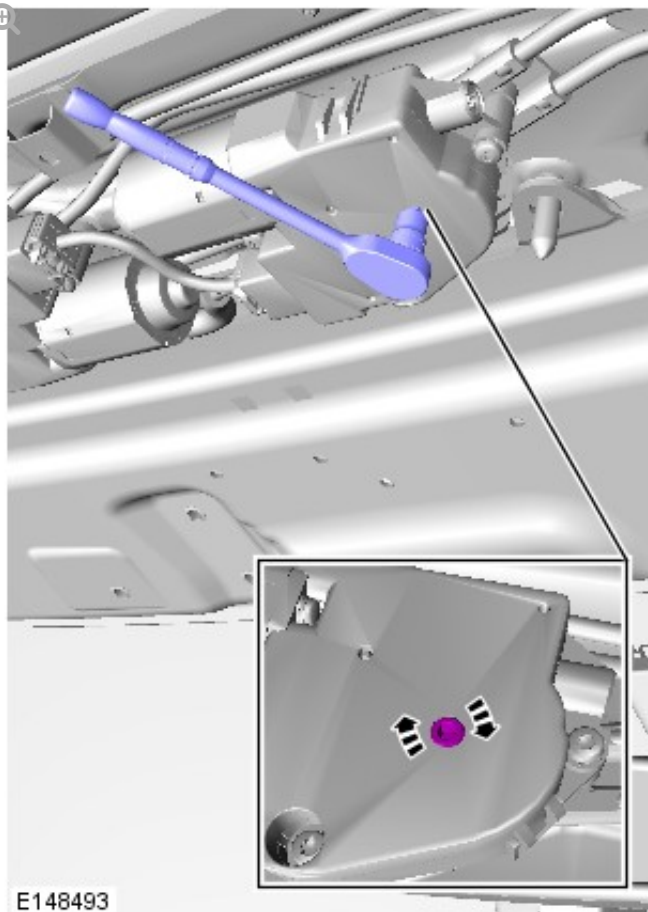


Using a suitable tool, rotate the opening roof panel blind motor to adjust the blind.

20.

CAUTION:

Do not allow the glass roof panel blind to retract until the locking pin is secure in its locator.

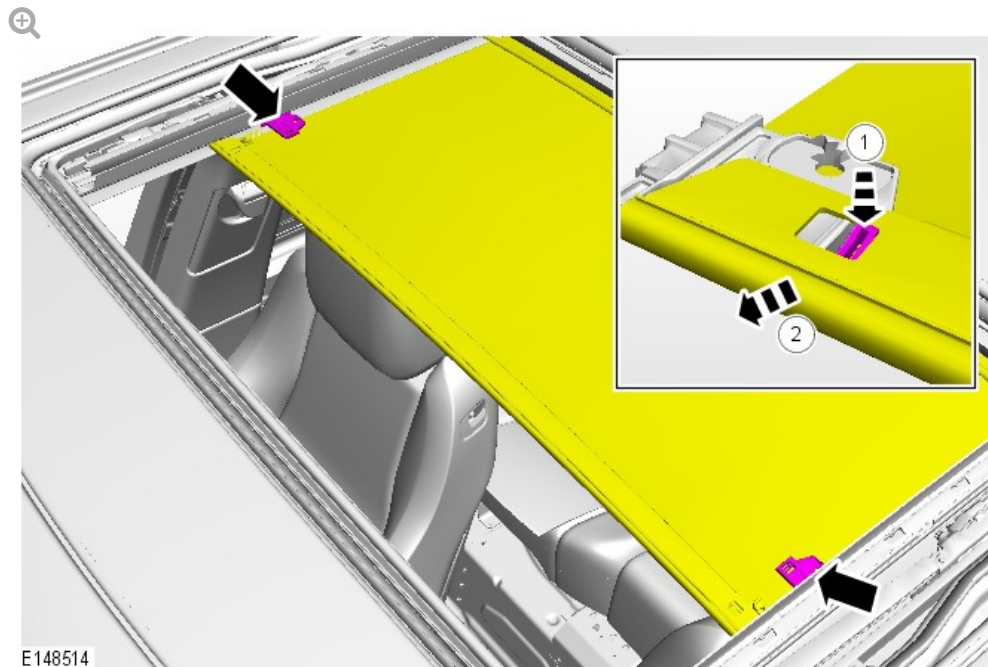


Release the opening roof panel blind.

21.

CAUTION:


Do not allow the glass roof panel blind to retract until the locking pin is secure in its locator.

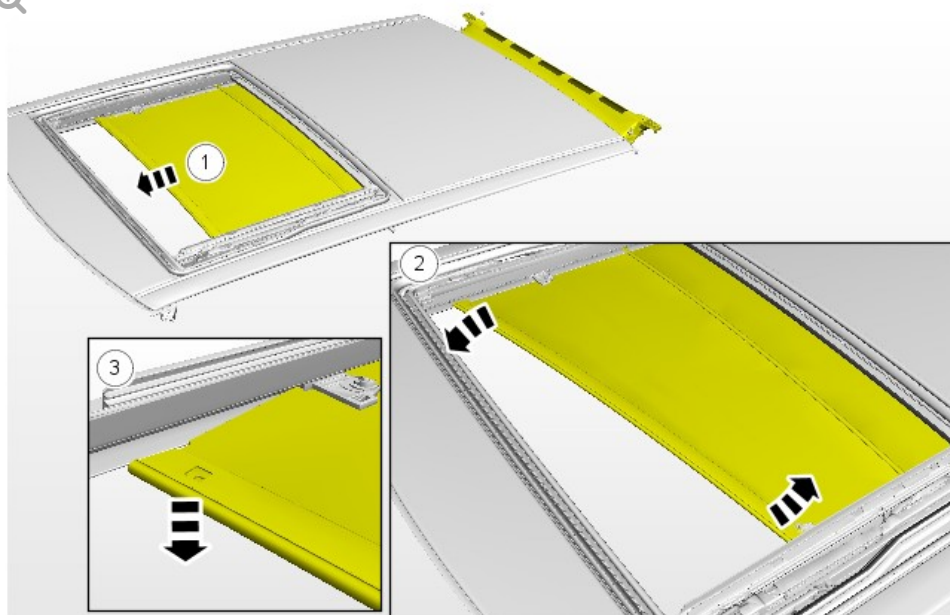

E148498

Release the opening roof panel blind from the guide rails.


22.

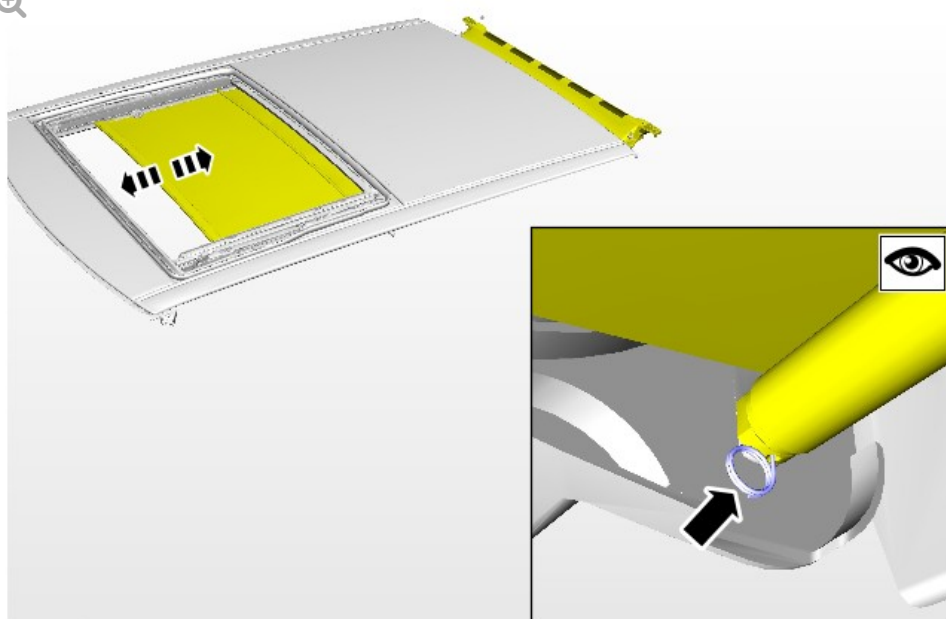


E148497

Install the glass roof panel blind retaining pin.

23.

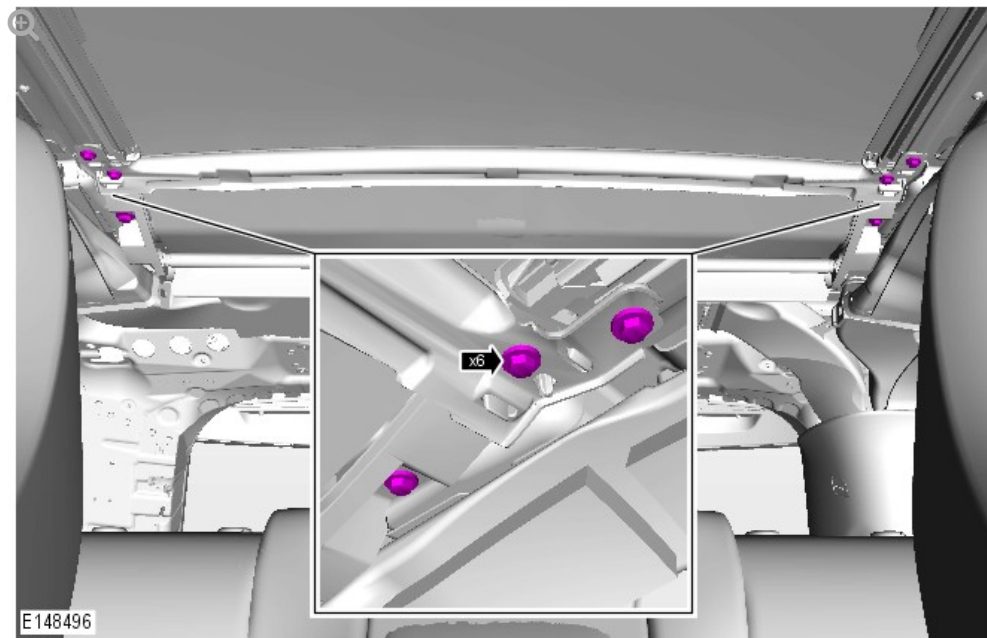

24.

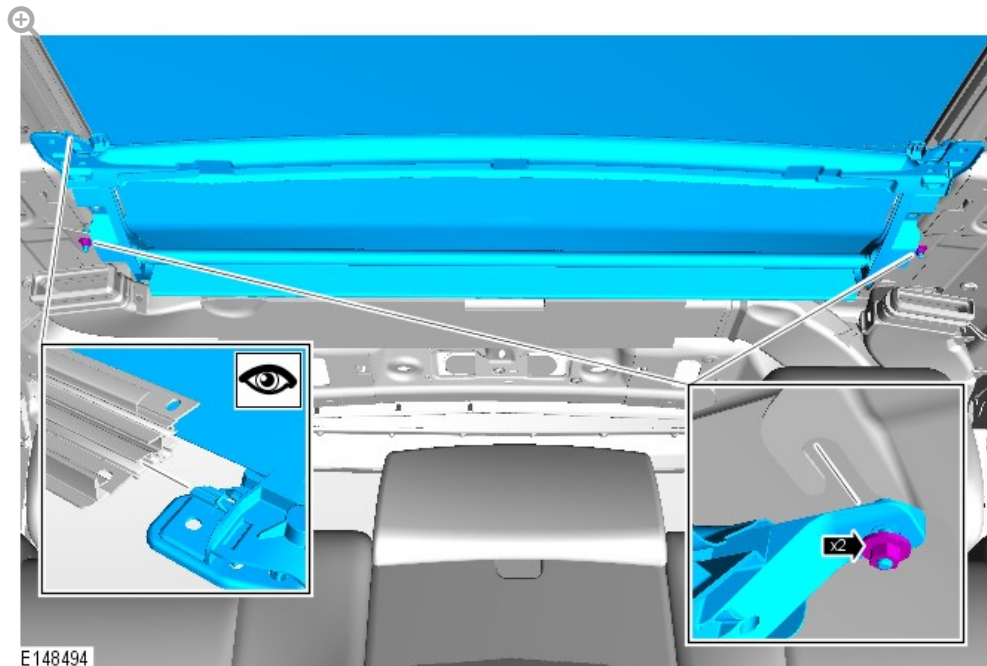

Remove the opening roof panel blind.

INSTALLATION

1. To install, reverse the removal procedure.

