

2016.0 RANGE ROVER (LG), 501-17

ROOF OPENING PANEL

ROOF OPENING PANEL FRAME [G1551678]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: [Roof Opening Panel](#) (501-17 Roof Opening Panel, Removal and Installation).
2. Refer to: [Rear Glass Roof Panel](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
3. Refer to: [Front Glass Roof Panel](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

4.

CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

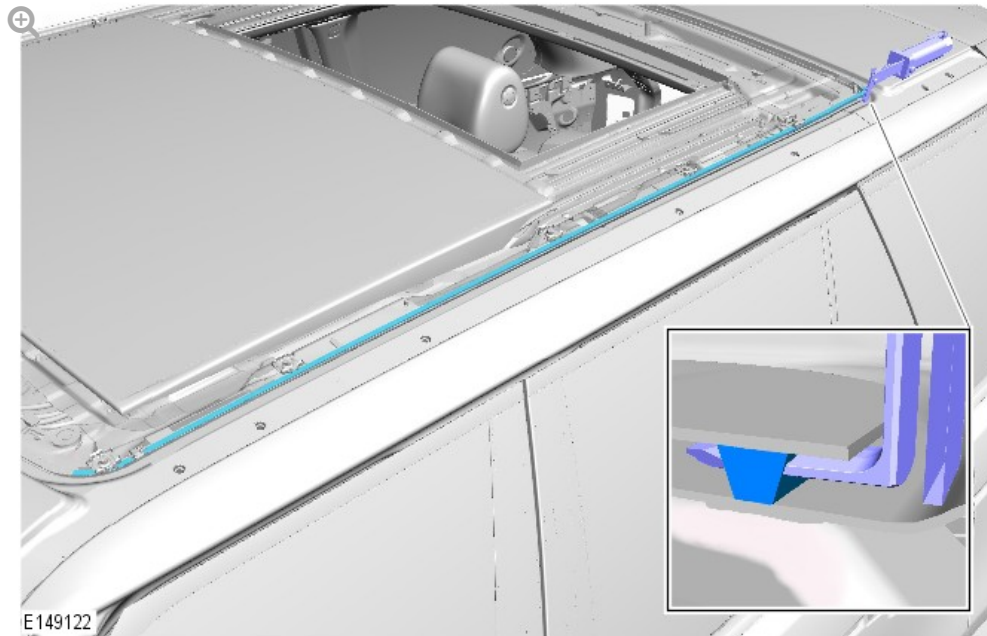


- Use a WK24ZS blade, cutting with the flat side against the body.

5.

CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

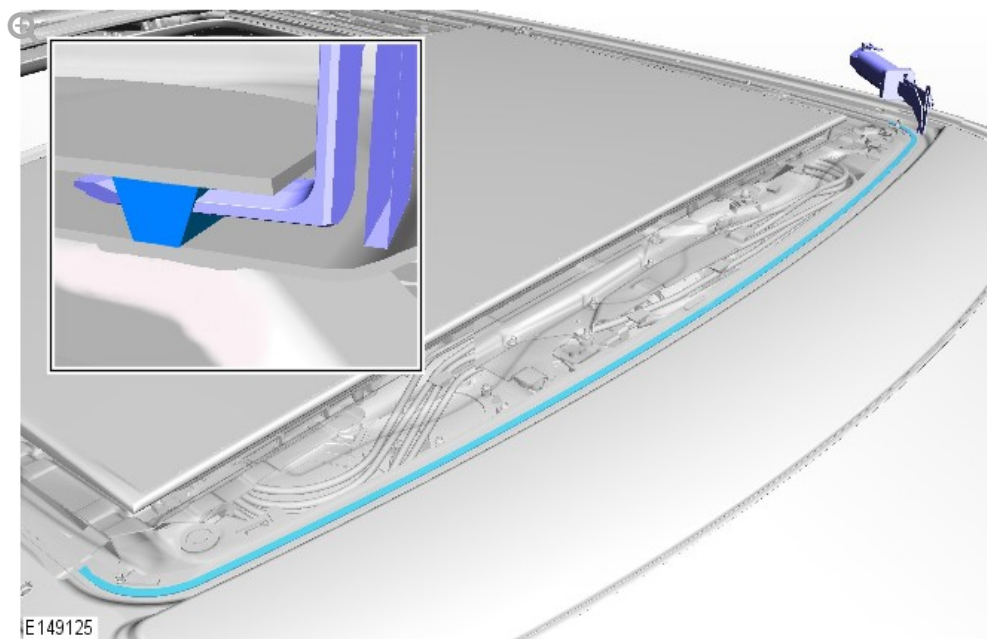


- Use a WK24ZS blade, cutting with the flat side against the body.

6.

CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

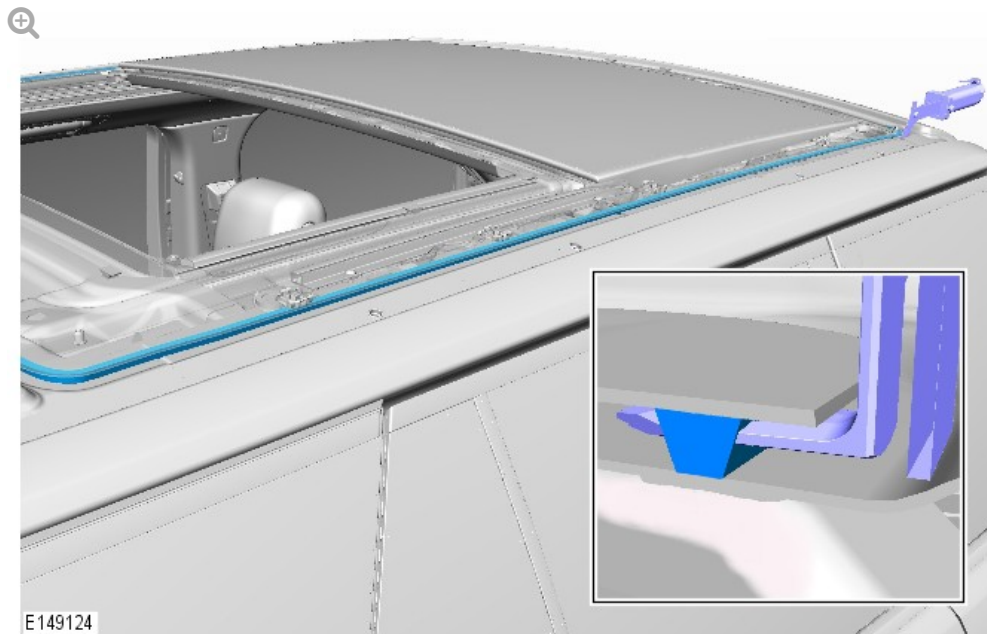


- Use a WK24ZS blade, cutting with the flat side against the body.

7.


CAUTION:

A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

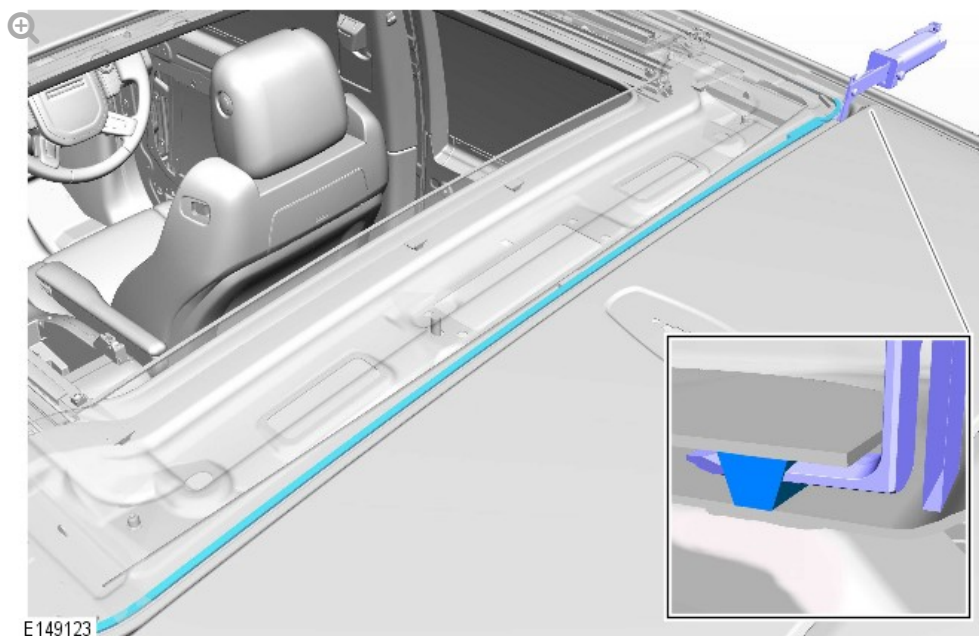

- Use a WK24ZS blade, cutting with the flat side against the body.


8.

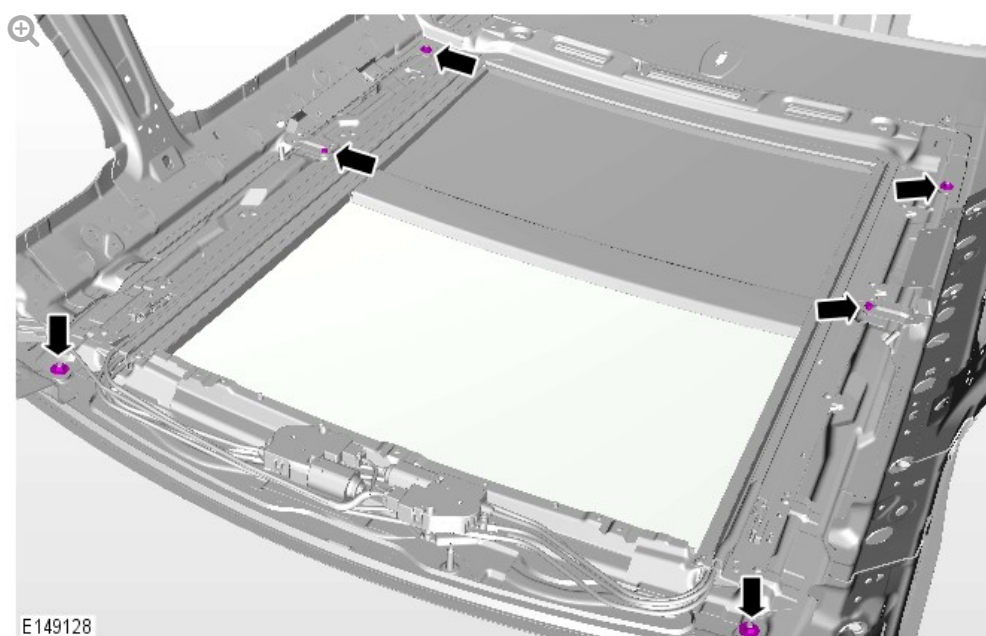

9.

WARNING:

This step requires the aid of another technician.

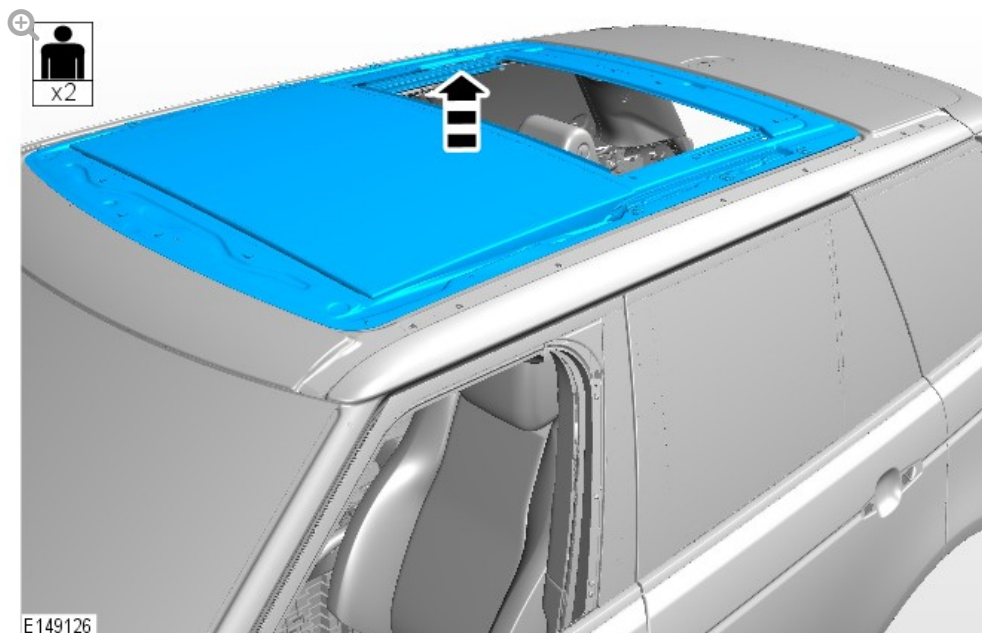


INSTALLATION

1.


CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Correct preparation of body apertures "post painting" to ensure satisfactory glass adhesion, must be carried out in line with industry practise.
- Using a suitable spirit wipe clean the component surfaces.

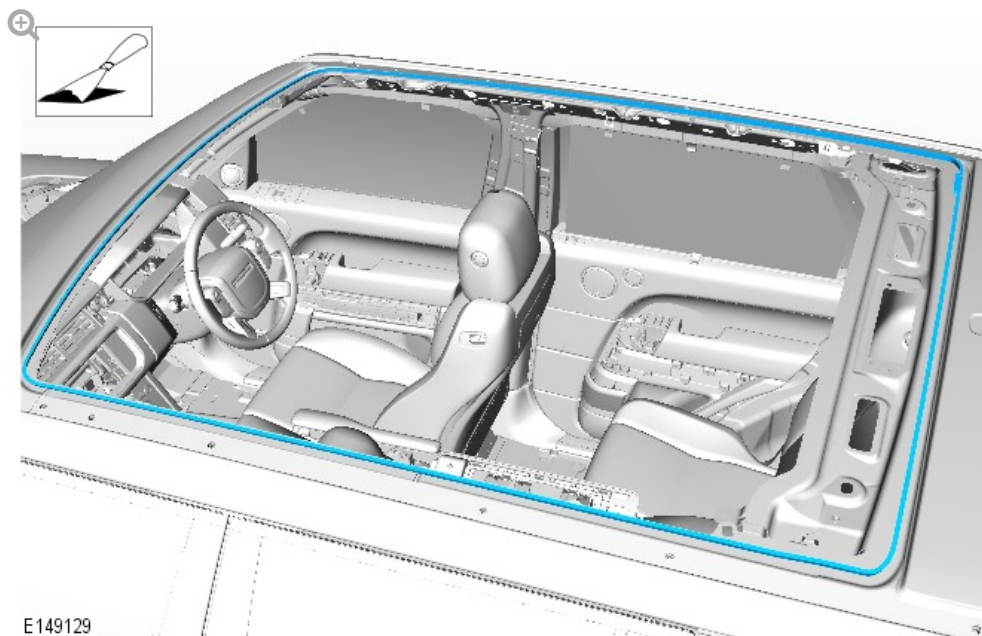

Prepare the glass roof cassette flange and trim the PU adhesive in accordance with the instructions included with the PU adhesive kit.


2.

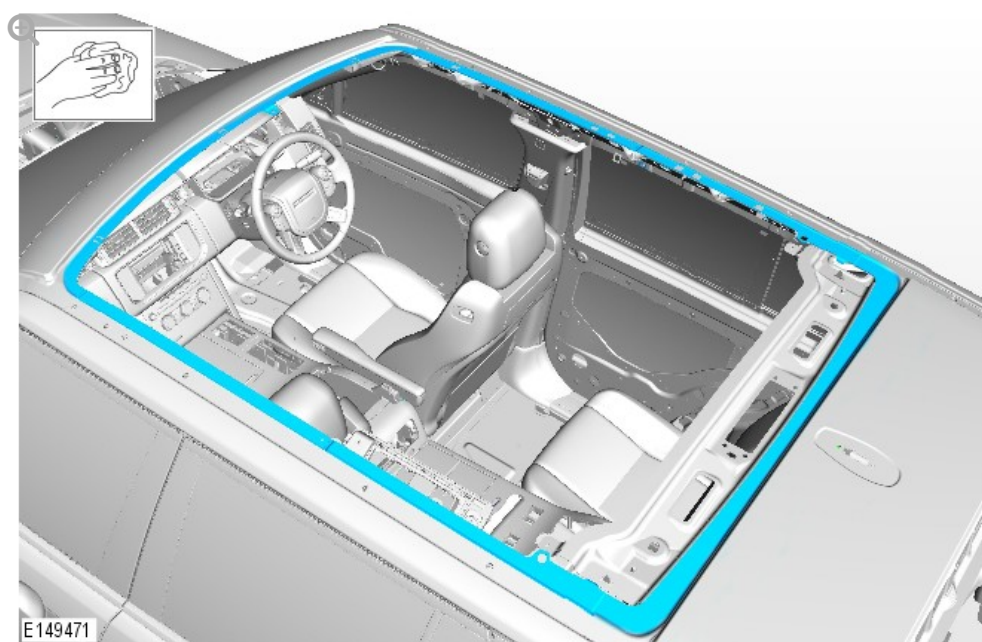

3.


CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Using a suitable spirit wipe clean the component surfaces.

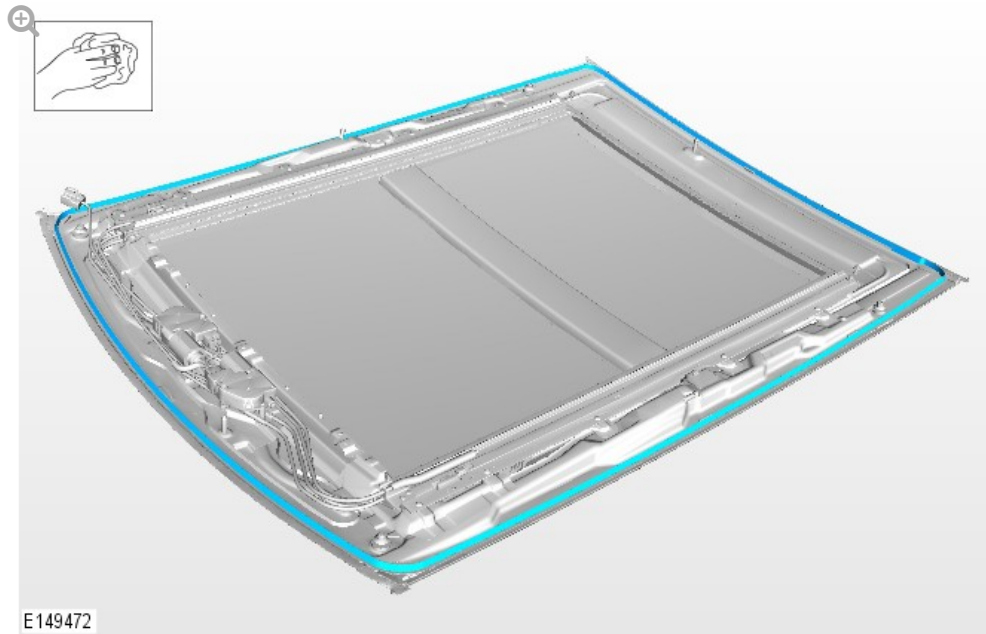

Prepare the glass roof cassette flange and trim the PU adhesive in accordance with the instructions included with the PU adhesive kit.

4.

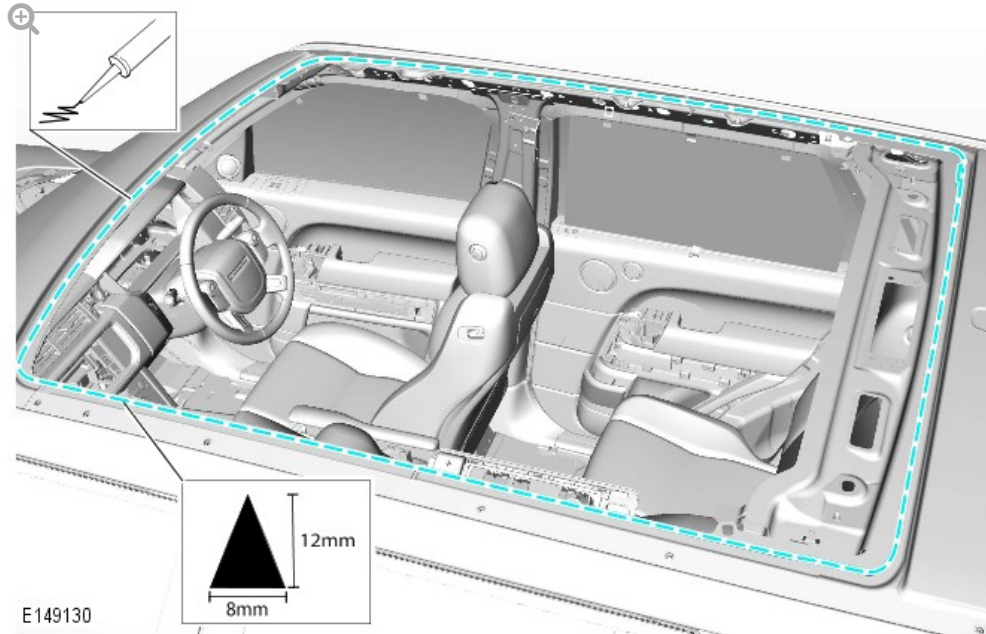


Apply RTV sealant in the position shown.

5.


WARNING:

This step requires the aid of another technician.

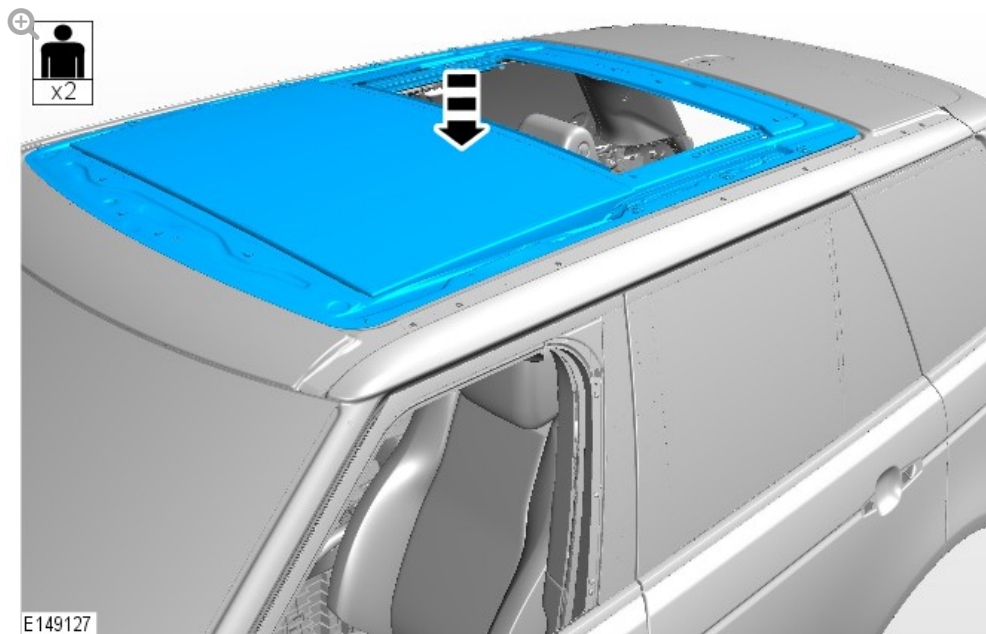

Install the roof opening panel module.

6.

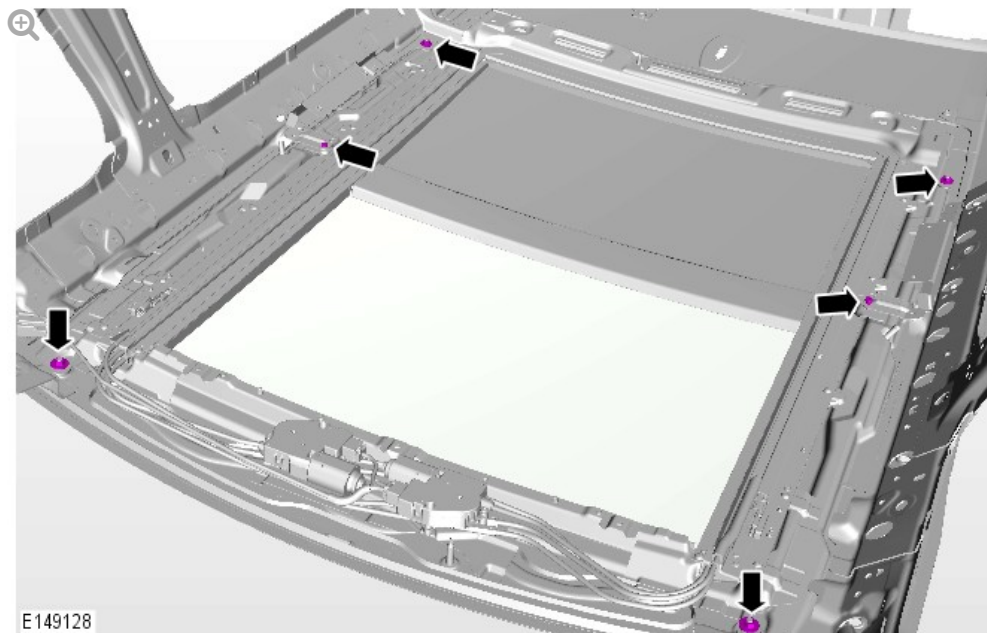

Torque:


M6 bolts **9 Nm**

M8 Nuts **22 Nm**

7.

CAUTION:

Make sure that no excess sealant residue is evident.

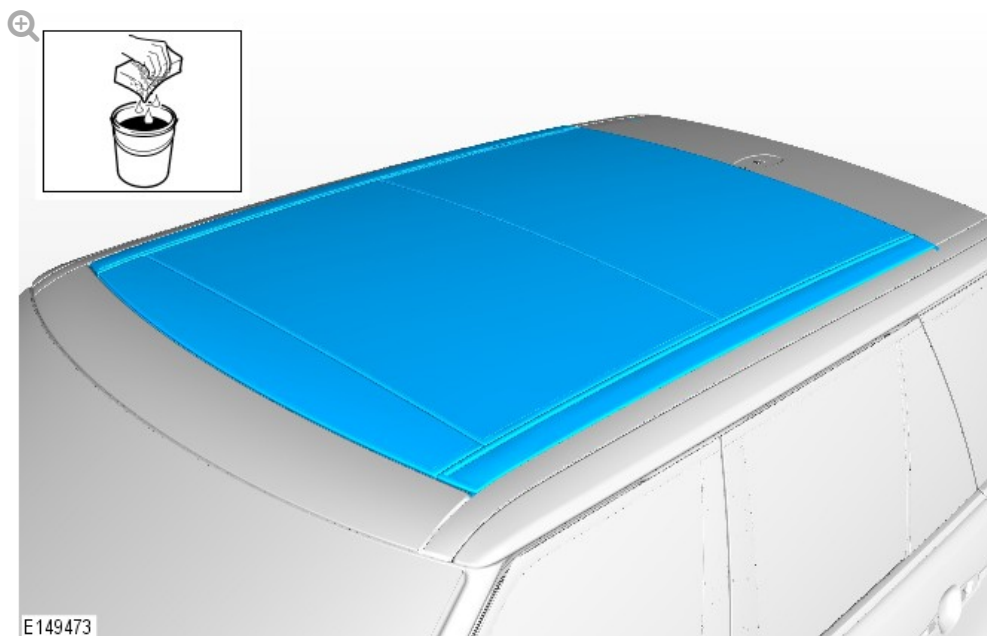

- If water is used as a means for the leak check, then allow sealant to dry before testing.
- Spray water around the glass roof panel, mark any area that leaks. Dry the glass roof panel and sealant before applying additional sealant.
- Spray water around the roof area and mark any area that leaks. Dry the roof glass and sealant before applying additional sealant.