

2016.0 RANGE ROVER (LG), 501-17

ROOF OPENING PANEL

ROOF OPENING PANEL MOTOR [G1551679]

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Refer to: [Overhead Console](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).
2. Refer to: [Sun Visor](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['A' Pillar Trim Panel](#) (501-05 Interior Trim and

Ornamentation, Removal and Installation).

4.

NOTE:

The procedure must be carried out on both sides.

Refer to: '[B' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

5.

NOTE:

The procedure must be carried out on both sides.

Refer to: '[C' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

6.

NOTE:


The procedure must be carried out on both sides.

Refer to: '[D' Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.

NOTES:

- LH illustration shown, RH is similar.
- Repeat the procedure for the other side.

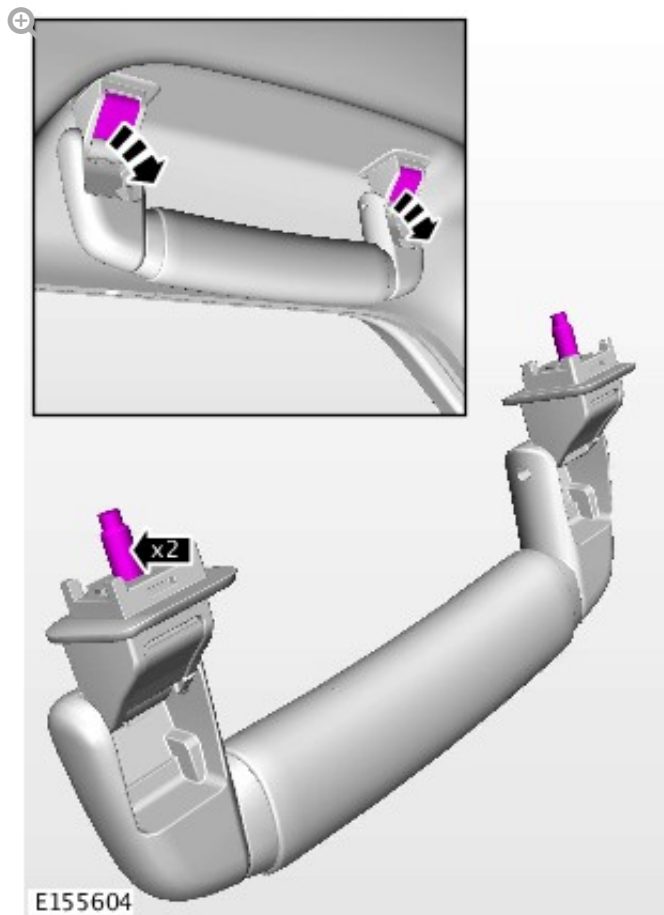


Torque: 6 Nm

8.

NOTES:

- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.

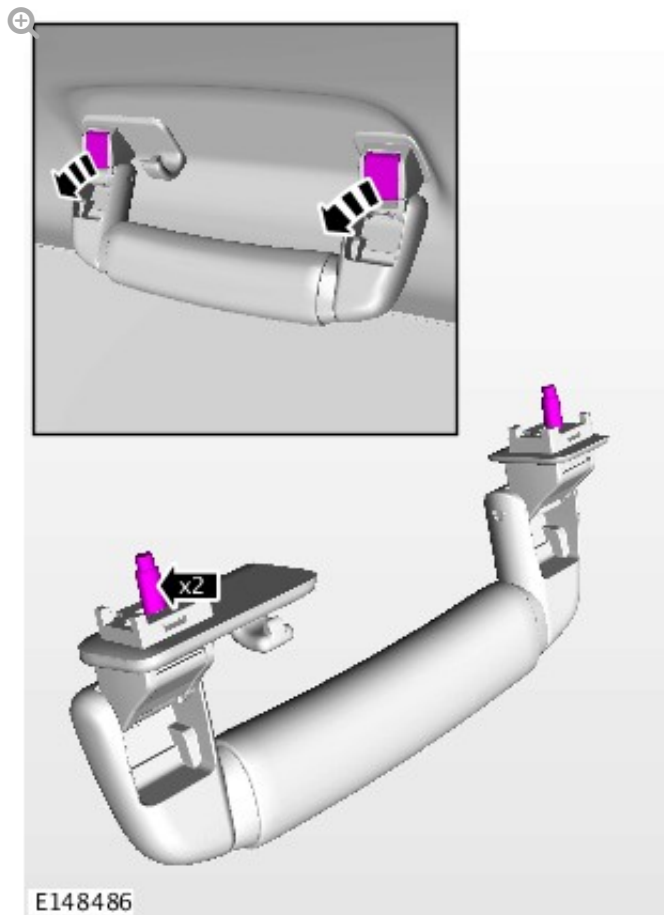

Torque: 6 Nm

9.

NOTES:

- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.




E155577

10.

NOTES:

- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.


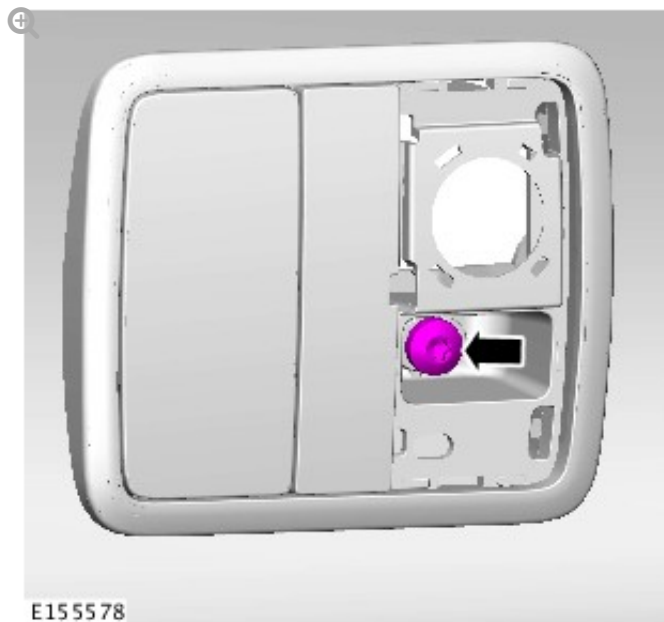


Torque: 6 Nm

11.

NOTES:


- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.

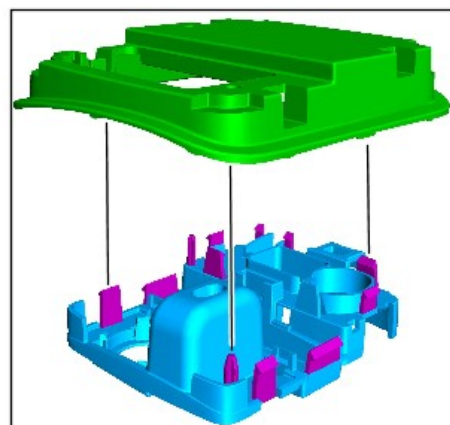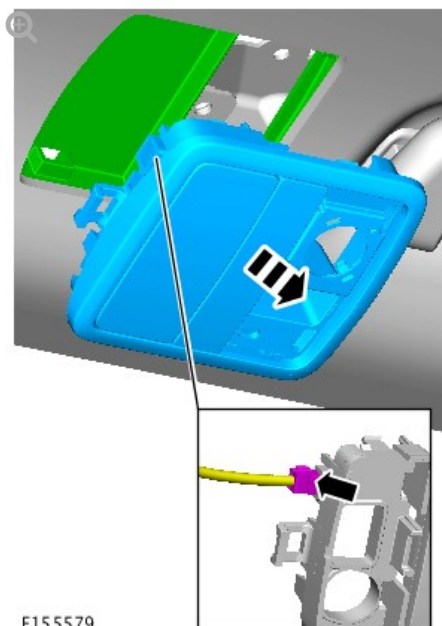

12.

NOTES:

- If equipped.
- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.

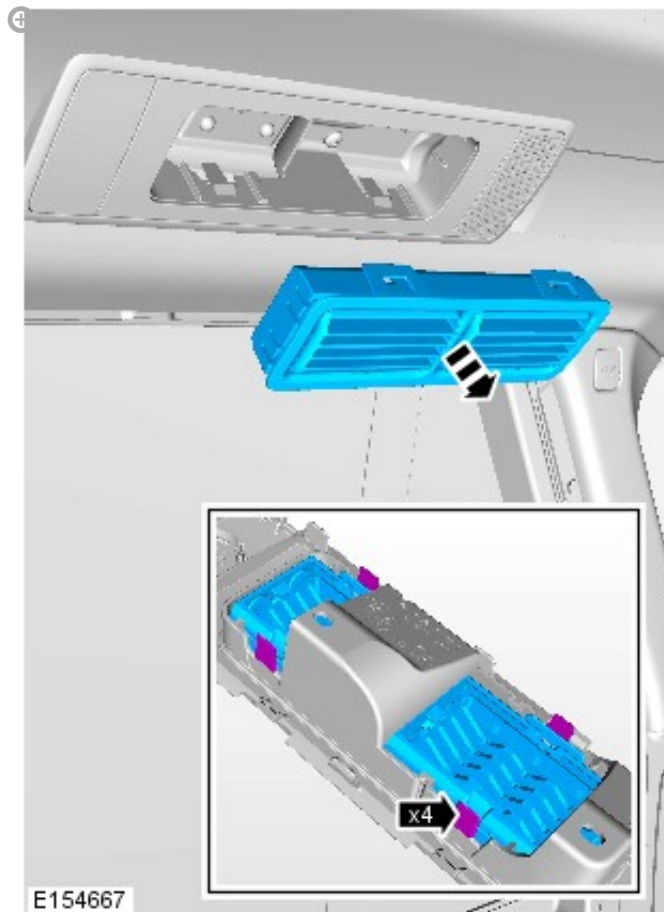

13.

NOTES:

- If equipped.
- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.



Torque: 6 Nm


14.

CAUTION:

Make sure damage is not caused to the headliner.

NOTE:


This step requires the aid of another technician.

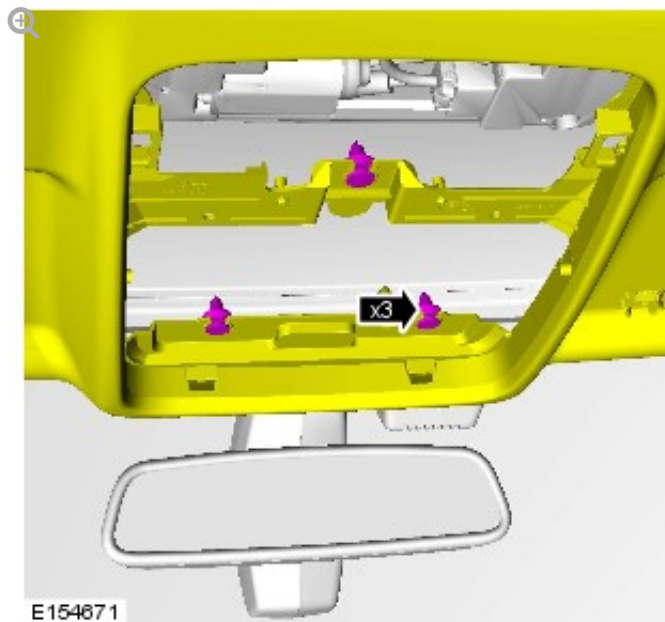

15.

CAUTION:


Make sure damage is not caused to the headliner.

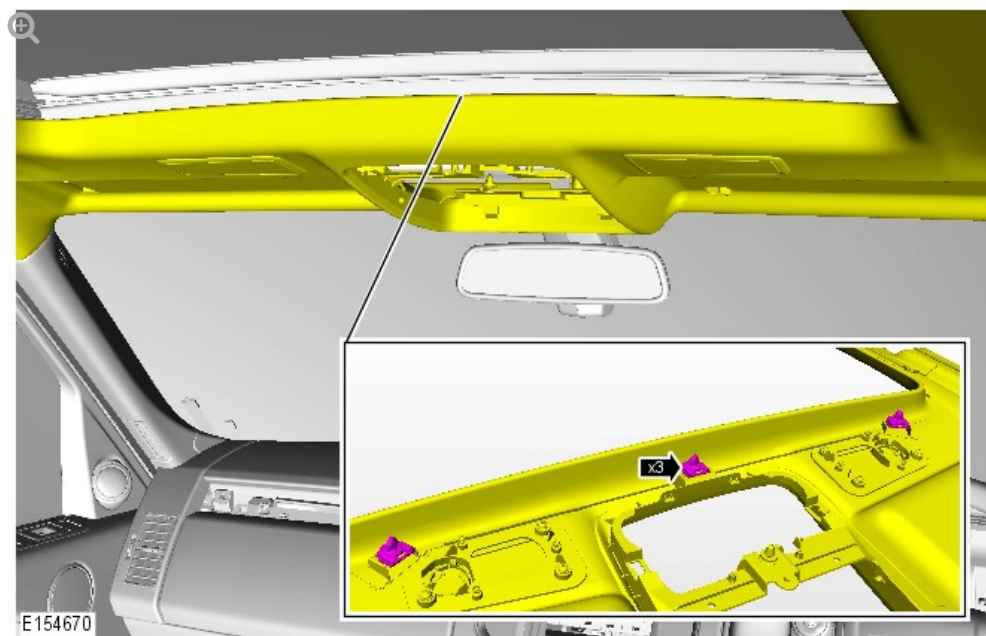

16.

CAUTION:


Make sure the magnetic fixings are attached to the headliner and not the roof opening panel blind to make sure of the correct installation.

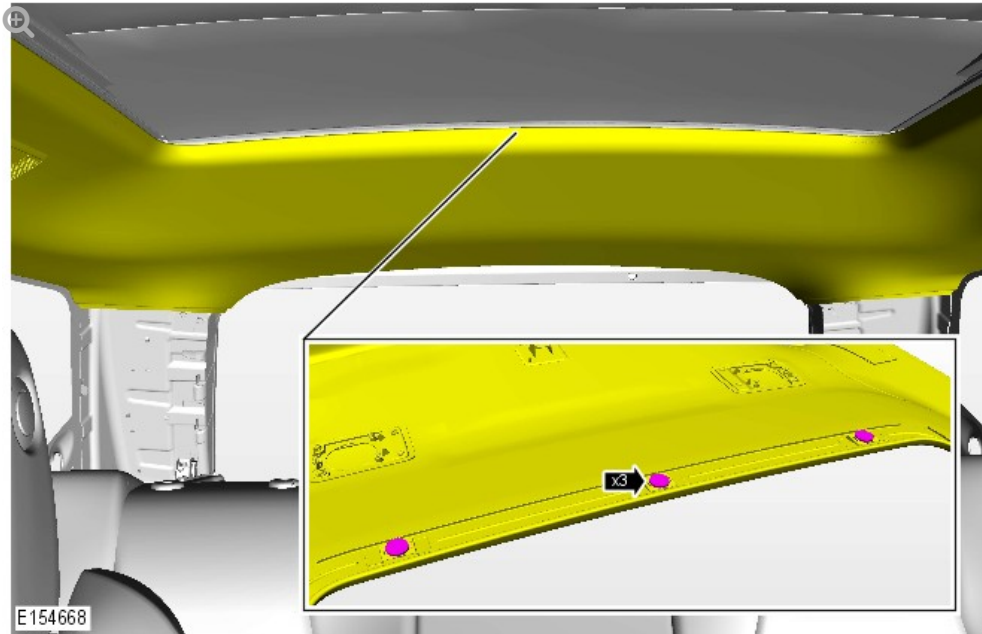


17.

CAUTION:

Make sure damage is not caused to the headliner.

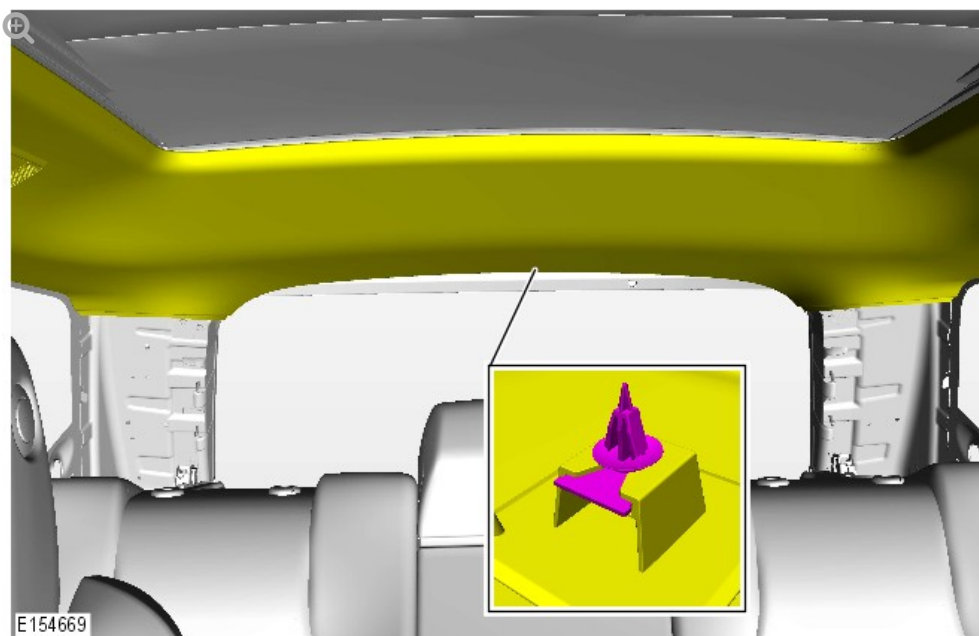


18.

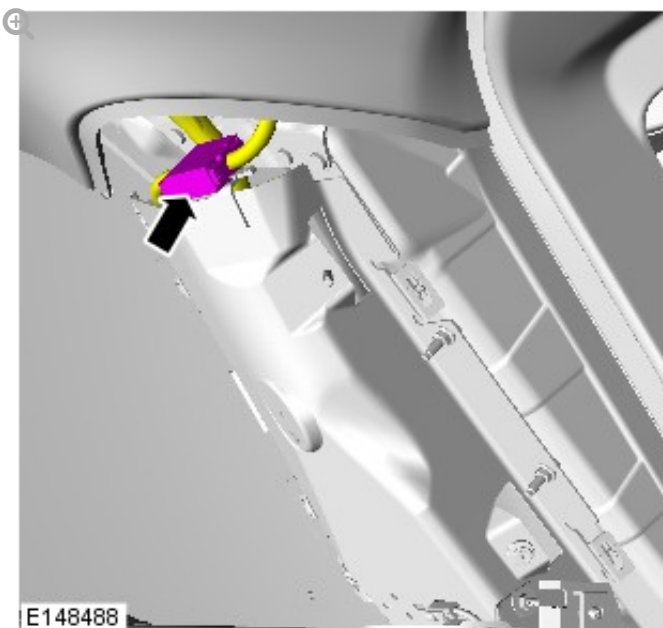

19.

CAUTION:

Make sure damage is not caused to the headliner.

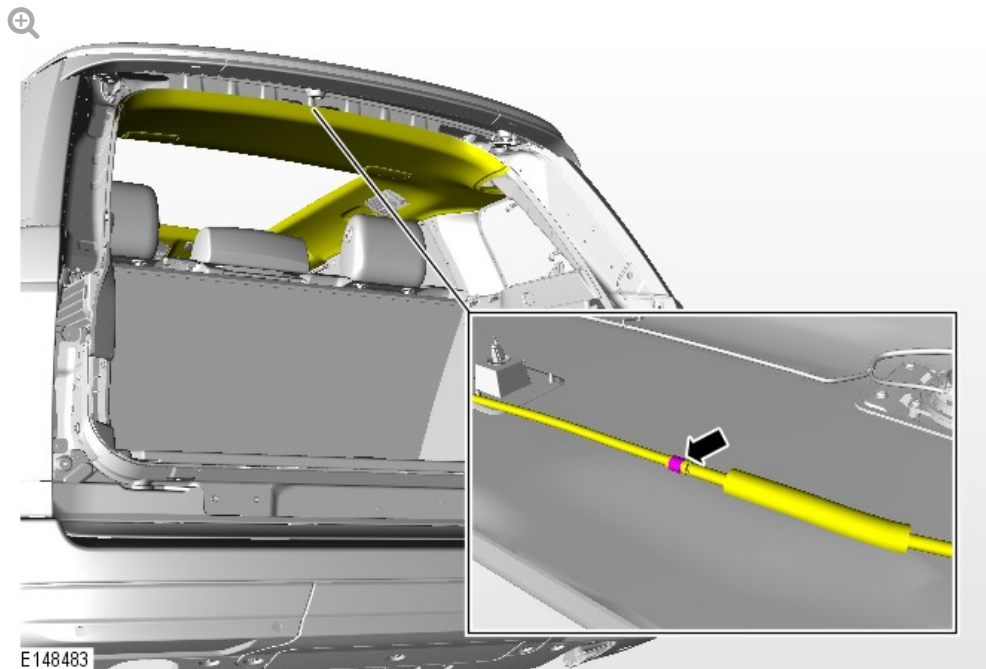


20.

CAUTION:

The headliner must be lowered as a complete unit to gain access, partial lowering of the headliner may cause damage.

NOTE:


Lower and reposition the headliner to aid access.

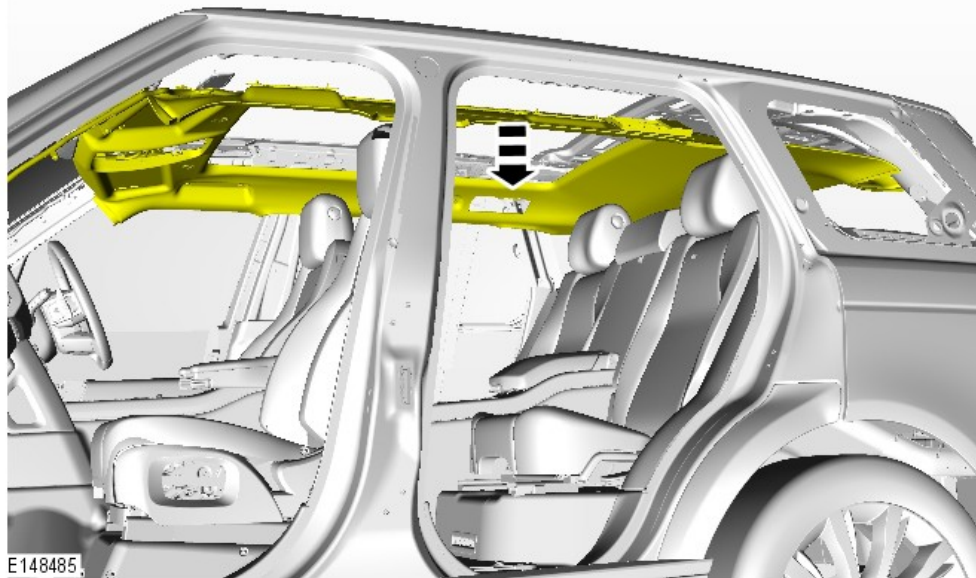

21.

WARNING:

If the roof opening panel motor is being replaced, the one touch and anti-trap function will become inoperative. Close the roof opening panel and continue to hold the switch for a further 20 seconds to allow the sunroof to complete a full cycle. This will complete the roof opening panel calibration routine and reset these functions.

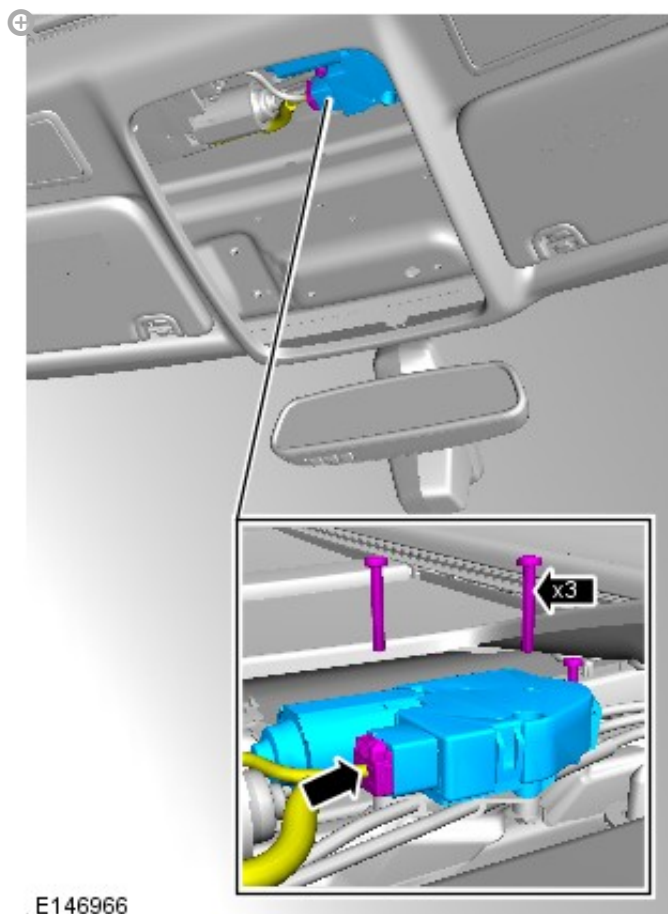


E146966

Torque: 3 Nm

INSTALLATION

1.

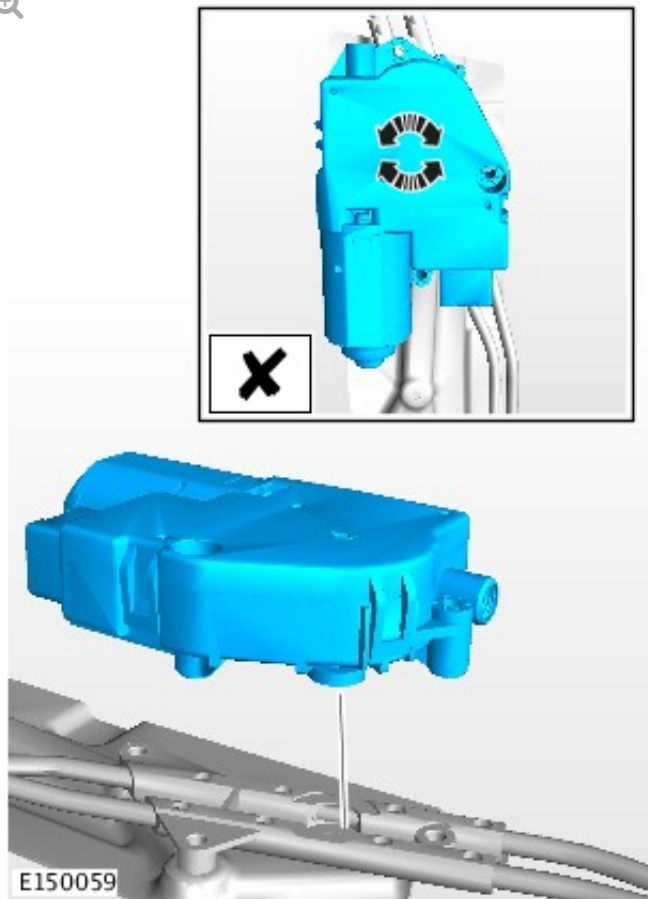

To install, reverse the removal procedure.

Refer to: [Power Roof Opening Panel Initialization](#) (501-17 Roof Opening Panel, General Procedures).