

2016.0 RANGE ROVER (LG), 501-17

ROOF OPENING PANEL

REAR ROOF PANEL SEAL

[G2019984]

REMOVAL AND INSTALLATION

REMOVAL

1.

NOTE:

Repeat this step on both sides of the vehicle.

Remove the roof mouldings.


Refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

2. Open the roof opening panel to the vent position.

3.

NOTE:


Note the orientation of the rear glass roof panel seal when removing from the vehicle.

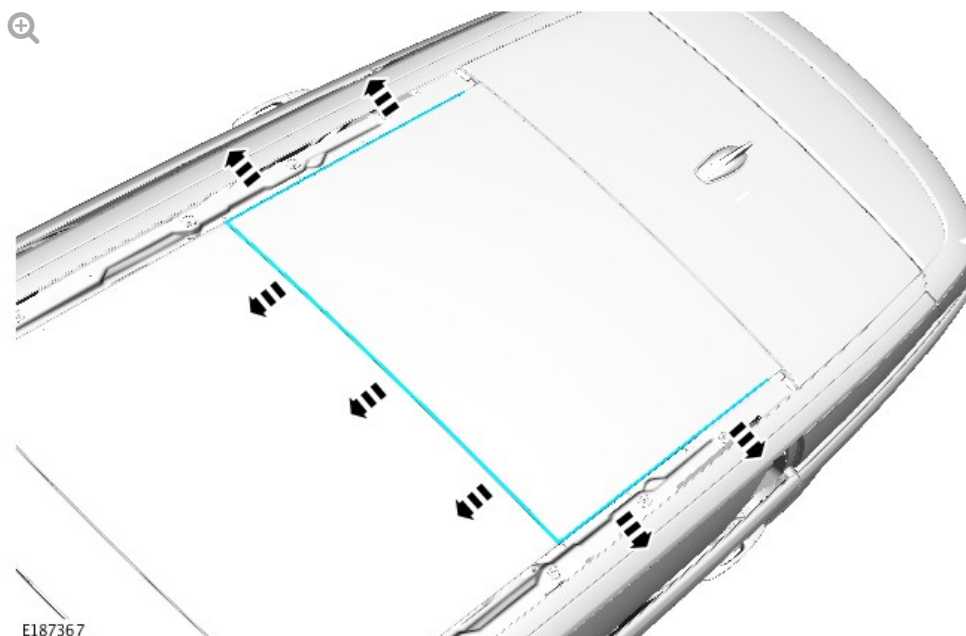

Remove the rear roof panel seal.


INSTALLATION

1.

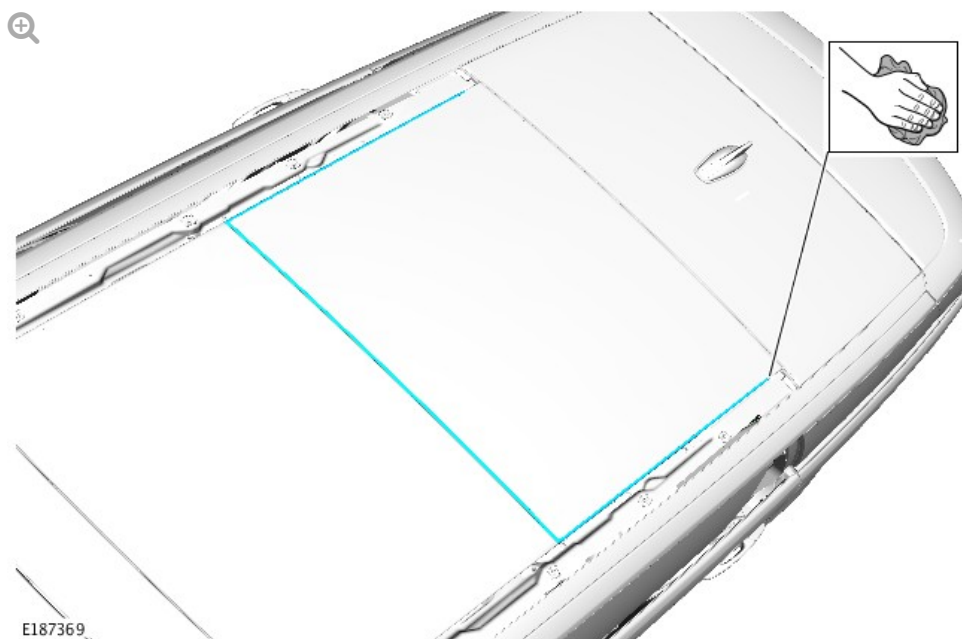

Use a suitable cloth to wipe clean the area shown.

2.

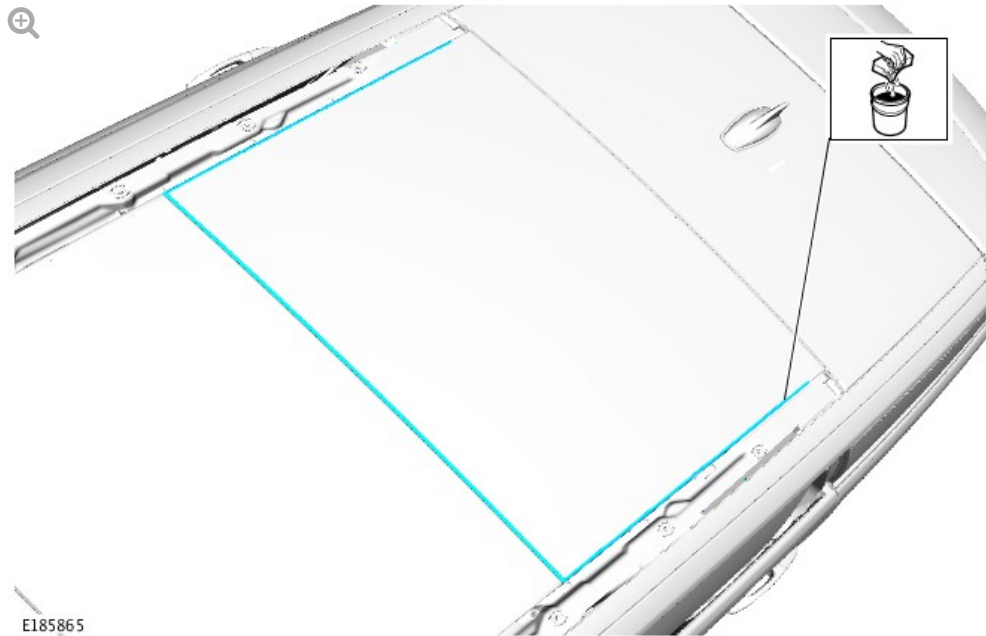


Use a suitable solution of 2ml mild soap per 1 Litre of water, wet the area shown.

3.

CAUTION:

Make sure the rear glass roof panel seal is correctly installed and fully located.

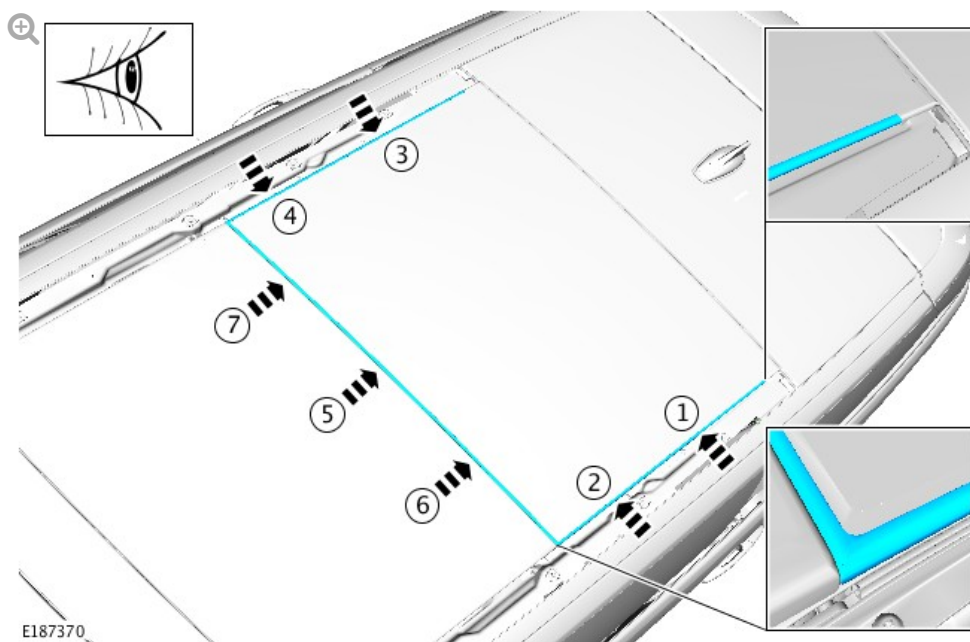

Install the rear roof panel seal in sequence shown.

4.

NOTE:

Repeat this step on both sides of the vehicle.

Install the roof mouldings.

Refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).