

2016.0 RANGE ROVER (LG), 501-17

ROOF OPENING PANEL

ROOF OPENING PANEL SEAL

[G1551681]

REMOVAL AND INSTALLATION

REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Refer to: [Roof Opening Panel](#) (501-17 Roof Opening Panel, Removal and Installation).

2.


CAUTION:

Note the fitted position of the seal.

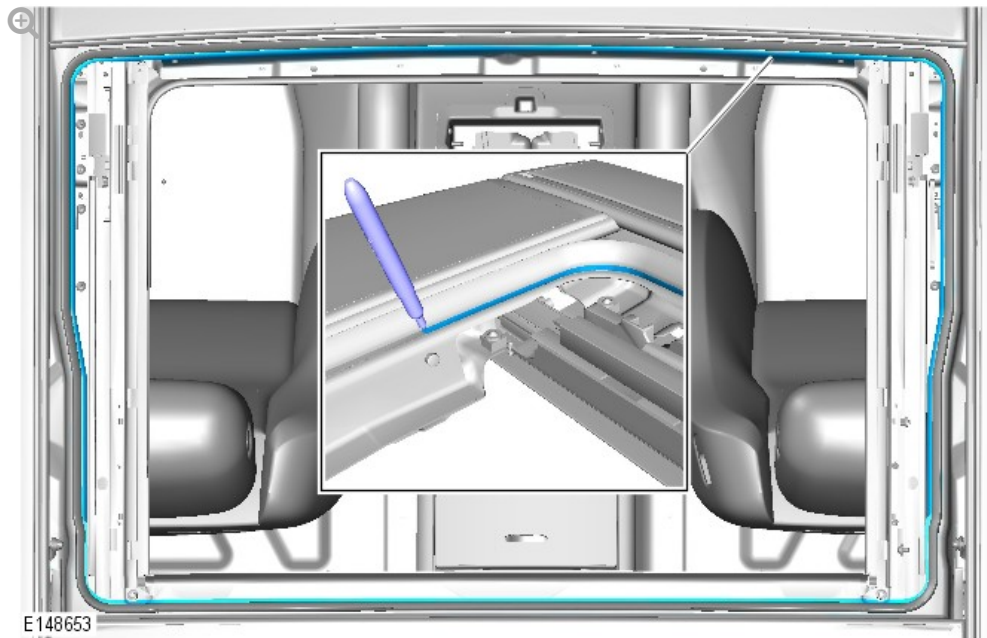

Using a suitable non-permanent marker, mark the installed position of existing seal.

3.

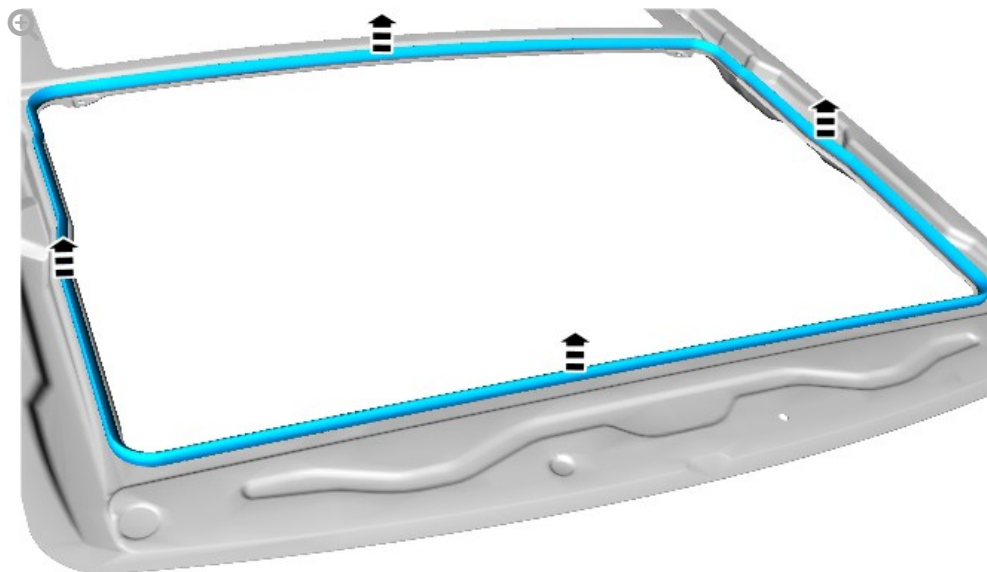


Remove and discard the seal.

4.

CAUTION:


Make sure that the surface is clean and free of foreign material.

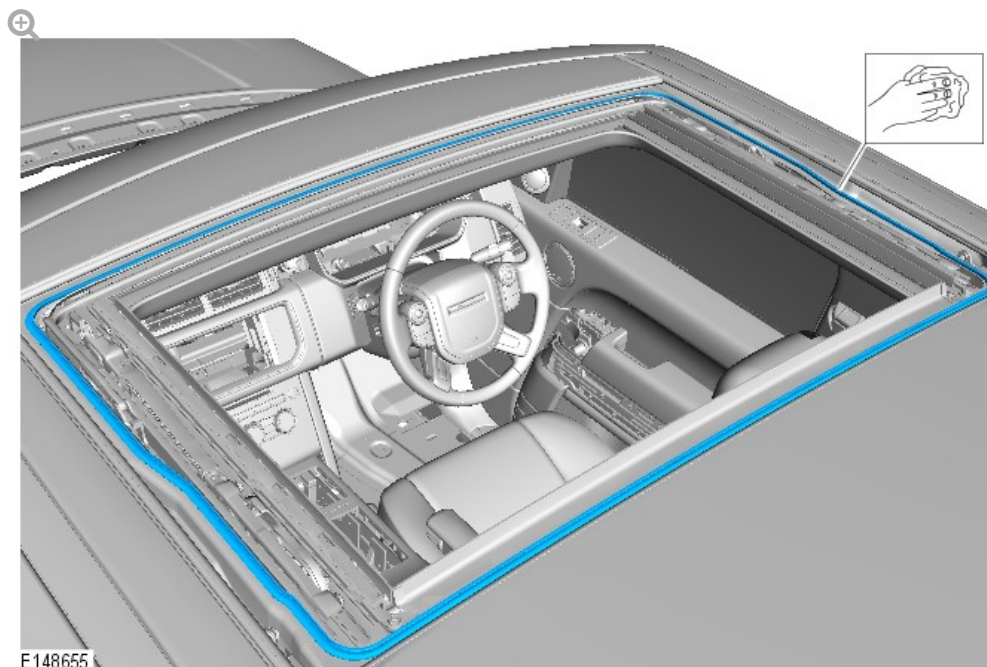

Clean the adhesive contact area.

INSTALLATION

1.

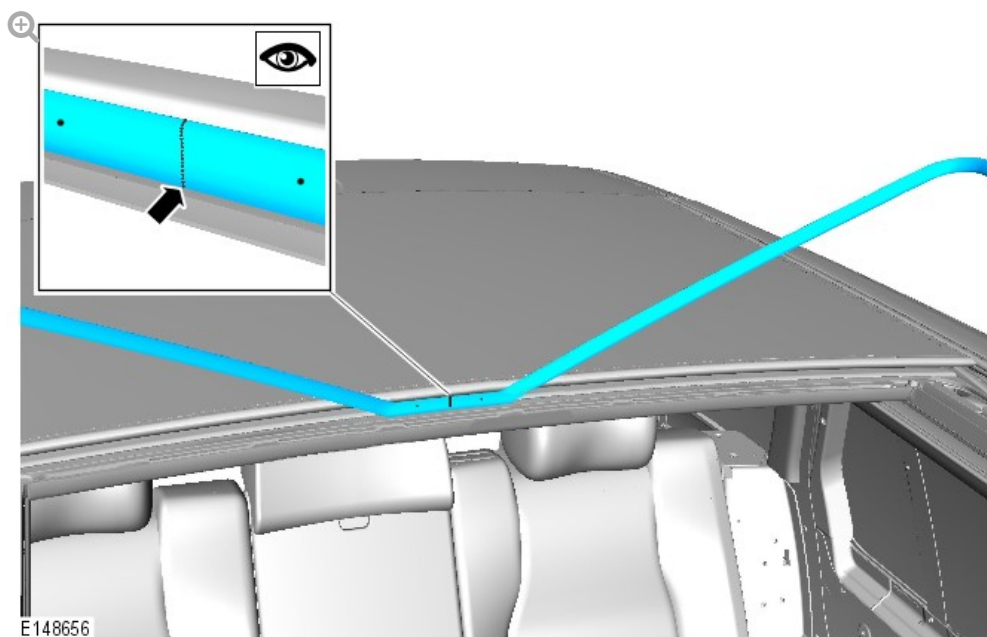


Position the roof opening panel seal seam in the center of the roof opening panel, as shown in the illustration.

2.

CAUTION:

Do not stretch the roof opening panel closing seal during installation.

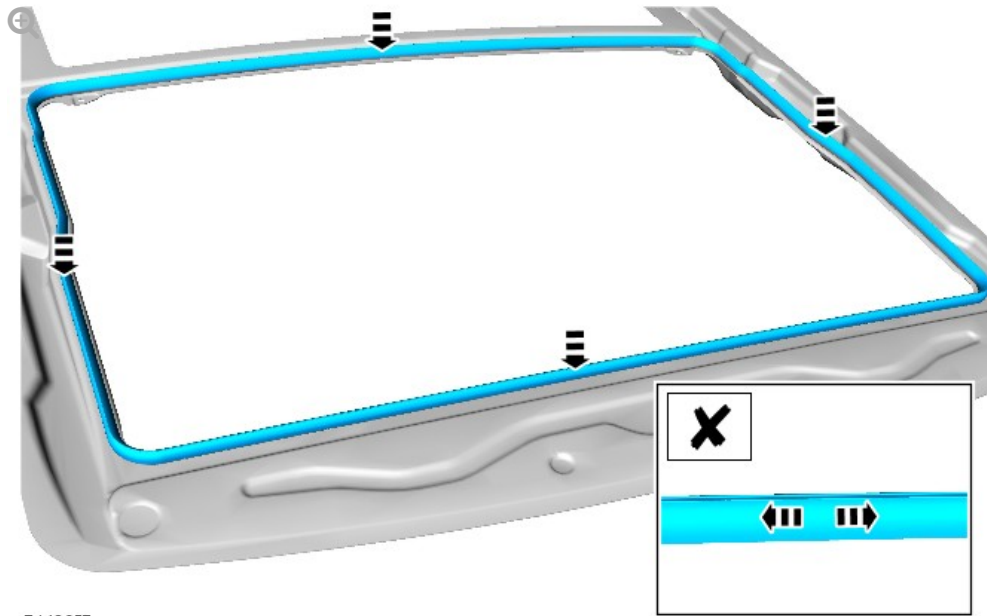

E148657

Install the roof opening panel closing seal using the mark made prior to removal.

3. Refer to: [Roof Opening Panel](#) (501-17 Roof Opening Panel, Removal and Installation).