

2016.0 RANGE ROVER (LG), 501-28

ROOF SHEET METAL REPAIRS

ROOF FRONT PANEL (G1454608)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The roof front panel is installed in conjunction with:

- Roof moulding
 - Roof opening panel
 - Windshield glass
 - Headliner
-

1.



E143309

The roof front panel is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
 - Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
 - Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
-

4. For additional information, refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
5. For additional information, refer to: [Roof Opening Panel Frame](#) (501-17 Roof Opening Panel, Removal and Installation).
6. For additional information, refer to: [Windshield Glass](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
7. For additional information, refer to: [Headliner](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
8. Release and position the roof opening panel wiring harness to one side.

9.

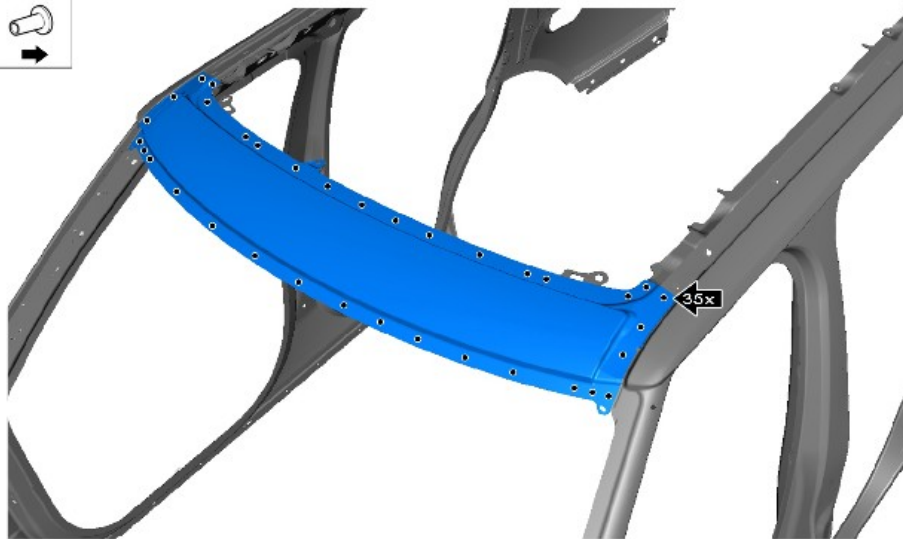

E143312

Remove the SPR's as indicated.

10. Separate the joints and remove the roof front panel.

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.
2. Dress flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces.
4. Offer up the new roof front panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

5.

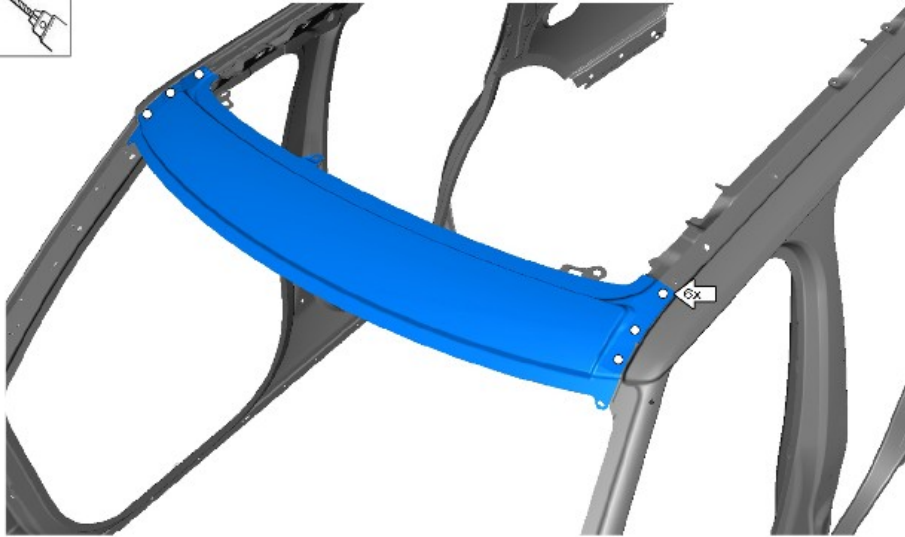

E143311

Drill holes through the old roof front panel into the new roof front panel where BSF's are to be installed as indicated.


6. Remove the new panel.

7. Deburr the drilled holes.

8. Using a fine bristle disc, clean and prepare the panel surfaces.

9. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

10.

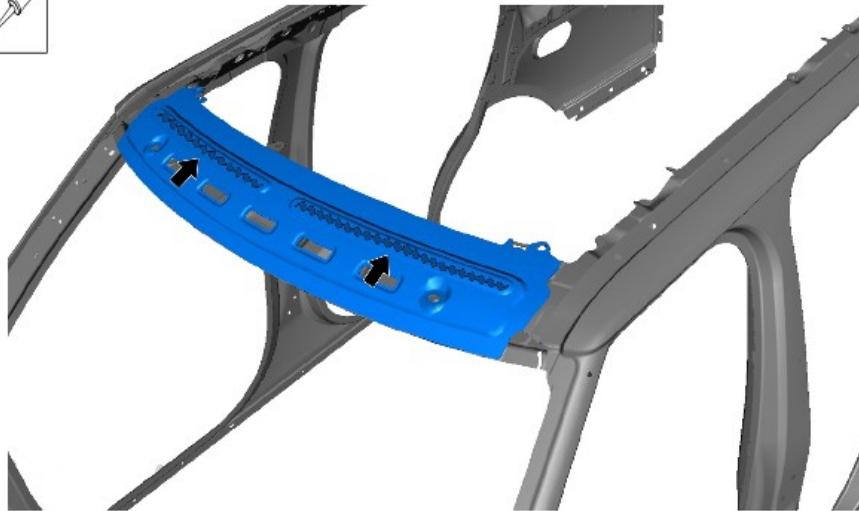


E143314

Apply the Land Rover approved semi rigid sealer to the body assembly as indicated.

11.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

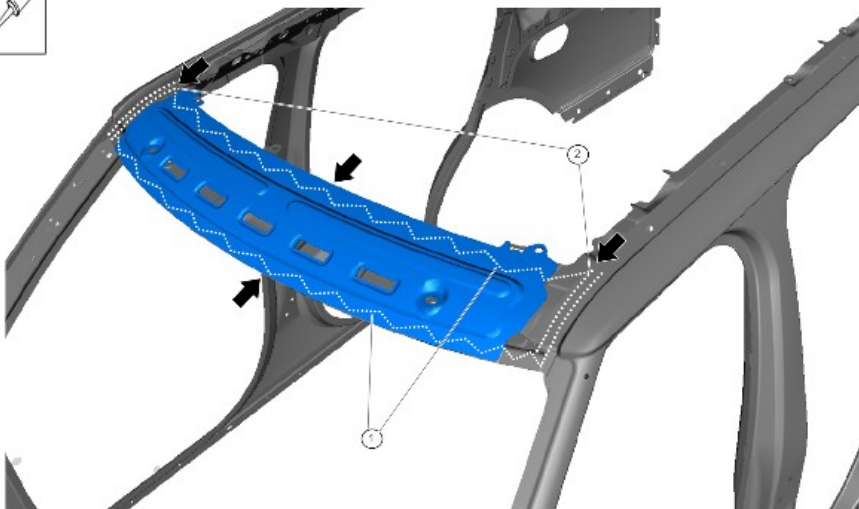


E143313

Apply a 5mm zig zag bead (1) and a straight bead (2) of the Land

Rover recommended bonding material as indicated.

12. Offer up the new roof front panel and clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

13.

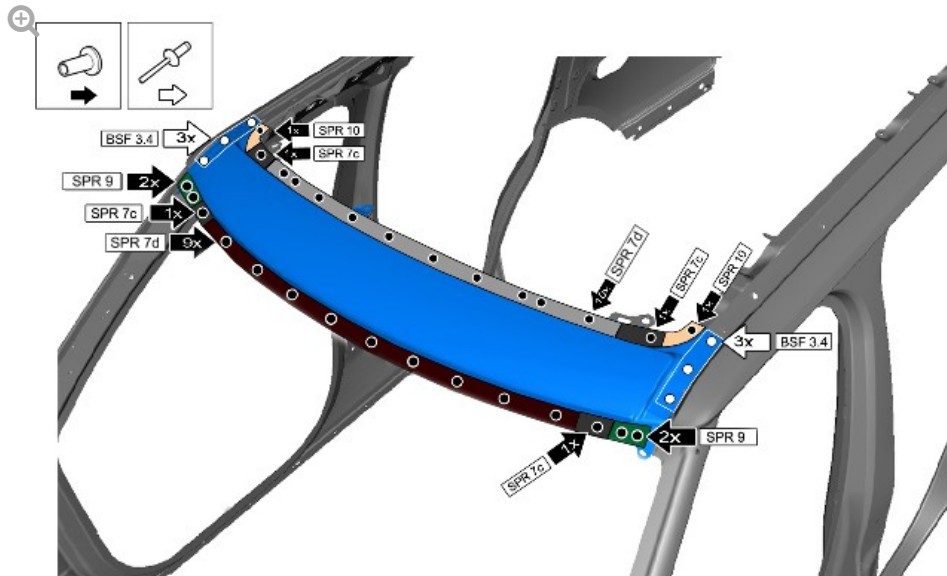

E143310

Install the BSF's and the SPR's as indicated.

14. Remove any excess adhesive.
15. Make sure that any open or exposed panel joints are sealed with a Land Rover recommended sealer.
16. Make sure corrosion protection is applied to all areas affected by repair.
17. The installation of associated panels and components is the reversal of removal procedure.