

2016.0 RANGE ROVER (LG), 501-28

ROOF SHEET METAL REPAIRS

ROOF REAR PANEL - STANDARD WHEEL BASE

[G 1 4 5 4 6 0 9]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The roof rear panel is installed in conjunction with:

- Liftgate
 - Side air curtain module
 - Rear glass roof panel
 - Headliner
 - Antenna
-

1. 



E143319

The roof rear panel is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Liftgate](#) (501-03 Body Closures, Removal and Installation).

5. For additional information, refer to: [Headliner](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).



6. For additional information, refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

7. For additional information, refer to: [Roof Opening Panel Frame](#) (501-17 Roof Opening Panel, Removal and Installation).

8. For additional information, refer to: [Side Air Curtain Module](#) (501-20B Supplemental Restraint System, Removal and Installation).

9. For additional information, refer to: [Audio Unit Antenna](#) (415-01 Information and Entertainment System, Removal and Installation).

10.

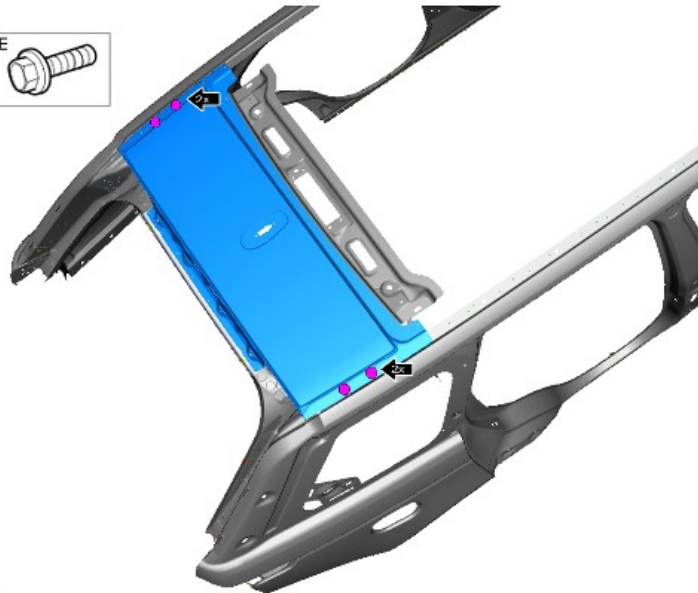


E143325

Remove the bolts as indicated..

-
11. Release and position the roof panel wiring harness to one side.
-

12.

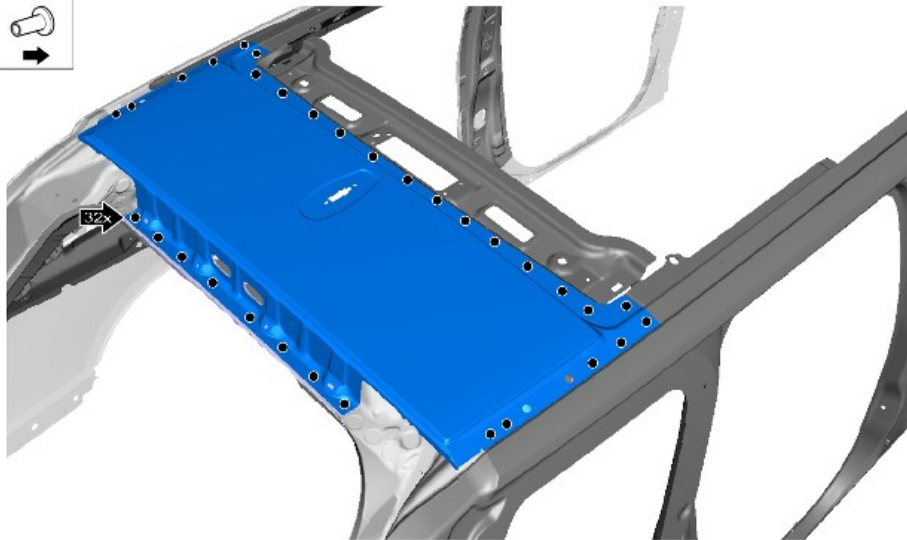

E143320

Remove the SPR's as indicated.

13. Separate the joints and remove the old roof rear panel.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.


NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.

2. Dress flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces, removing any adhesive residue.
4. Offer up the new roof rear panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

5.

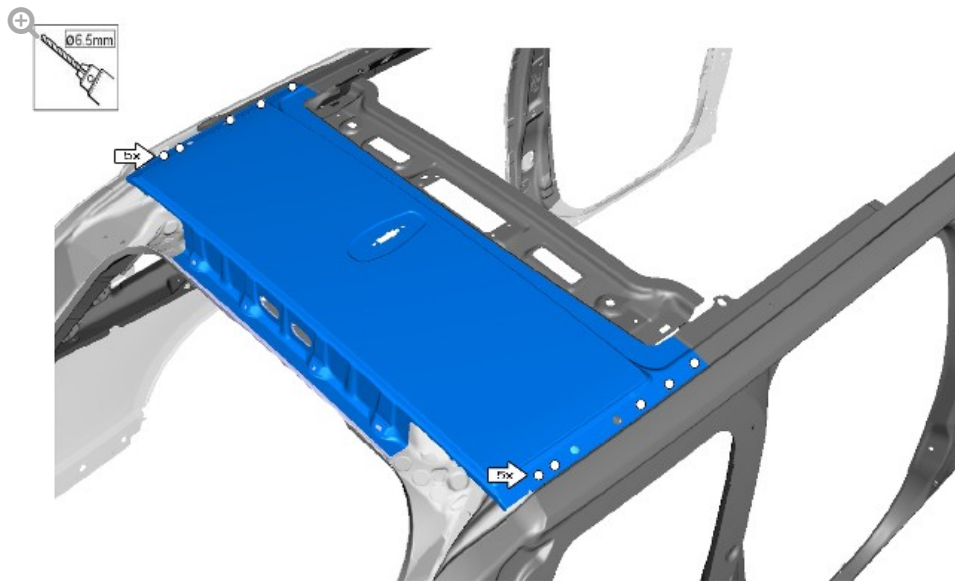

E143323


Drill holes through the old roof rear panel into the new roof rear panel where BSF's are to be installed as indicated.

6. Remove the new roof rear panel.
7. Deburr the drilled holes.
8. Using a fine bristle disc, clean and prepare the panel surfaces.
9. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

10.

NOTE:

Make sure that the areas highlighted have a sealer thickness of 8mm.

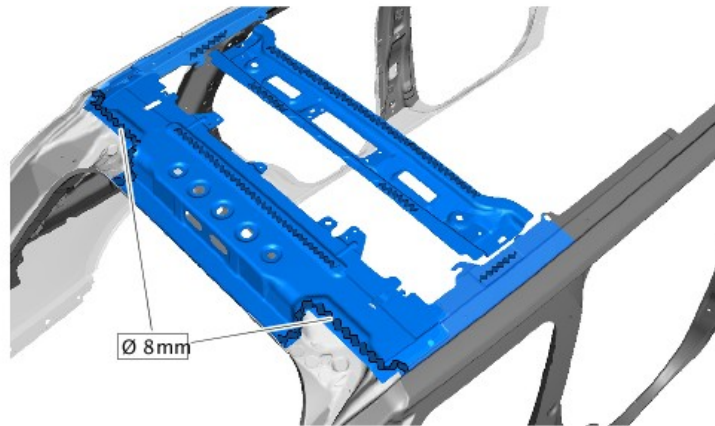


E143322

Apply a zig zag bead of Land Rover recommended semi-rigid sealer to the body assembly as indicated.

11.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

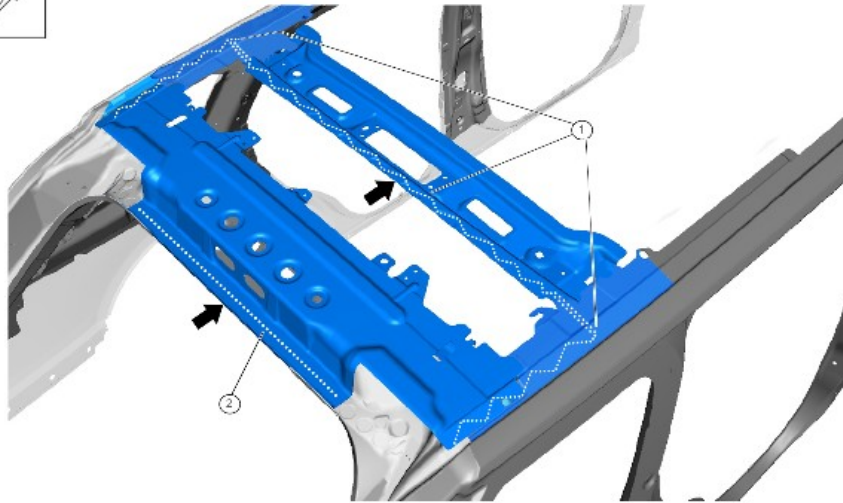

E149242


Apply a 5mm zig zag bead (1) and a straight bead (2) of Land Rover recommended bonding material to the body joints.

-
12. Offer up the new roof rear panel and clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.
-

13.

NOTE:

Make sure that the two BSF's at the rear of the roof rear panel are installed from the inside.


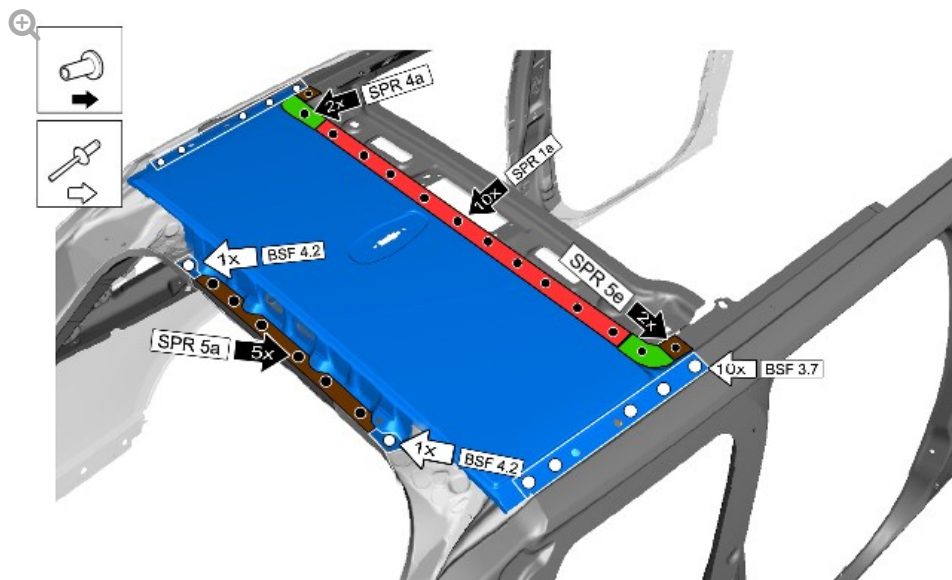


E143324

Install the BSF's and the SPR's as indicated.

14. Remove any excess adhesive.
15. Make sure that sealer is applied over the rivet heads including the remnants of the rivet stem and the surrounding hole.

16.

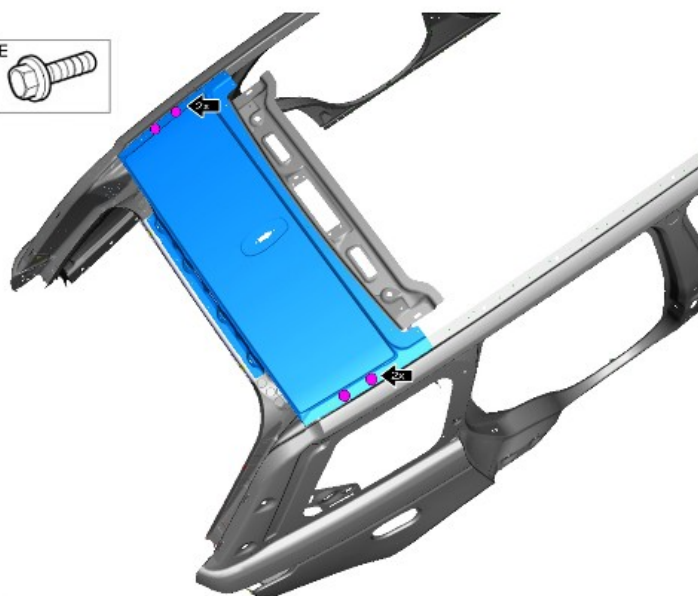

E143325

Install the roof rear panel fixing bolts and tighten to 23Nm.

17. Make sure that any open or exposed panel joints are correctly sealed.

18. Make sure corrosion protection is applied to all areas affected by repair.

19. The installation of associated panels and components is the reversal of removal procedure.