

2016.0 RANGE ROVER (LG), 501-20

SEATBELT SYSTEM

REAR SAFETY BELT RETRACTOR (G1521658)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and

trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.

- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTE:

Removal steps in this procedure may contain installation details.




All vehicles

1. Make the SRS system safe.


Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).

2.

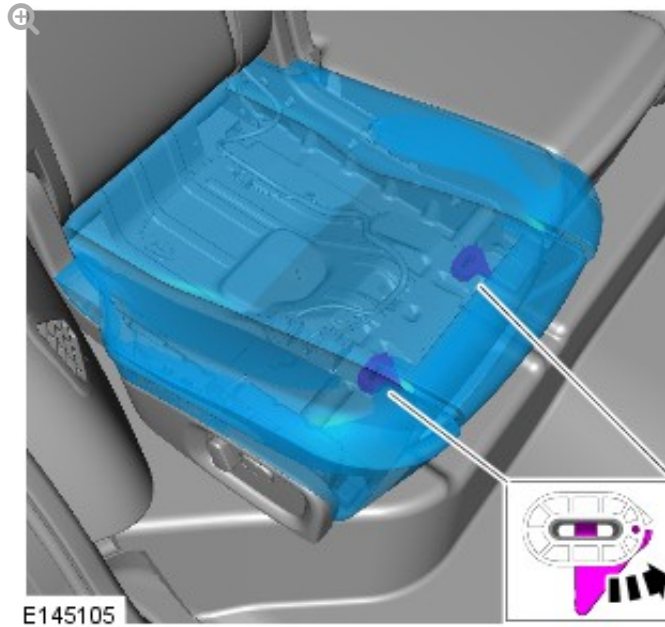


Vehicles with heated rear seat

3.

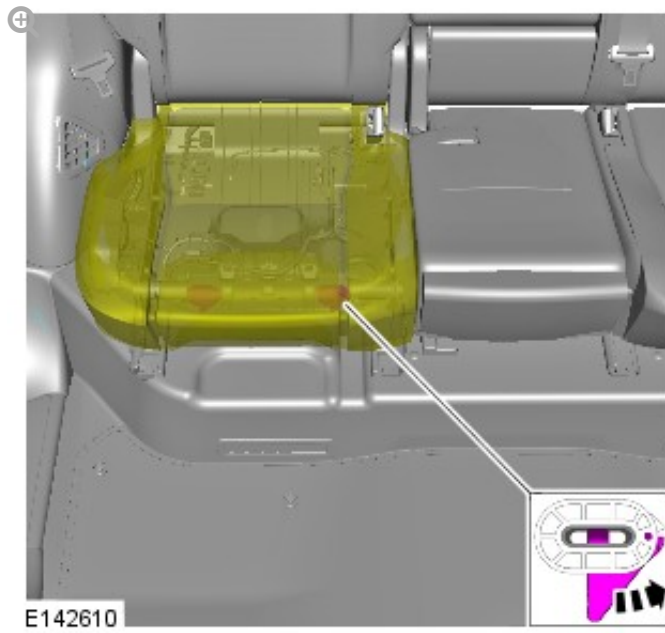


4.

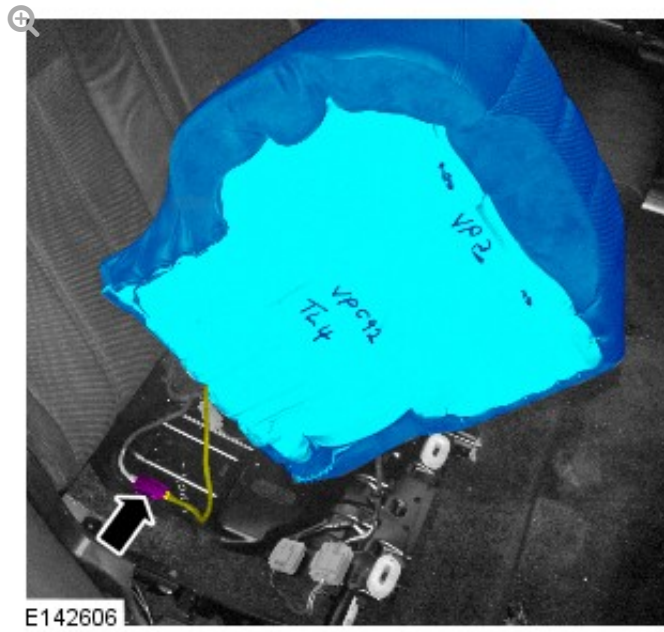


Vehicles without business seats

5.

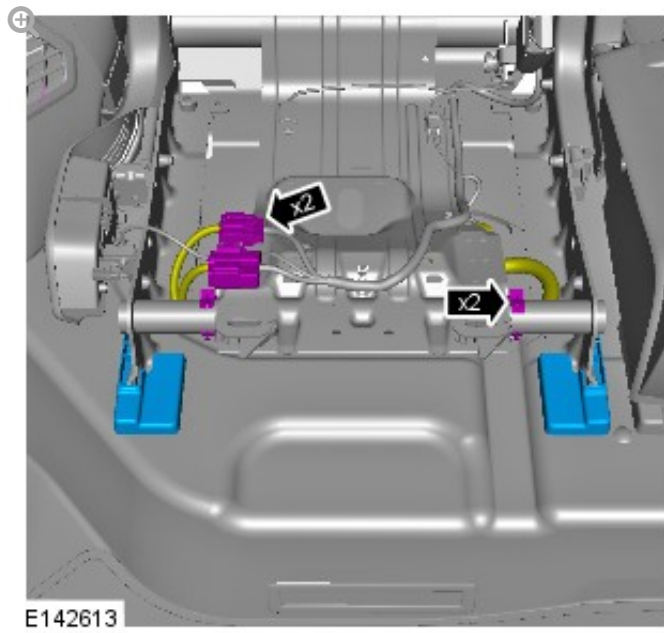

6.

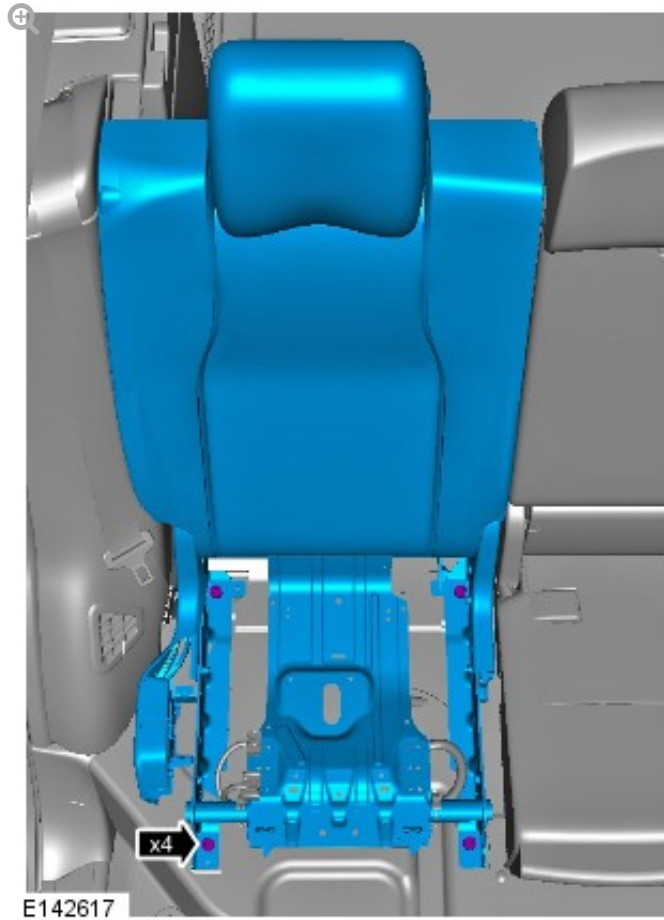


Torque: 50 Nm




Vehicles with business seats

7.

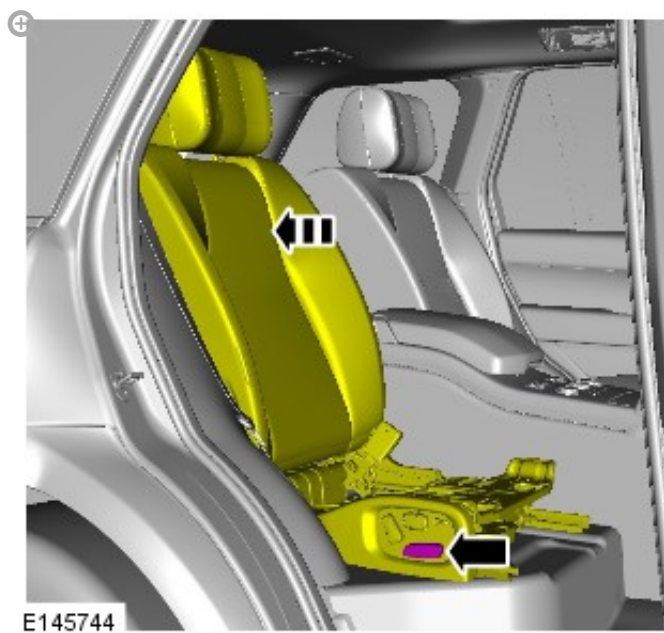


8.

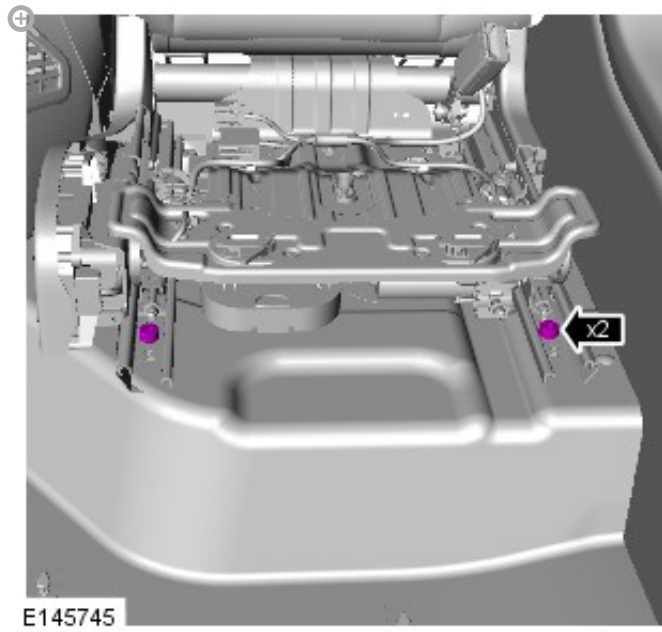

Torque: 50 Nm

9.

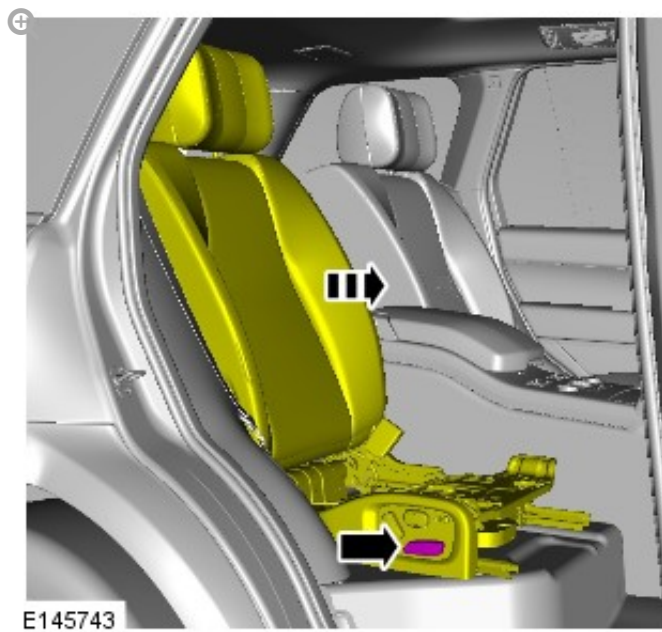


10.



E146116

Torque: 50 Nm

11.

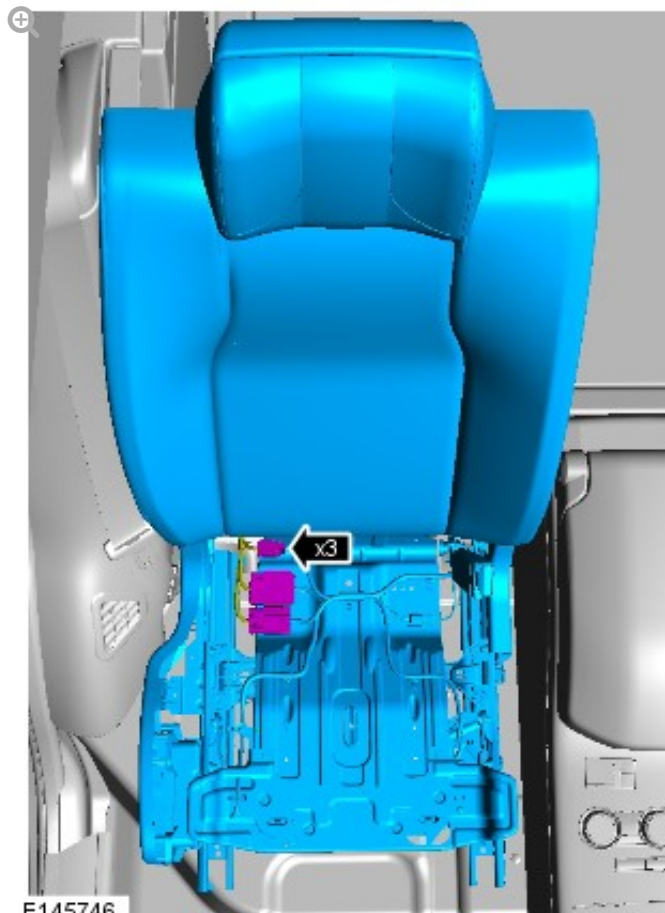


E145746




Vehicles with armour

12.

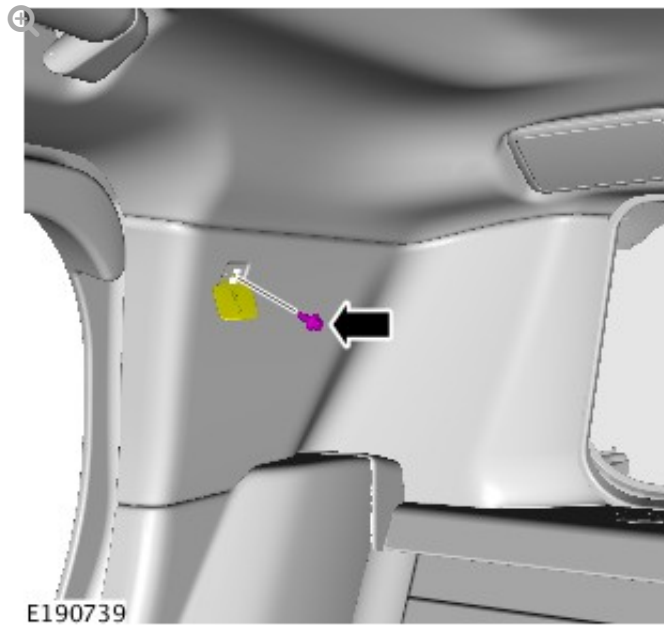


Torque: 8 Nm

13.


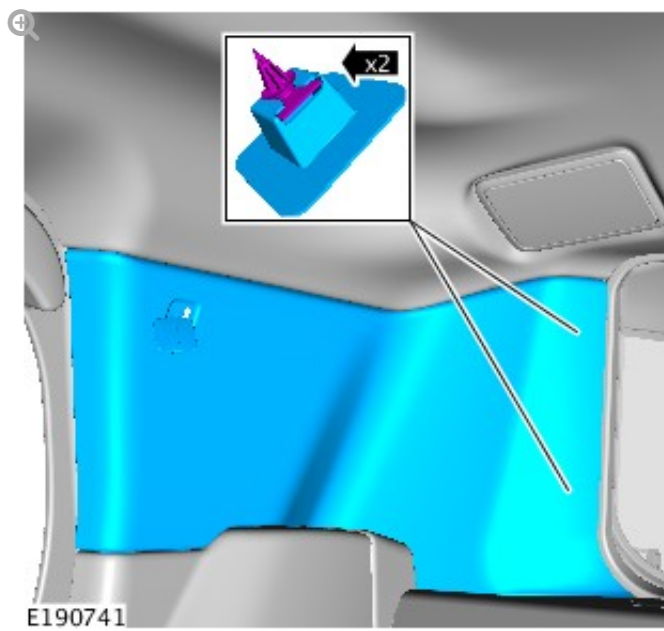


14.

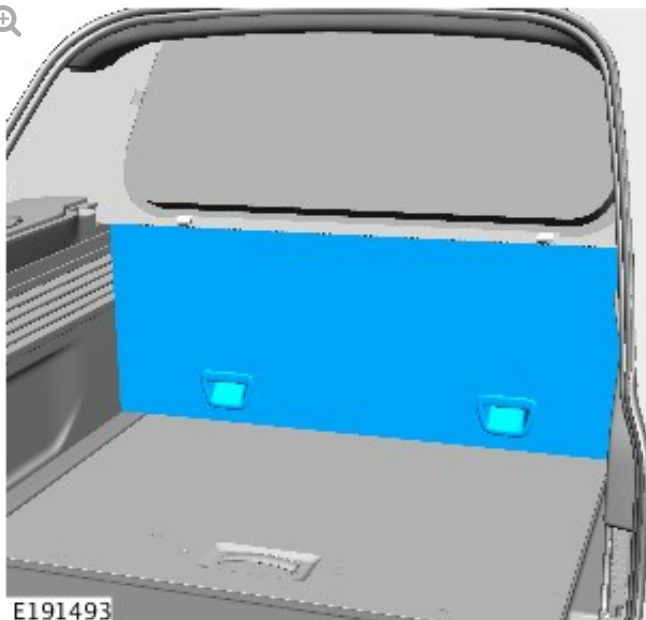

Vehicles without armour

15.

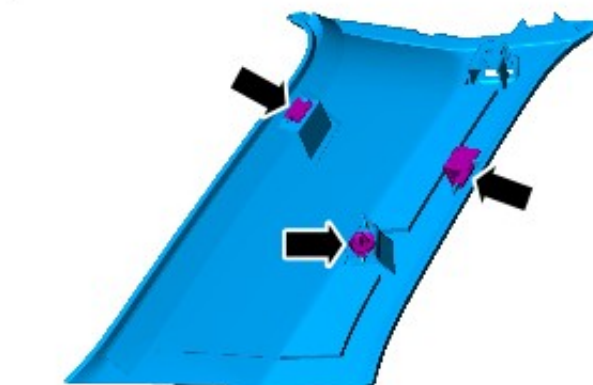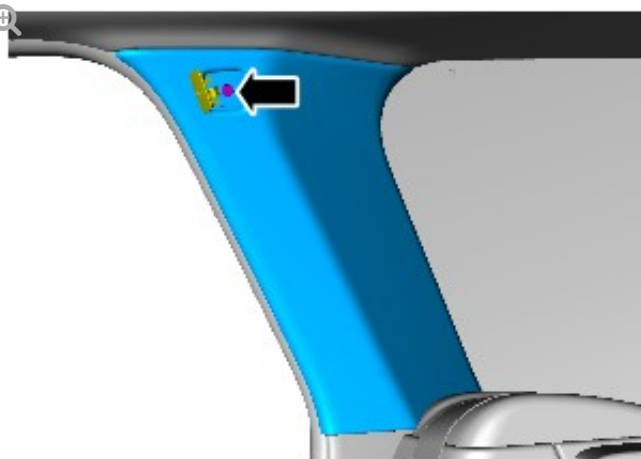


Torque: 8 Nm



All vehicles



16.

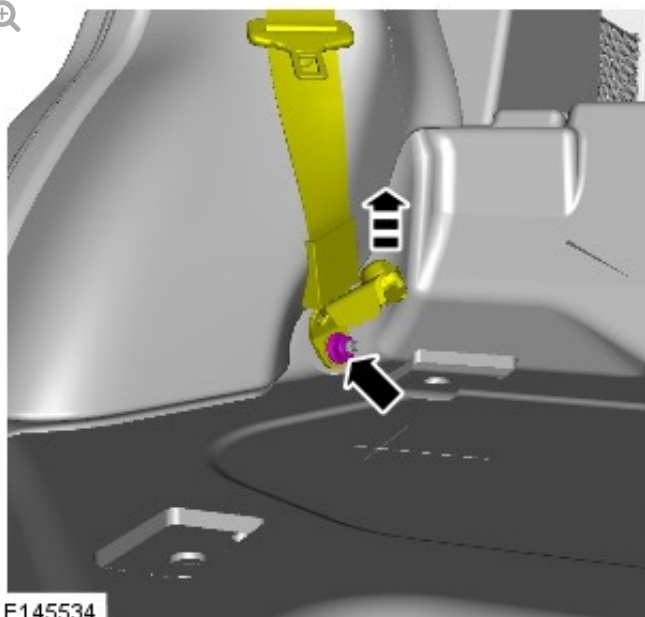

E145534



Torque: 45 Nm

17.

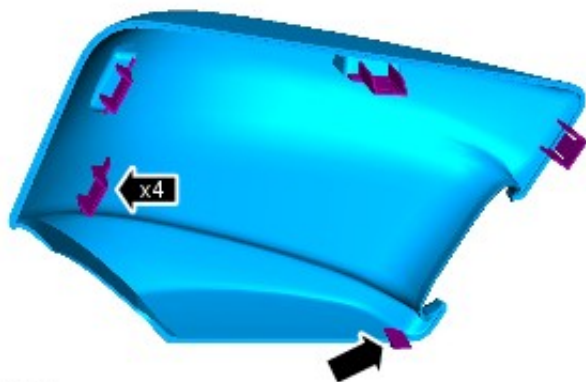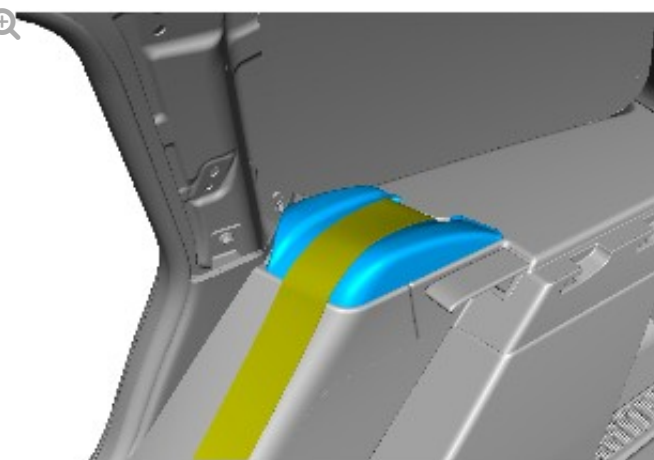

E145531



18.

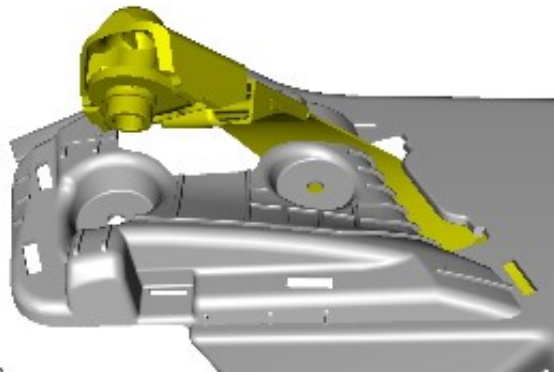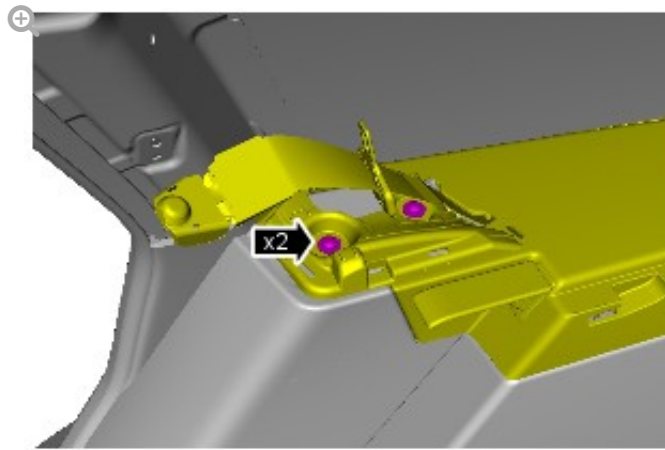

E145536

Torque: 8 Nm

19.

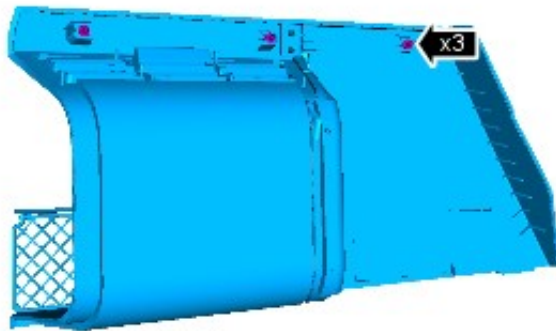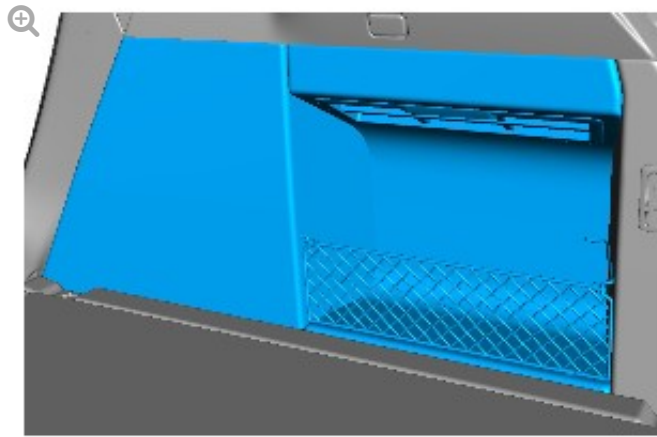


E145529

20.

NOTE:

LH shown.

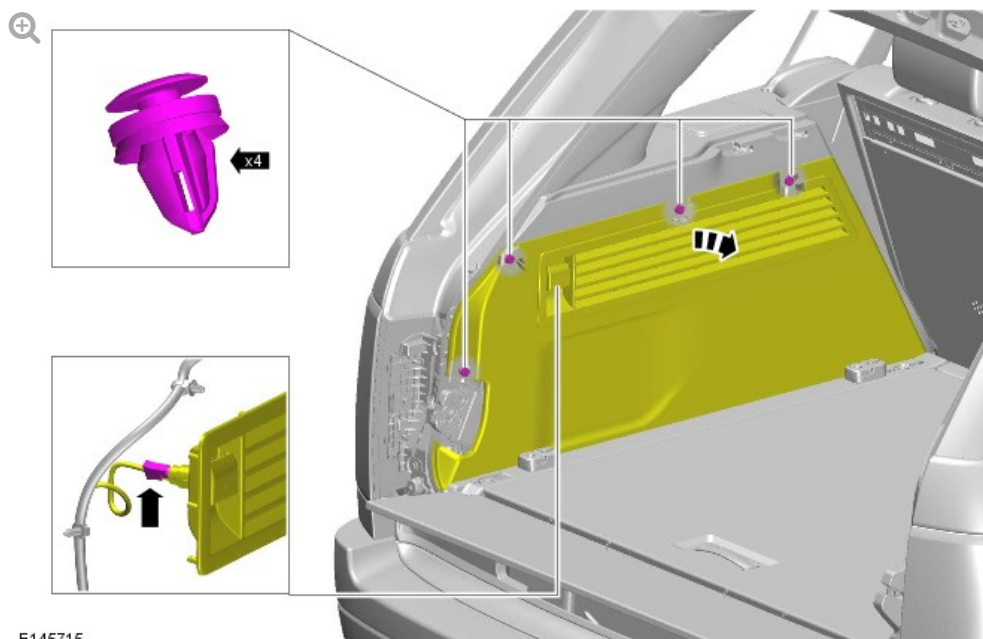


E145715

21.

NOTE:

LH shown.

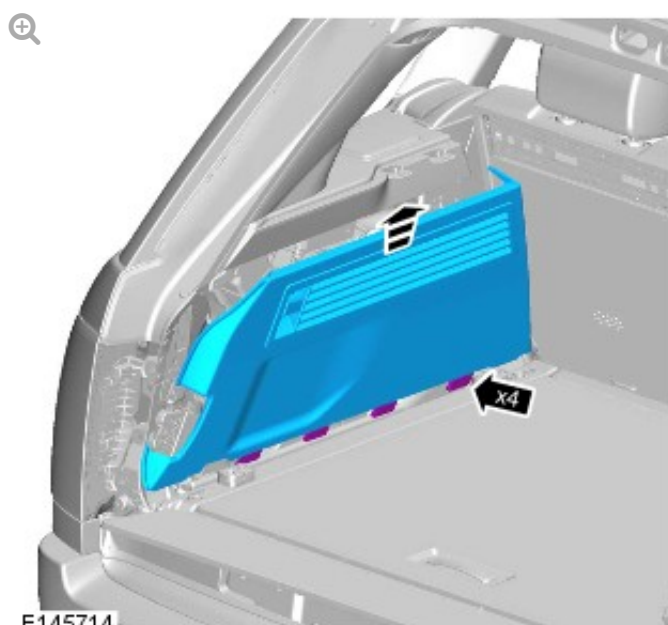


E145714


22.

NOTE:


LH shown.

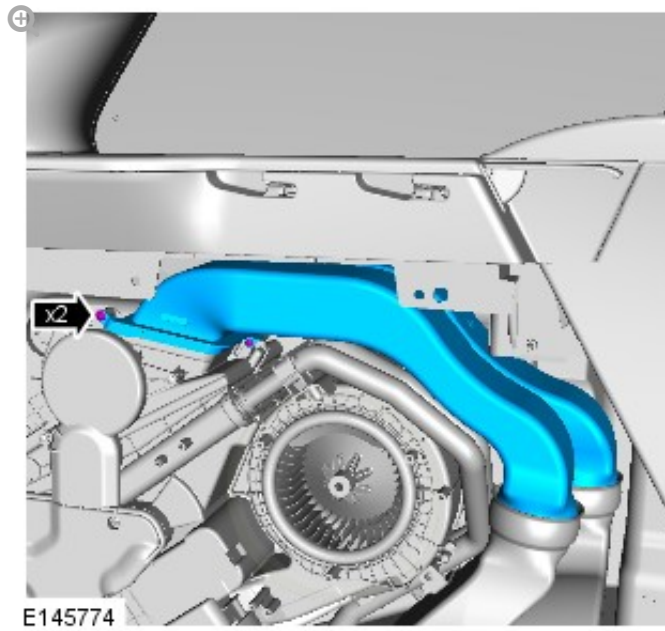

23.

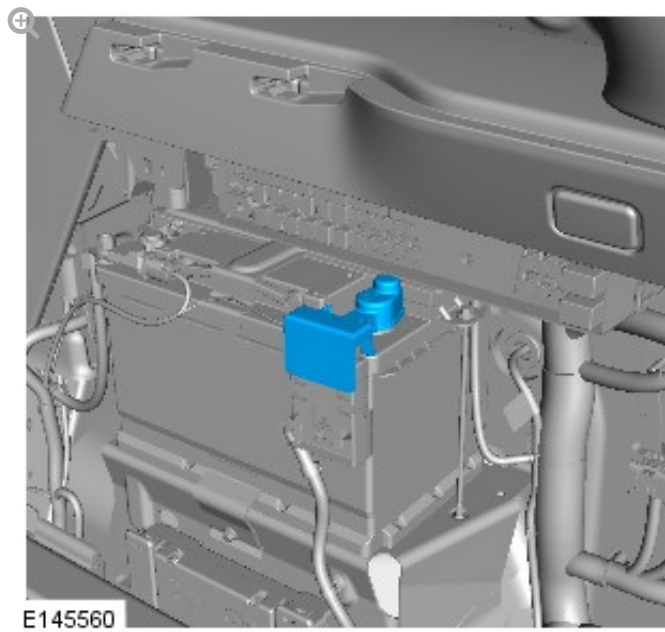


24.

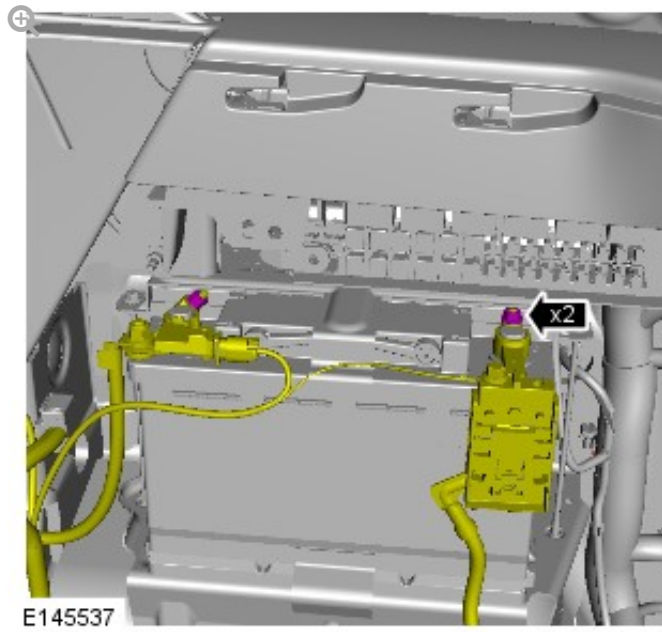



Torque: 6 Nm

25.

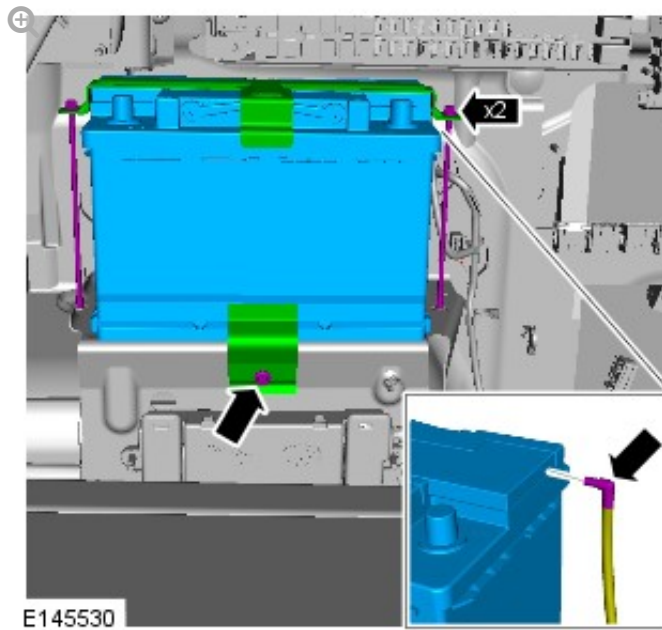

Torque: 9 Nm



26.

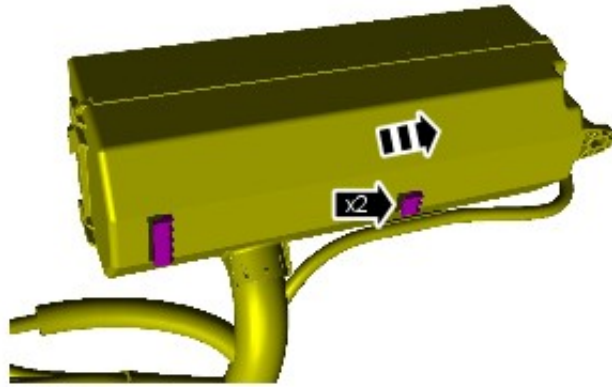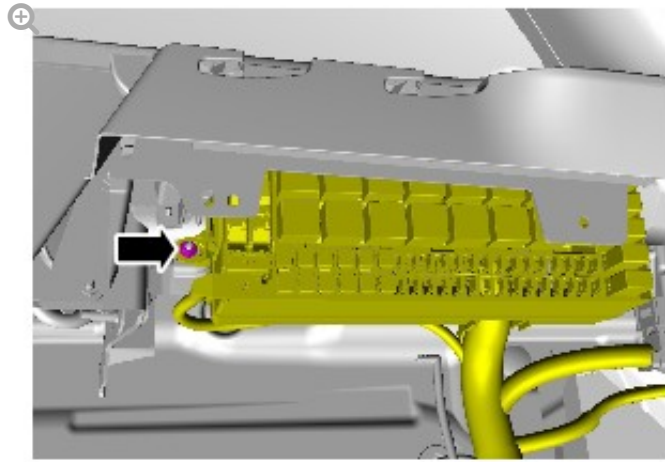

E145533

Torque: 8 Nm

27.

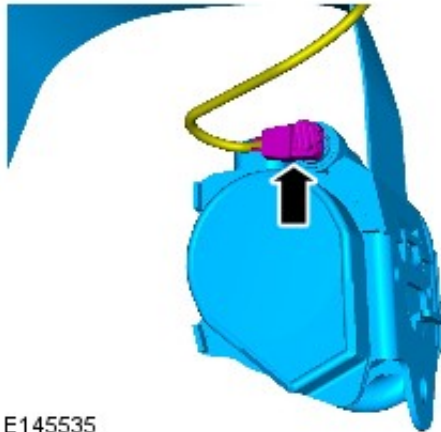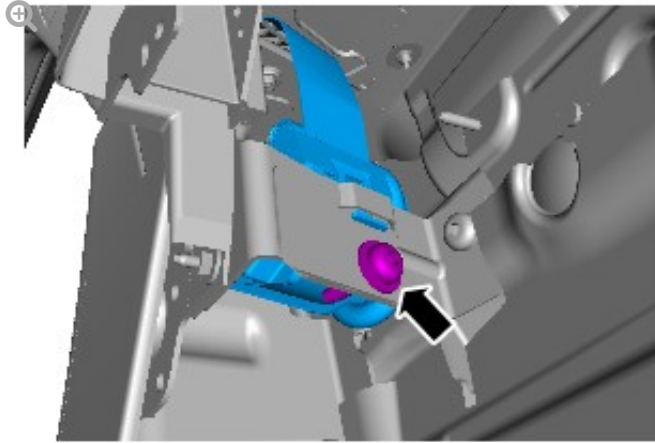

E145535

Torque: 45 Nm

INSTALLATION

1. To install, reverse the removal procedure.