

2016.0 RANGE ROVER (LG), 501-10

SEATING - LONG WHEEL BASE

FRONT SEAT HEIGHT ADJUSTMENT MOTOR (G1702558)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and

trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.


- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: Standard Workshop Practices (100-00, Description and Operation).
2. Refer to: Front Seat (501-10, Removal and Installation).

3.

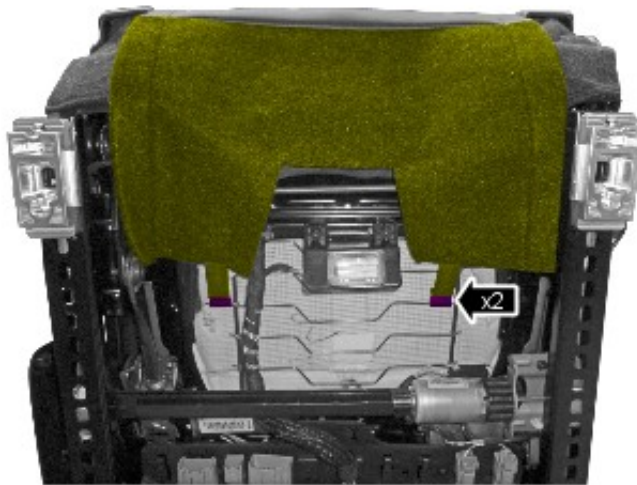


E143833

4.


NOTE:

Make sure that the clips are installed in the correct orientation.

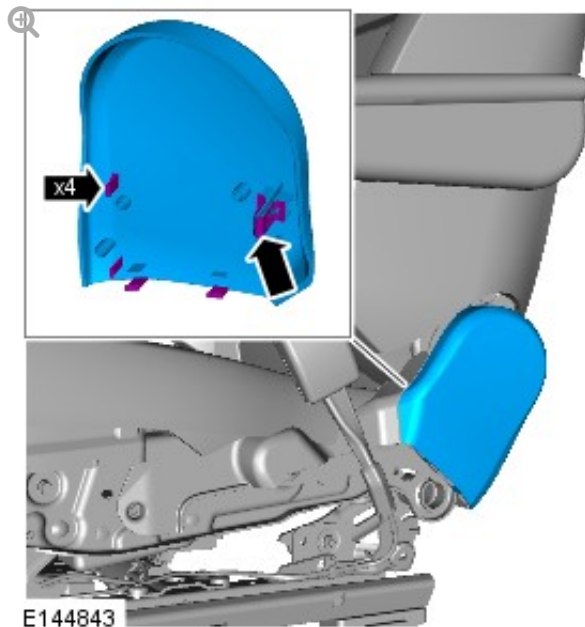


E144843

5.

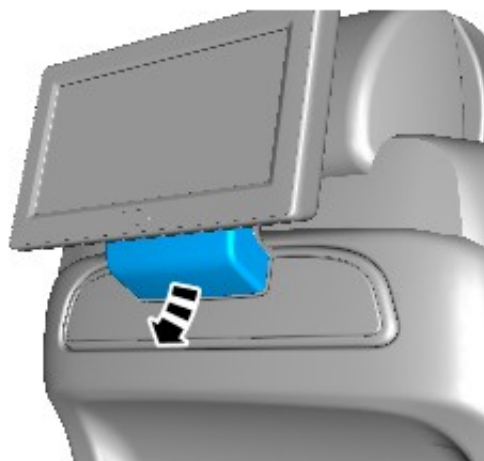



E161743

6.

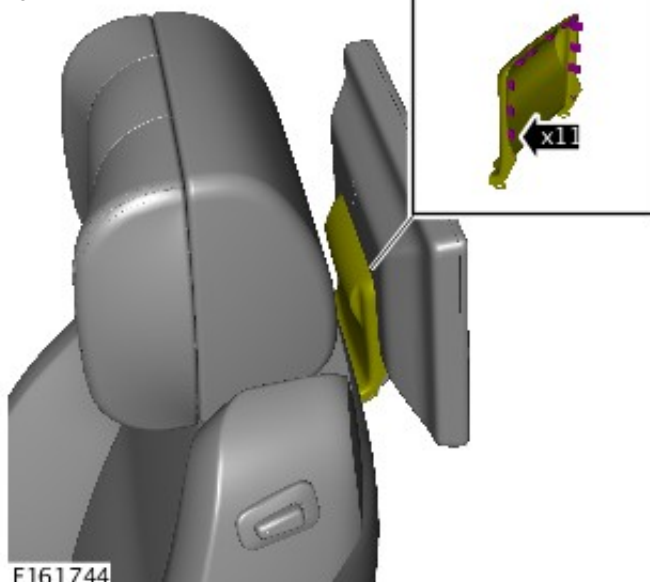


E161744

7.

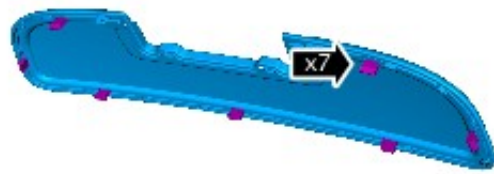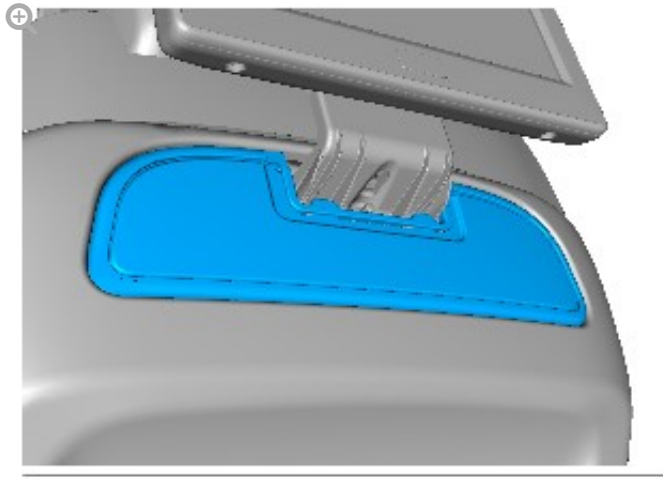

E161745


8.

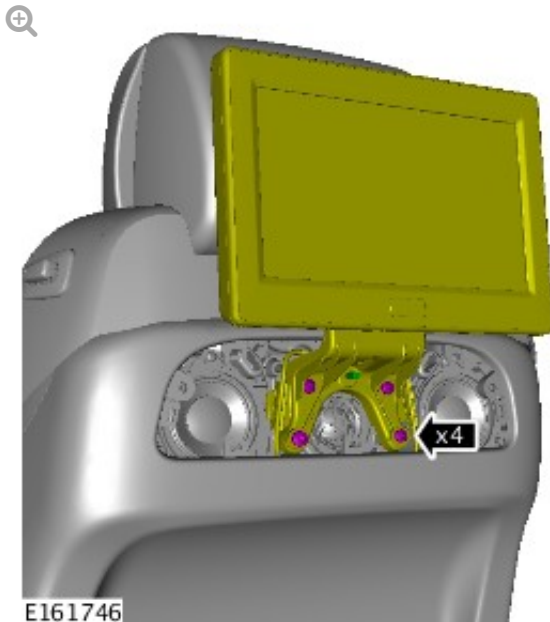

E161746

Torque: 6 Nm

9.

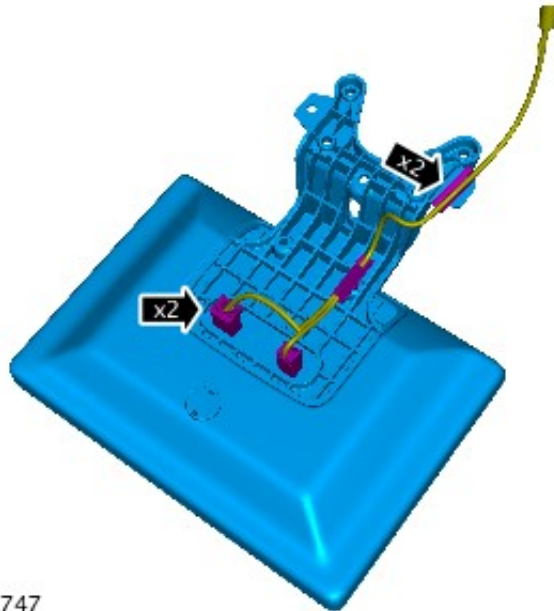


E161747

10.


NOTE:

Repeat the step for the other side.

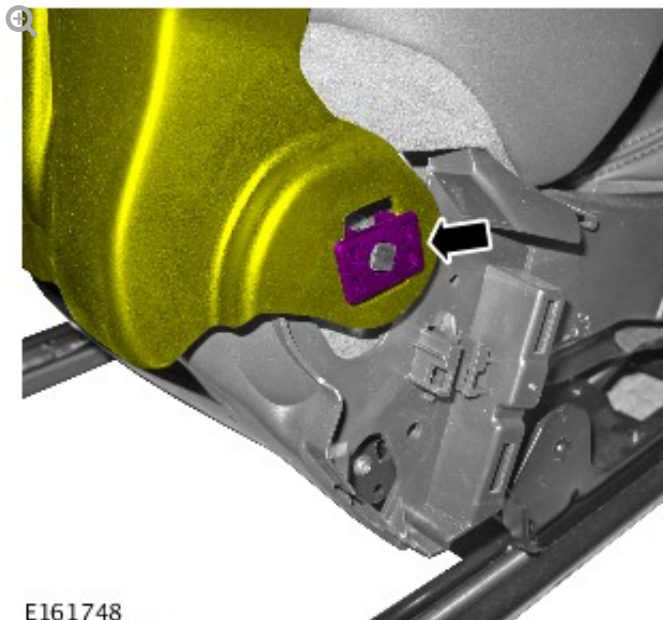



E161748

11.

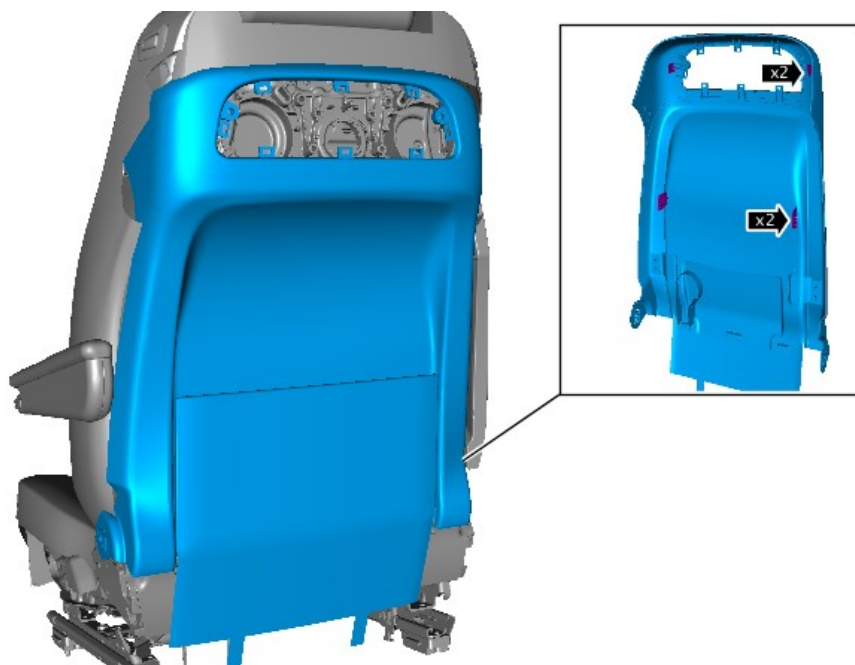


E161749

12.

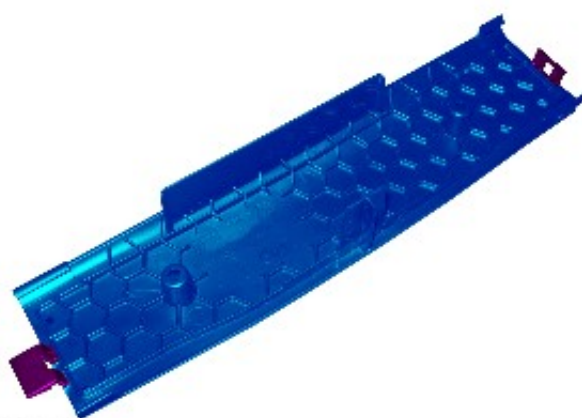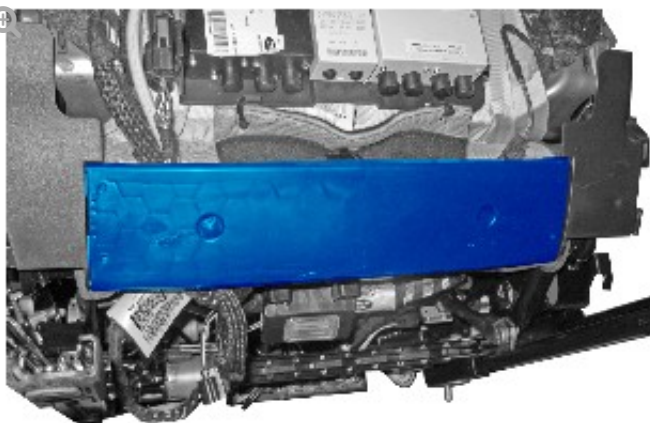


E161788


13.

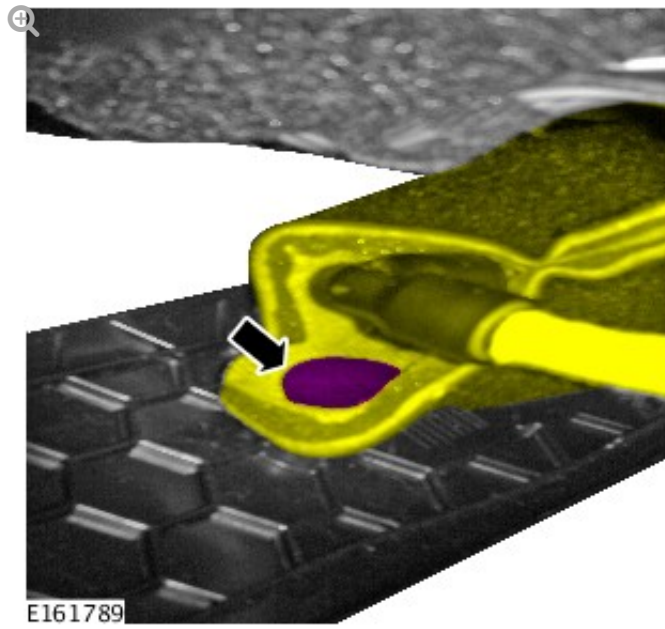

14.

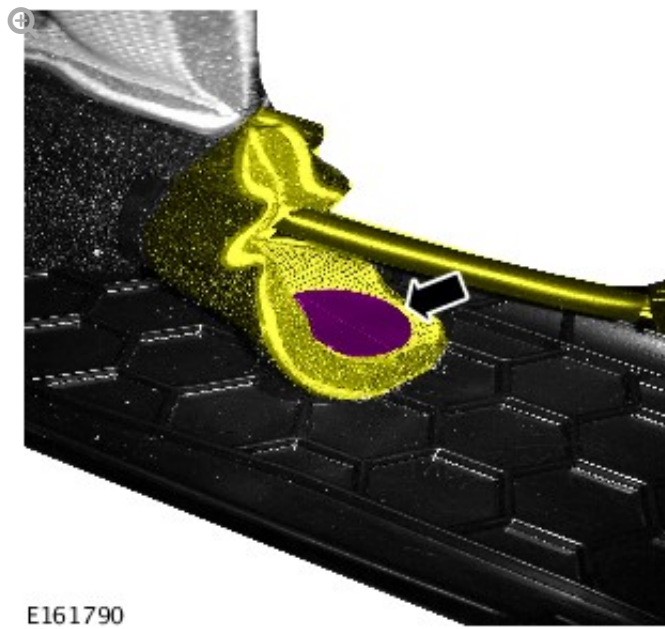


15.

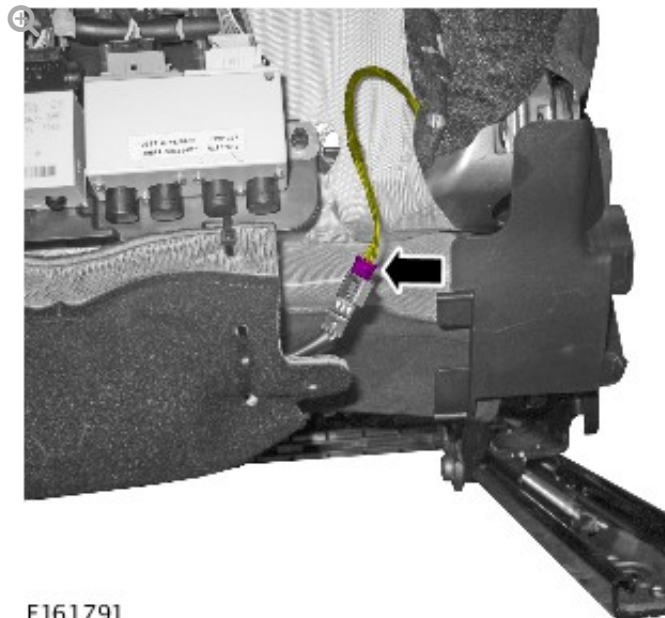



E161791

16.

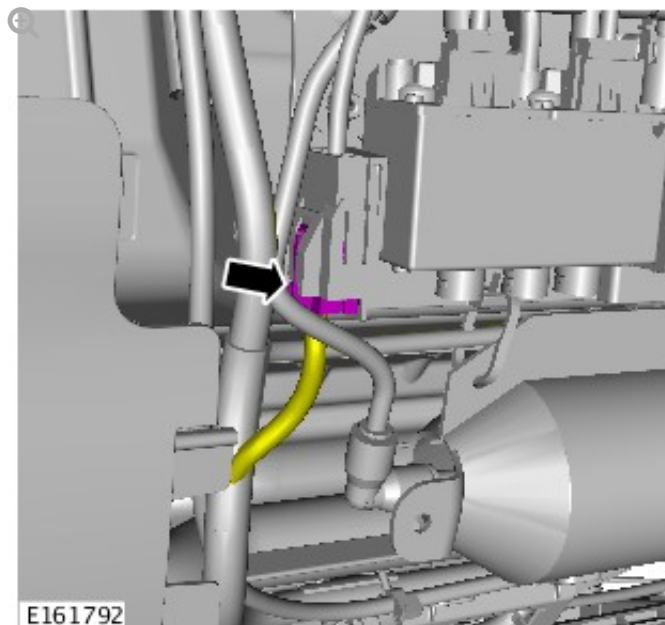


E161792


17.

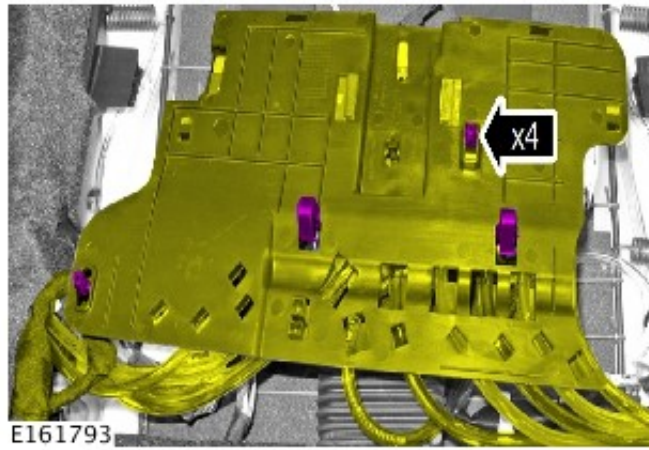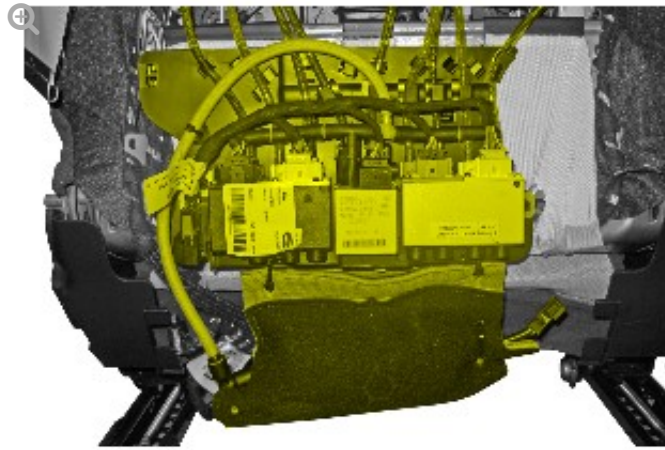


18.

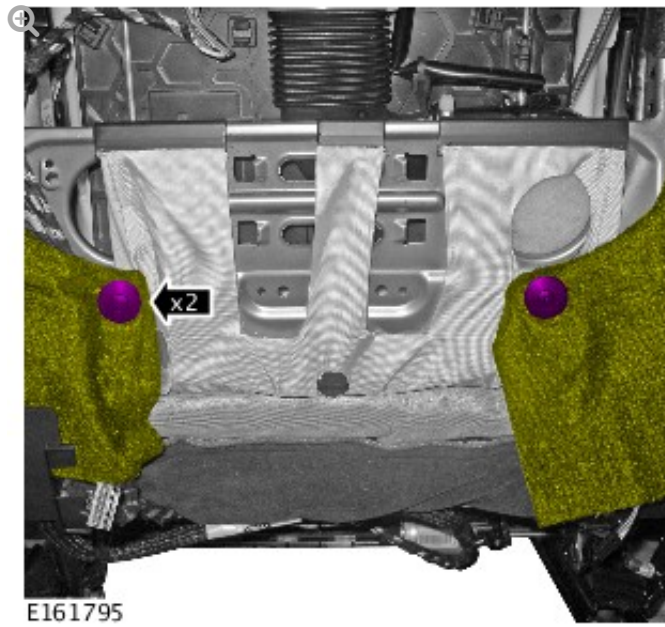


19.

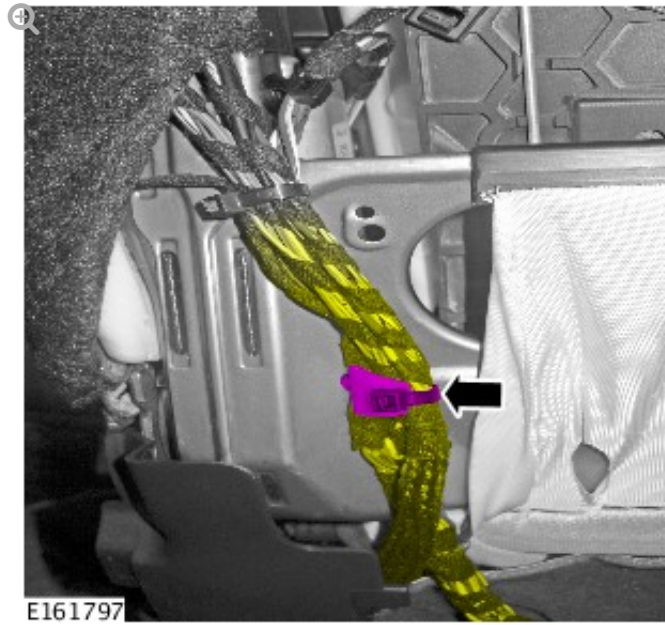

20.

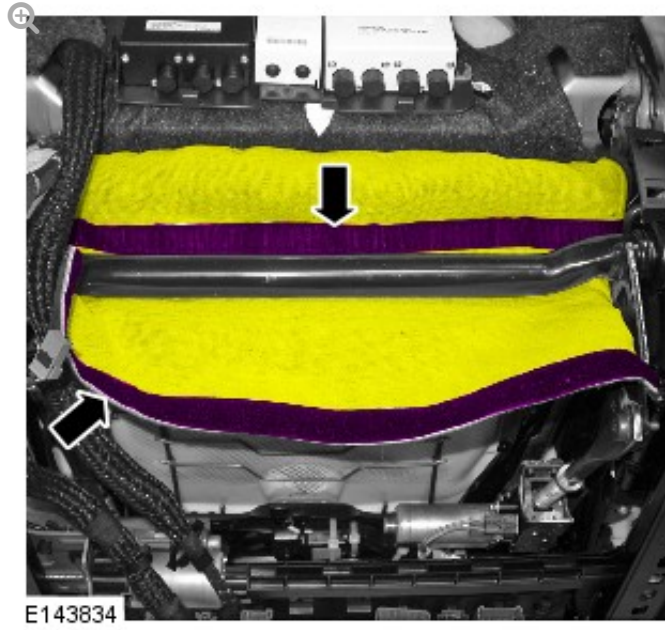


21.

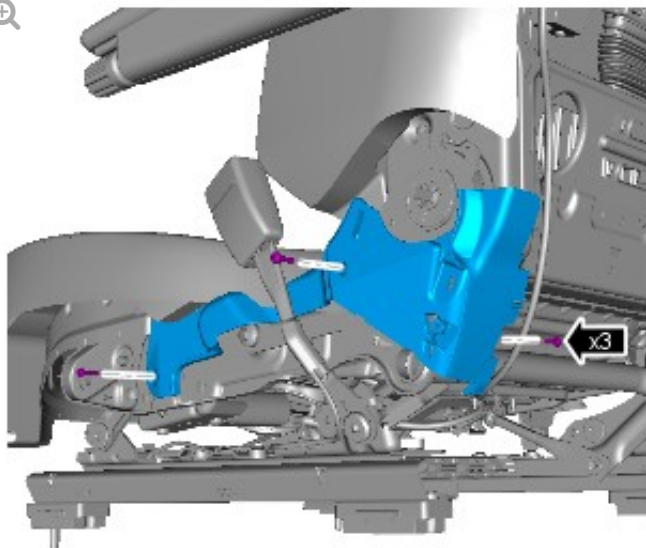


E144841

22.

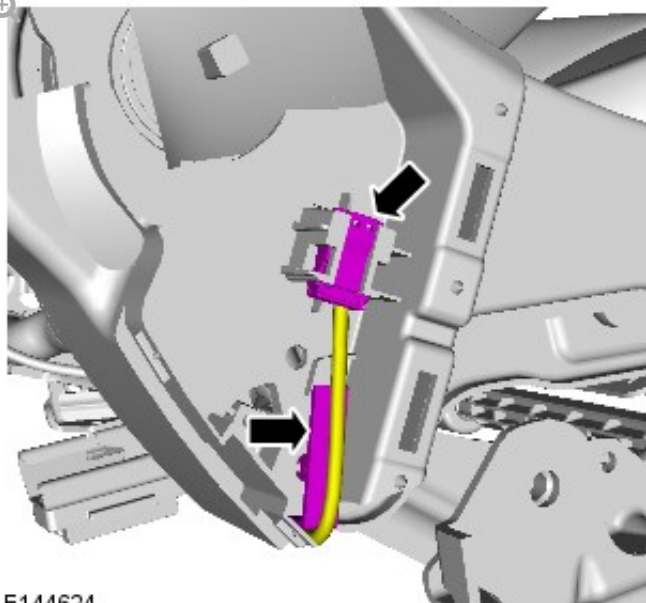


E144624

23.

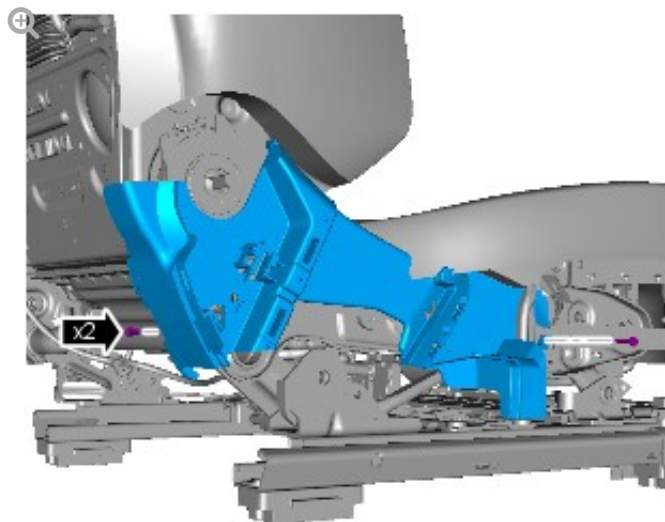


E144842

24.

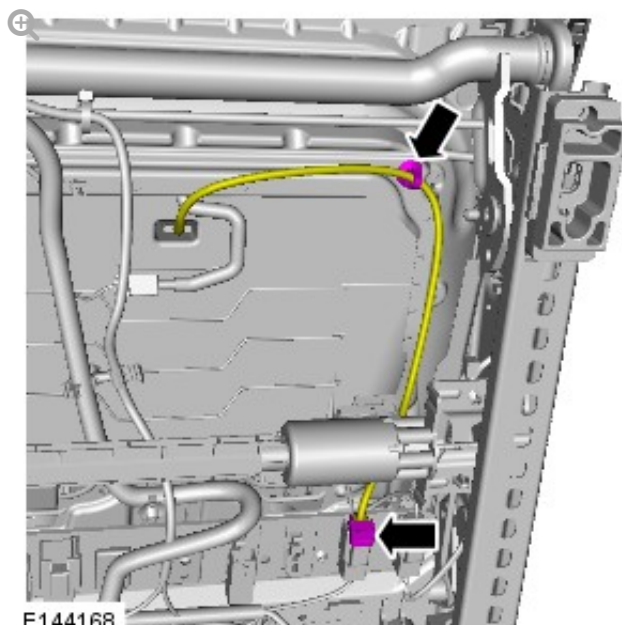


E144168

25.

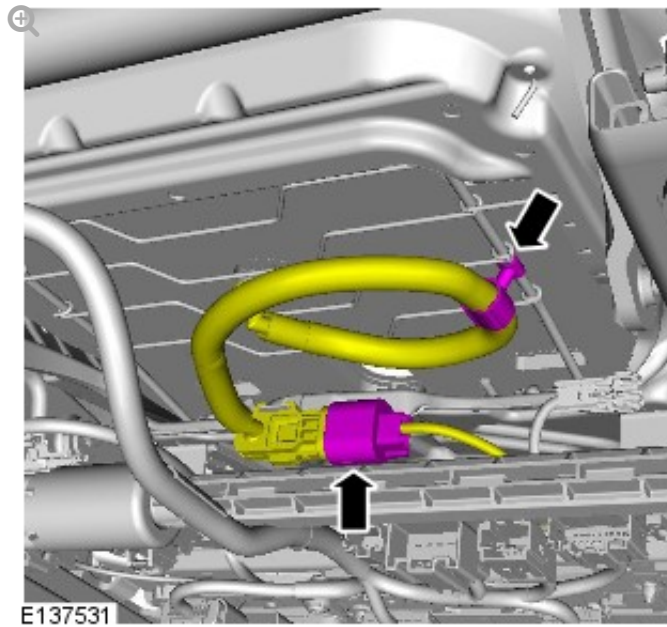



26.

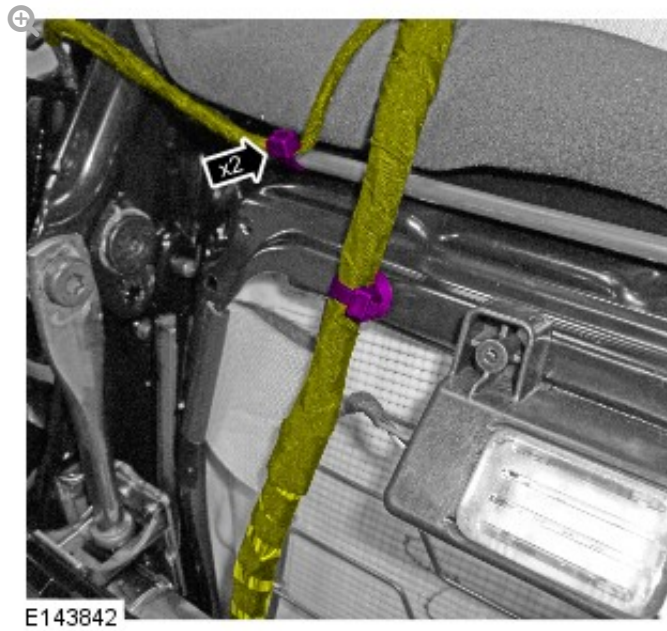

27.

CAUTION:

Take extra care not to damage the component.

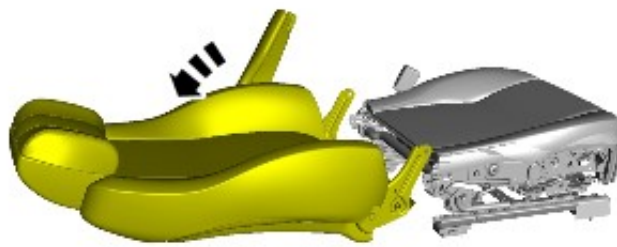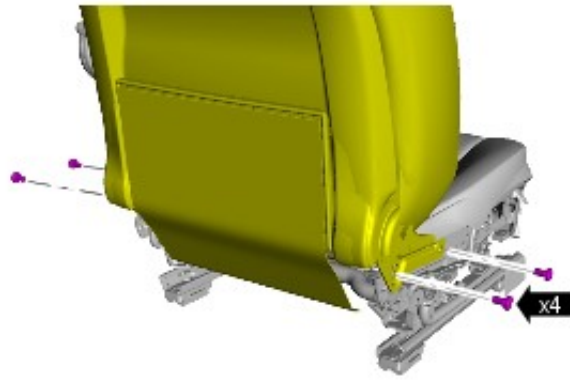


E144592

Torque: 50 Nm

28.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

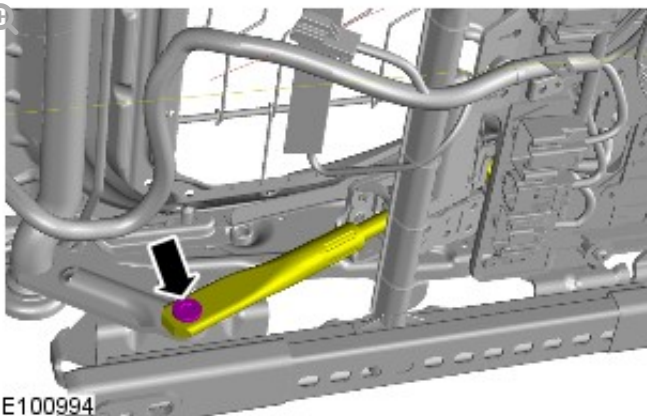


E100994

Torque: 28 Nm

29.

NOTES:


- Use a suitable tool to remove the circlips from the seat cushion frame bolts.
- Note the orientation of the components.
- Right-hand shown, left-hand similar.
- Repeat the procedure for the other side.

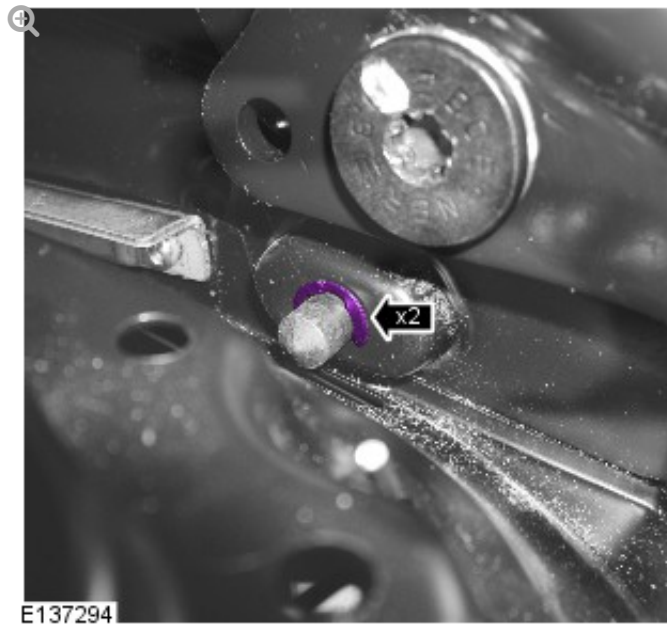

30.

NOTES:


- Right-hand shown, left-hand similar.
- Repeat the procedure for the other side.

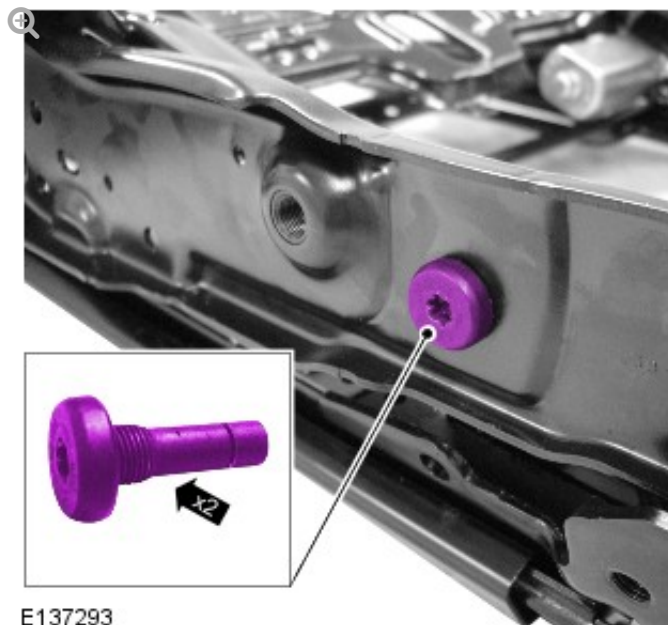

E137293

Torque: 20 Nm

31.

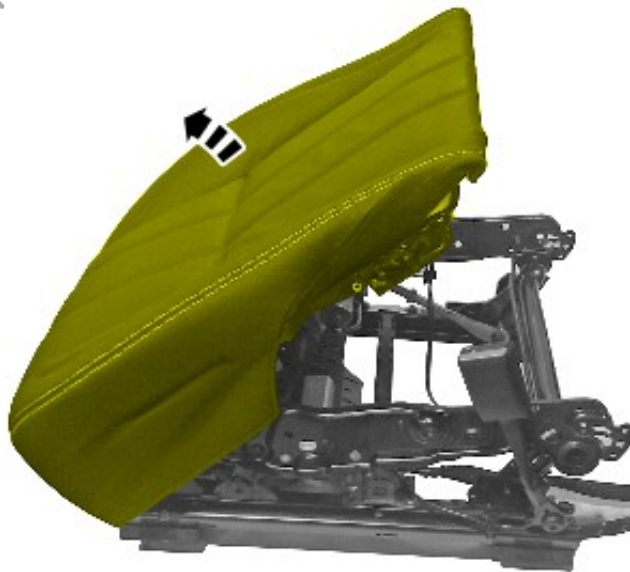


E144594

32.


NOTES:

- Note the orientation of the components.
- Right-hand shown, left-hand similar.

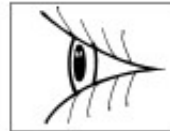

E137317

33.

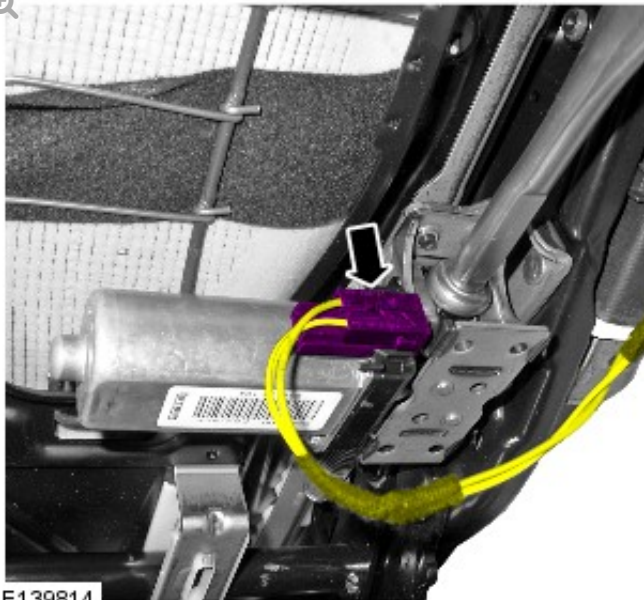


E139814

34.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

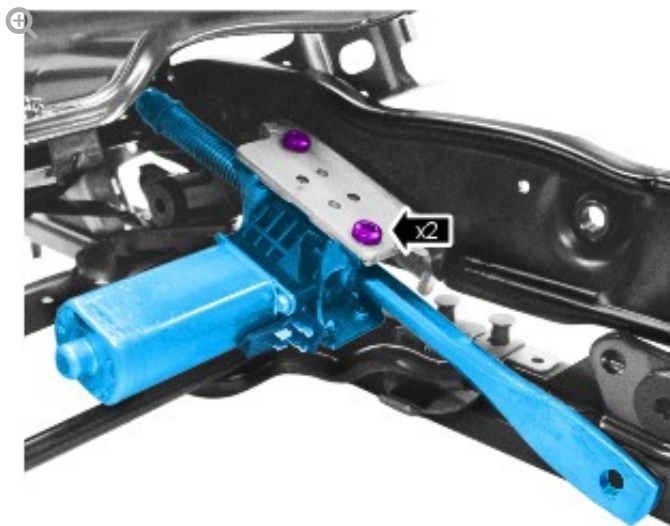

E139869

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.