

2016.0 RANGE ROVER (LG), 501-10

SEATING - LONG WHEEL BASE

FRONT SEAT TRACK MOTOR

[G1702561]

REMOVAL AND INSTALLATION


REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.


1. Refer to: Standard Workshop Practices (100-00, Description and Operation).
2. Refer to: Front Seat (501-10, Removal and Installation).

3.

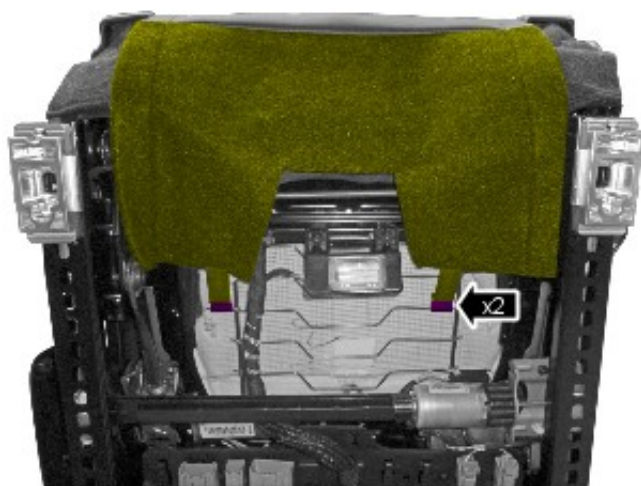


E143833

4.

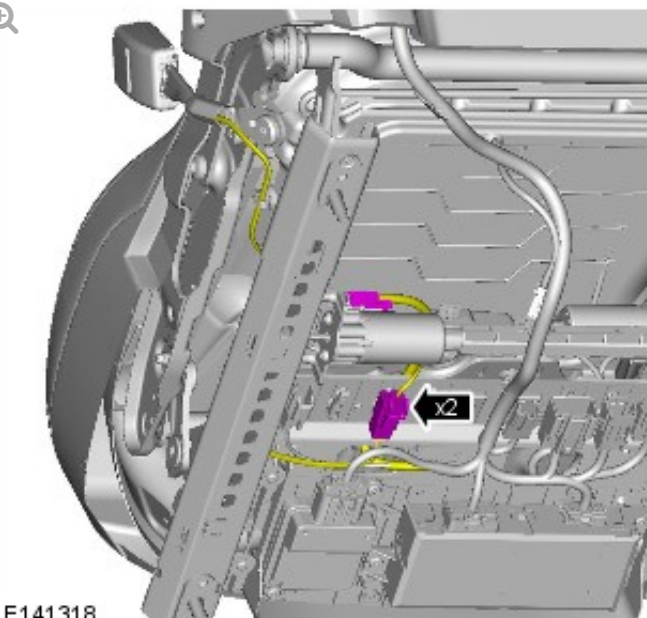


E141318

5.

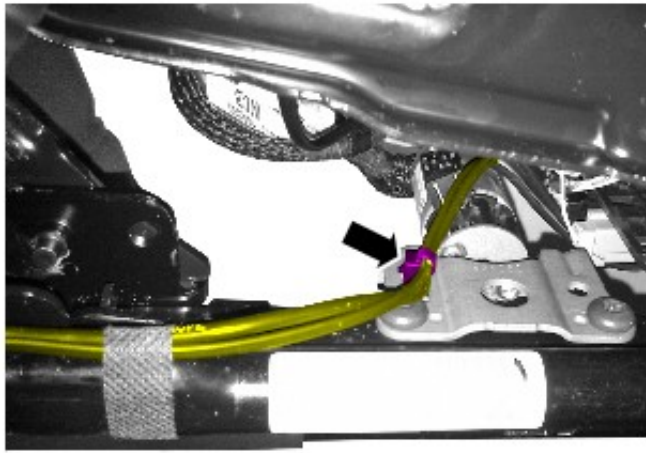

E141317

6.

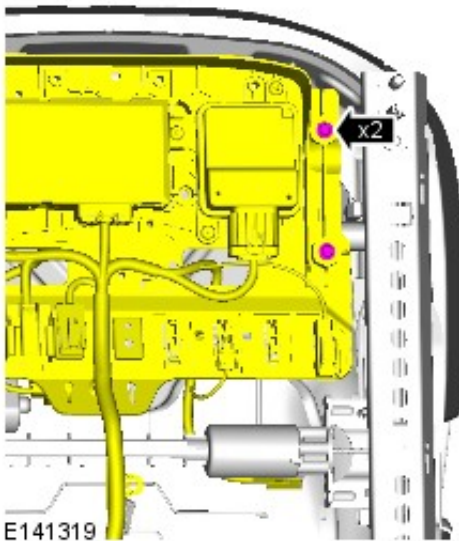


E141319

Torque: 10 Nm

7.

NOTE:

Install the rear reatining bolt first.

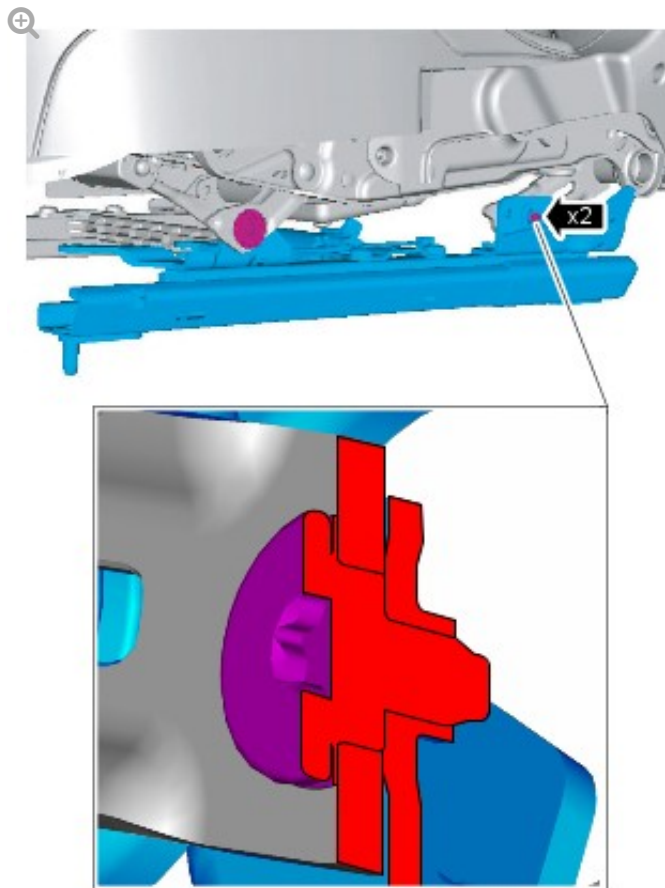


E137363

Torque: 28 Nm

8.

NOTE:

Note the orientation of the electrical connector and wiring harness.

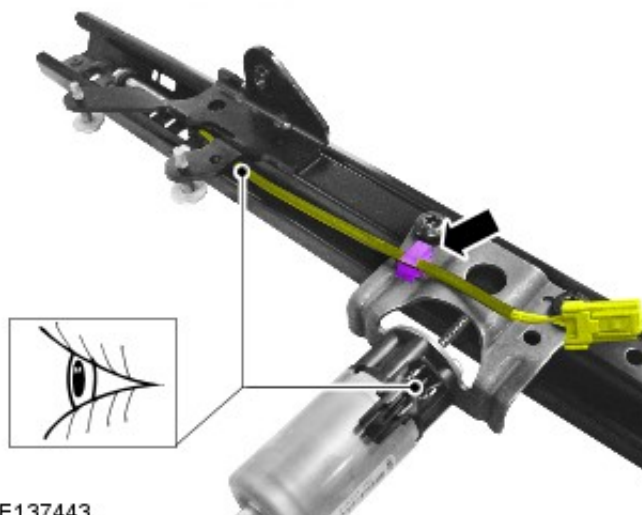


E137443

9.

NOTE:

Make a note of the orientation of the front seat track motor drive pin bar.

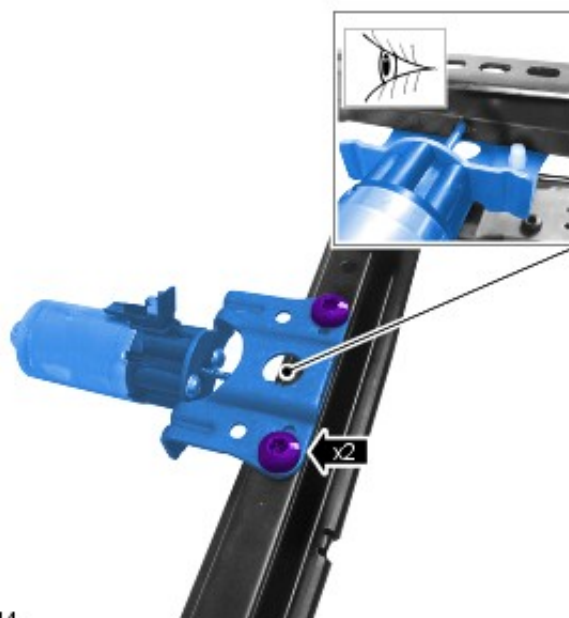


E137444

Torque: 10 Nm

10.

NOTE:

Make a note of the orientation of the electrical connector.

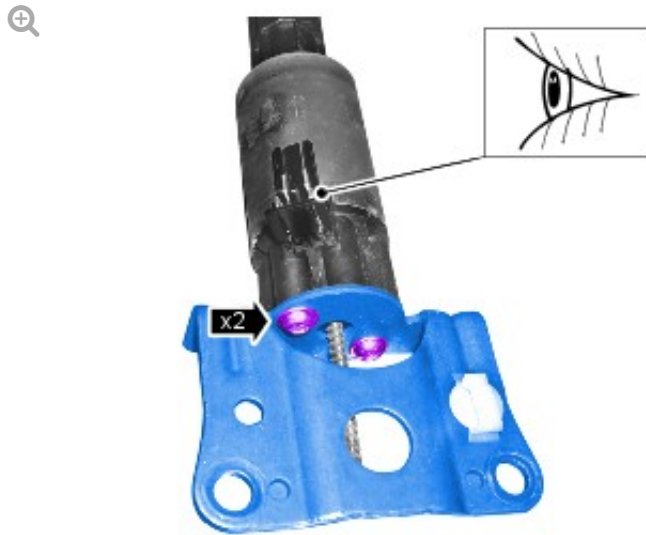

E137445



Torque: 1.7 Nm

INSTALLATION

1.

CAUTIONS:

- Make sure that the front seat track motor is correctly installed to the front seat track.
- Make sure that these components are installed to the noted removal position.

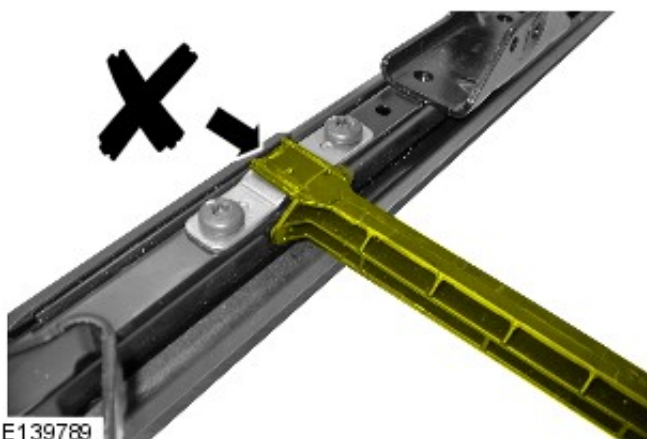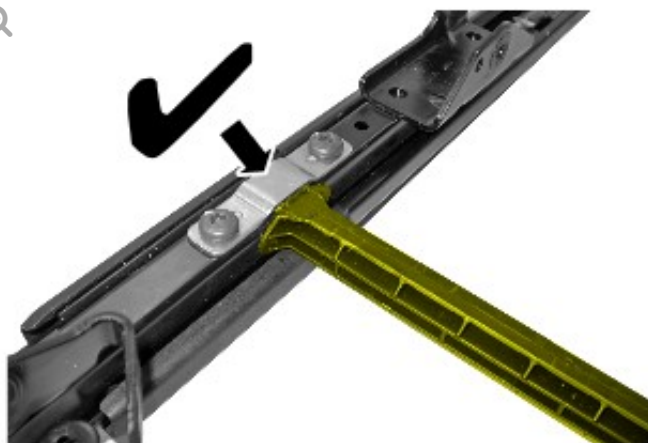

E139789

2. To install, reverse the removal procedure.