

2016.0 RANGE ROVER (LG), 501-10

SEATING - LONG WHEEL BASE

MASSAGING LUMBAR ASSEMBLY (G1702563)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplementary restraints system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait for one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and

trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.


- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.


1. Refer to: Front Seat (501-10, Removal and Installation).

2.

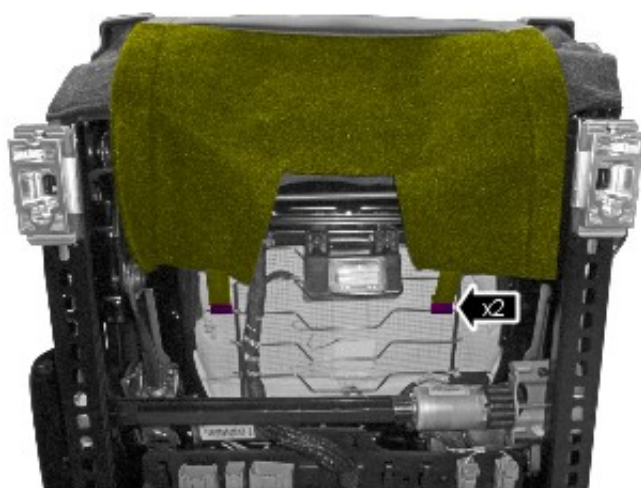


E143833

3.

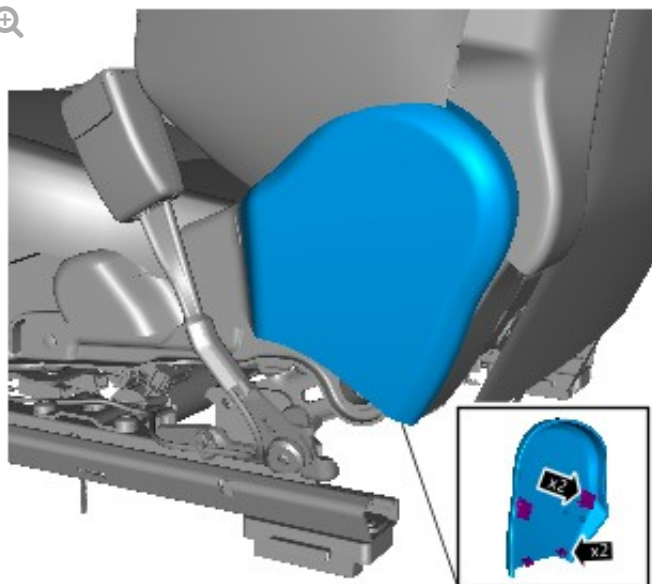


E161742

4.

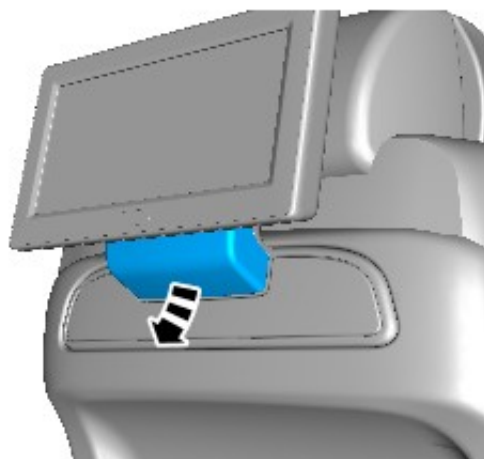



E161743

5.

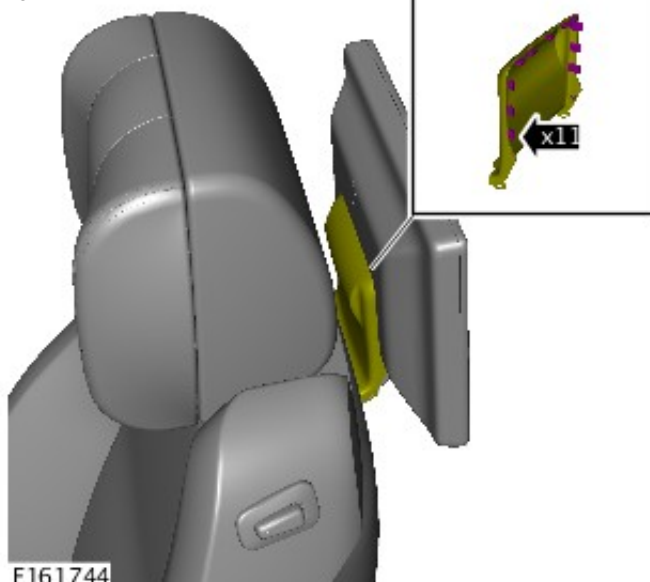


E161744

6.

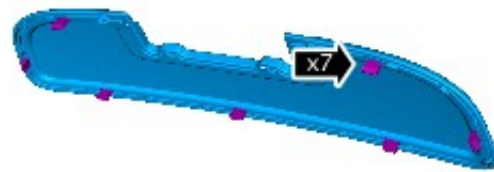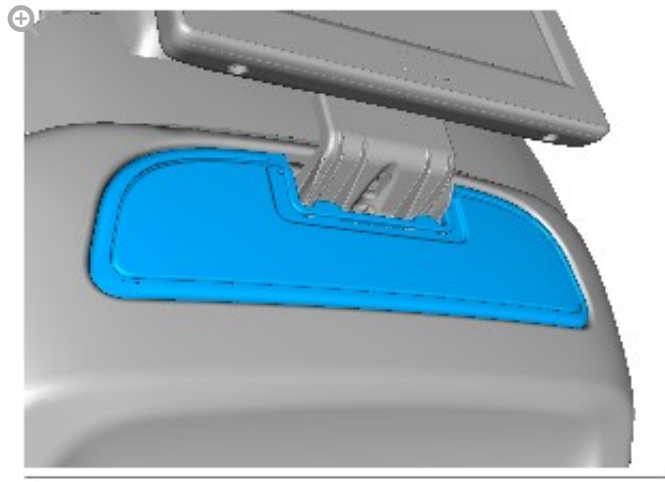

E161745


7.

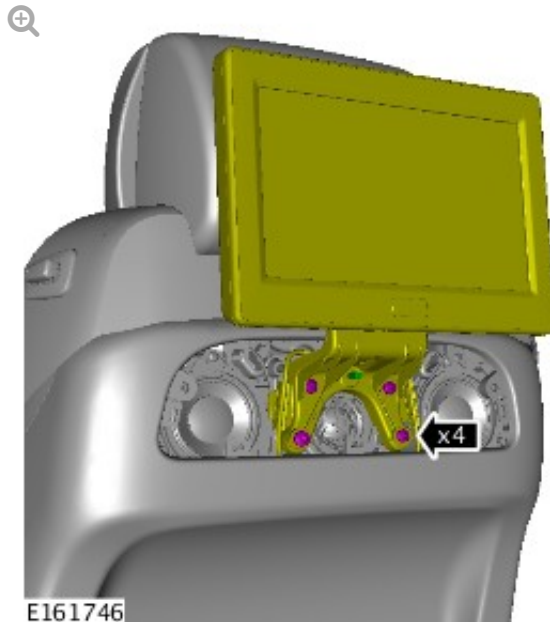

E161746

Torque: 6.5 Nm

8.

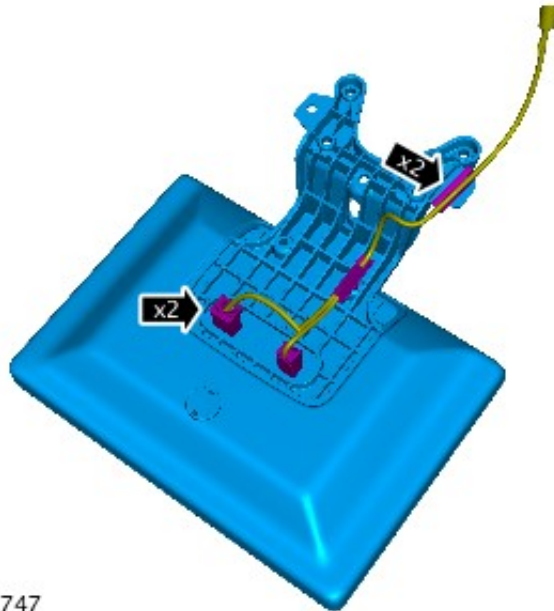


E161747

9.


NOTE:

Repeat the step for the other side.

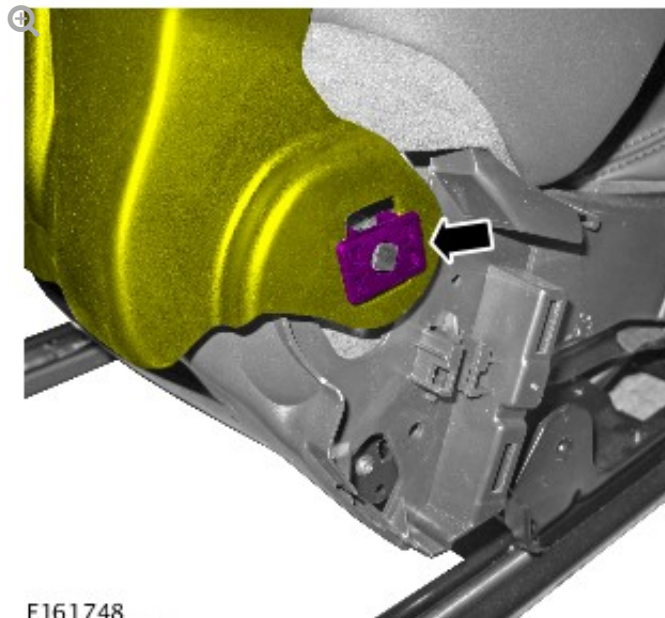


E161748

10.

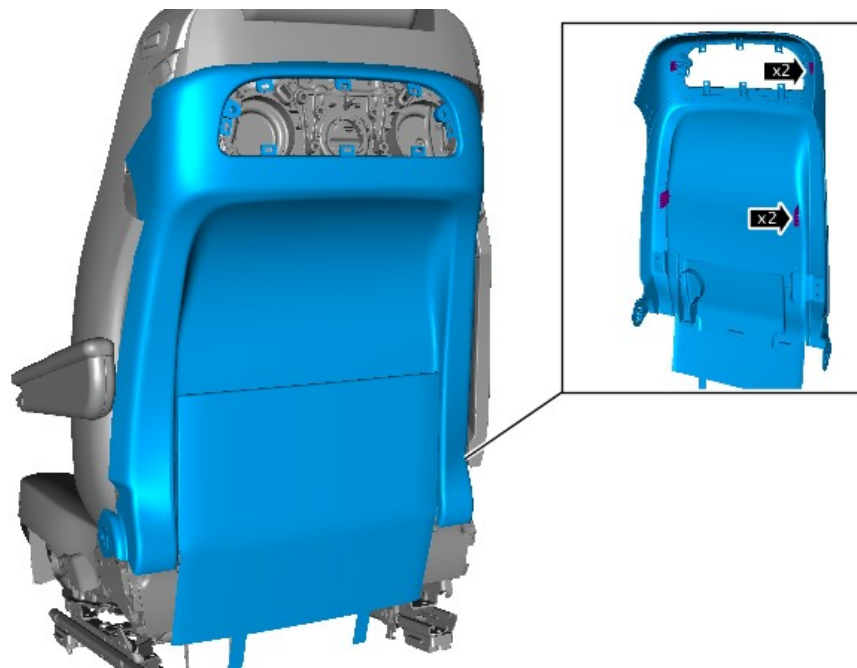

E161749


11.

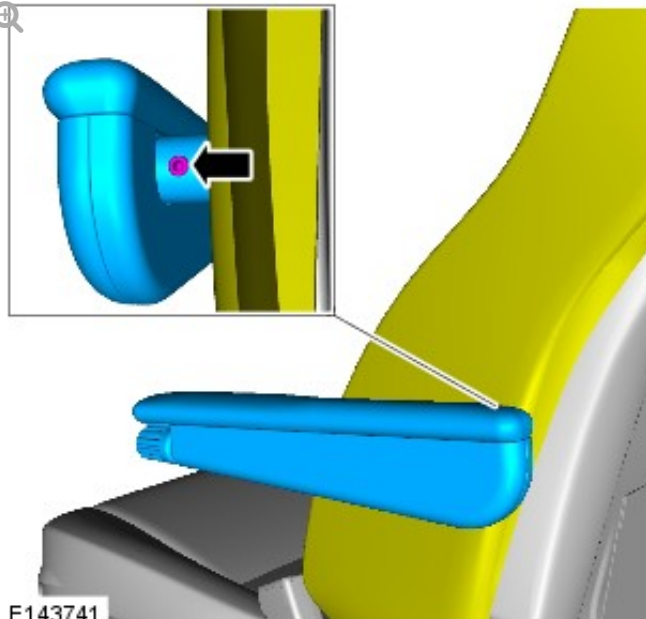

E143741


Torque: 25 Nm

12.

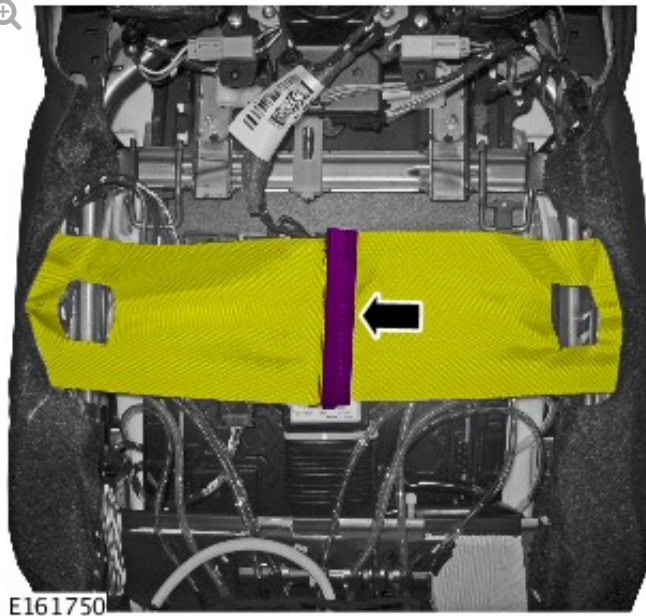



E161750

13.

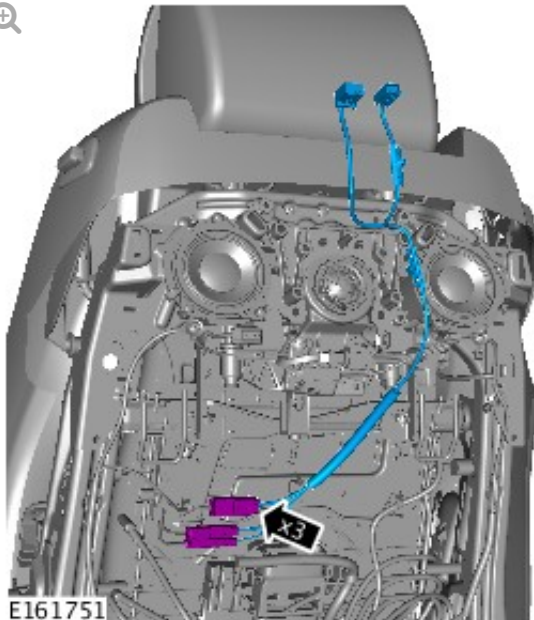


E161751


14.

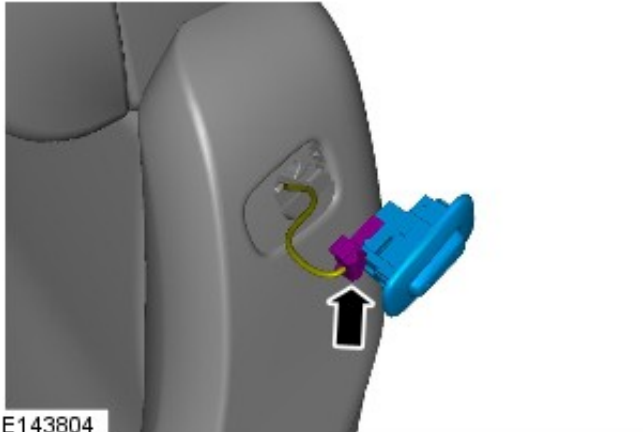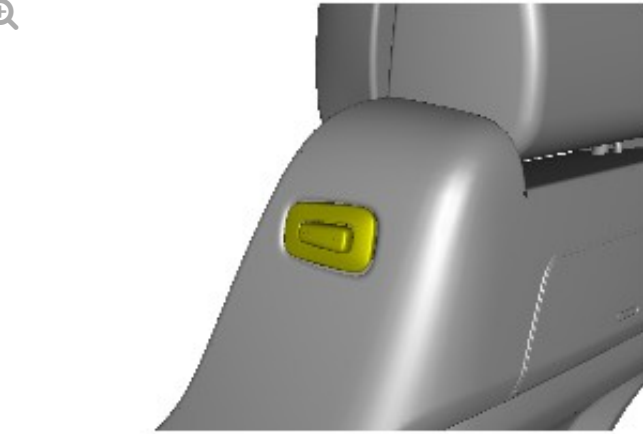

15.

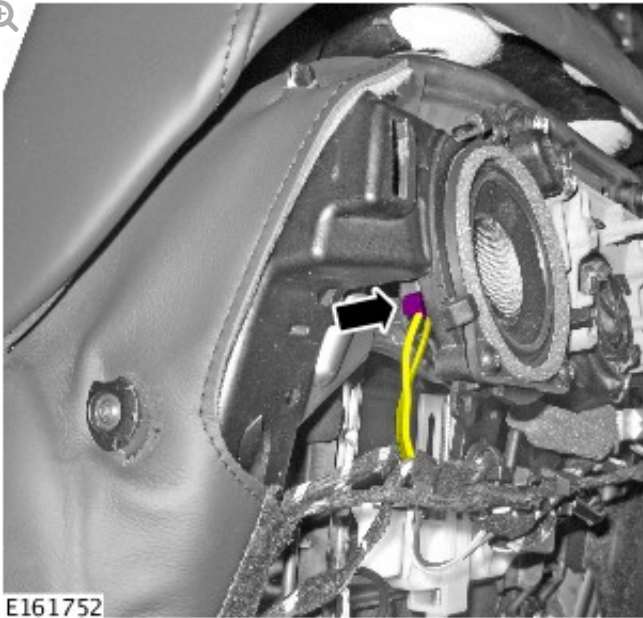


16.

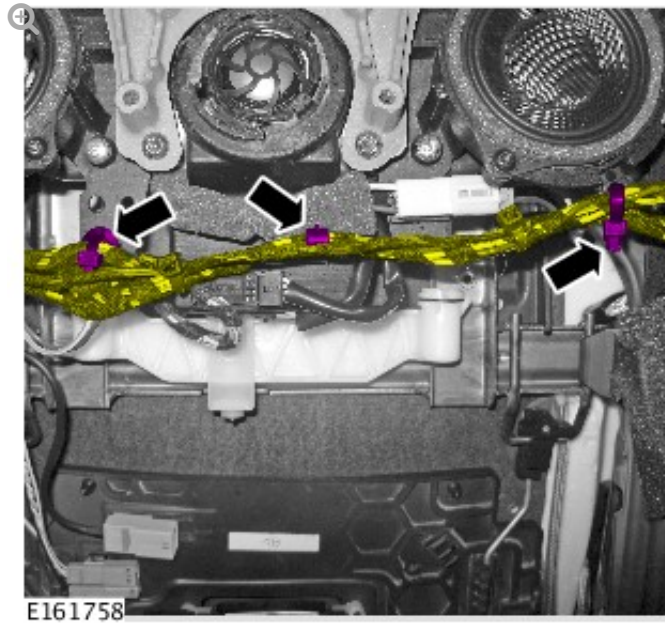


17.



18.

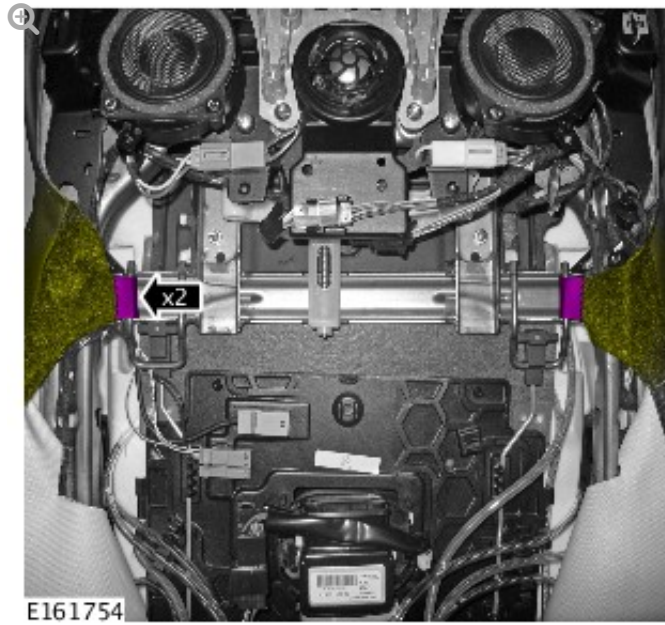


19.

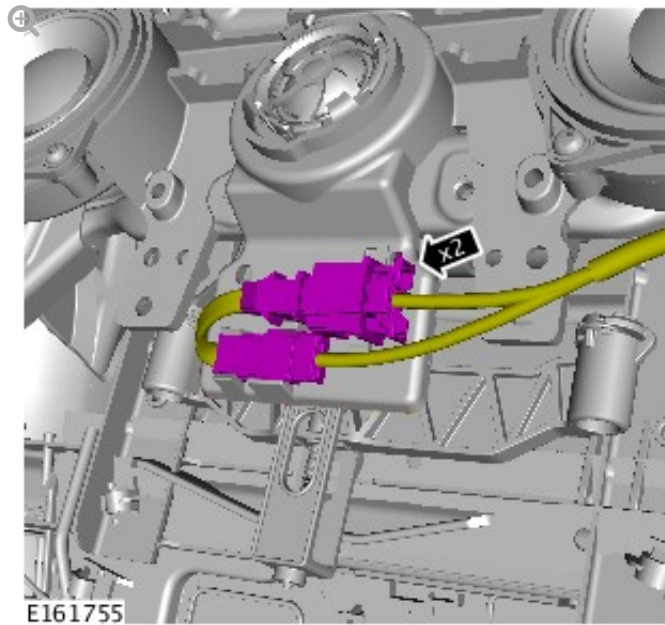

20.

NOTE:

Repeat the step for the other side.


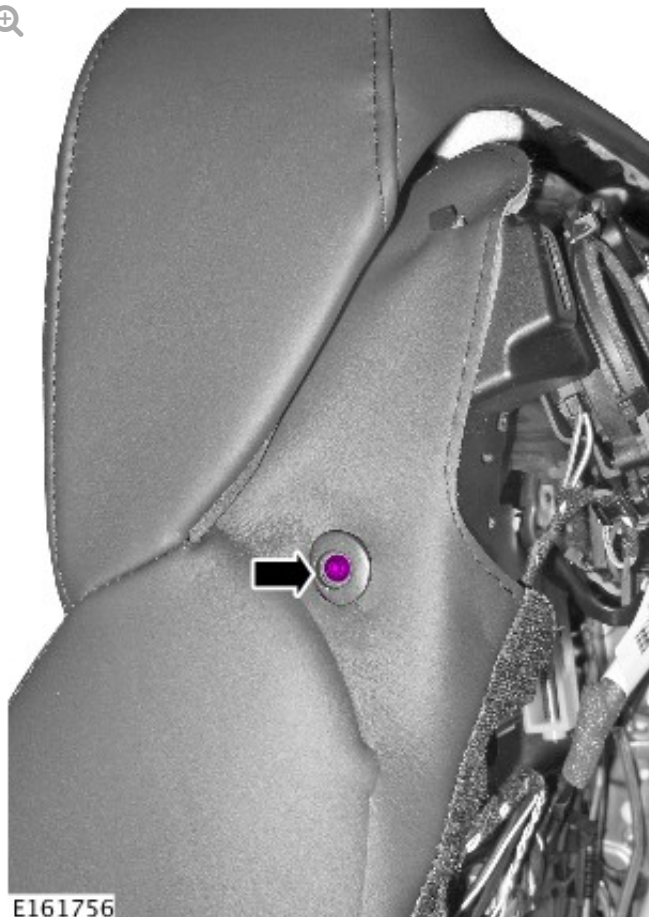


E161756

21.


NOTE:

Repeat the procedure for the other side.

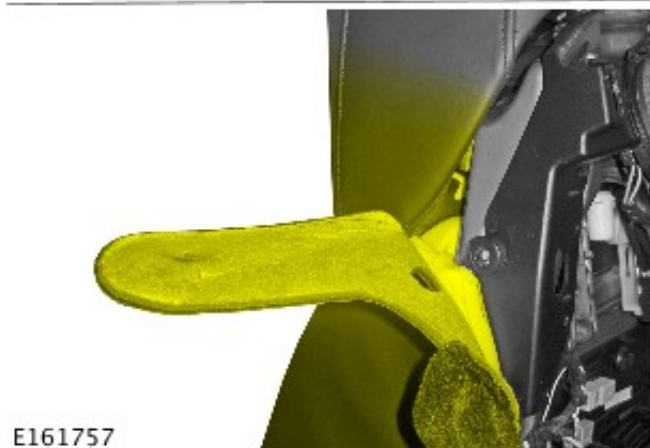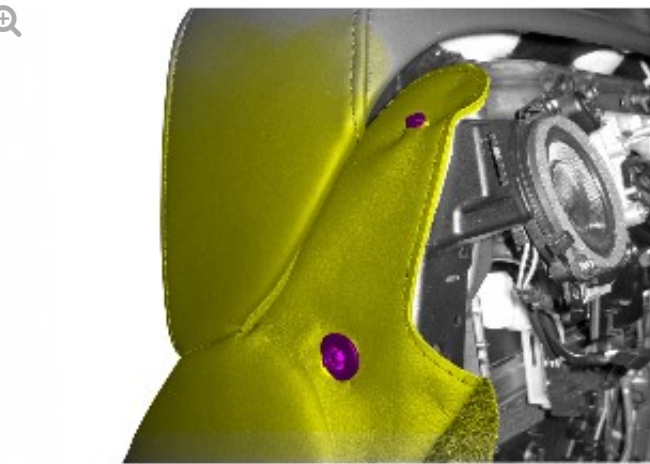


E161757

22.

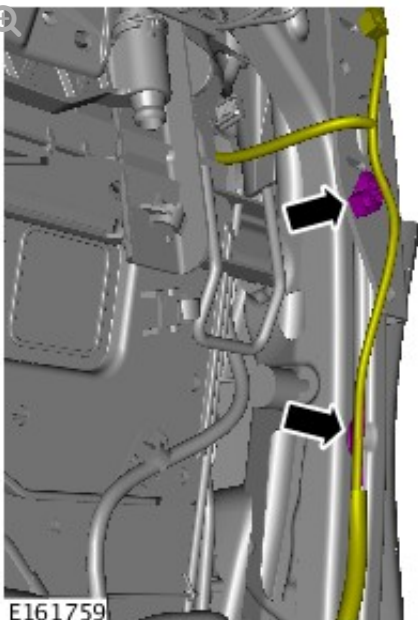

E161759



23.

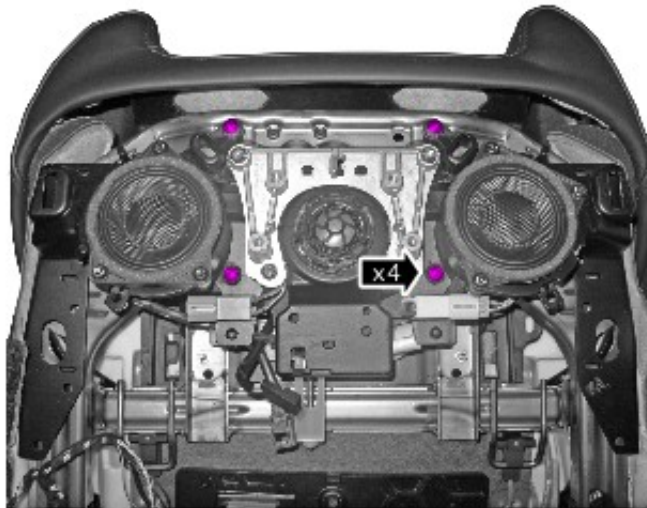

E161760

Torque: 6 Nm

24.

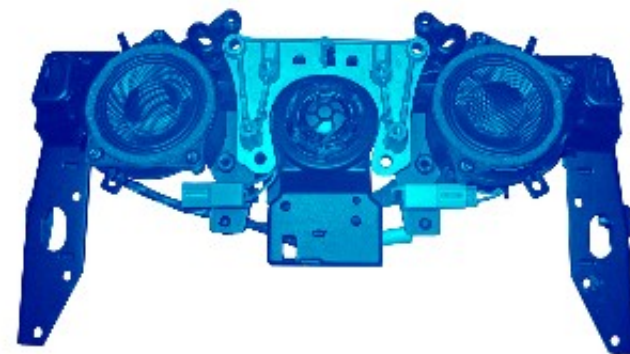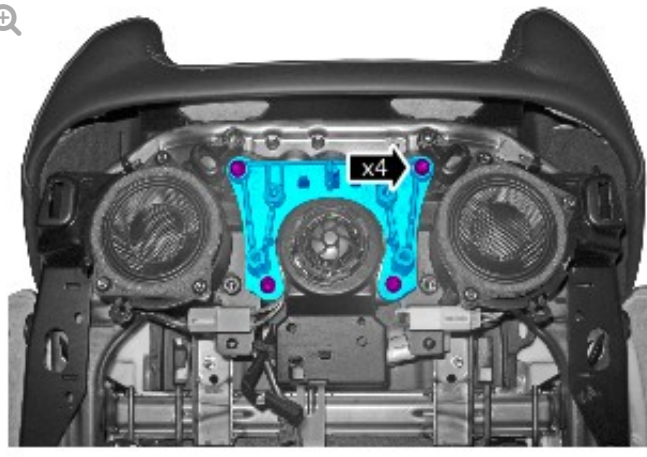


E161761

Torque: 6 Nm


25.

NOTE:


Note the orientation of the clips.

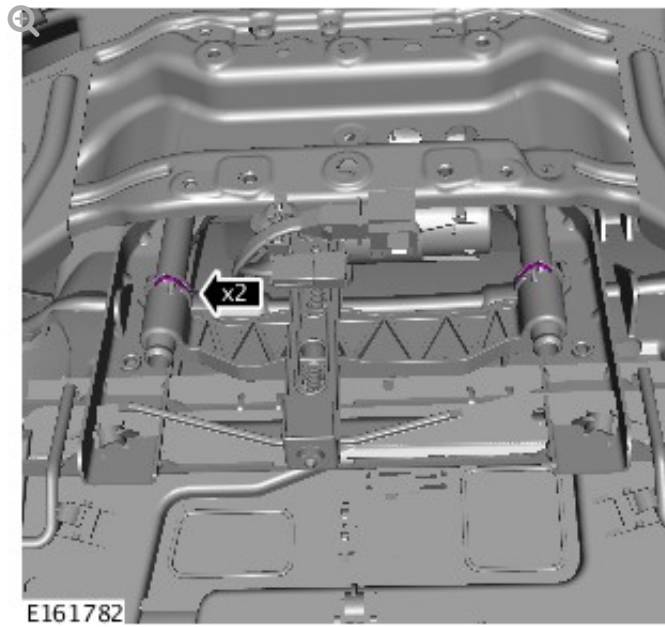

26.

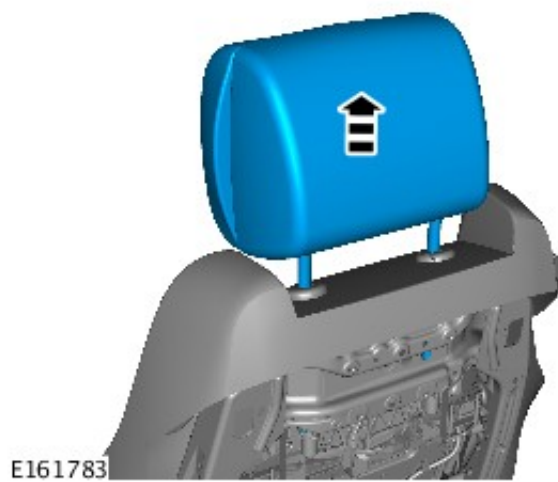


27.

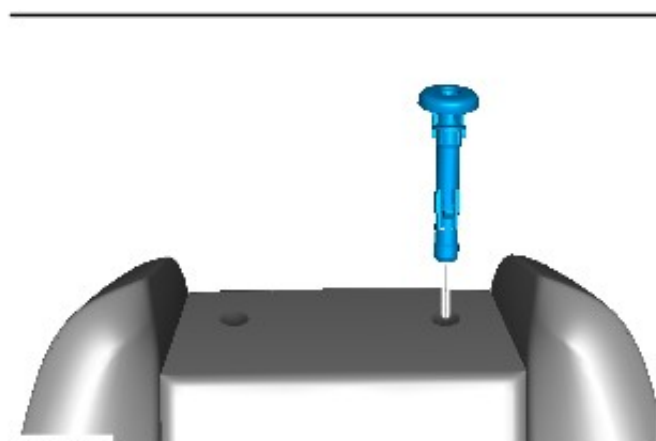



E145605

28.

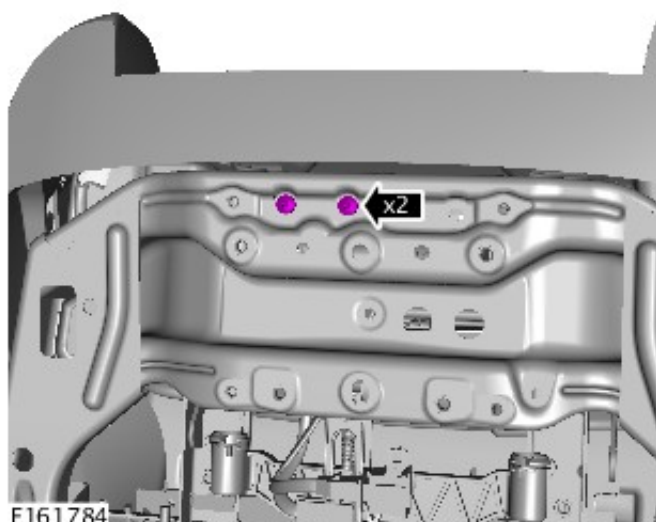

E161784


29.

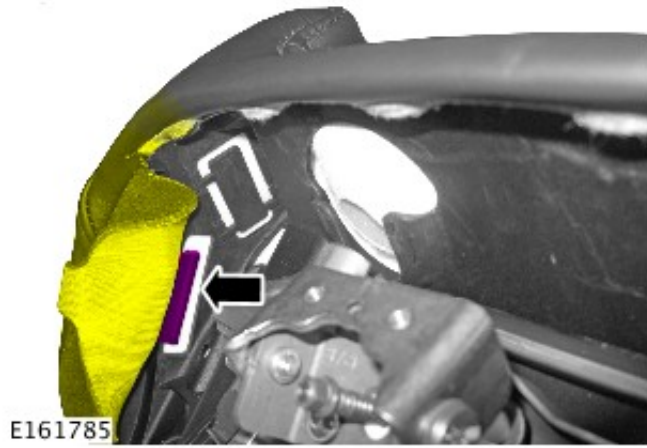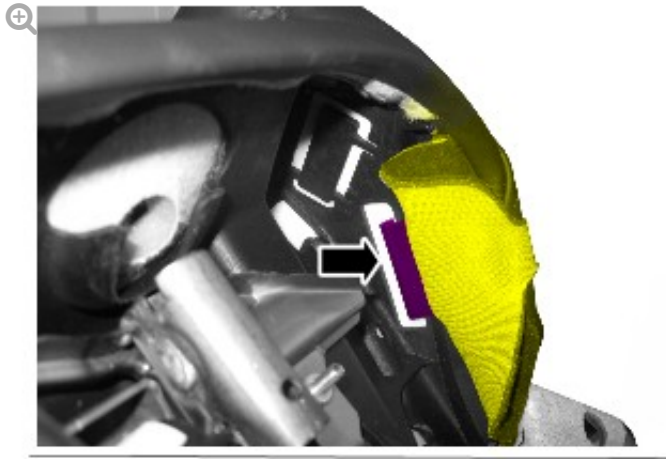


30.

NOTE:


Note the orientation of the component.

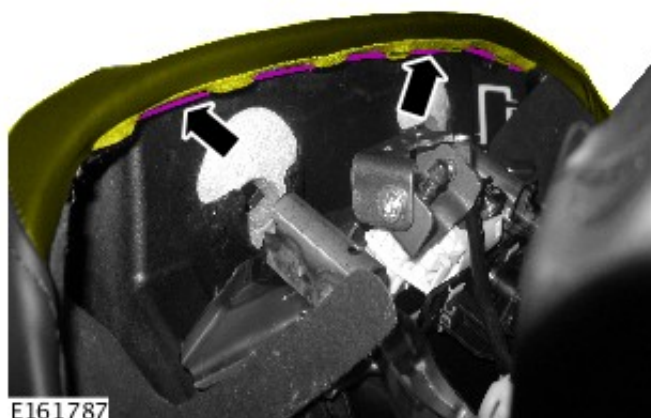



31.

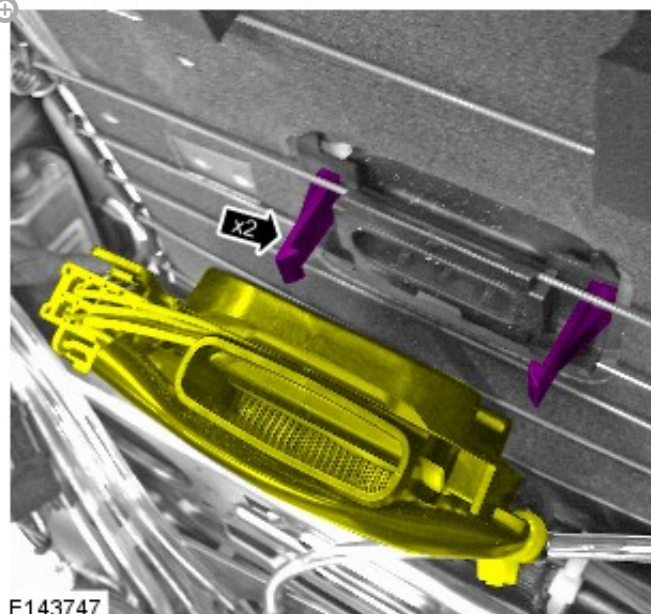


32.

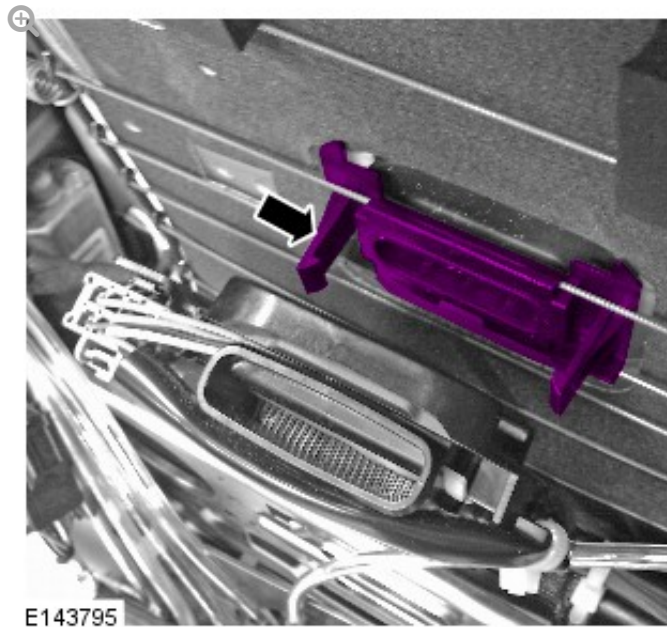


33.

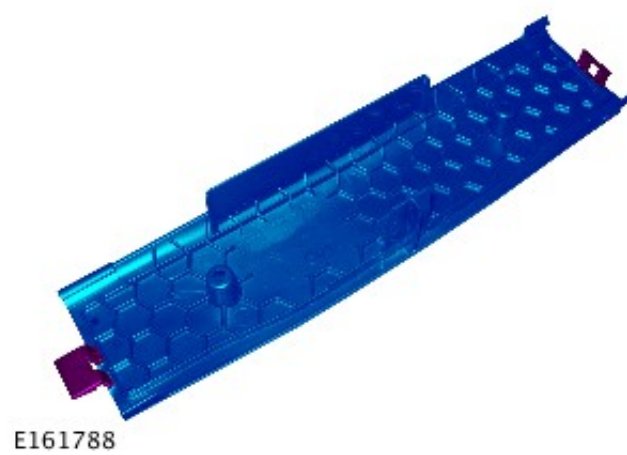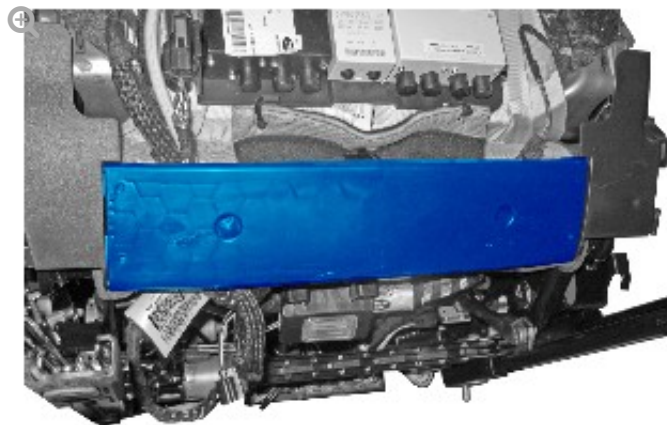


34.

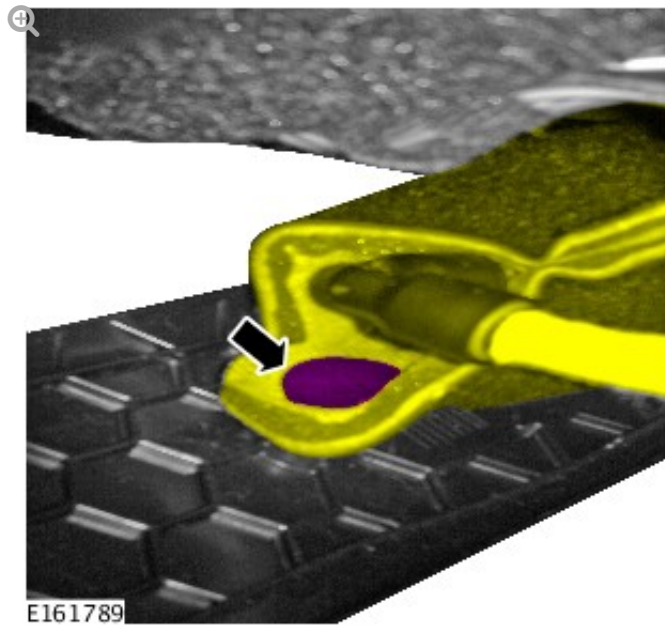

35.

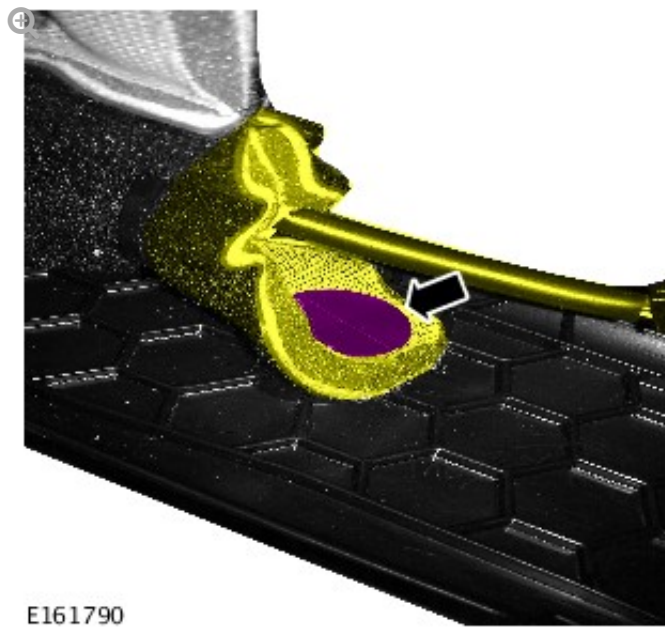


36.

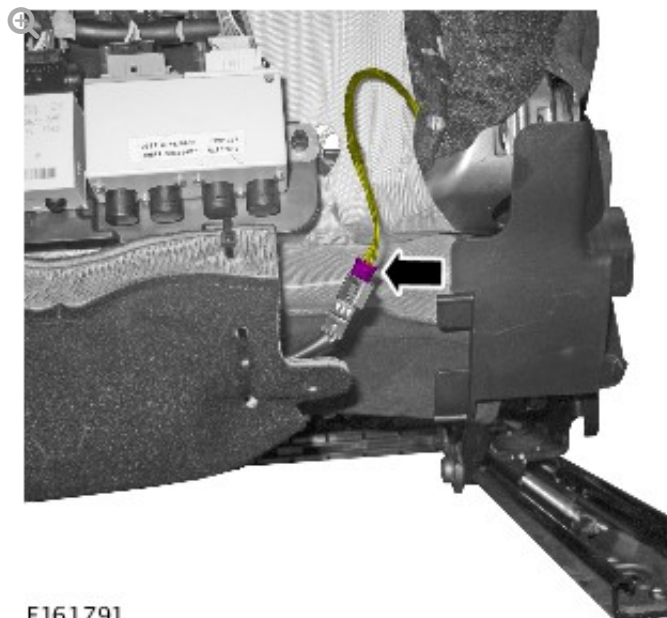



E161791

37.

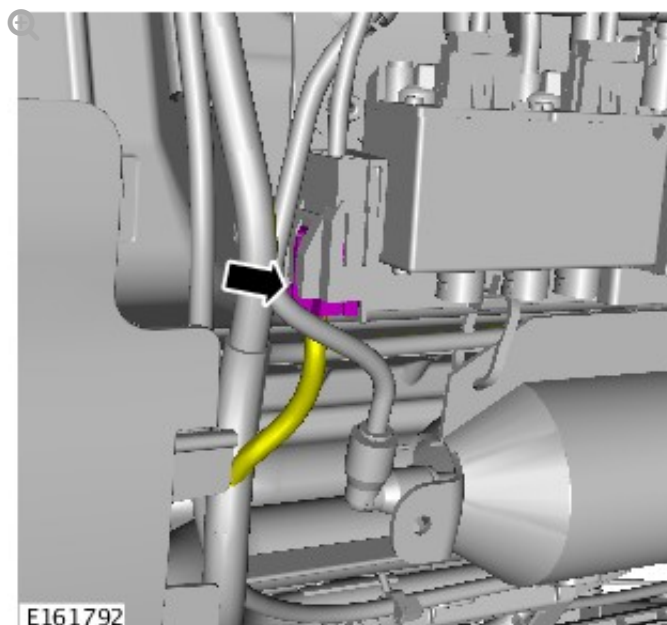


E161792


38.

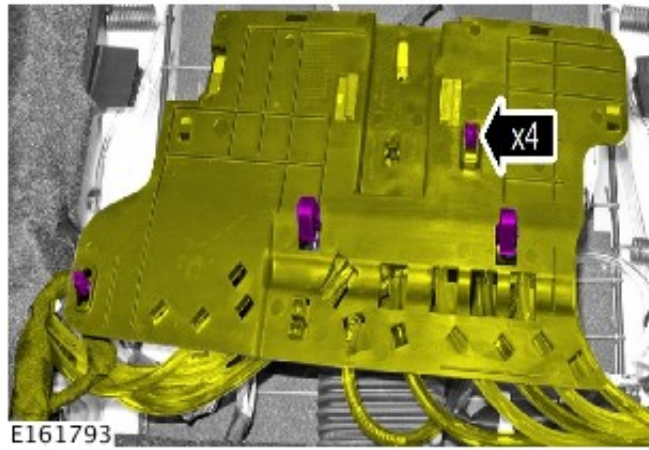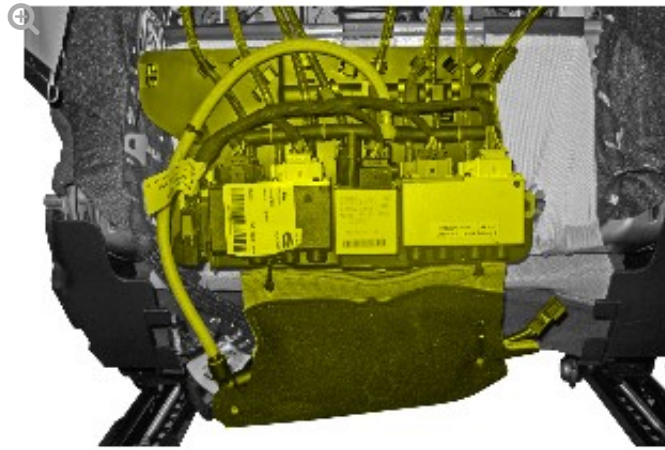


39.

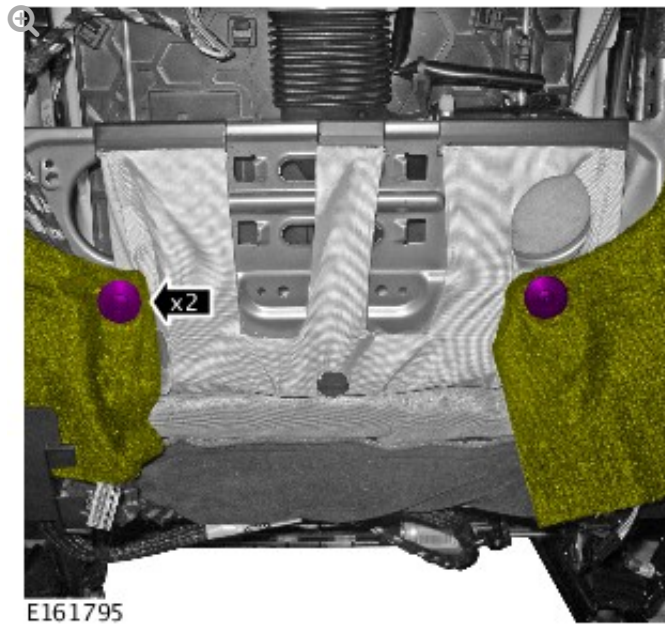

40.

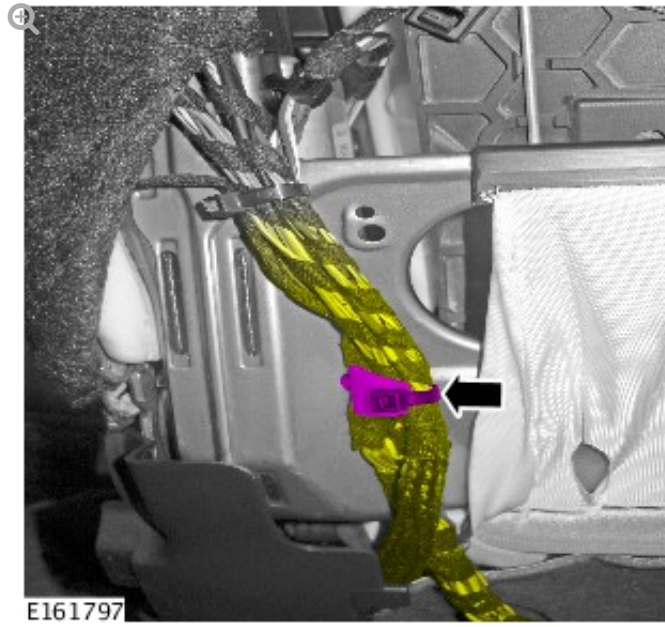


41.

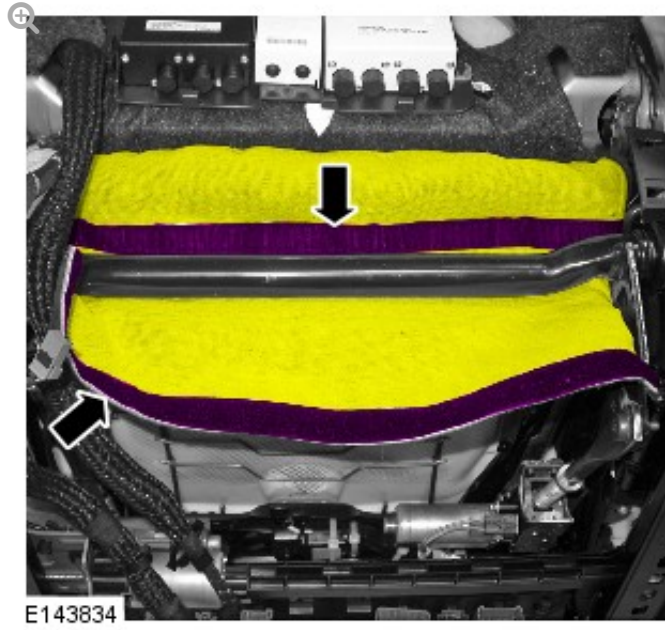


42.



43.

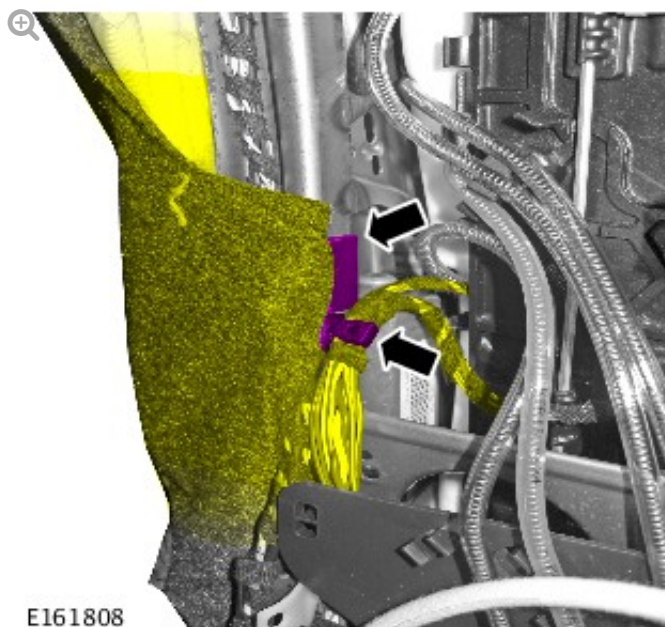


44.

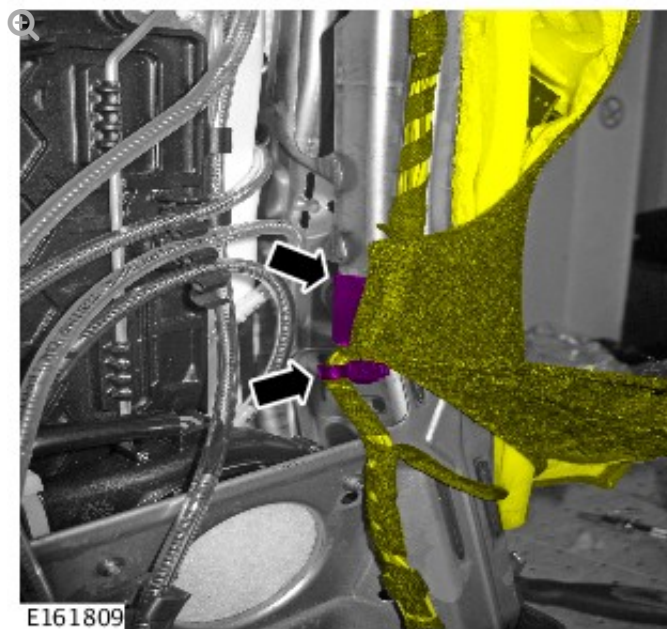

45.




46.

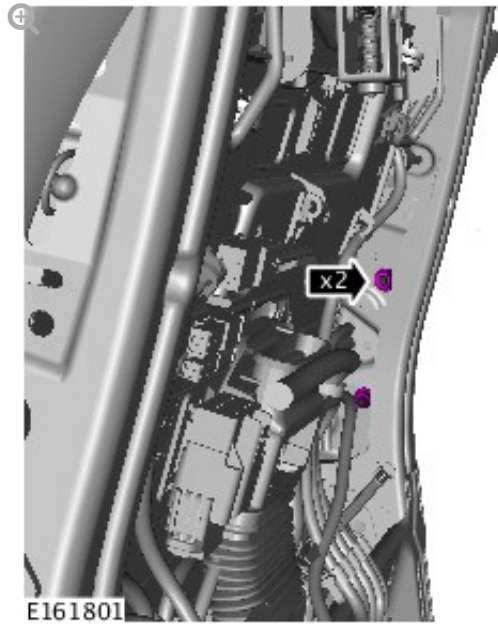

Torque: 7 Nm

47.

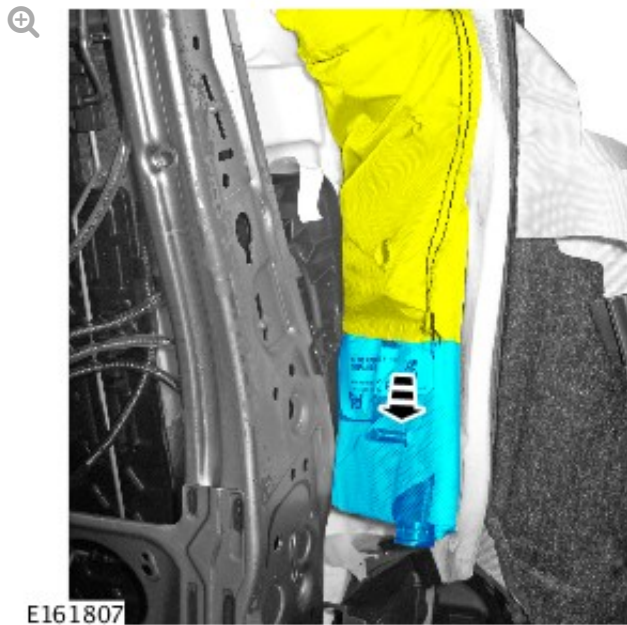

48.



49.





E161813



51.



52.

NOTE:

Repeat the step for the other side.

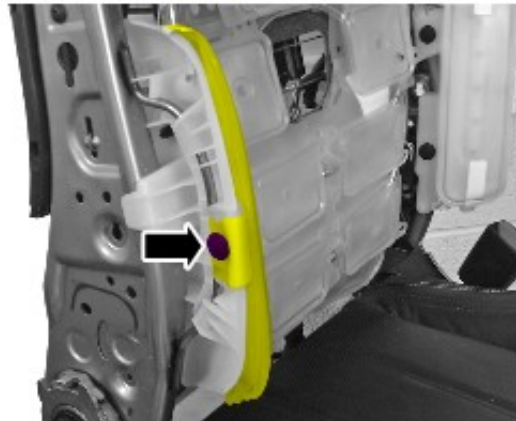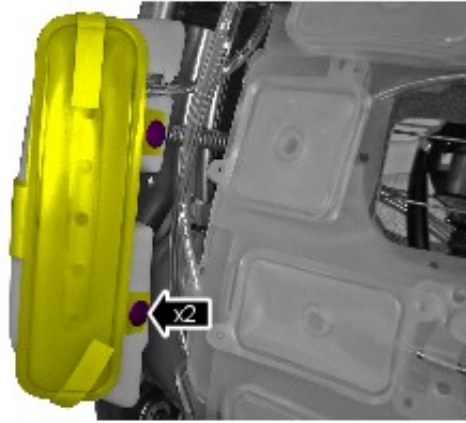

E143891

53.




E161833

Torque: 7 Nm



E161846

55.

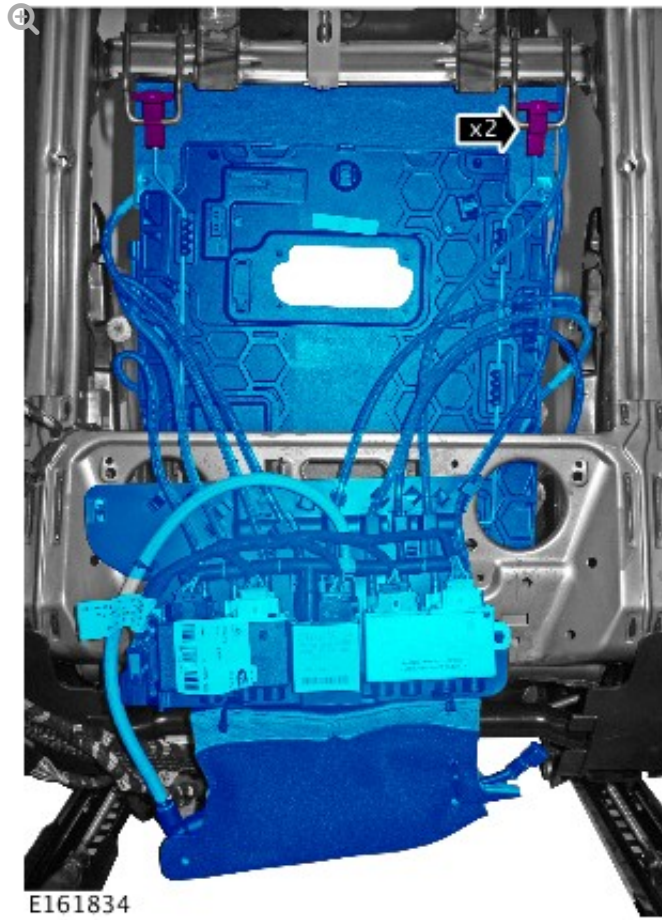

INSTALLATION

1. To install, reverse the removal procedure.