

2016.0 RANGE ROVER (LG), 501-10

SEATING - LONG WHEEL BASE

REAR SEAT (G1707117)


REMOVAL AND INSTALLATION

REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- RH illustration shown, LH is similar.

1.

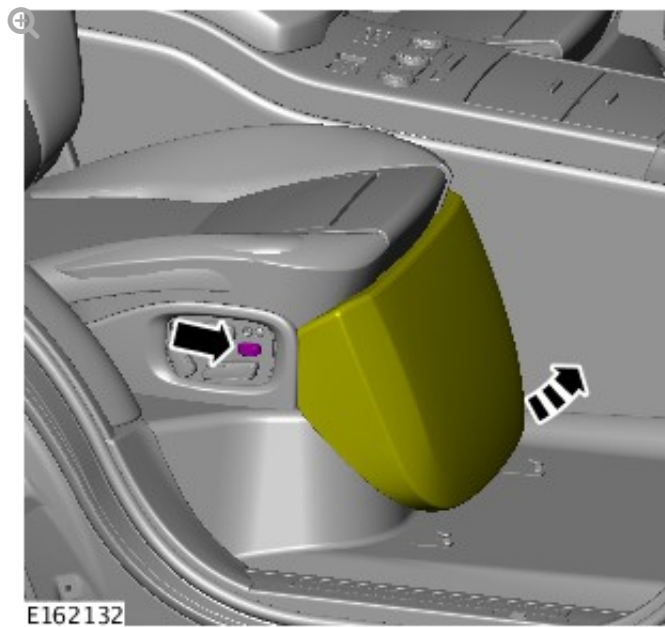

- If equipped.

2.

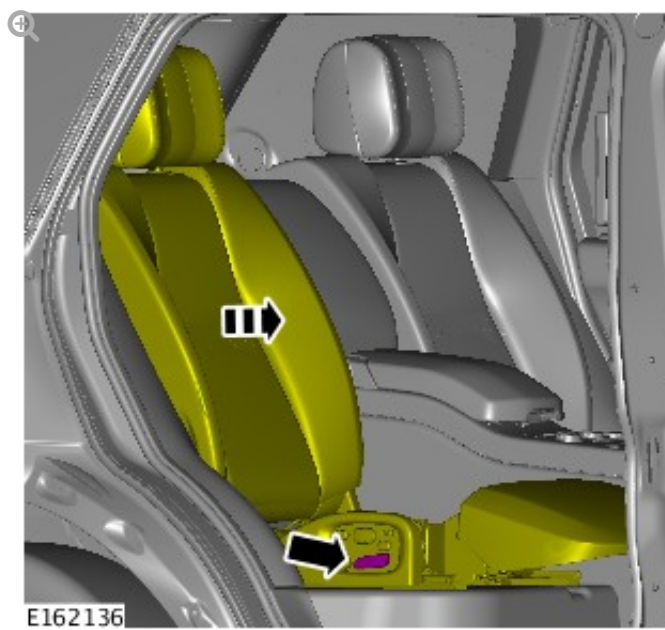

3.




Torque: 50 Nm


4.

CAUTION:


Using a suitable tool, release the seat cushion.

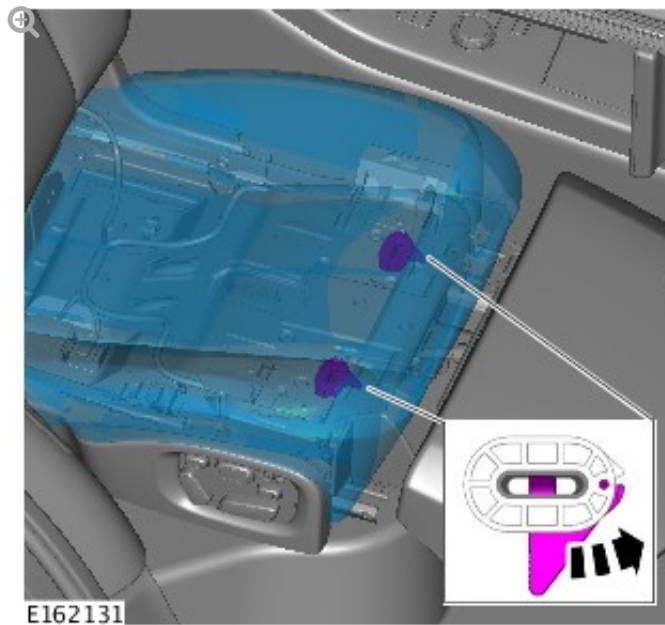

5.

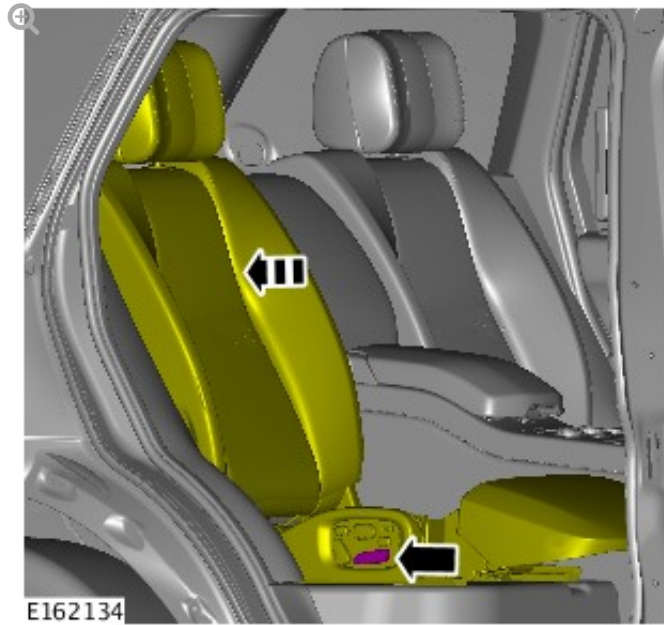


6.

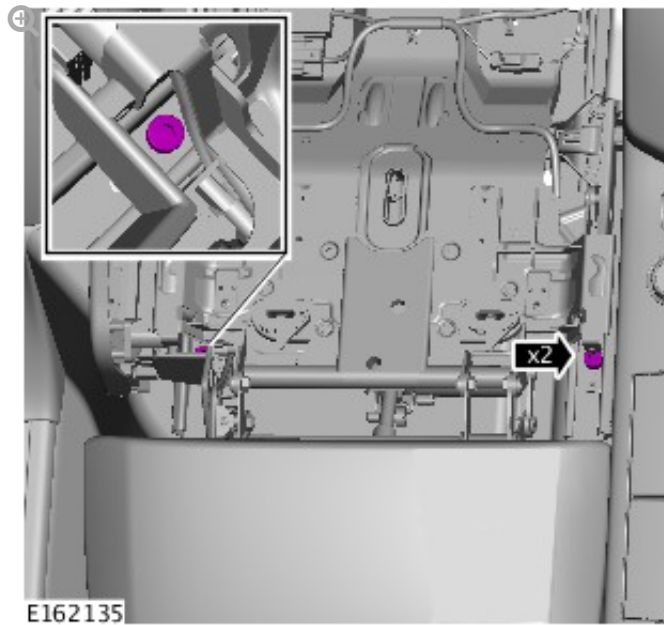


Torque: 50 Nm

7. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

8.

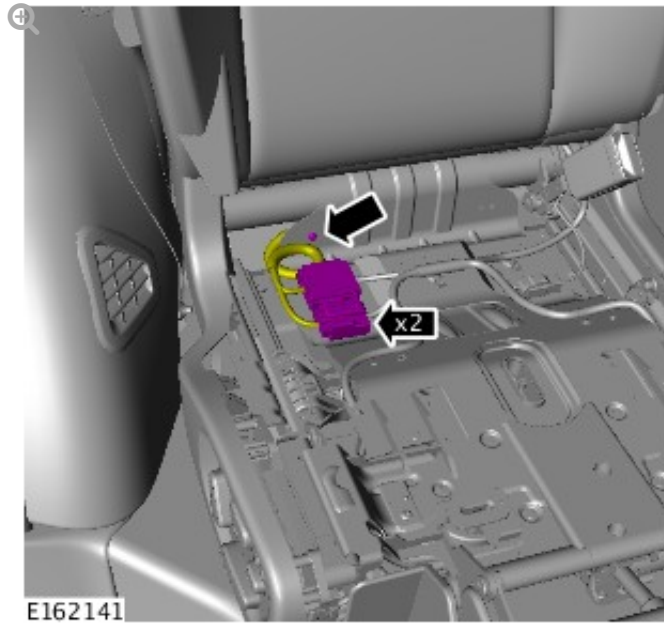

9.

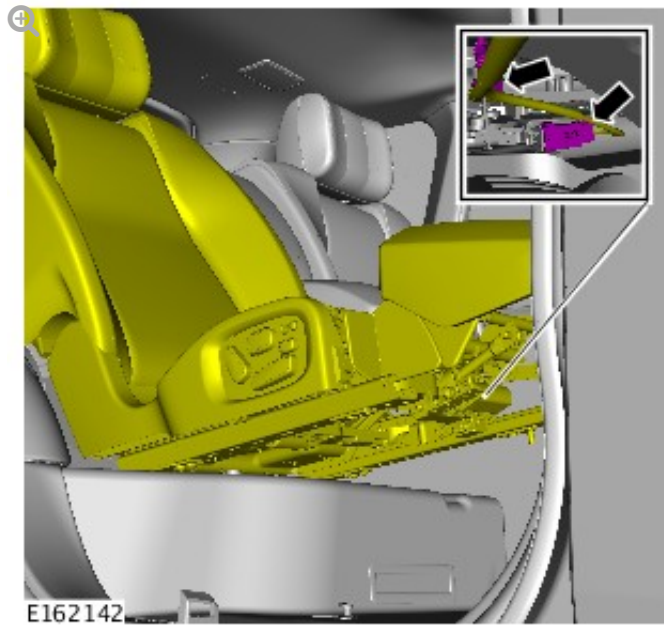


10.

WARNING:

This step requires the aid of another technician.

CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

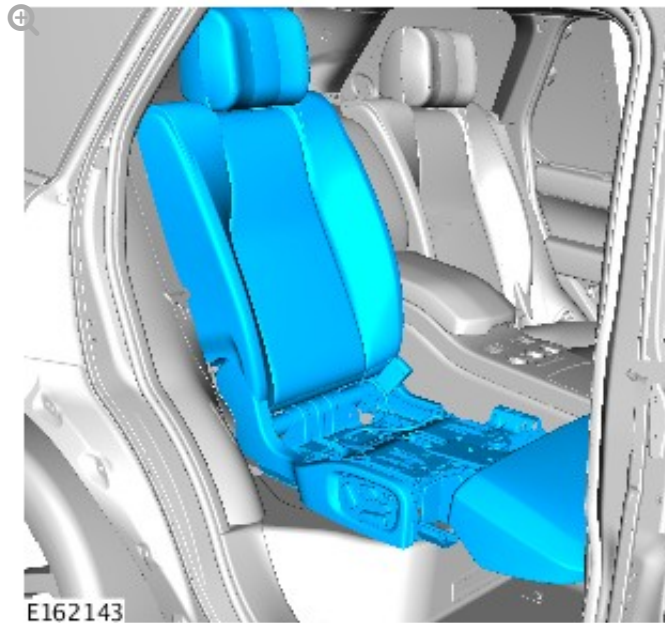

INSTALLATION

1. To install, reverse the removal procedure.

2.

