

2016.0 RANGE ROVER (LG), 501-10

SEATING - STANDARD WHEEL BASE

FRONT ROW SEAT BACKREST COVER [G1521603]

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and

trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.

- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTE:

Removal steps in this procedure may contain installation details.




All vehicles

1. Refer to: Front Seat Head Restraint (501-10, Removal and Installation).

2.

CAUTION:

Care must be taken to avoid damaging the surrounding components.

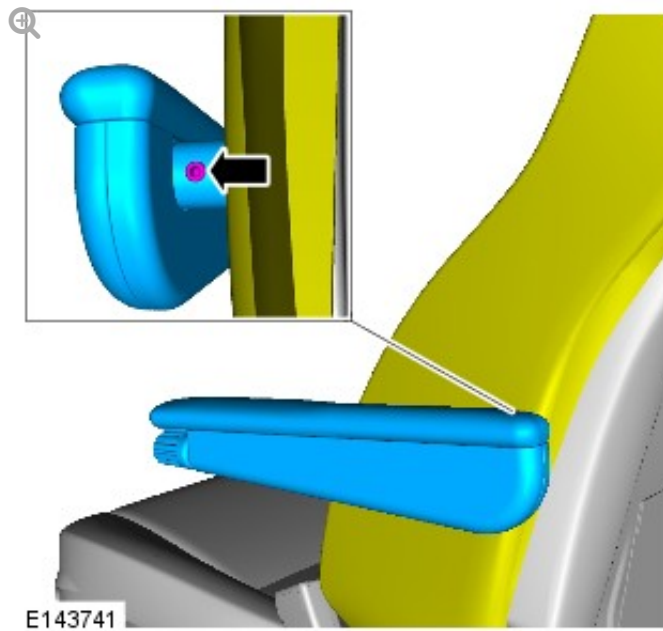


Torque: 25 Nm


3.

NOTE:



Make sure that the clips are installed in the correct orientation.

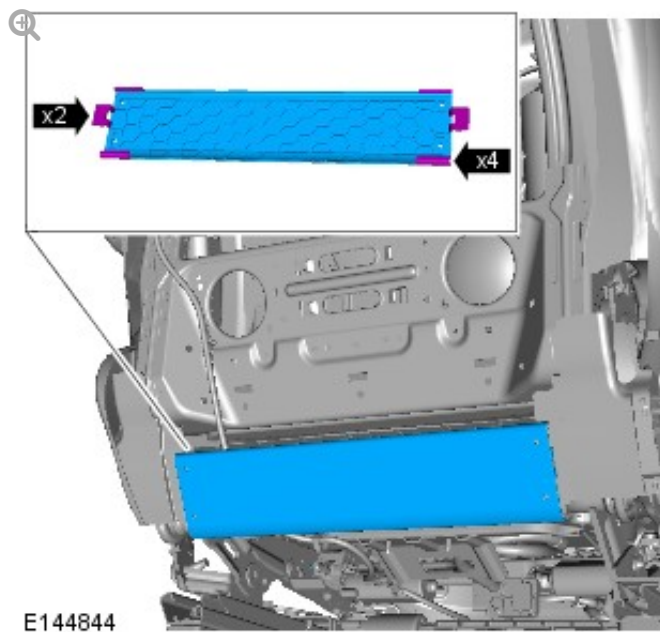



4.

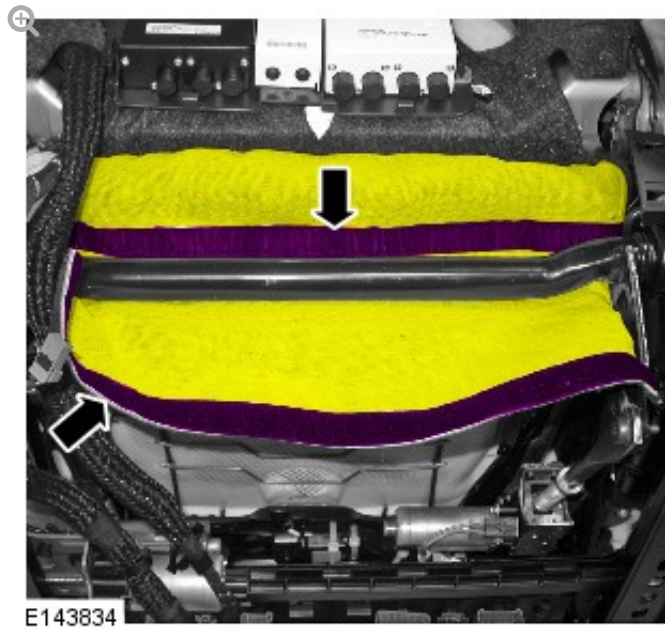

5.

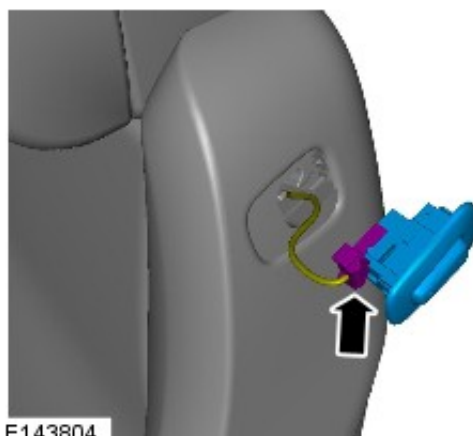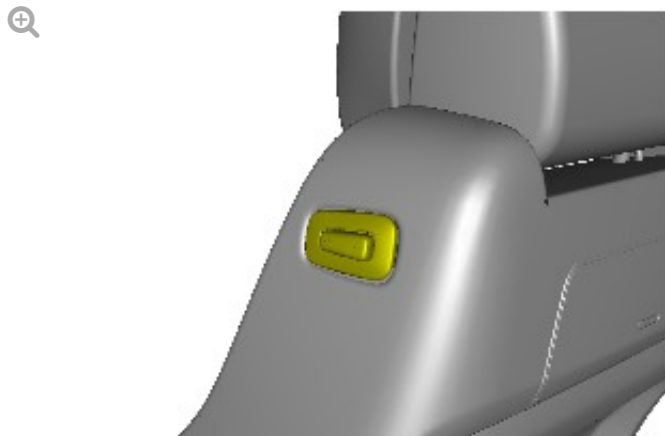


6.

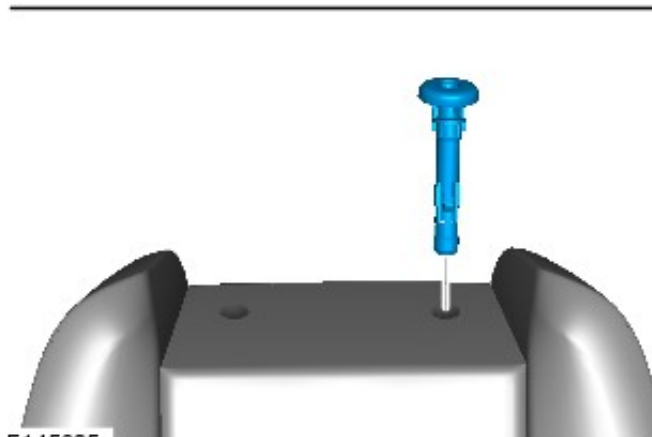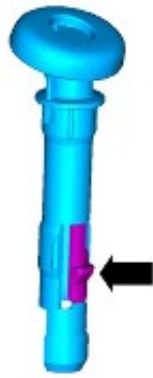


E145605

7.

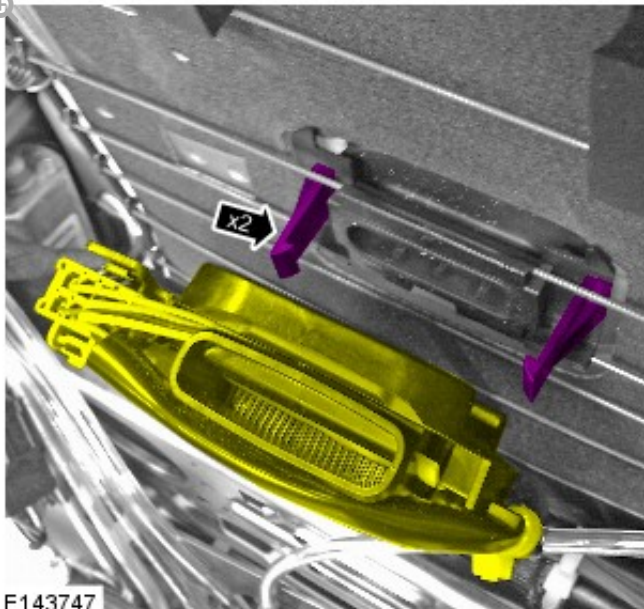



E143747

8.

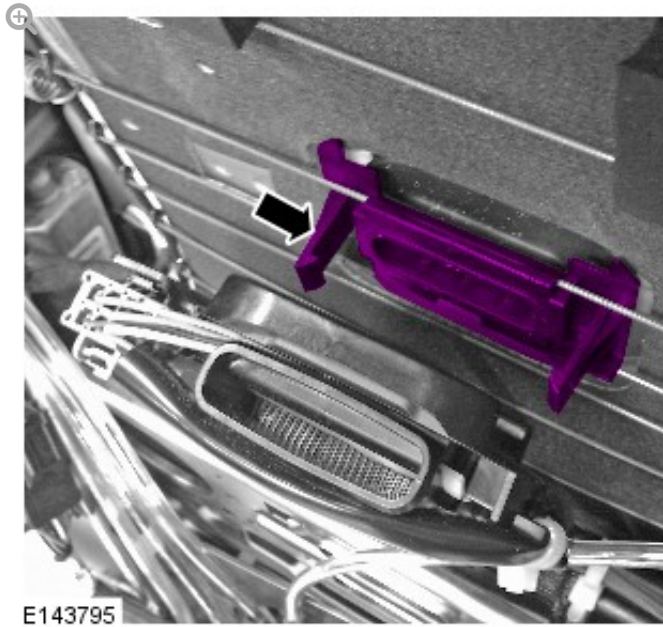


E143795

9.

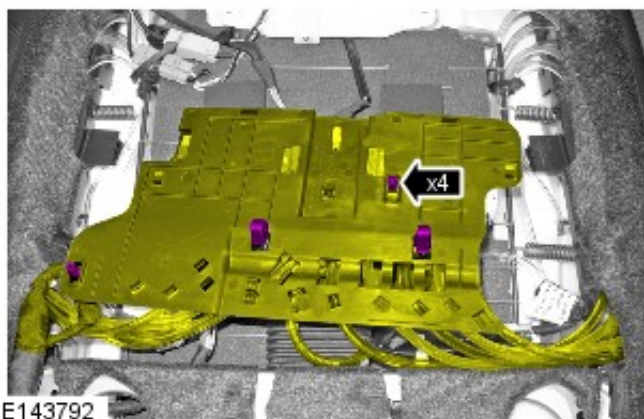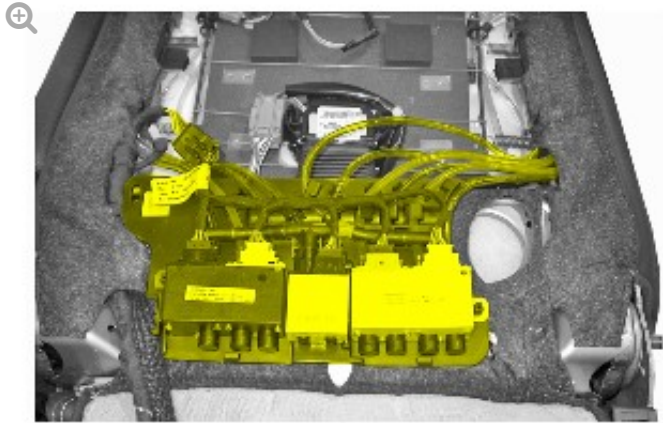


E143792

10.

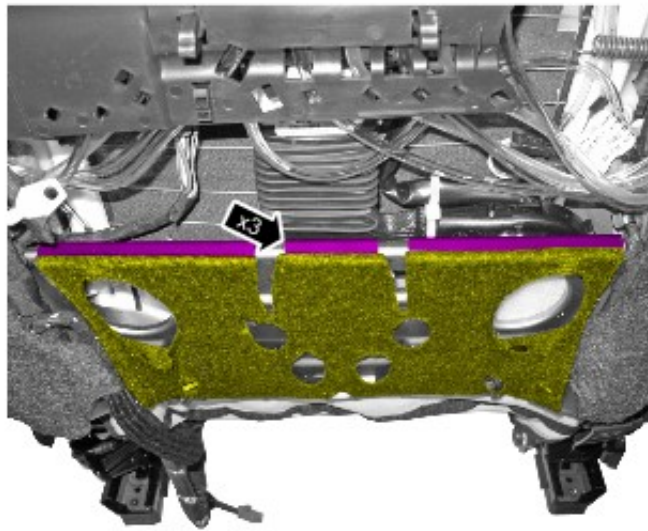


E143800

11.

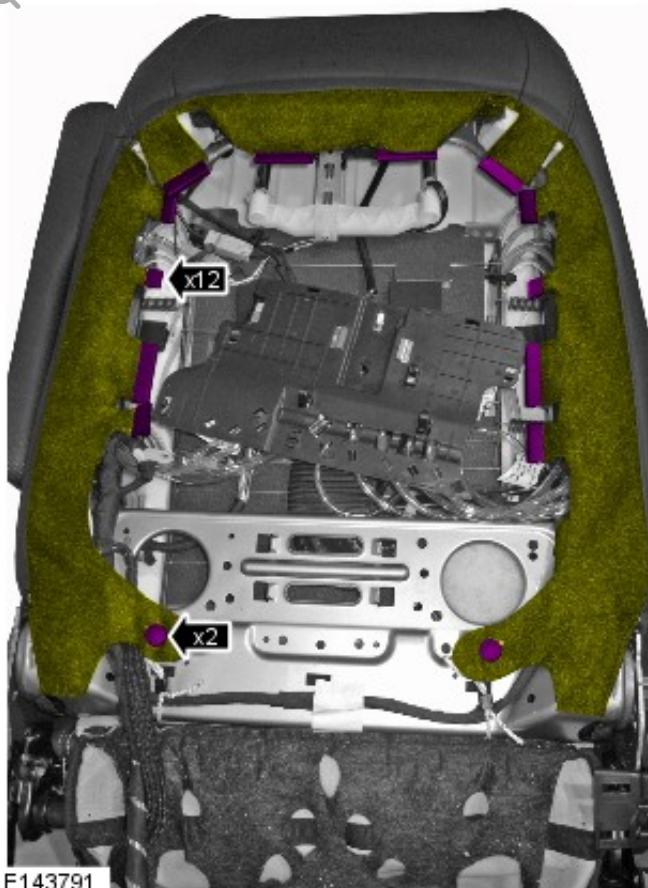


E143791

12.

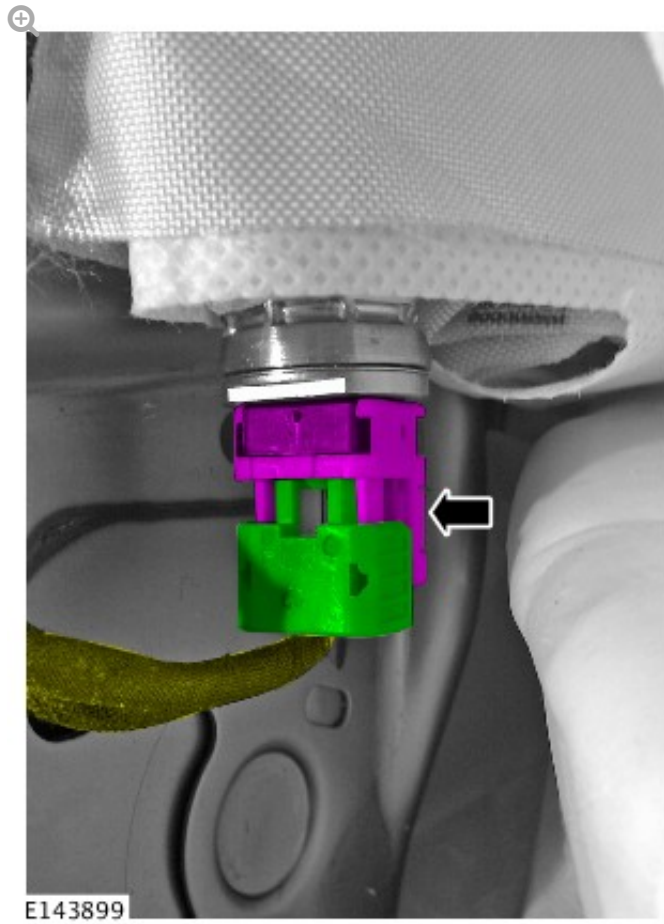

13.

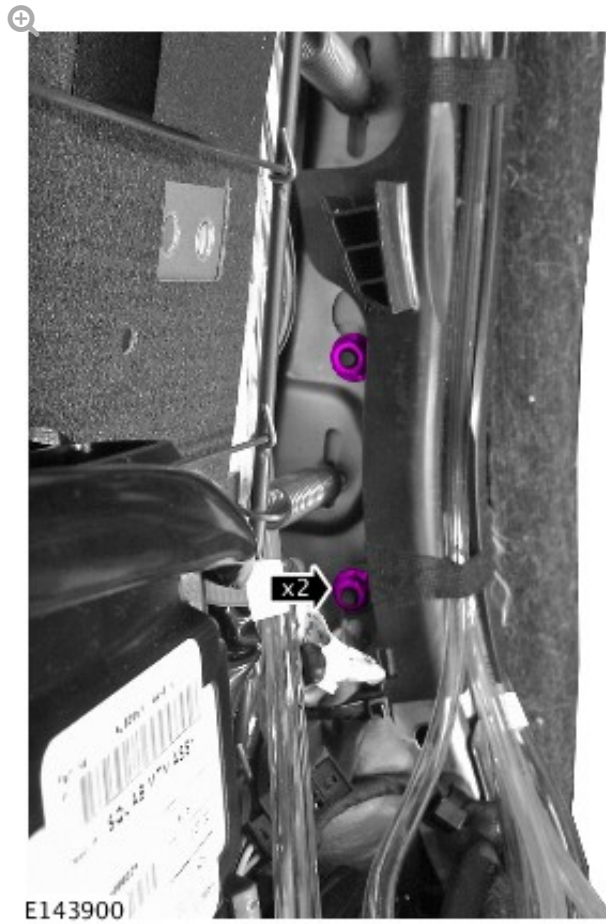


Torque: 7 Nm

14.



E143901

15.

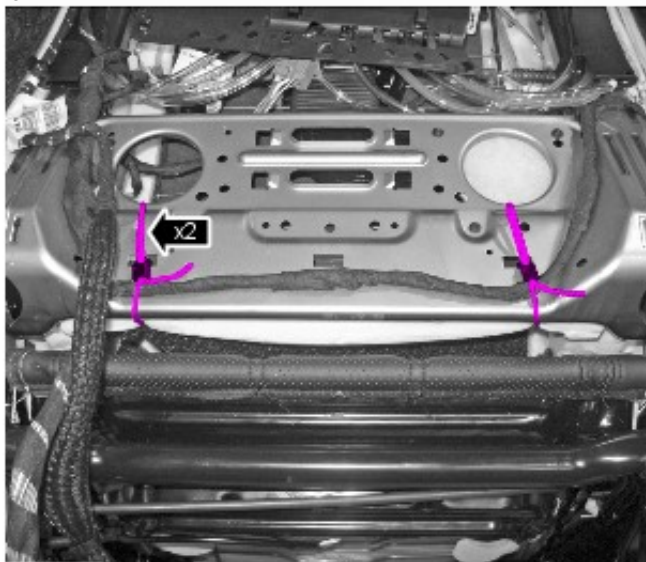


E143799

16.

NOTES:

- RH illustration shown, LH is similar.
- Repeat the procedure for the other side.

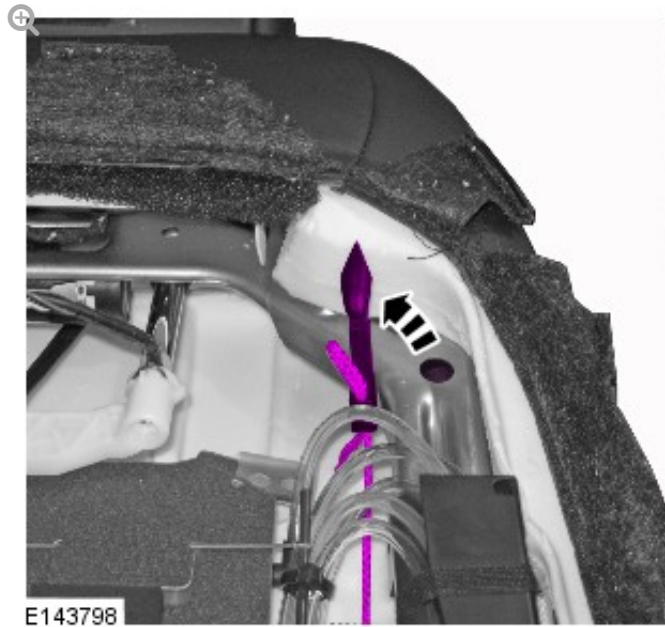


17.



Vehicles with heated front seats

18.

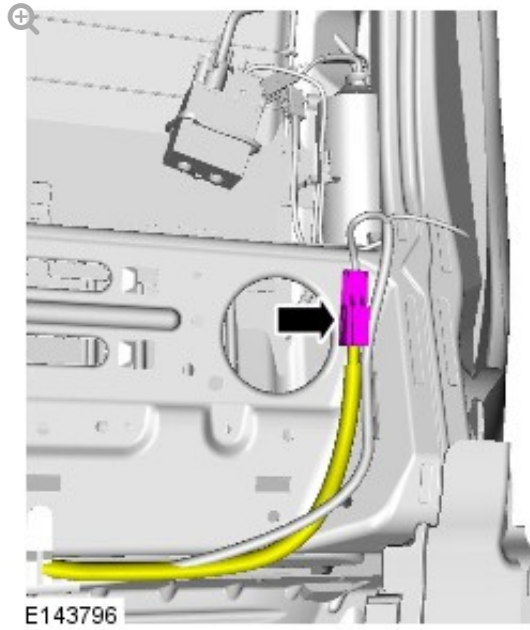

All vehicles

19.




20.



E143805

21.

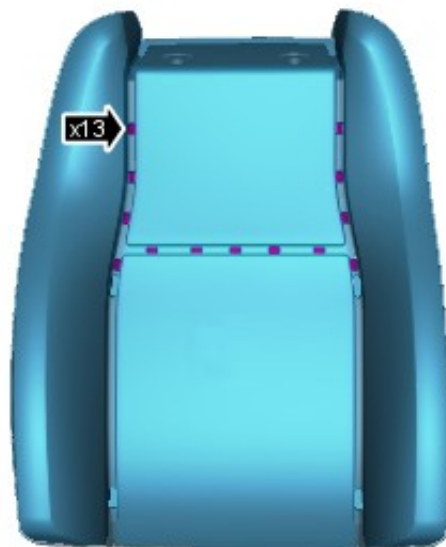


E143793

INSTALLATION

1.

NOTES:

- Make sure that new hog rings are installed.
- Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed to overlap as illustrated.

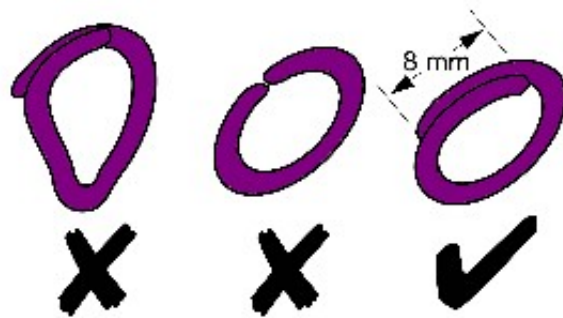


V4001063

2.

NOTE:

Make sure that the hogrings are installed in the sequence shown.

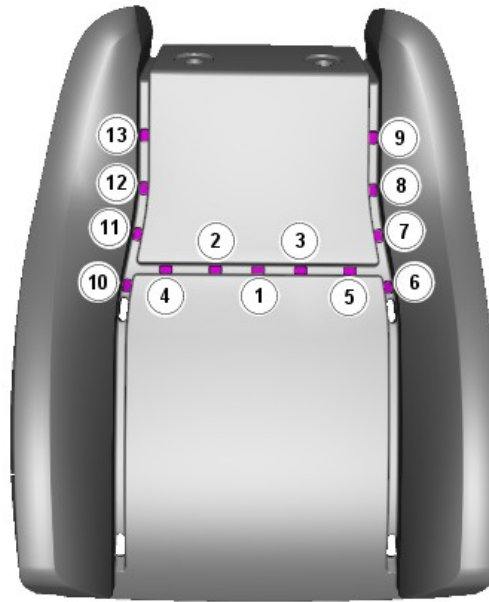

E145734

3. To install, reverse the removal procedure.