

2016.0 RANGE ROVER (LG), 501-10

SEATING - STANDARD WHEEL BASE

FRONT SEAT HEIGHT ADJUSTMENT MOTOR (G1521611)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and

trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.

- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTE:


Removal steps in this procedure may contain installation details.



All vehicles

1. Make the SRS system safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Refer to: [Front Row Seat](#) (501-10A Seating - Standard Wheel Base, Removal and Installation).

3.

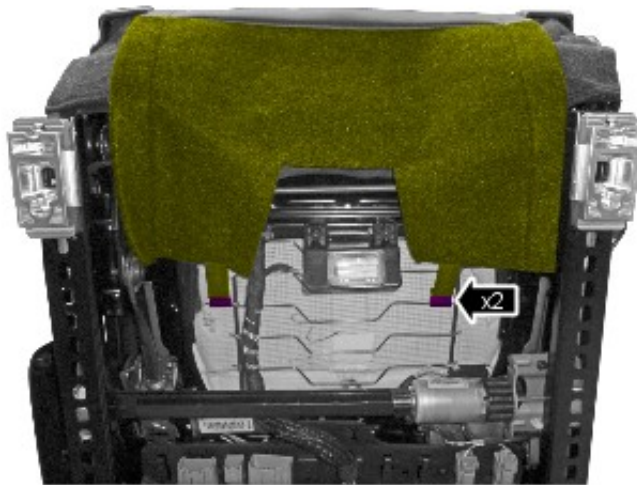


E143833

4.


NOTE:

Make sure that the clips are installed in the correct orientation.

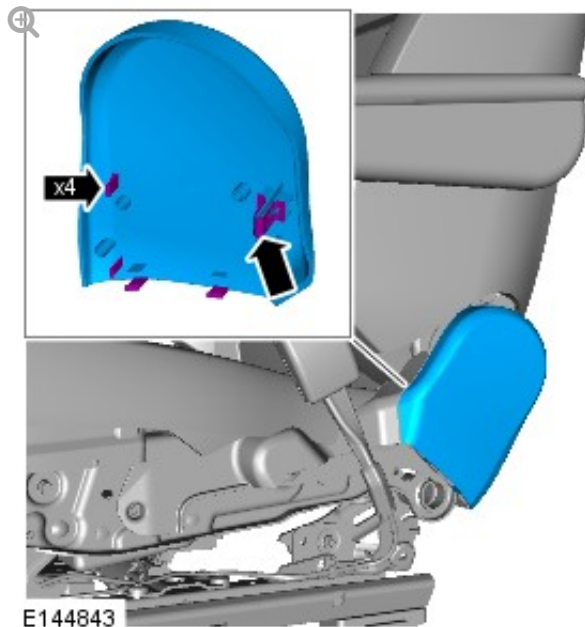


E144843


5.

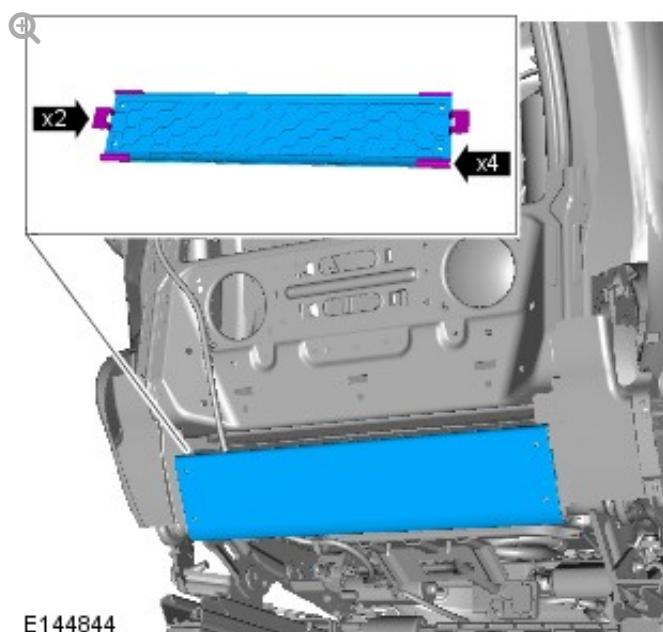

6.

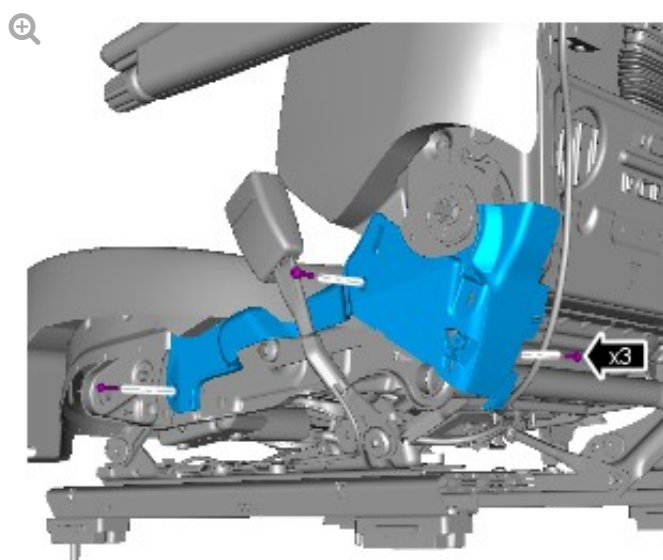


7.

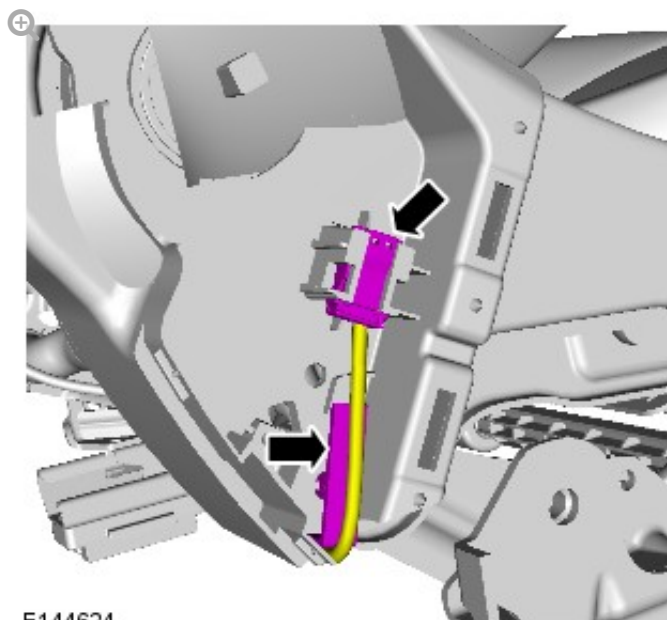


E144624

8.

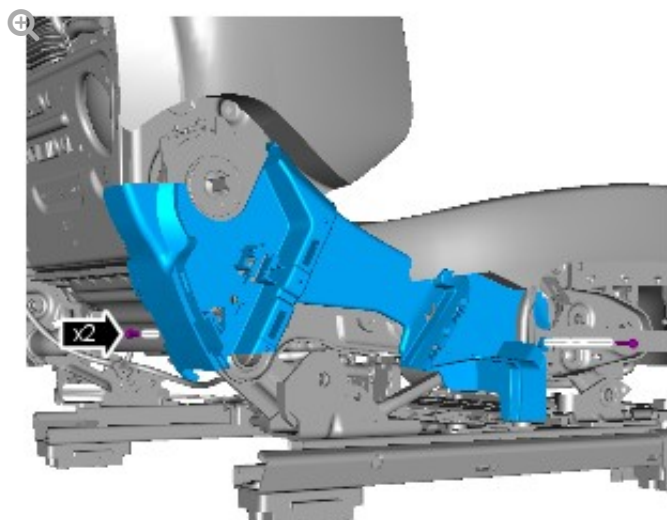

E144842

9.

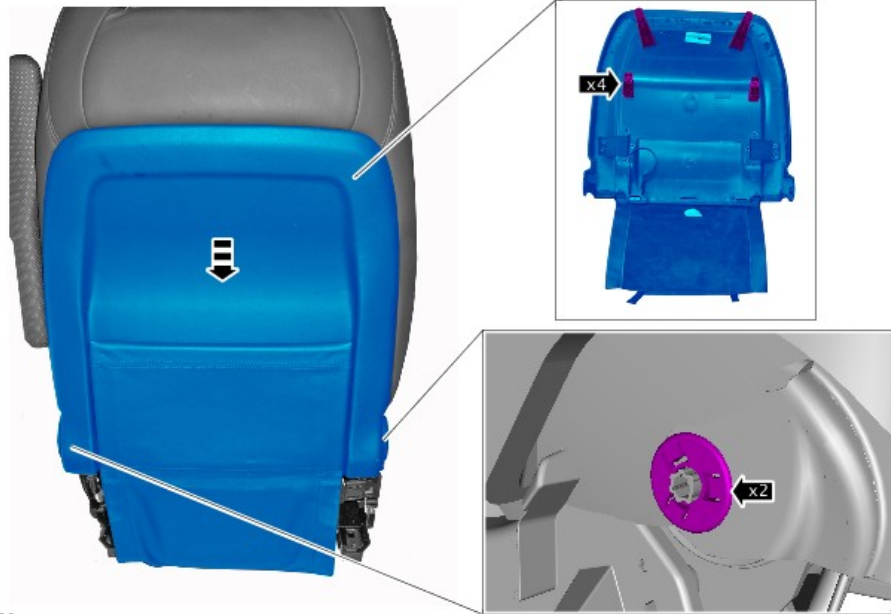


E143831

10.


CAUTION:

Make sure the component is aligned as shown.

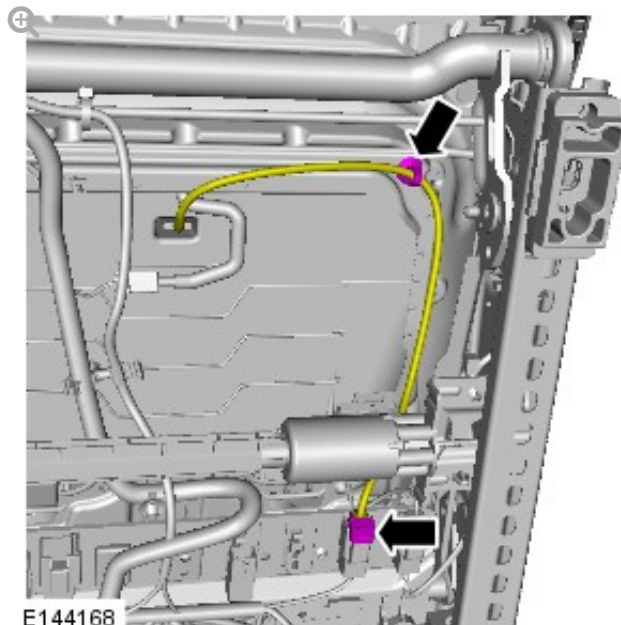


E144168

11.

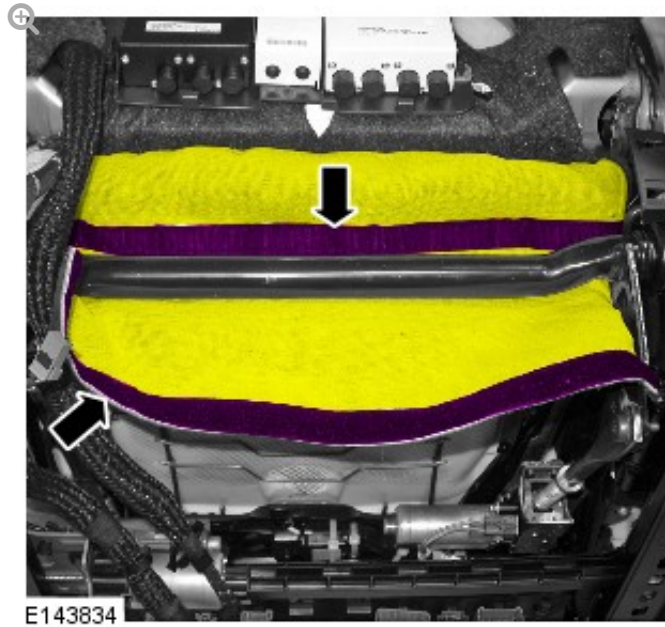


Vehicles with heated front seats

12.

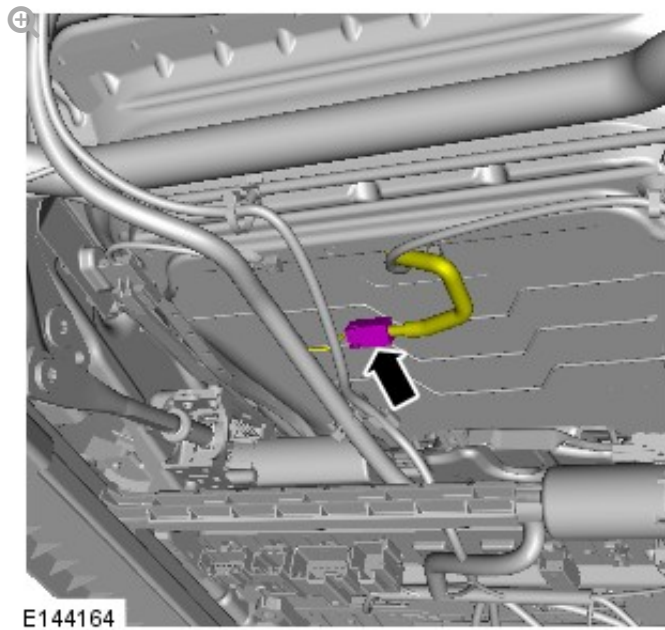

All vehicles



13.

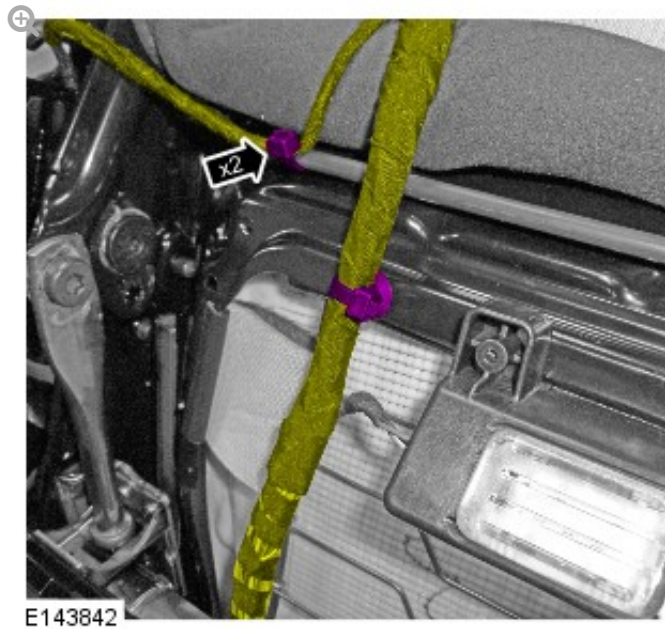

14.

CAUTION:

Take extra care not to damage the component.

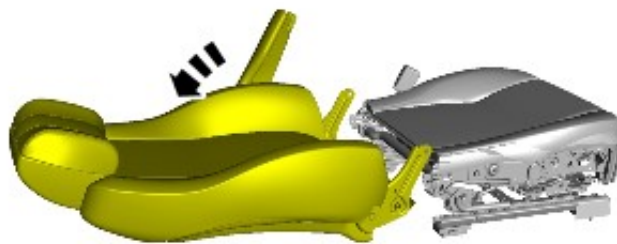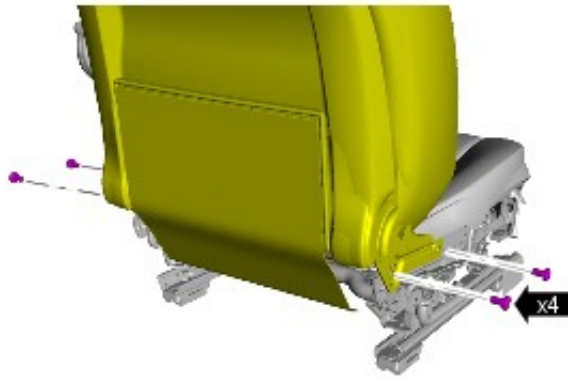


E144592

Torque: 35 Nm

15.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

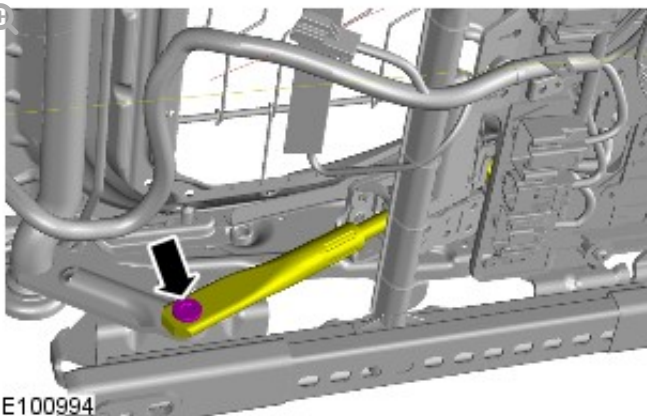


E100994

Torque: 28 Nm

16.

NOTES:


- Use a suitable tool to remove the circlips from the seat cushion frame bolts.
- Note the orientation of the components.
- Right-hand shown, left-hand similar.
- Repeat the procedure for the other side.

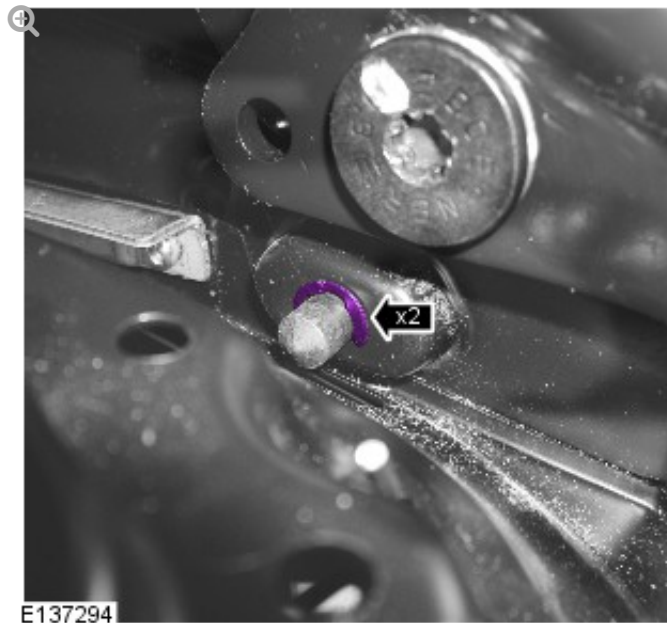

17.

NOTES:


- Right-hand shown, left-hand similar.
- Repeat the procedure for the other side.

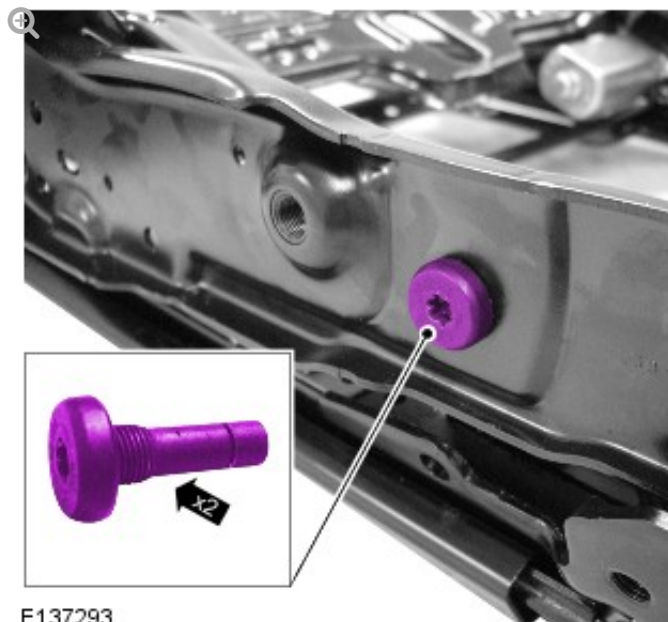

E137293

Torque: 20 Nm

18.

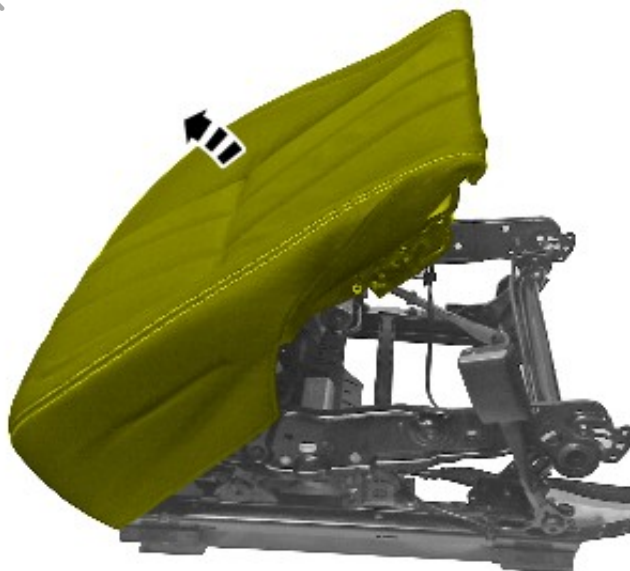


E144594

19.


NOTES:

- Note the orientation of the components.
- Right-hand shown, left-hand similar.

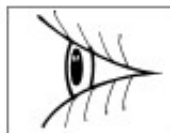


E137317

20.

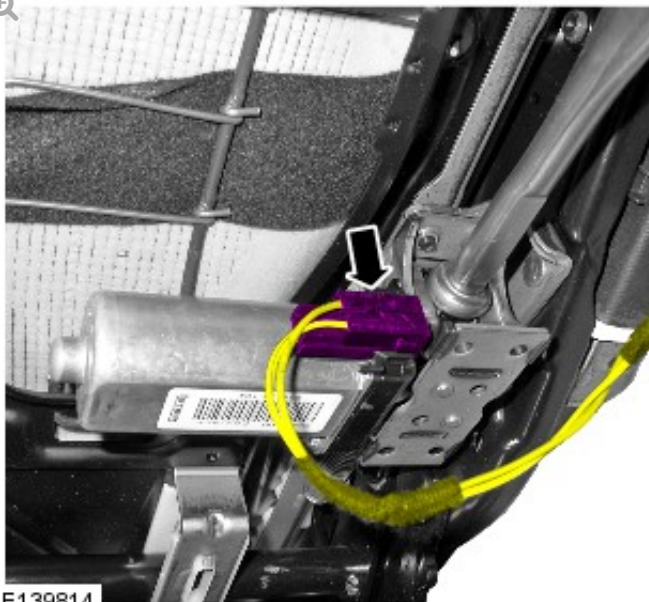

E139814

21.

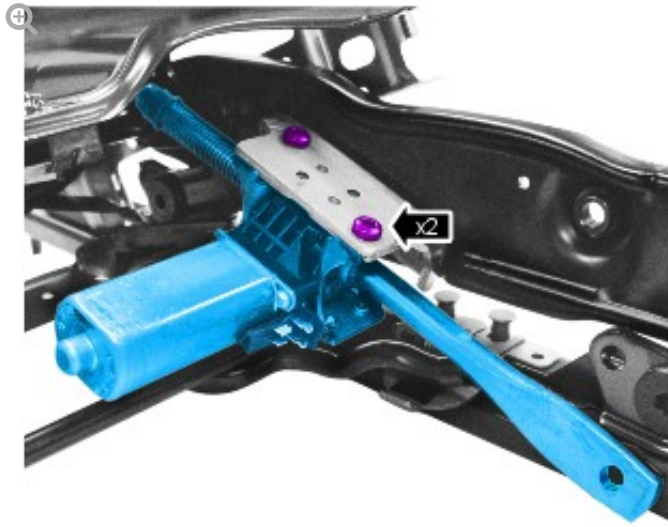

E139869

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.