

2016.0 RANGE ROVER (LG), 501-10

SEATING - STANDARD WHEEL BASE

FRONT SEAT TRACK MOTOR

[G1521613]

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment, the restraints control module backup power supply must be depleted. Wait at least two minutes after disconnecting the battery ground cable(s) before commencing any repair or adjustment to the supplemental restraint system (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and

trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.


- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.


1. Make the SRS system safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Refer to: [Front Row Seat](#) (501-10A Seating - Standard Wheel Base, Removal and Installation).

3.

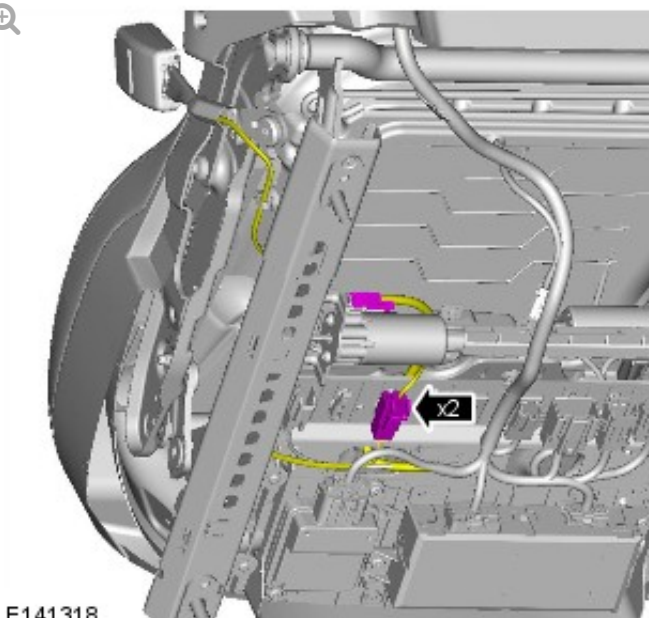


E141318

4.

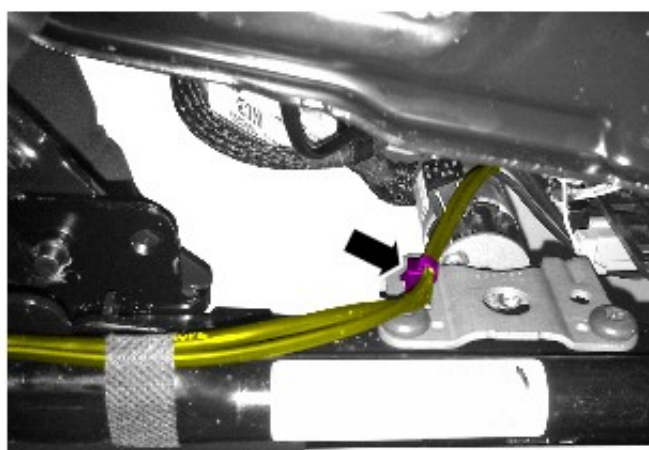

E141317

5.

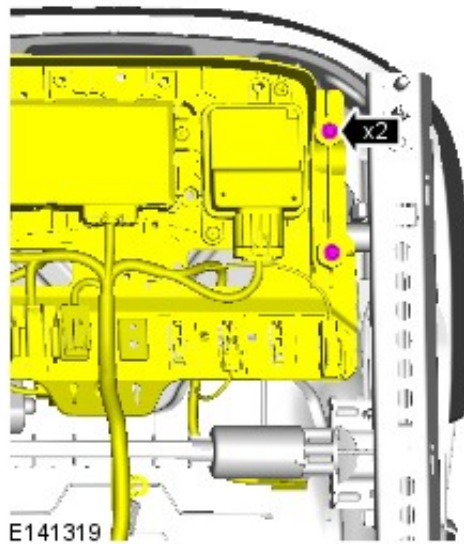


Torque: 10 Nm

6.

NOTE:

Install the rear reatining bolt first.

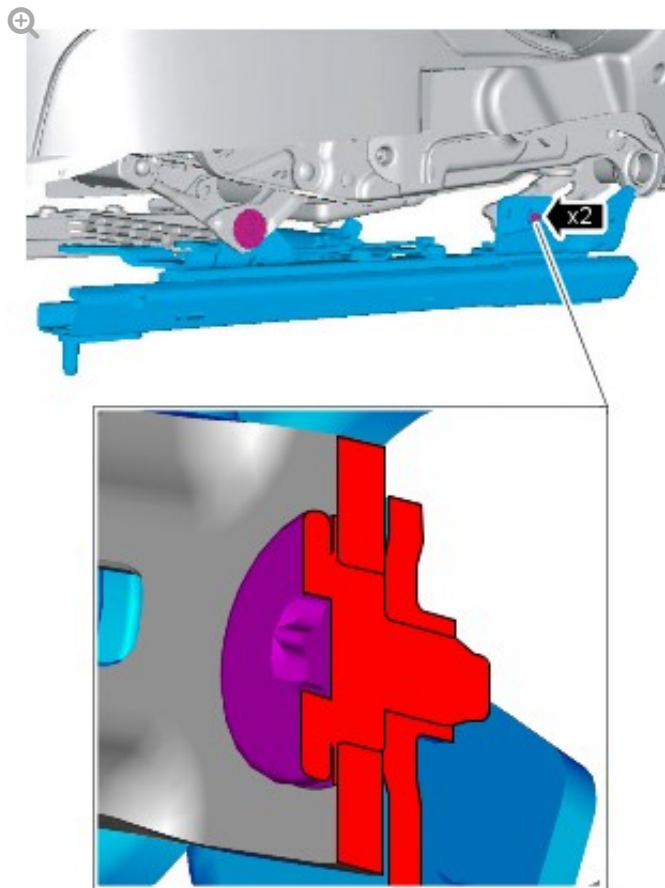


E137363

Torque: 28 Nm

7.

NOTE:

Note the orientation of the electrical connector and wiring harness.

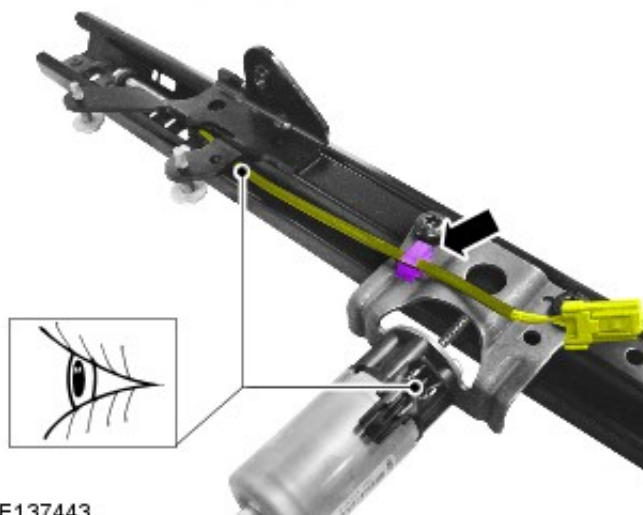


E137443

8.

NOTE:

Make a note of the orientation of the front seat track motor drive pin bar.

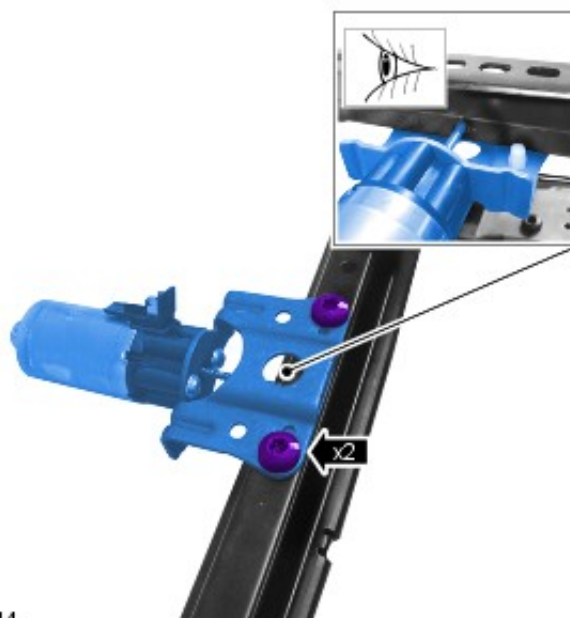


E137444

Torque: 10 Nm

9.

NOTE:

Make a note of the orientation of the electrical connector.

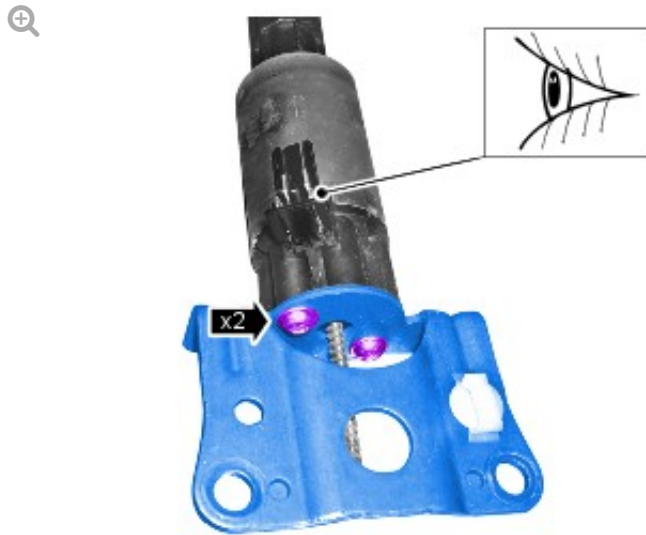

E137445



Torque: 1.7 Nm

INSTALLATION

1.

CAUTIONS:

- Make sure that the front seat track motor is correctly installed to the front seat track.
- Make sure that these components are installed to the noted removal position.

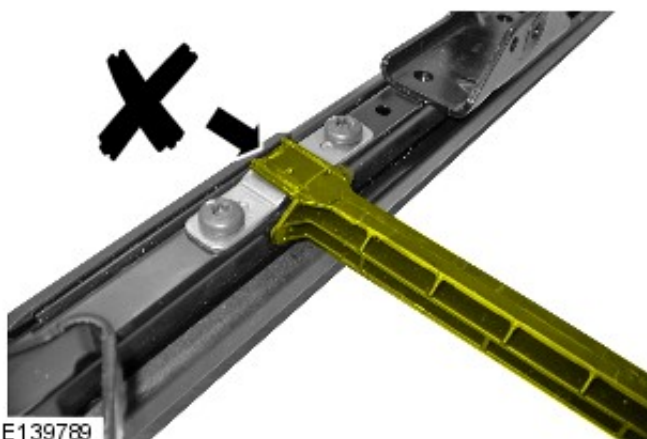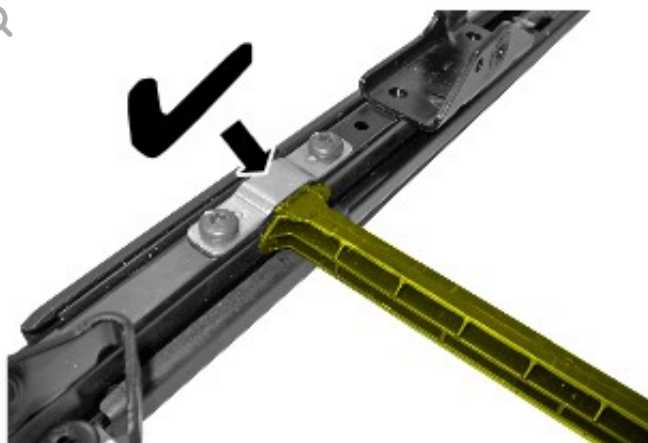

2. To install, reverse the removal procedure.