

2016.0 RANGE ROVER (LG), 501-10

SEATING - STANDARD WHEEL BASE

LUMBAR ASSEMBLY (G1521614)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTE:

Removal steps in this procedure may contain installation details.




All vehicles

1. Make the SRS system safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Refer to: [Front Row Seat Head Restraint](#) (501-10A Seating - Standard Wheel Base, Removal and Installation).

3.


CAUTION:

Care must be taken to avoid damaging the surrounding components.

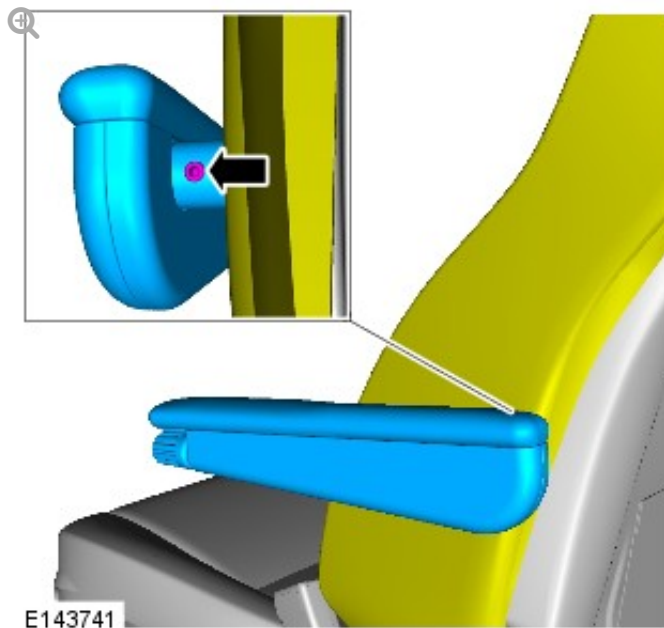

Torque: 25 Nm



4.

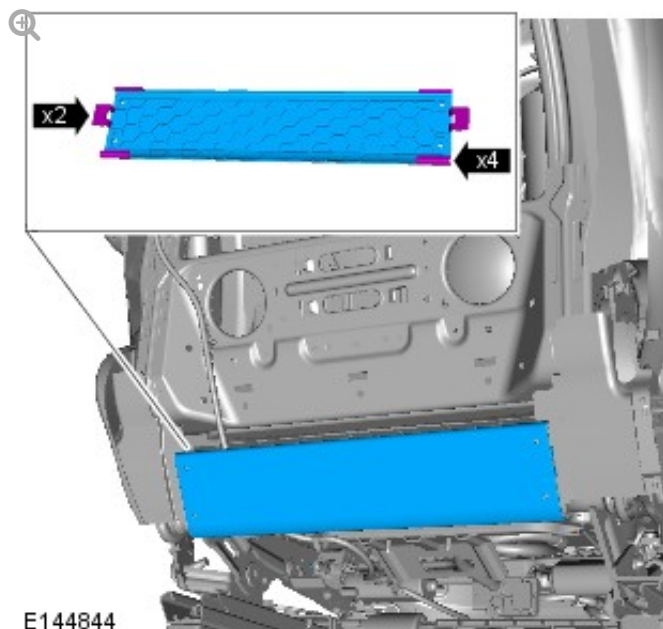

5.





6.

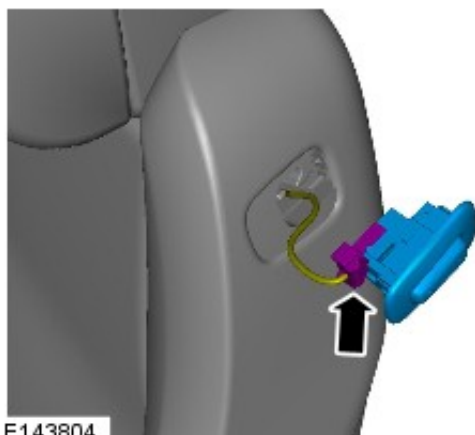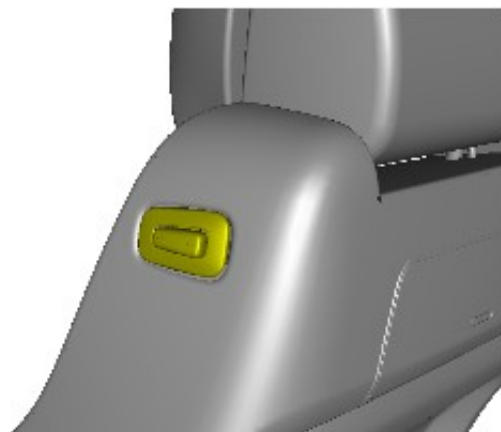


E143804

7.

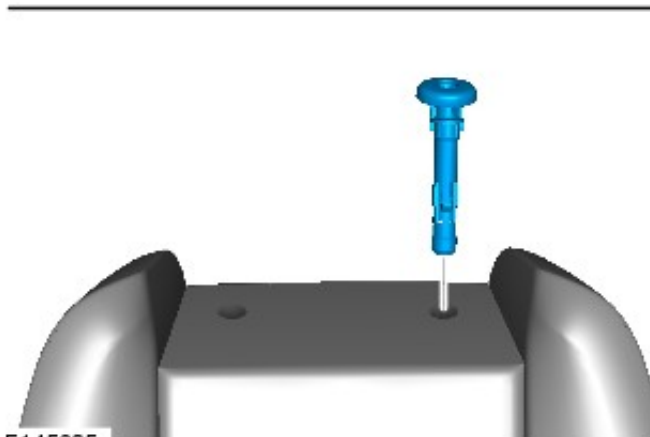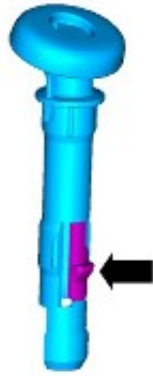


E145605

8.

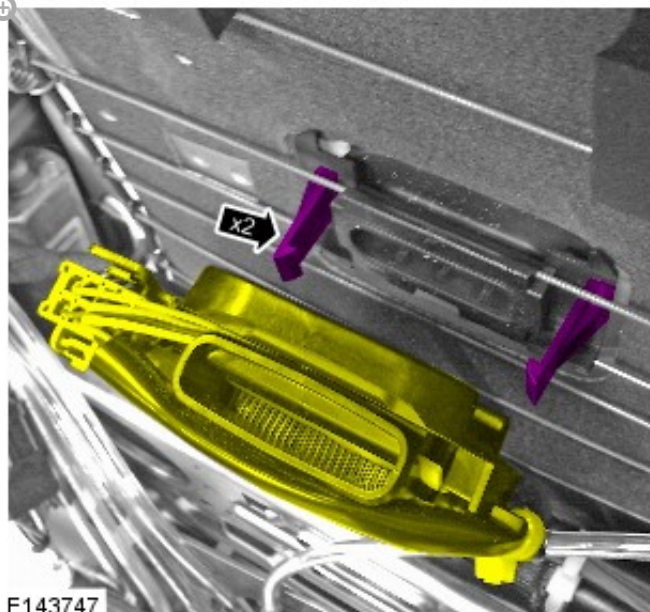


E143747


9.

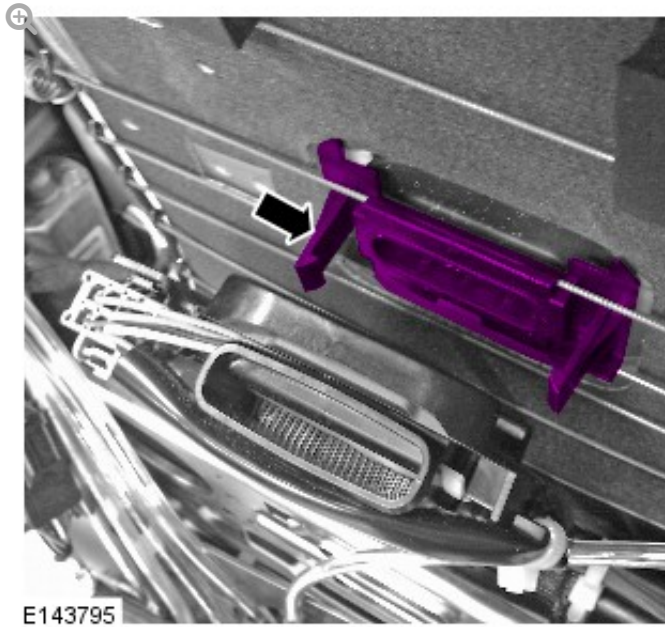


10.

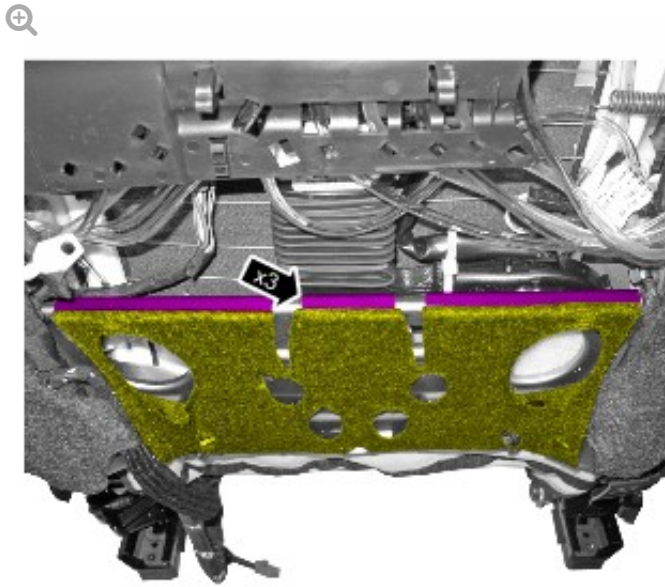


11.

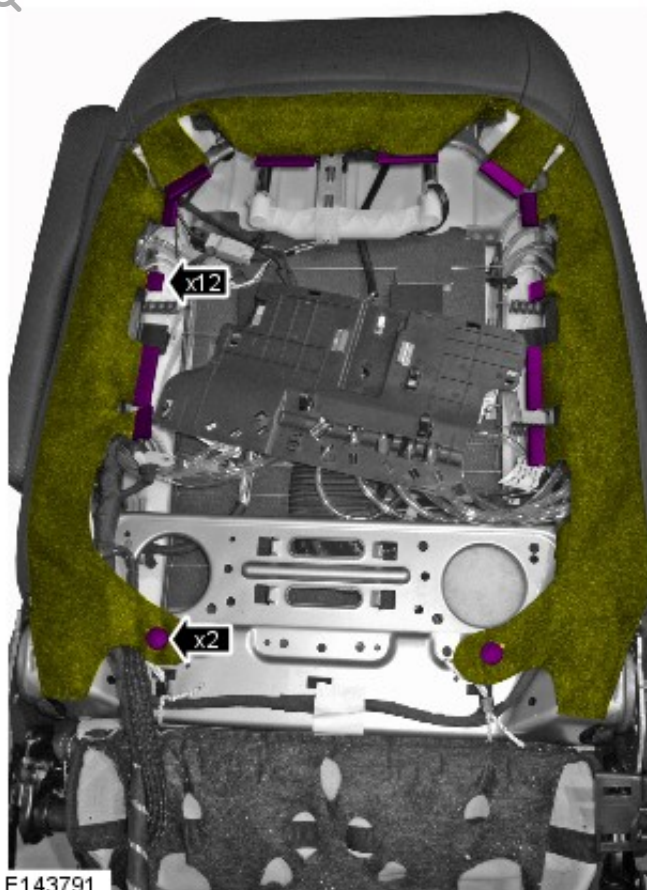

12.

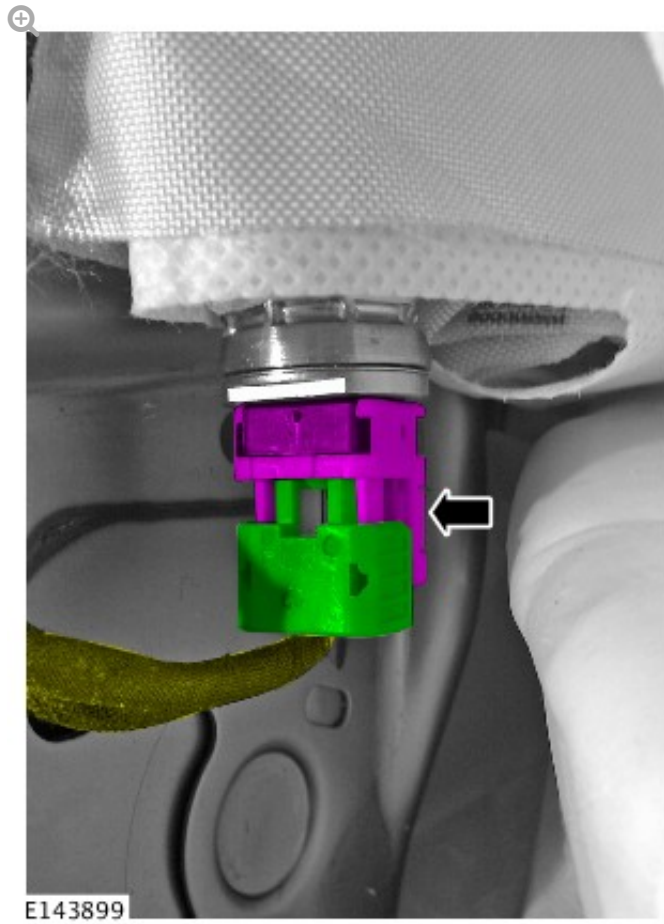

13.

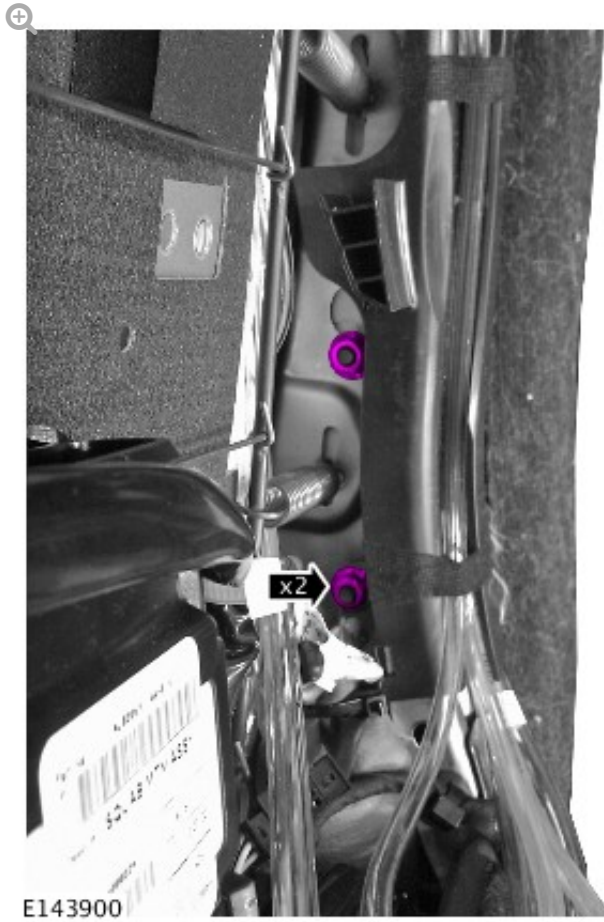

E143900


Torque: 7 Nm

14.



E143901

15.

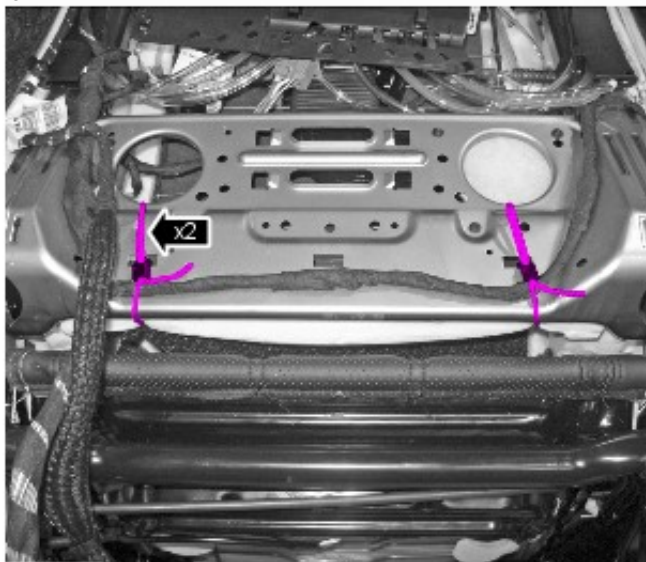


E143799

16.

NOTES:

- LH illustration shown, RH is similar.
- Repeat the procedure for the other side.

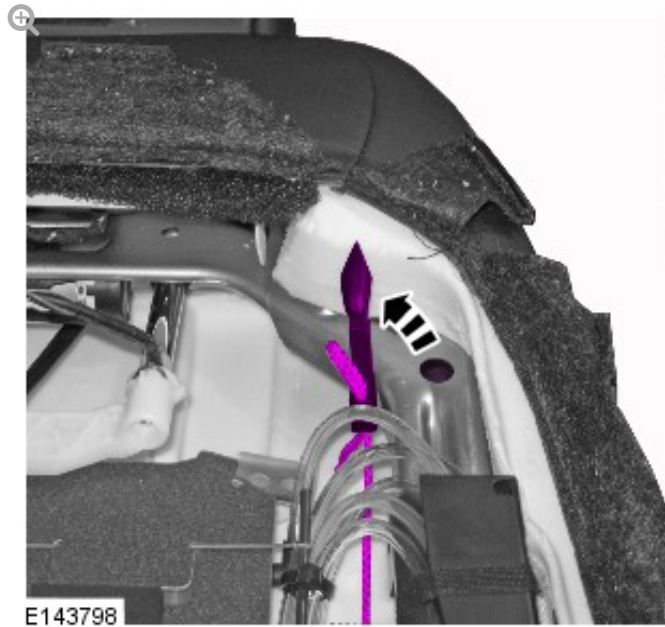


17.



Vehicles with heated front seats

18.


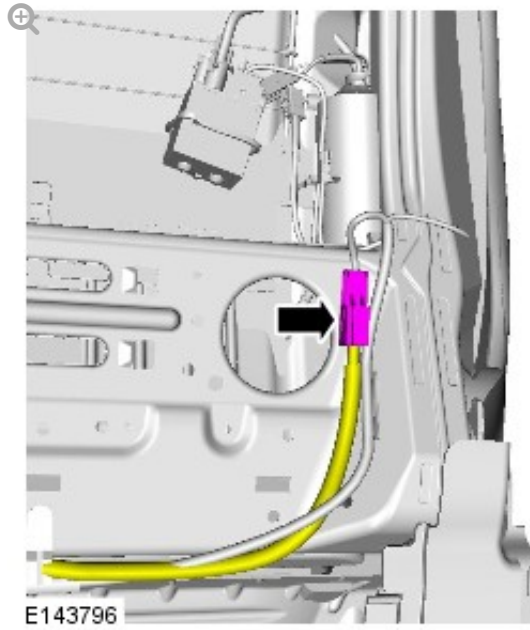


All vehicles

19.




20.

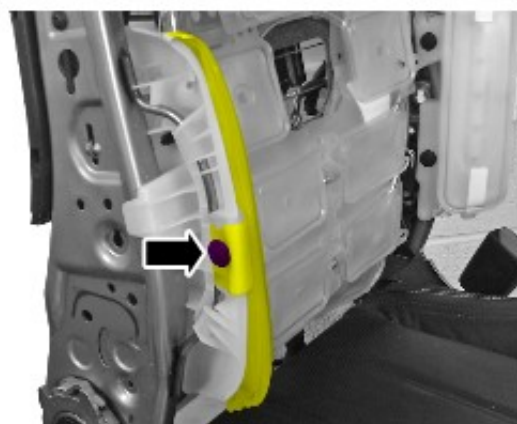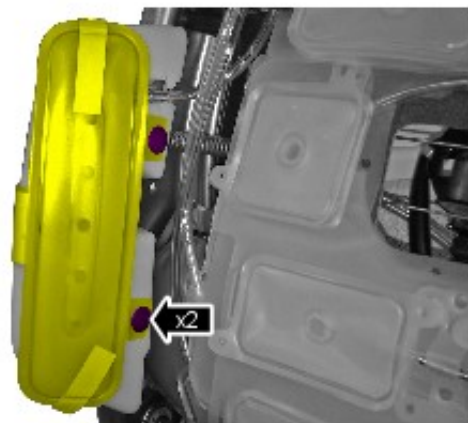


E143891

21.

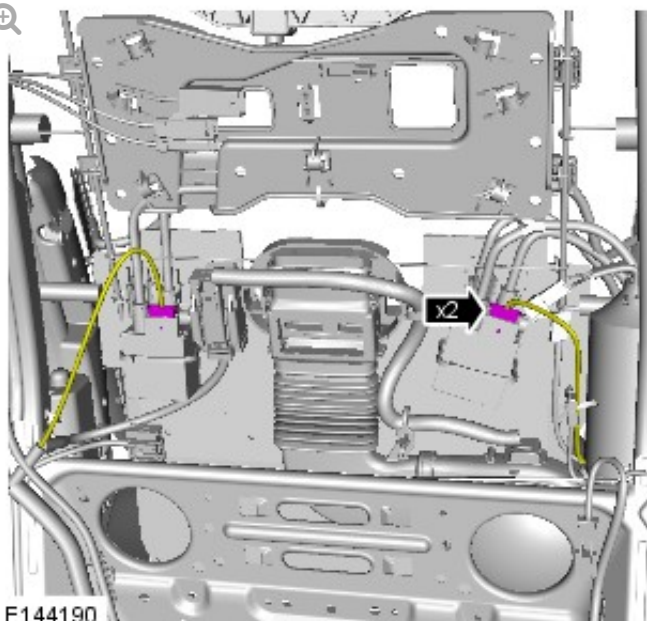


E144190


22.

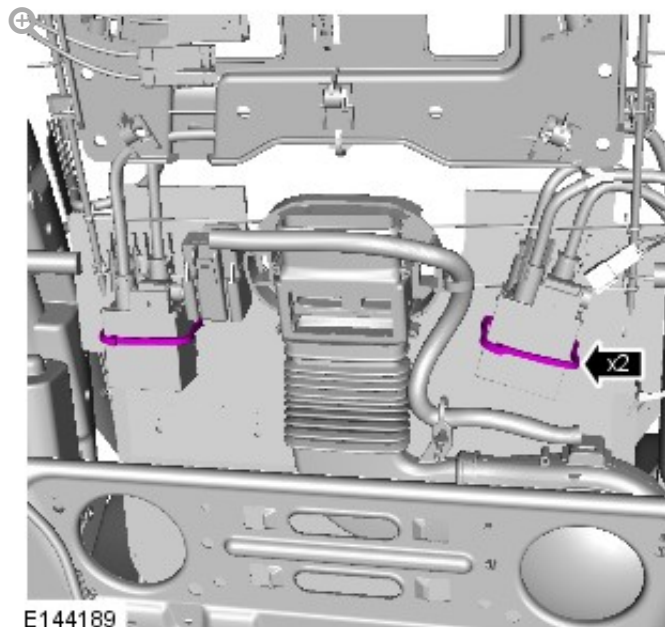

23.

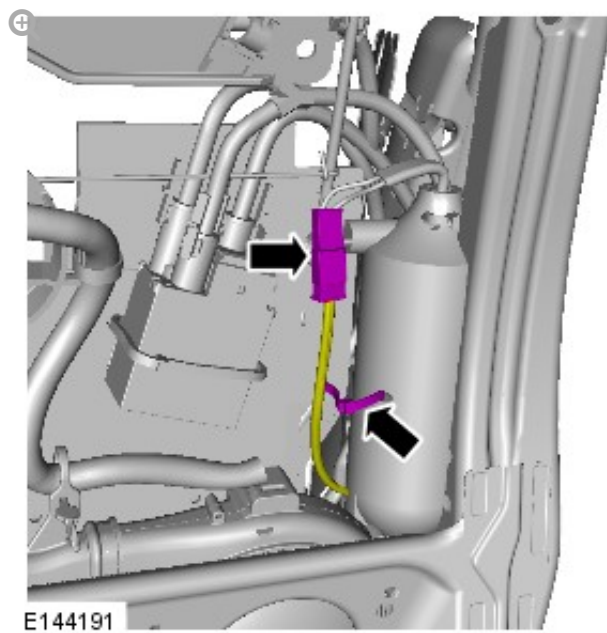

24.

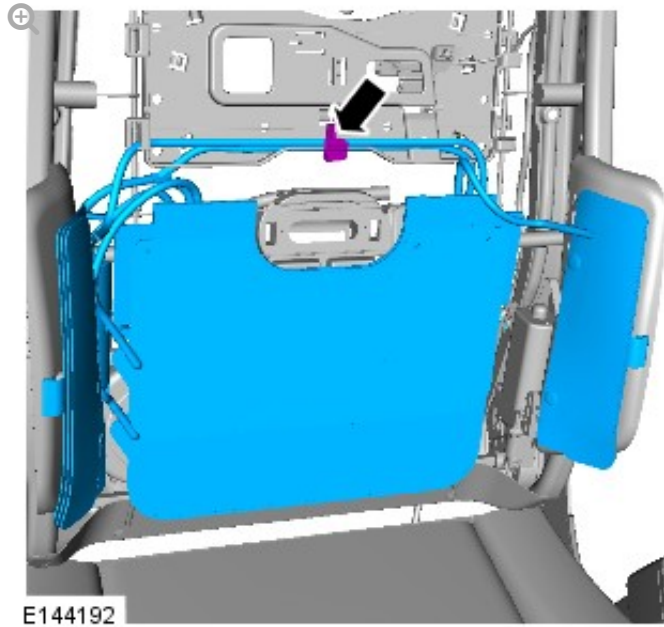

INSTALLATION

1. To install, reverse the removal procedure.