

2016.0 RANGE ROVER (LG), 501-10

SEATING - STANDARD WHEEL BASE

REAR SEAT RECLINER MOTOR - VEHICLES WITHOUT: REAR BUSINESS SEATS [G1521648]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.



All vehicles


1. Make the SRS system safe.
Refer to: Standard Workshop Practices (100-00, Description and Operation).

2.

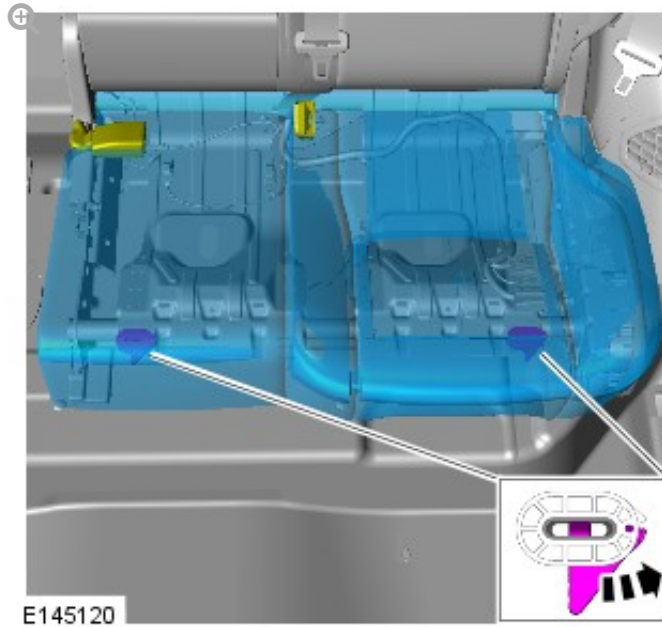


Vehicles with heated rear seat

3.

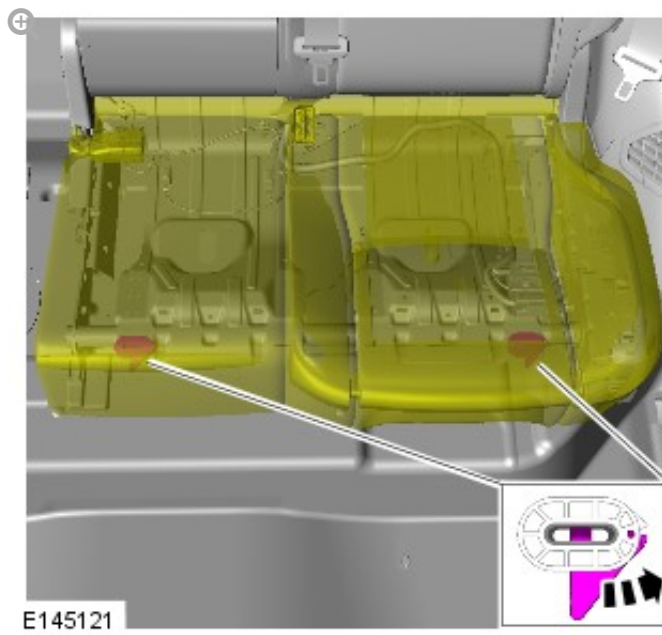

4.

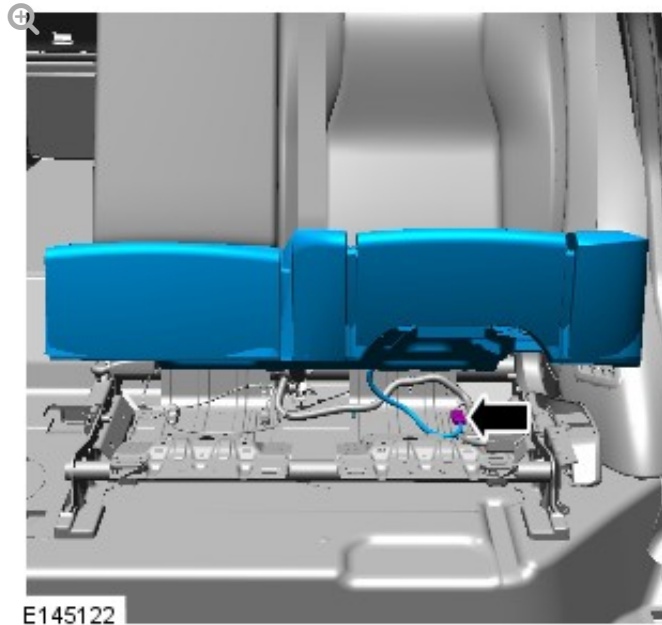


All vehicles


5.

NOTE:

RH illustration shown, LH is similar.

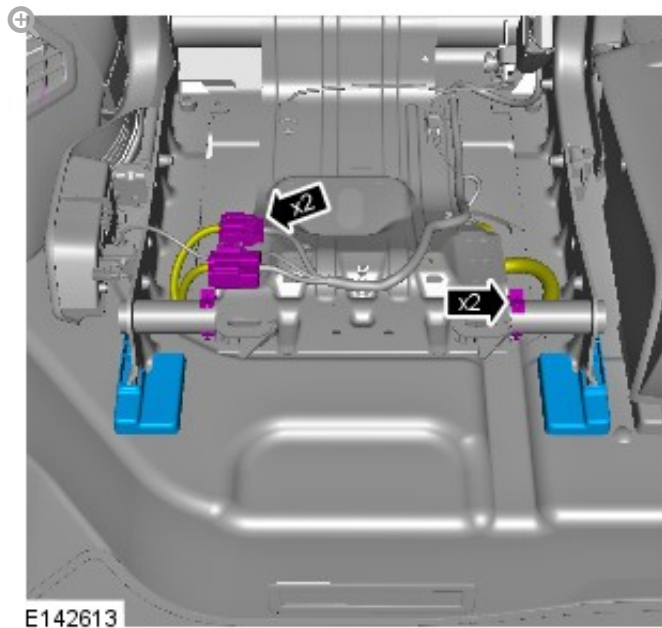


6.

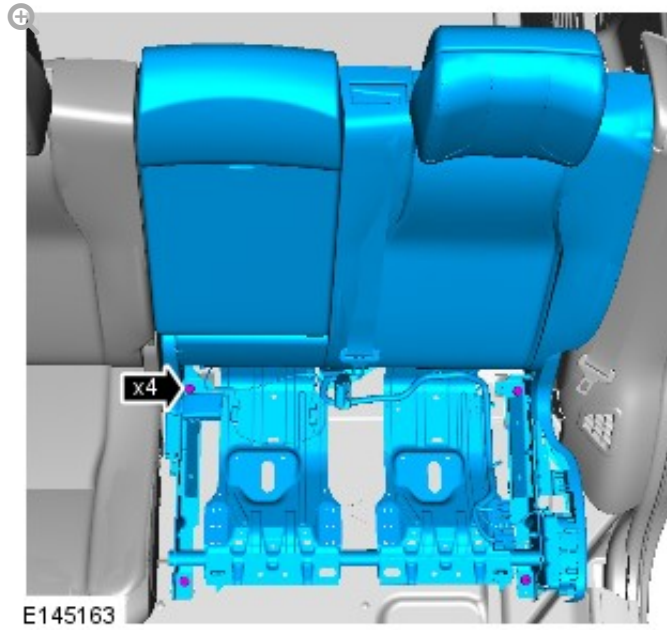


Torque: 50 Nm

7.

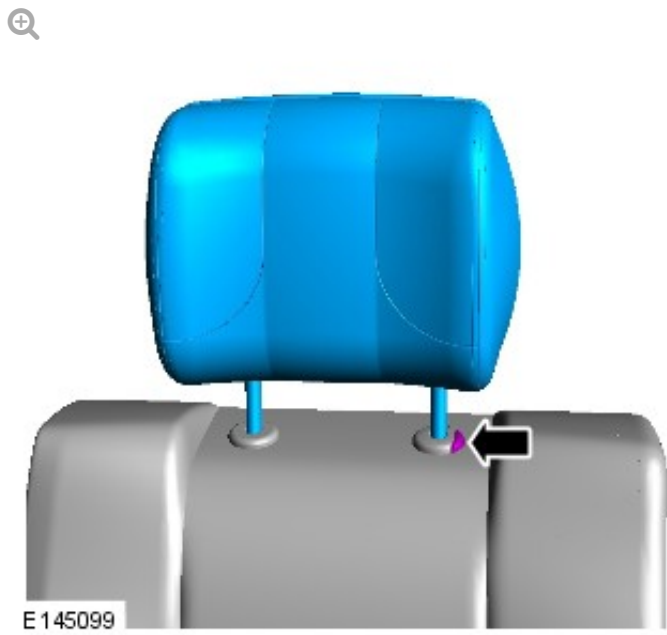


8.

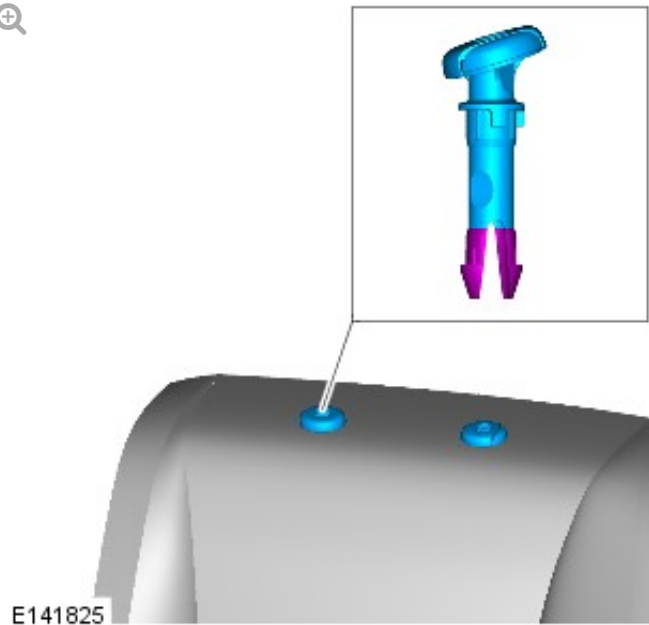

9.

NOTE:

LH shown.

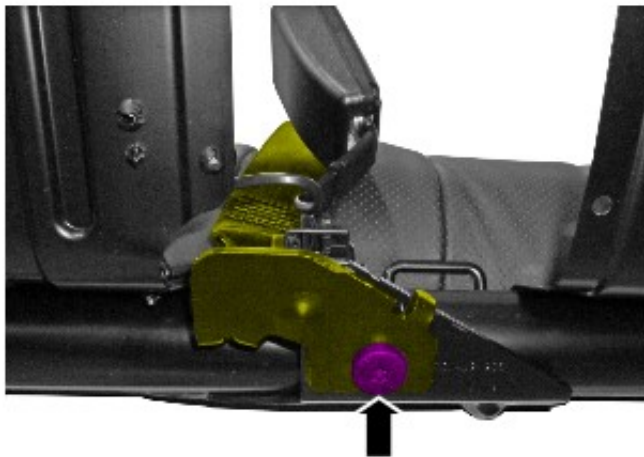

E145160

Torque: 45 Nm

10.


NOTE:

LH shown.



E145161

11.

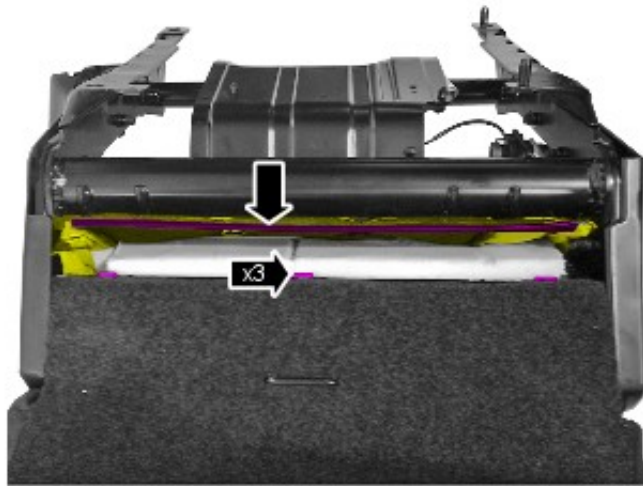

E145095

12.




E145094




Vehicles with heated rear seat

13.

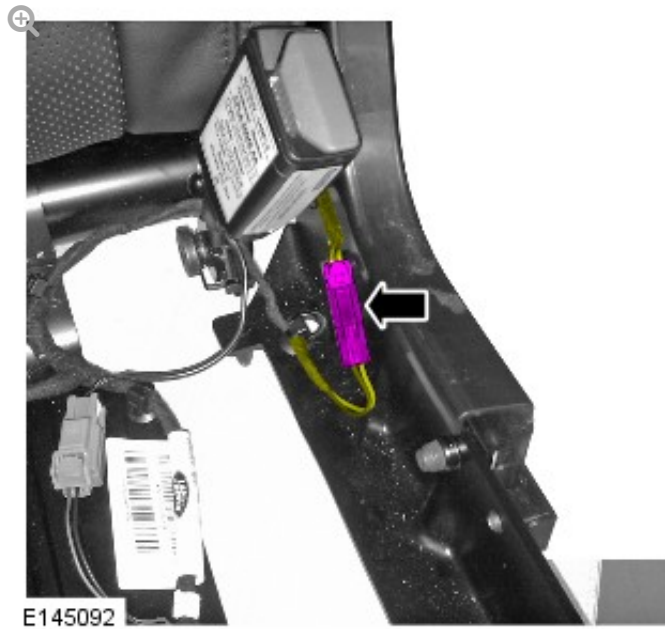

All vehicles


14.

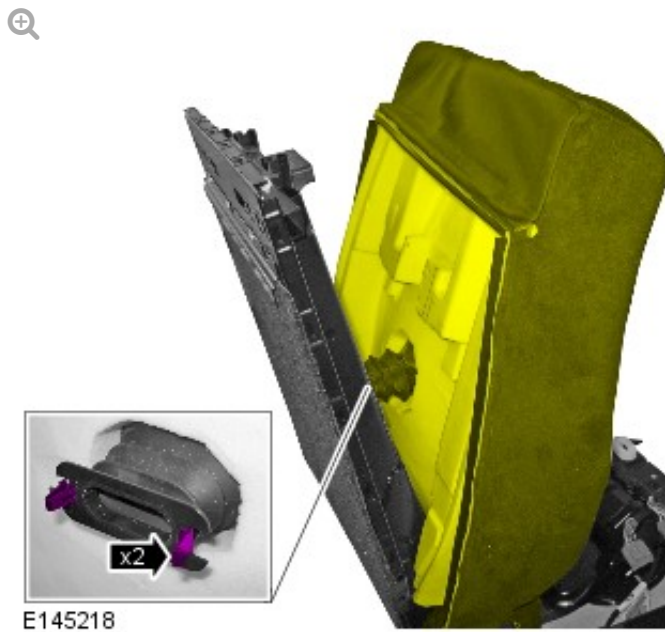


15.

NOTE:

LH shown.

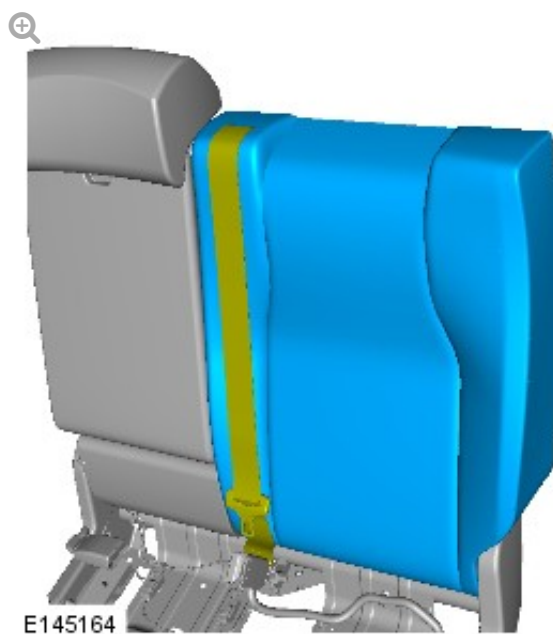


16.


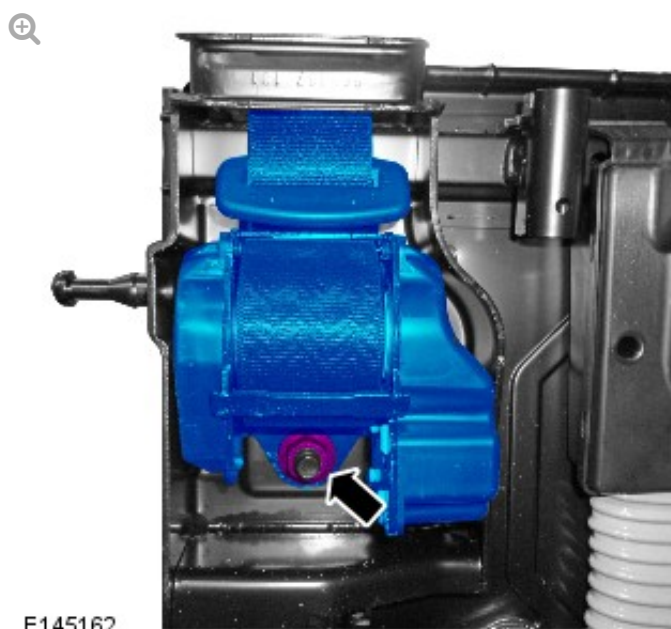


Torque: 45 Nm

17.

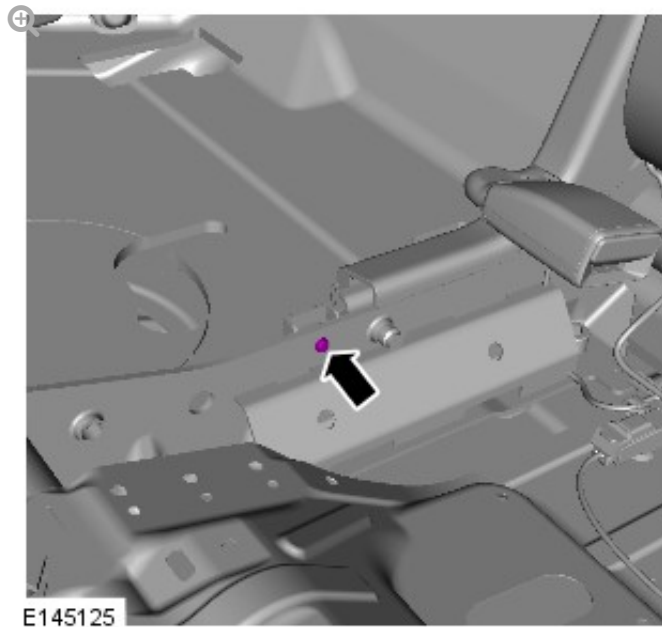

18.

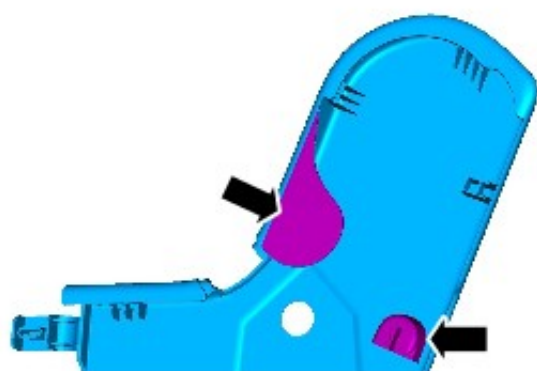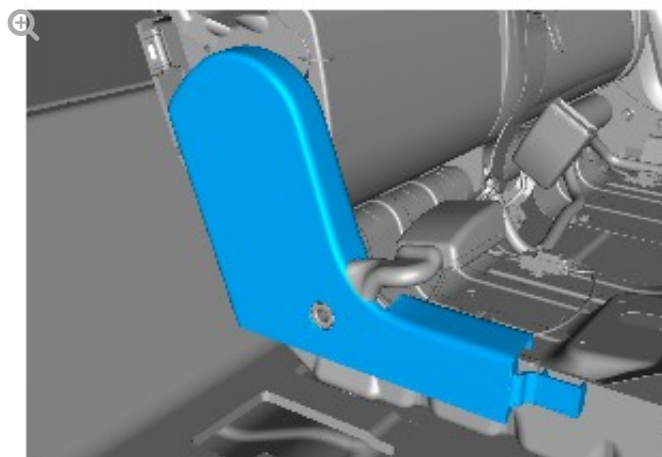


E145124

19.

NOTE:

Make sure the wiring harness is routed correctly.

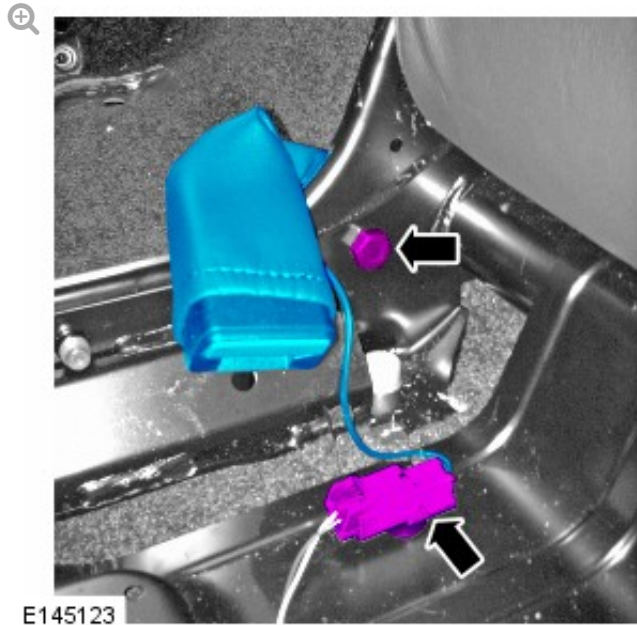


Torque: 40 Nm

20.

NOTES:


- Make sure the wiring harness is routed correctly.
- RH illustration shown, LH is similar.

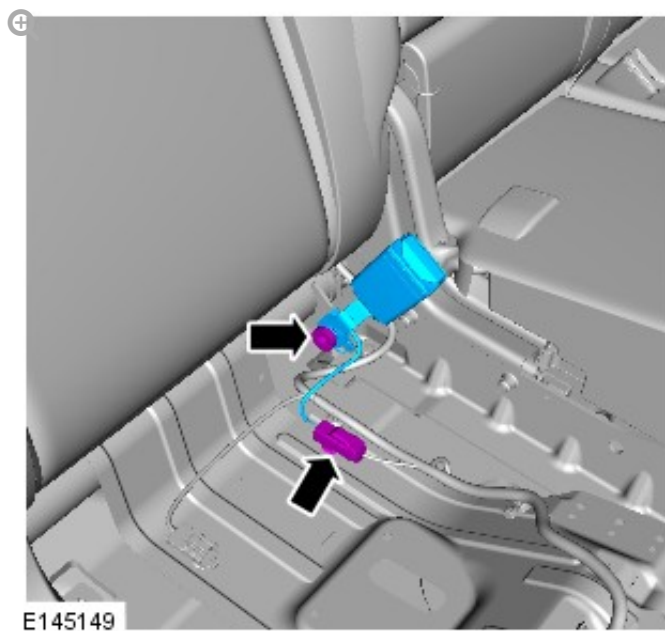

E145149


Torque: 40 Nm

21.

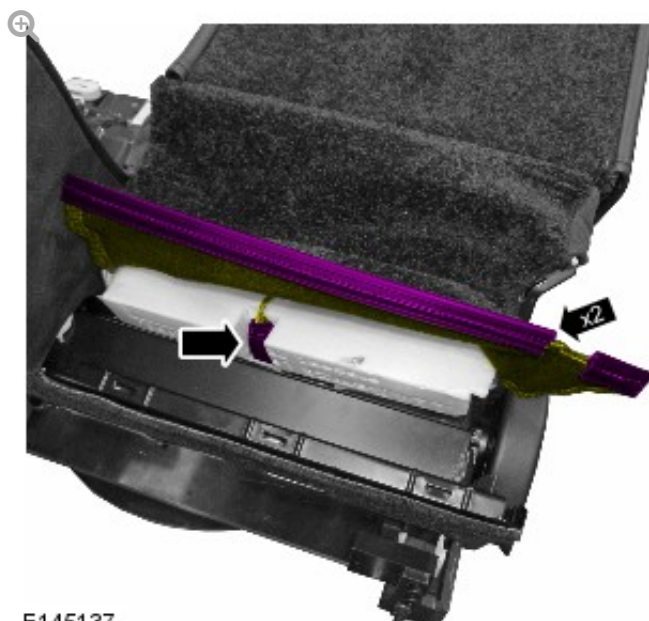

E145137

22.

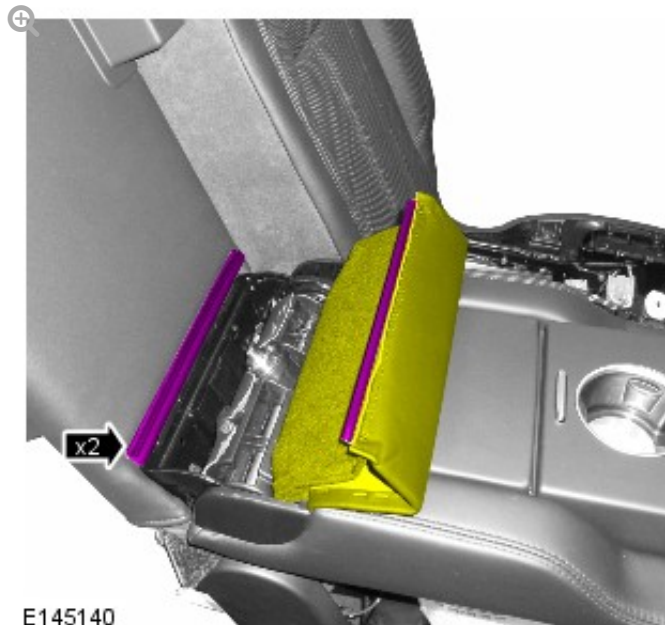

E145140


23.



E145136



Torque: 10 Nm

24.

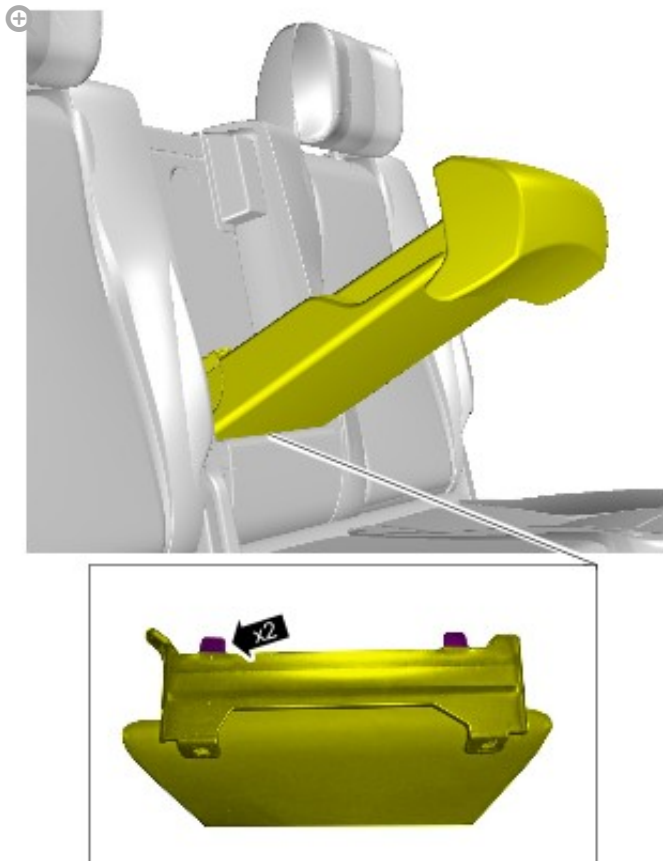


E145135

25.

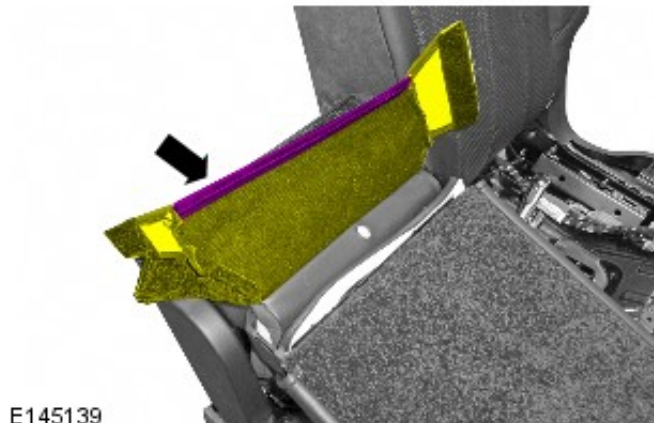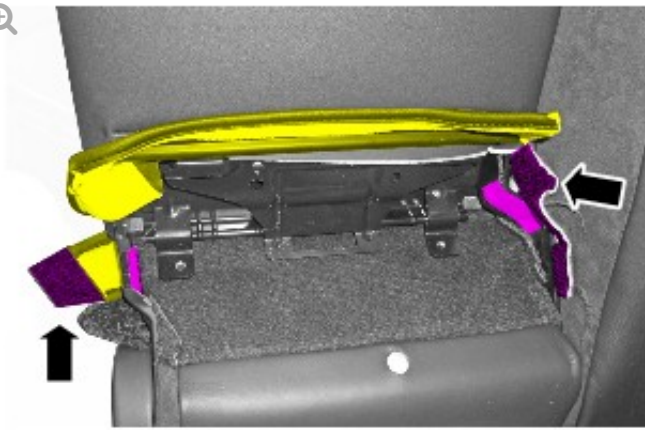


E145139

26.

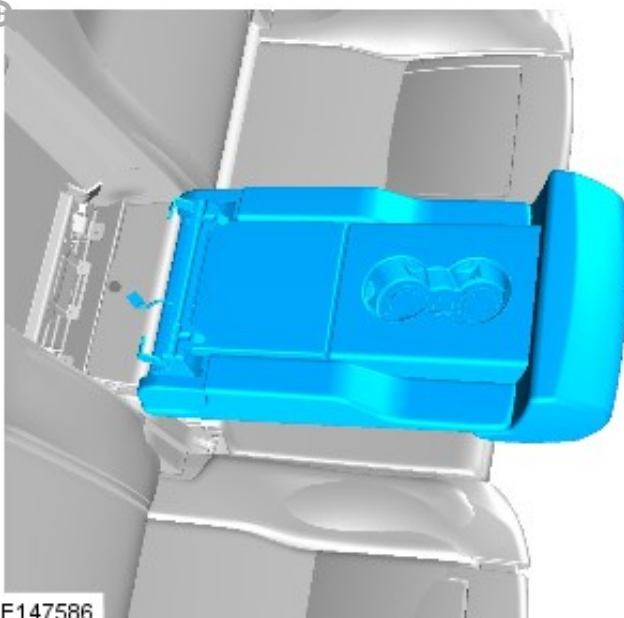


E147586


27.

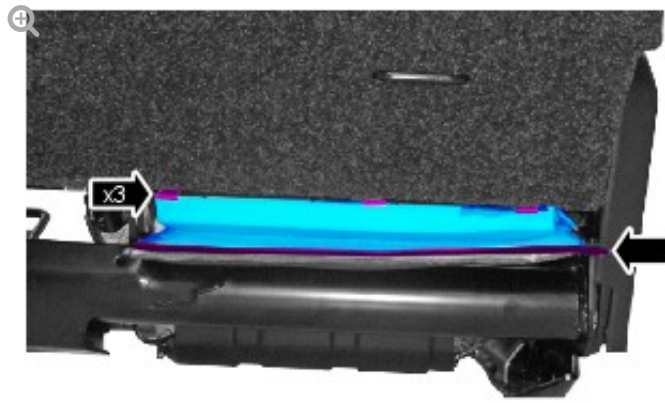

E145693

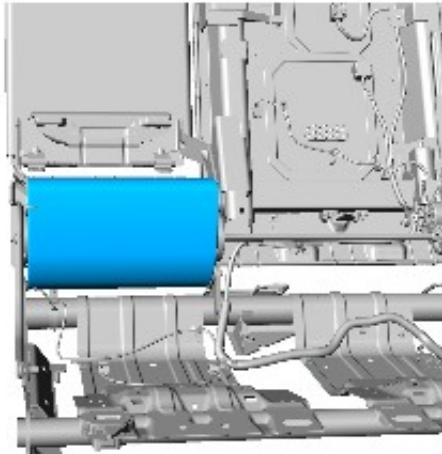


28.

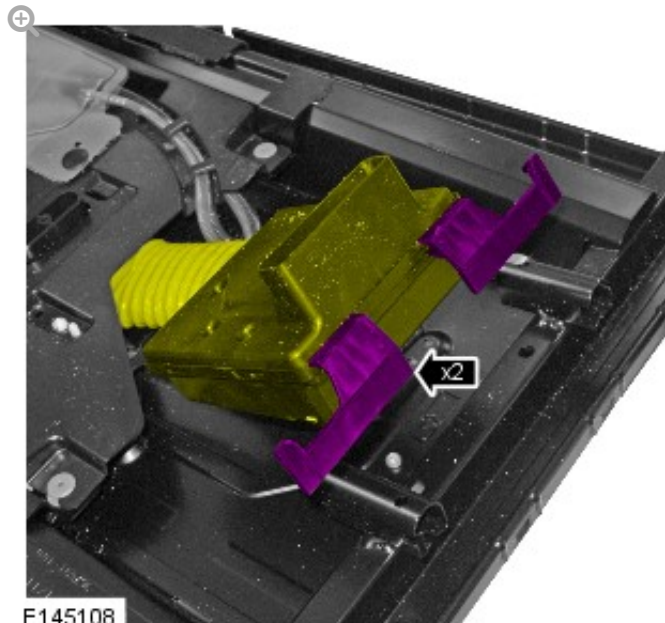


E145108

29.

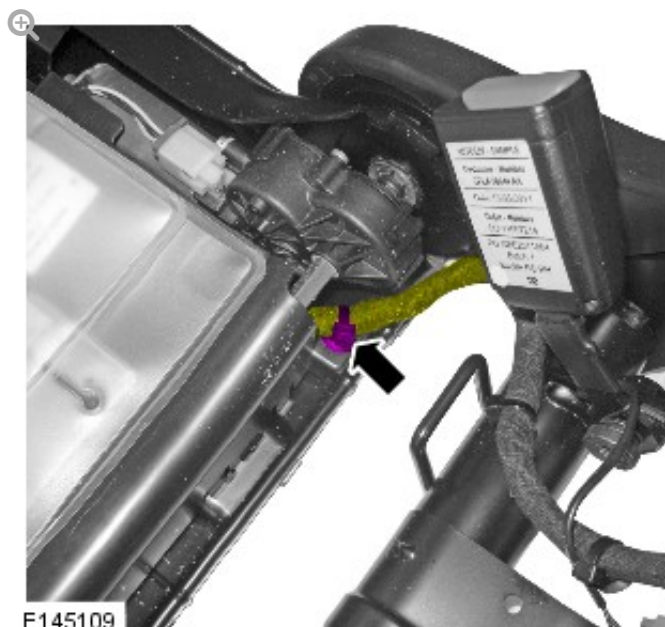


E145109

30.

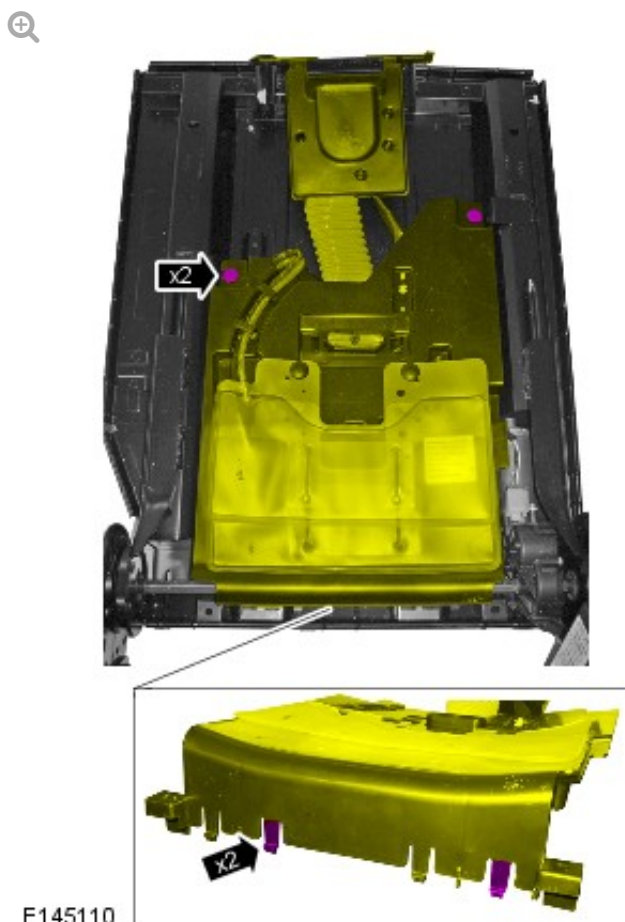


E145110

31.

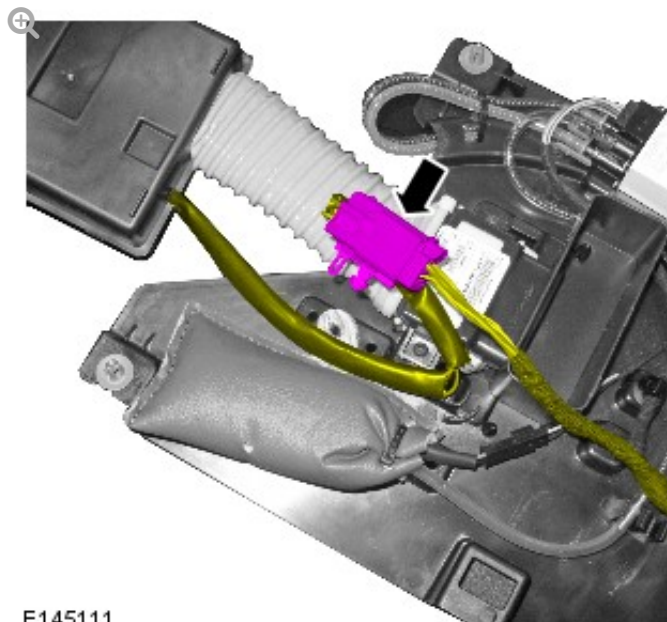



E145111

32.

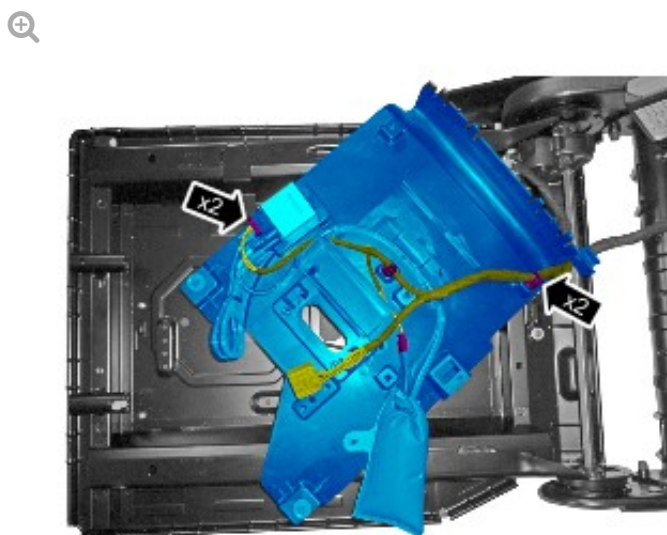


E145165

33.

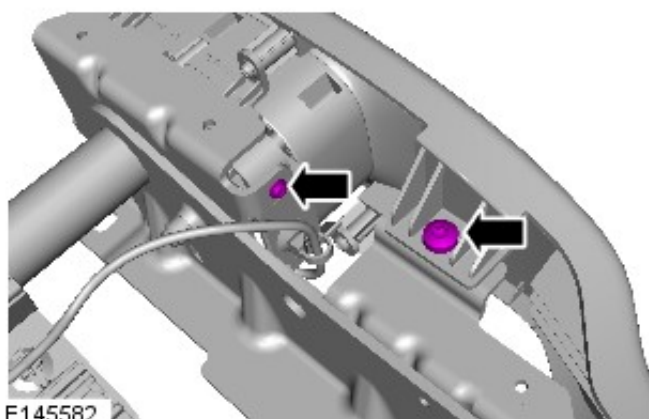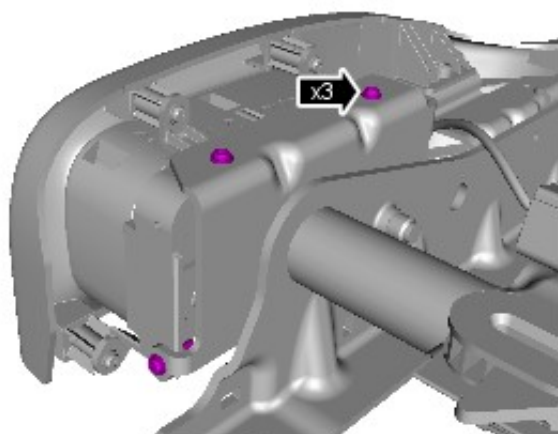


E145582

34.

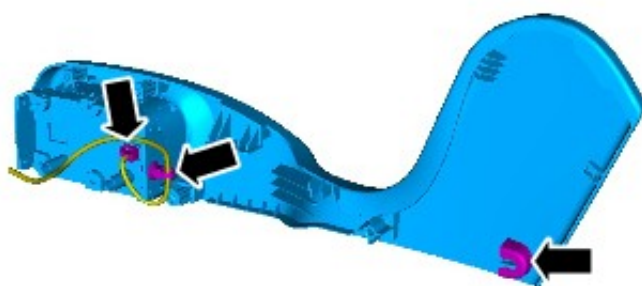


E145584

35.

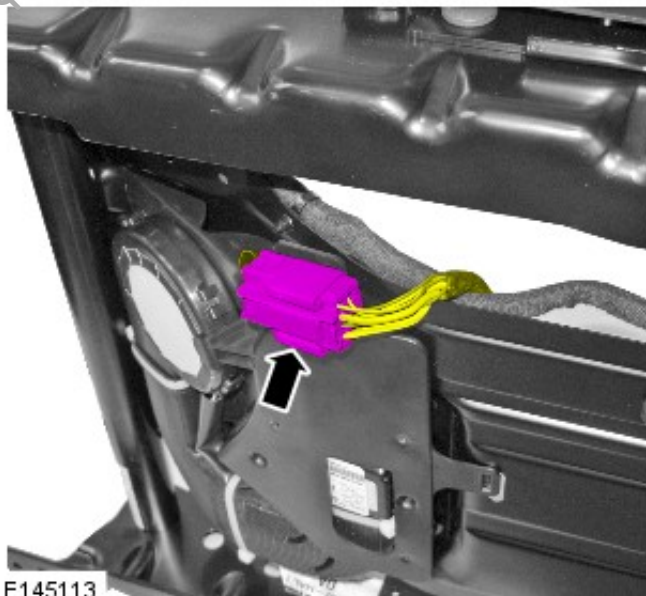



E145113

36.

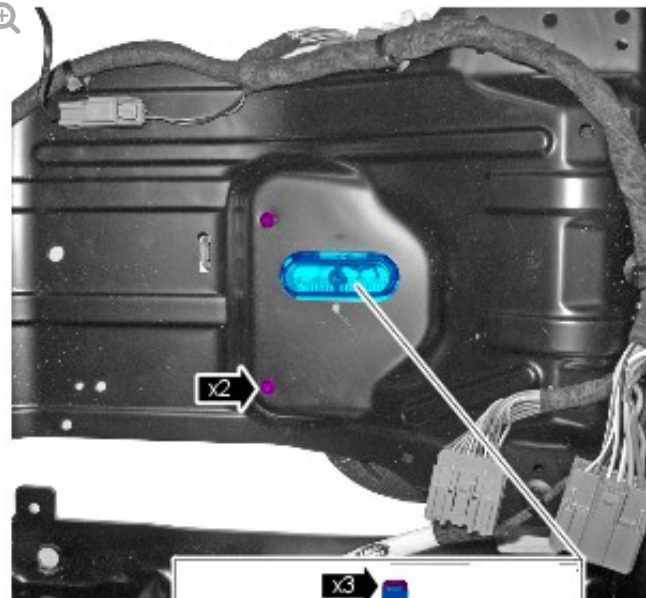

E145114

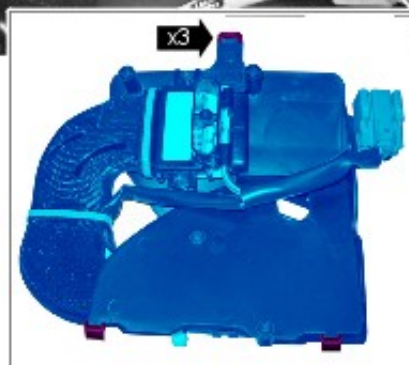

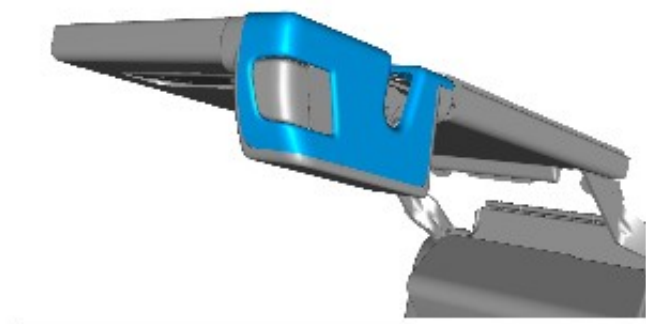

E145695




E145696



E145697


40.

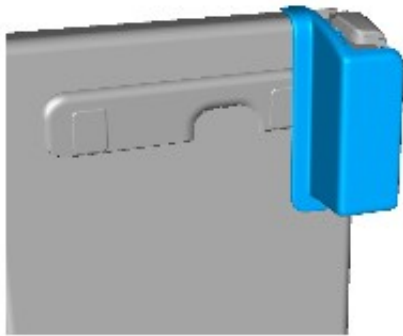

E145694




41.

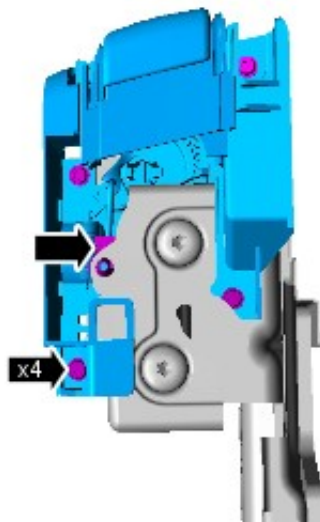


E145704

42.

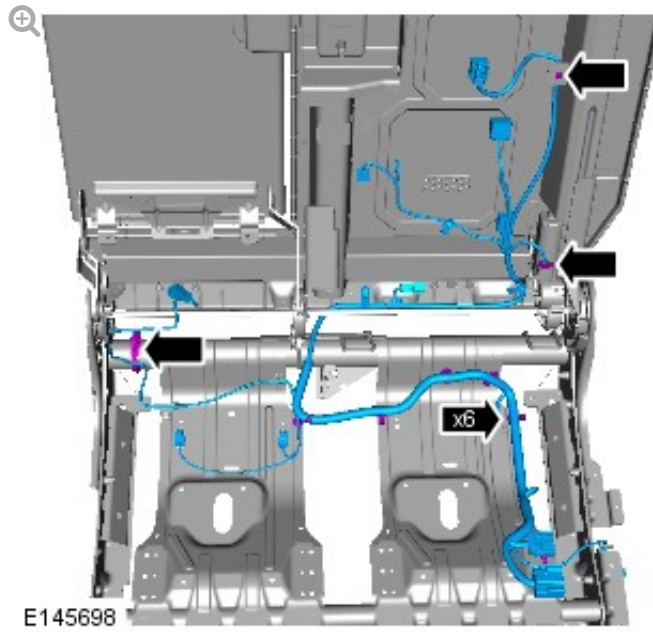

43.

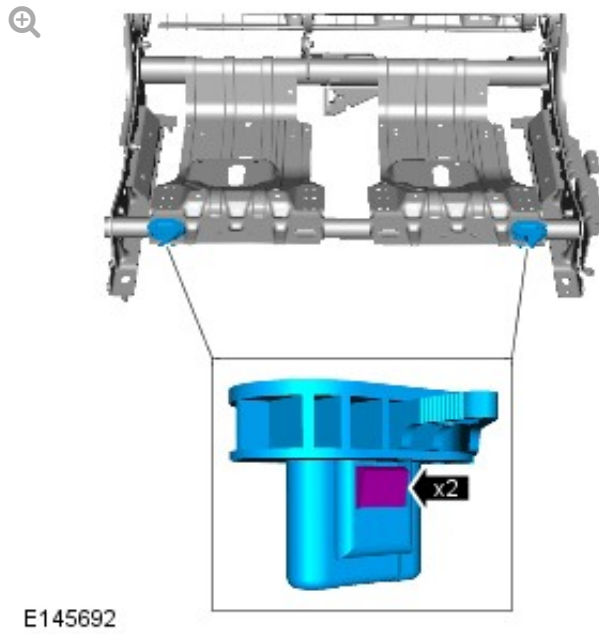

INSTALLATION

1. To install, reverse the removal procedure.