

2016.0 RANGE ROVER (LG), 501-10

SEATING - STANDARD WHEEL BASE

SEAT BASE (G1521649)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

NOTE:


Removal steps in this procedure may contain installation details.



All vehicles

1. Make the SRS system safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Refer to: [Front Row Seat](#) (501-10B Seating - Long Wheel Base, Removal and Installation).

3.

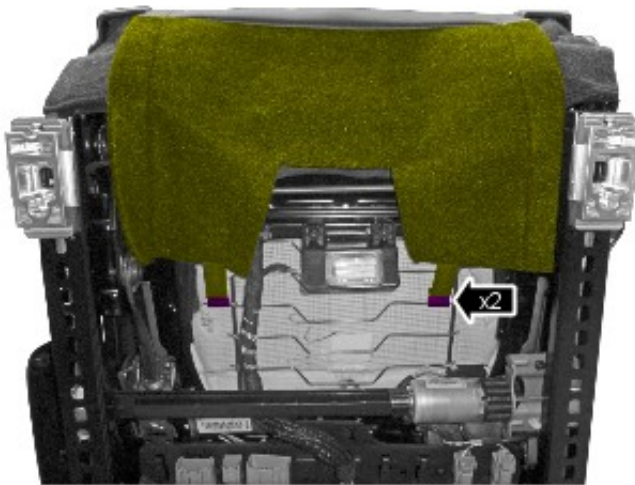


E143833


4.

NOTE:


Make sure that the clips are installed in the correct orientation.

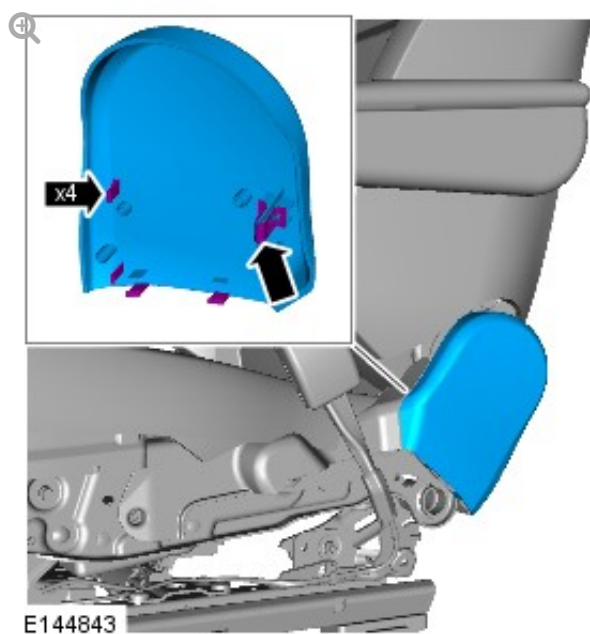

5.

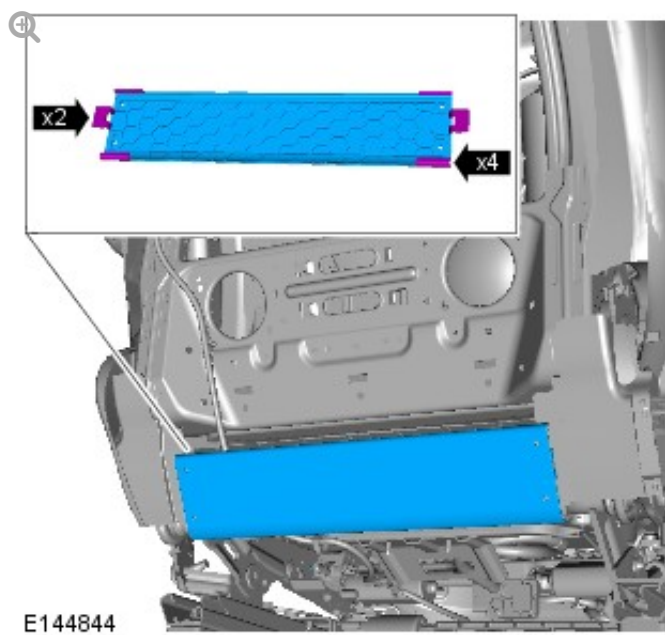


6.

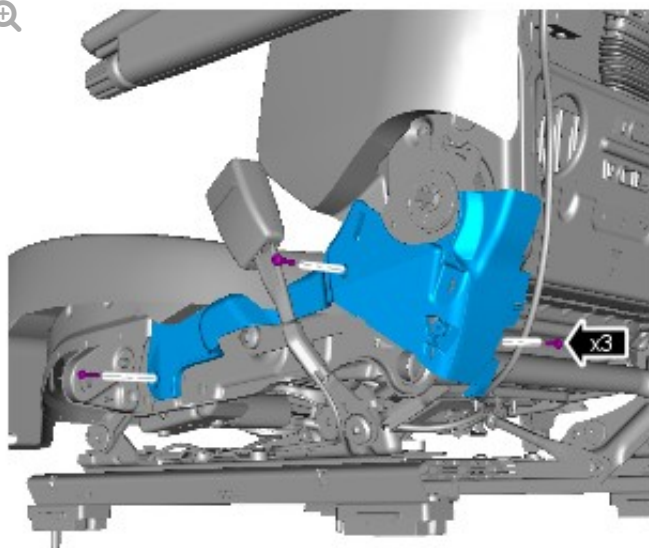


E144841

7.

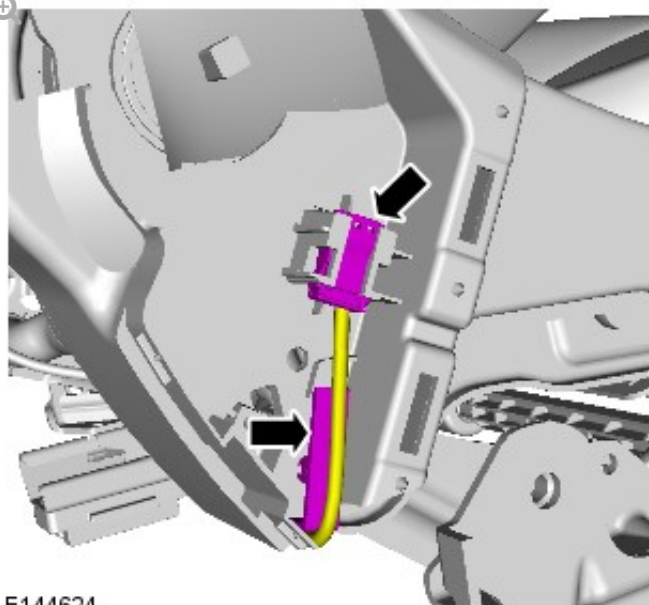


E144624

8.

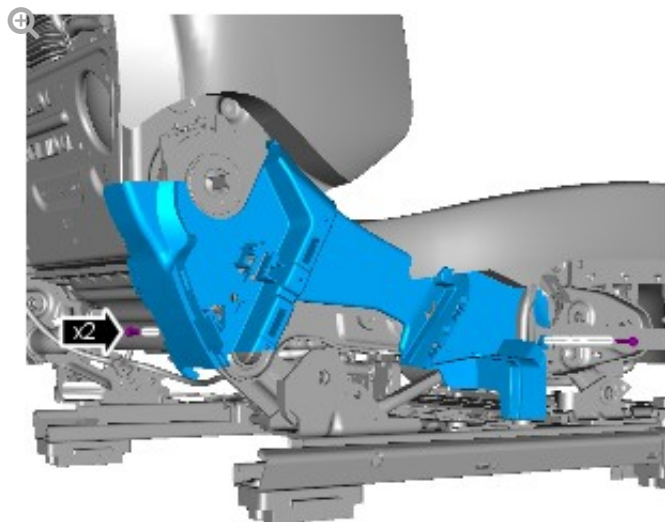


E144842

9.

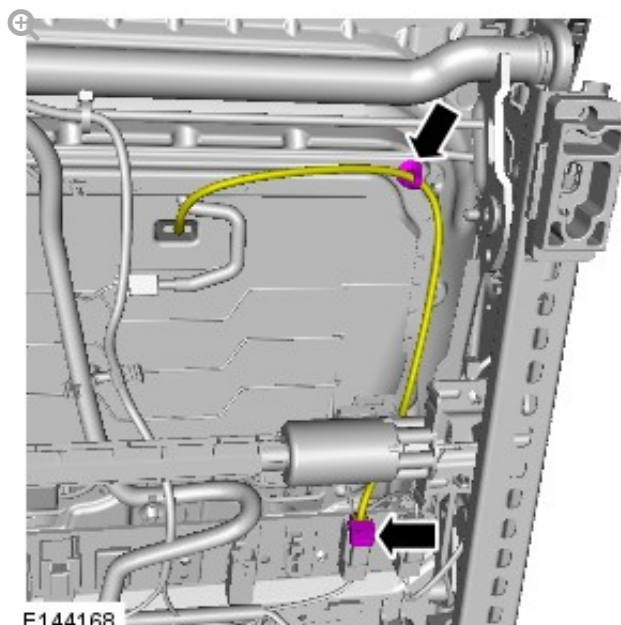


E144168

10.

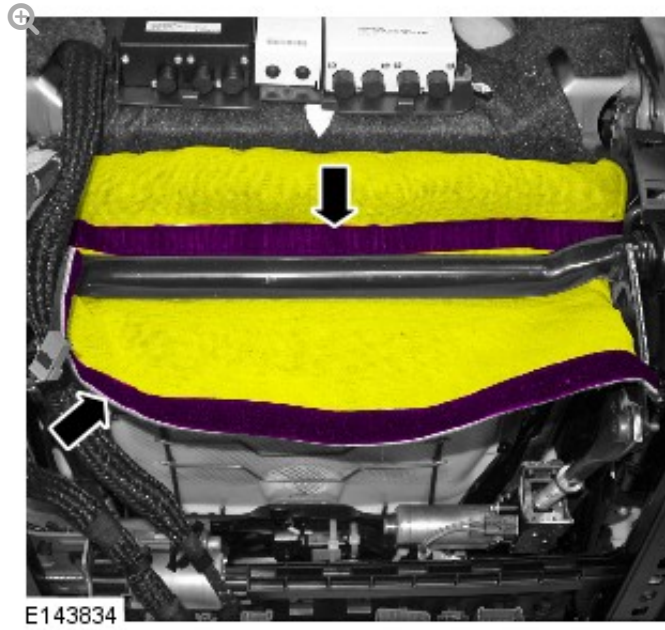


Vehicles with heated front seats

11.

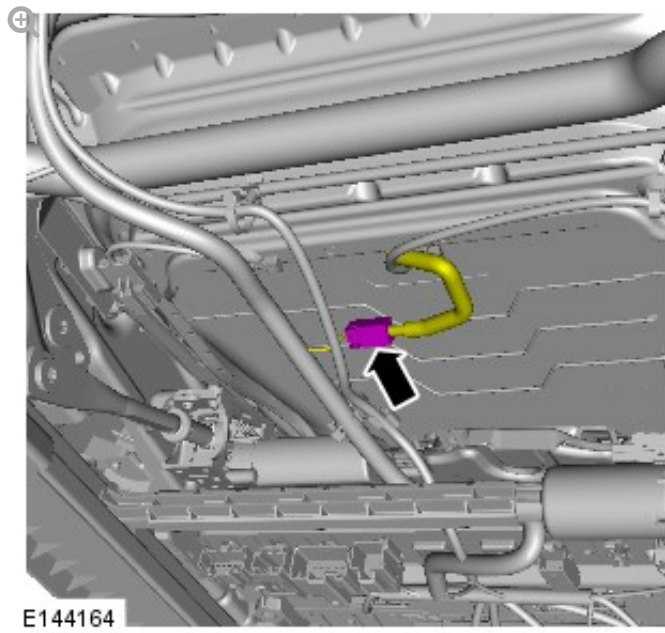


All vehicles

12.

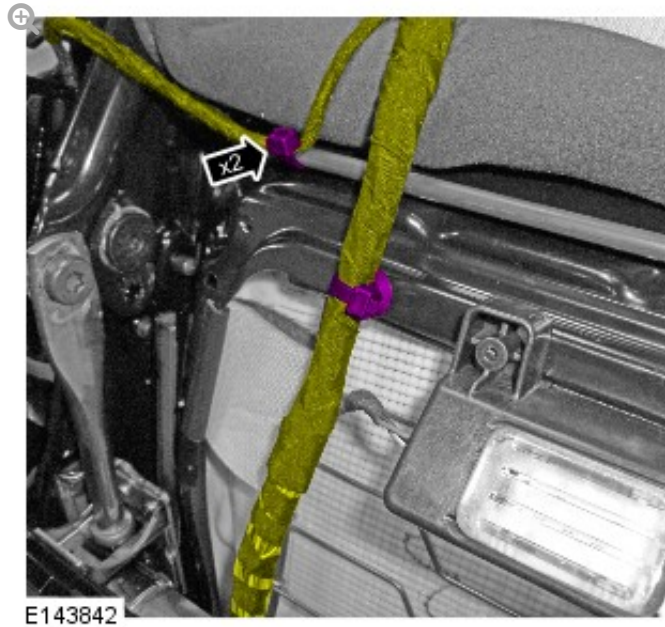


E143842

13.

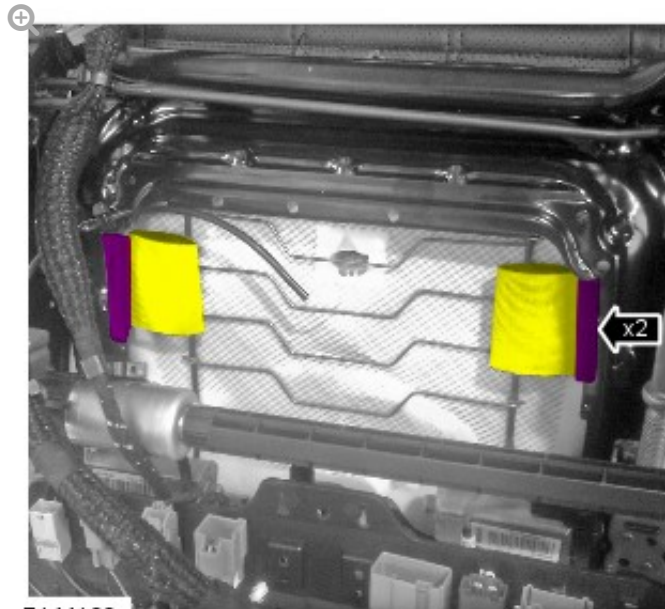


E144166


14.

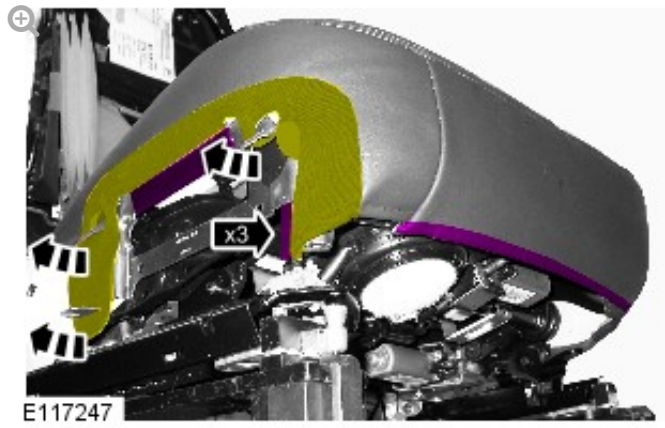


15.

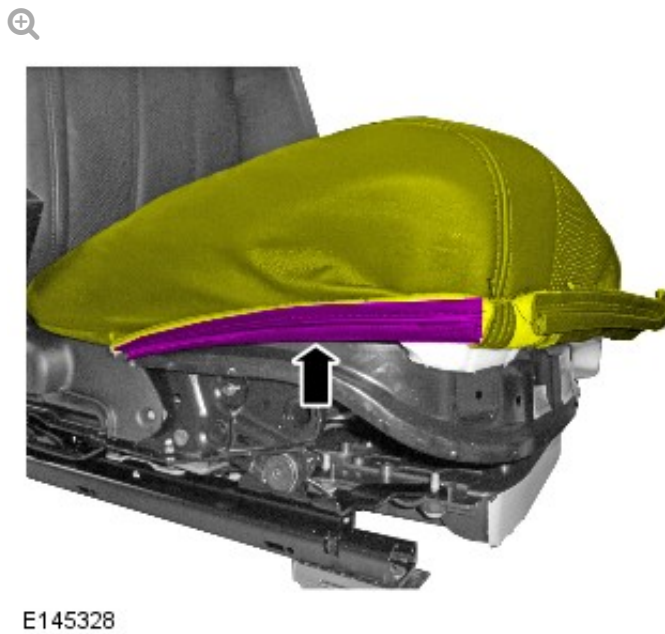

16.

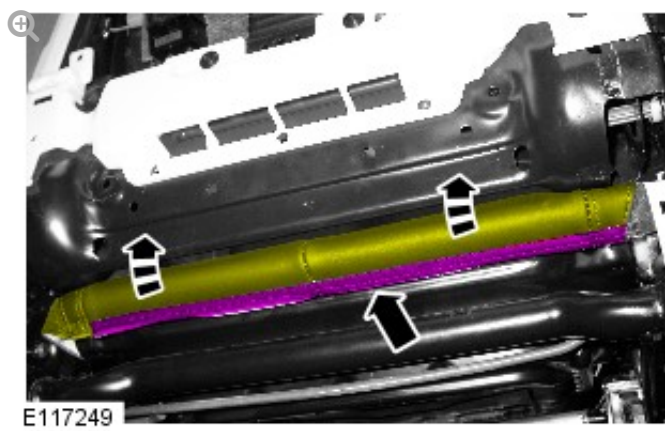

17.

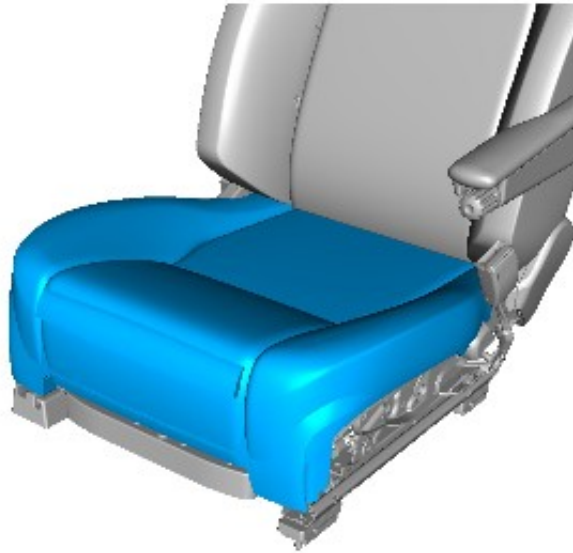

E144167




NAS vehicles

18.

CAUTIONS:

- Note the fitted position of the component prior to removal.
- It is essential that the sensor is installed in the correct orientation as shown.


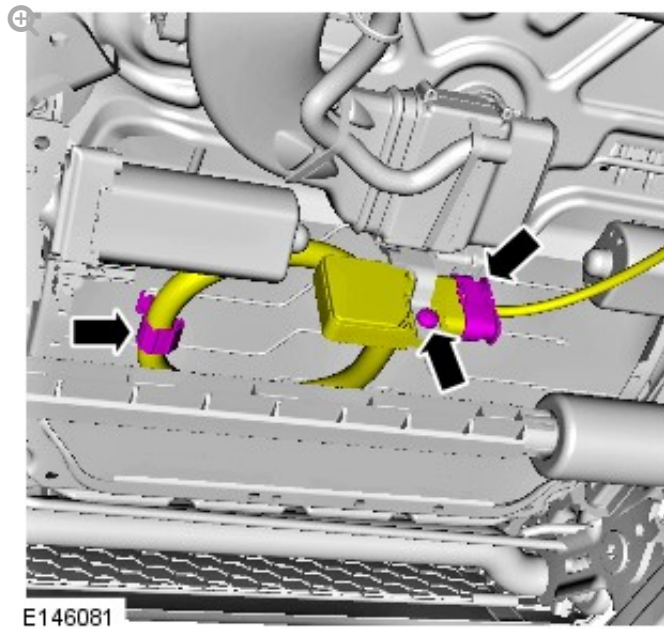


Torque: 5 Nm

19.


CAUTIONS:

- Note the fitted position of the component prior to removal.
- It is essential that the hose is installed in the correct orientation as shown.

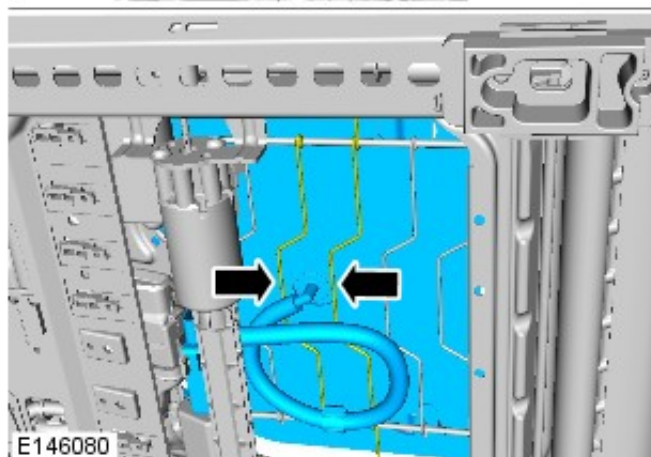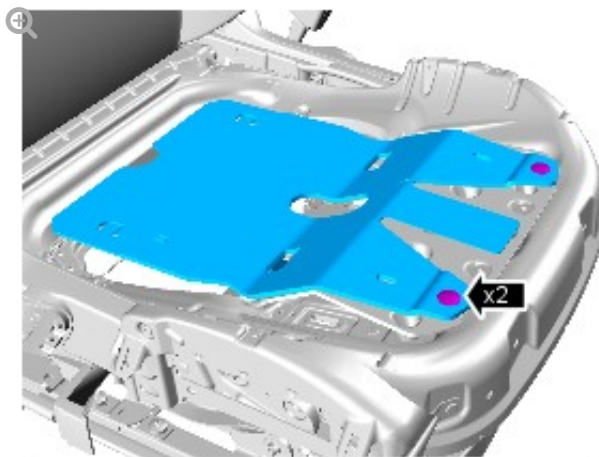


All vehicles

20.

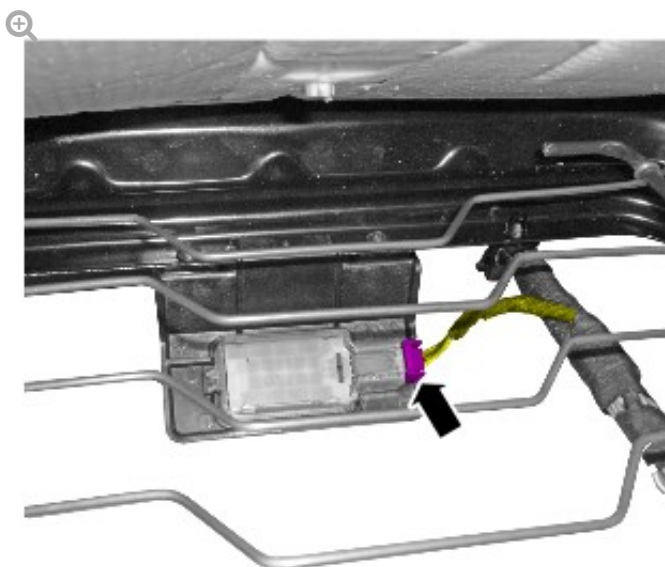


E145216



21.

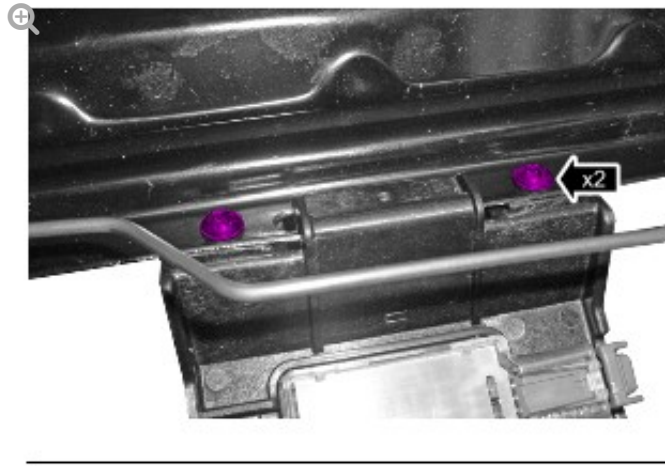

22.

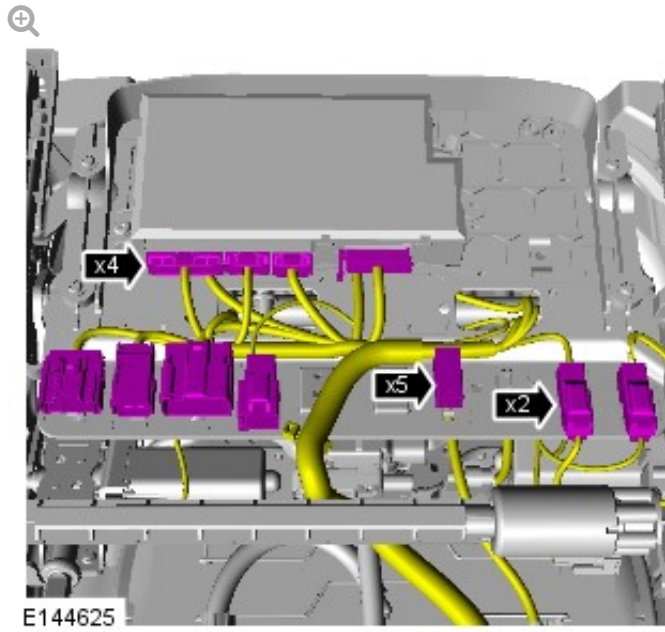


23.

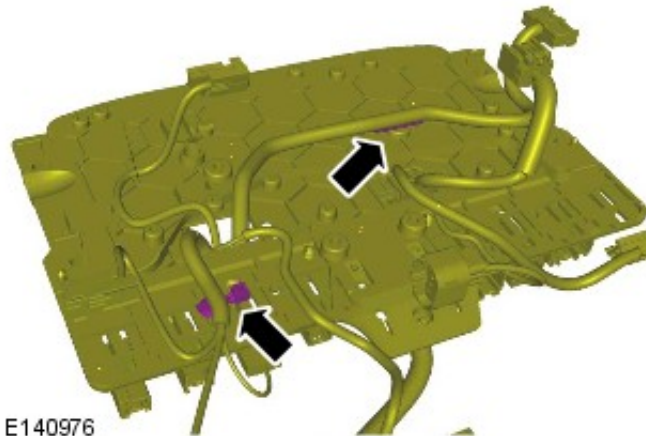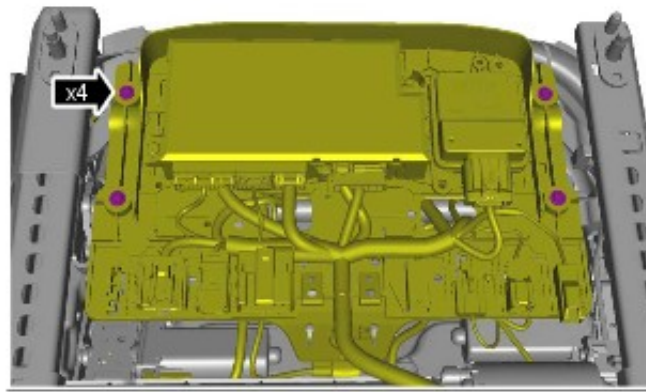

24.

NOTE:

Note the position of the wiring harnesses to aid installation.


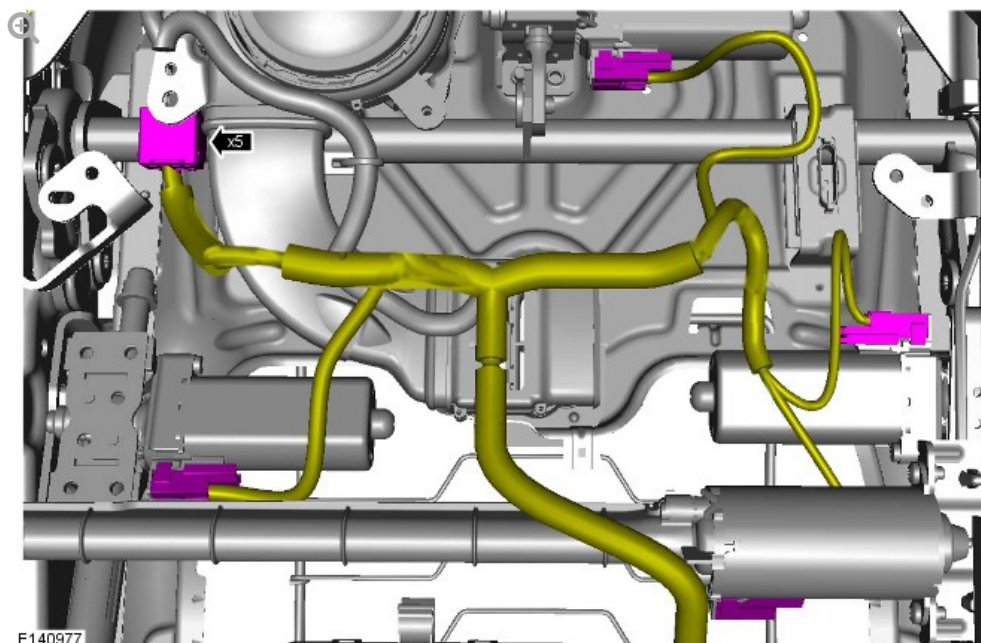


E140977

25.

CAUTION:


Take extra care not to damage the component.

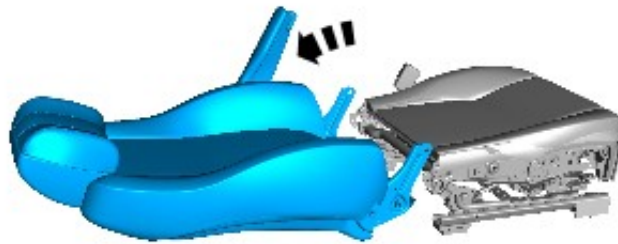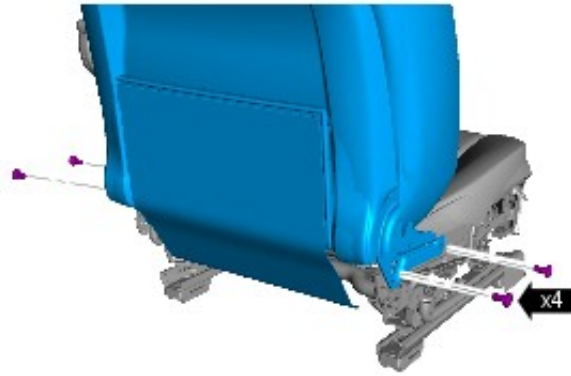

E145090


Torque: 35 Nm

26.

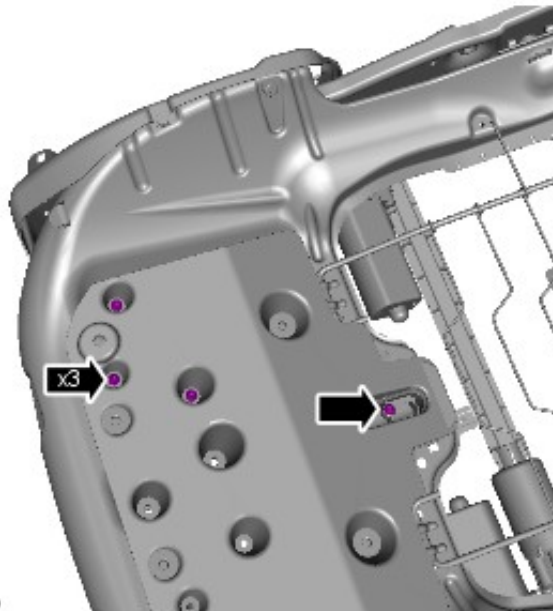

E145102

27.

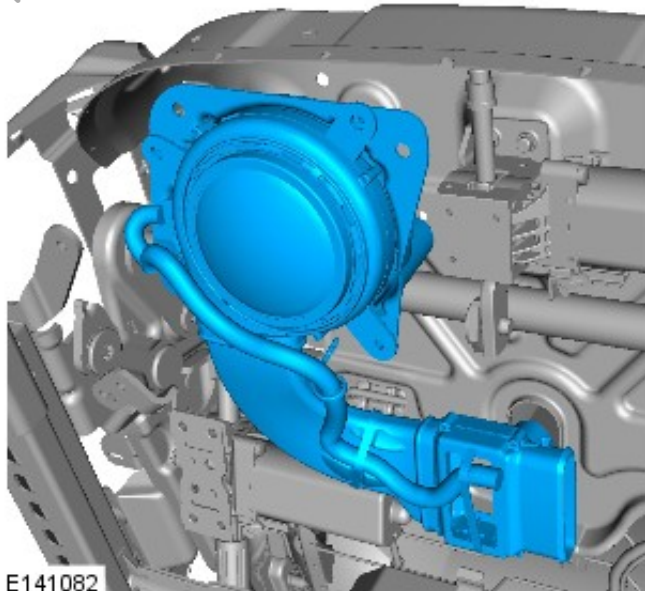

E141082




NAS vehicles

28.

CAUTION:

Note the fitted position of the component prior to removal.

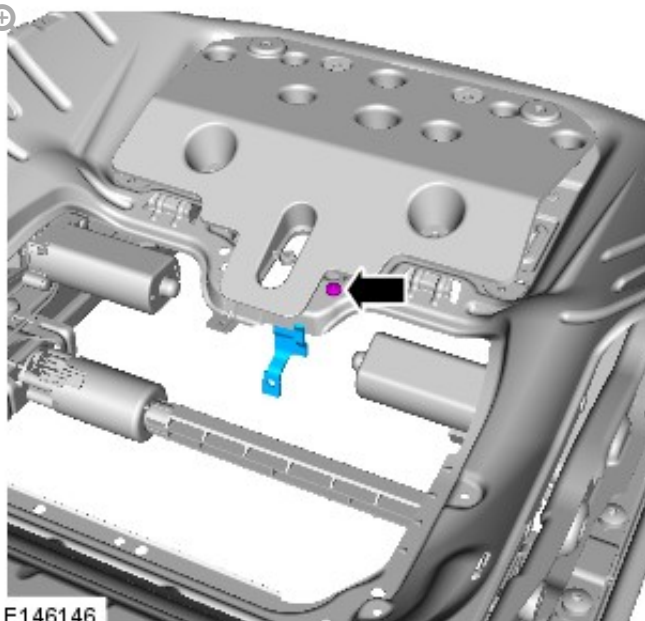


E146146

Torque: 5 Nm



All vehicles

29.

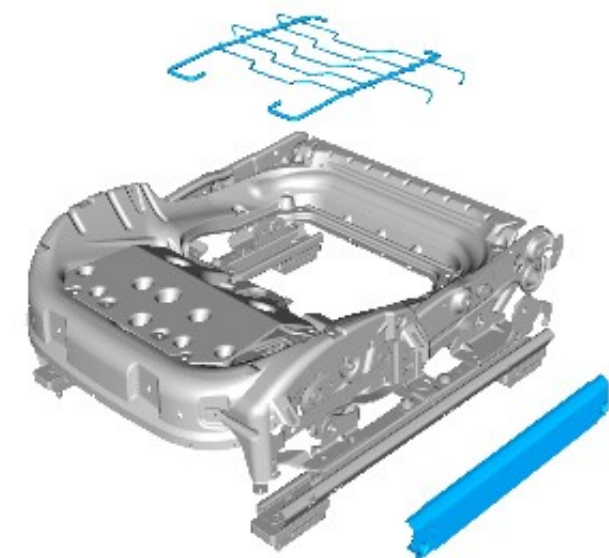

E145091

INSTALLATION

1. To install, reverse the removal procedure.