

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

'A' PILLAR REINFORCEMENT

[G1454612]

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The A-pillar reinforcement is installed in conjunction with:

- Side panel front section
 - Fender apron panel
 - Front fender lower mounting bracket
-

1.

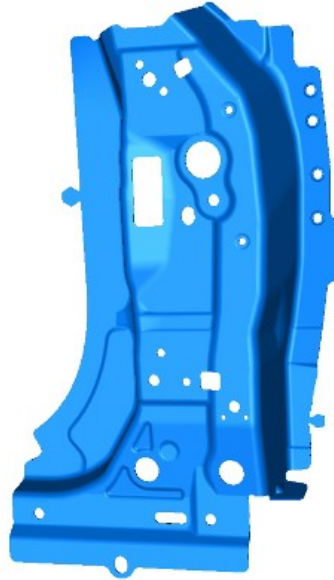

E143349

The A-pillar reinforcement is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.


For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:


- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Fender Apron Panel](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).
5. For additional information, refer to: [Side Panel Front Section](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
6. For additional information, refer to: [Front Fender Lower Mounting Bracket](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).

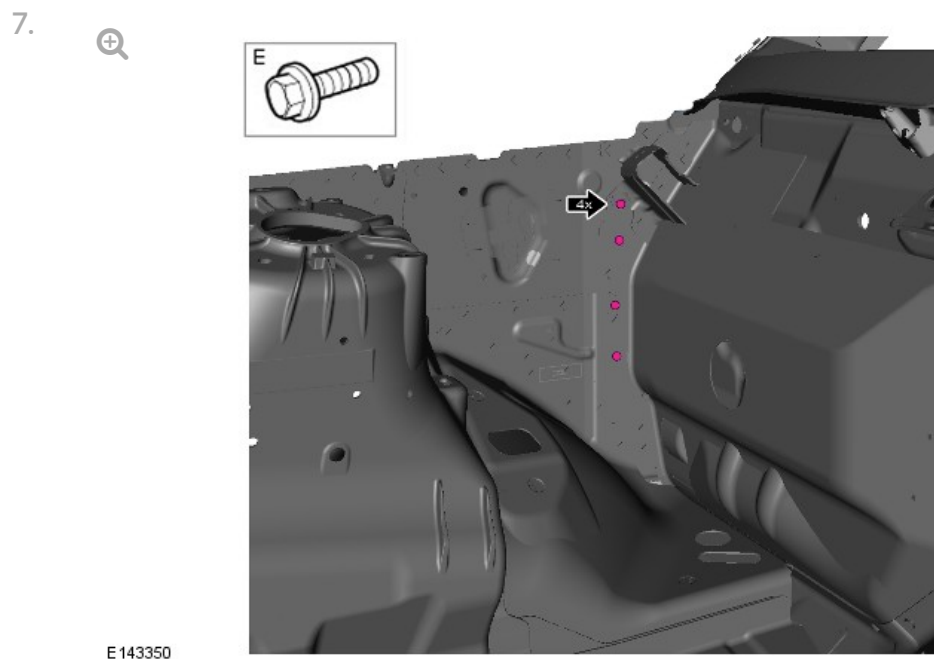

Remove the retaining bolts as indicated.


8.

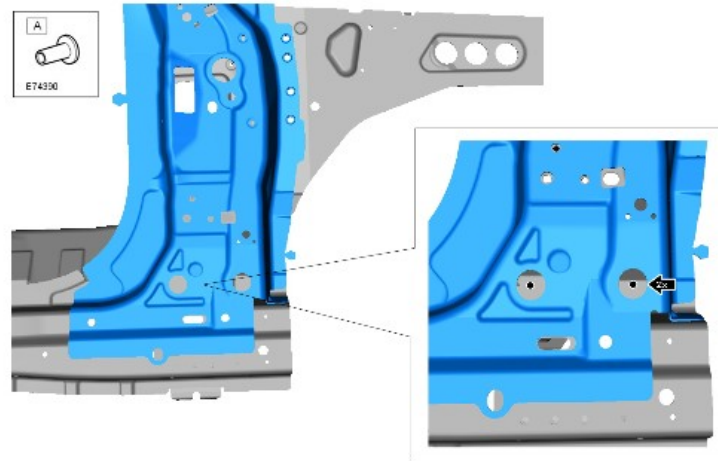

E143351

Remove SPR's as indicated.

9.

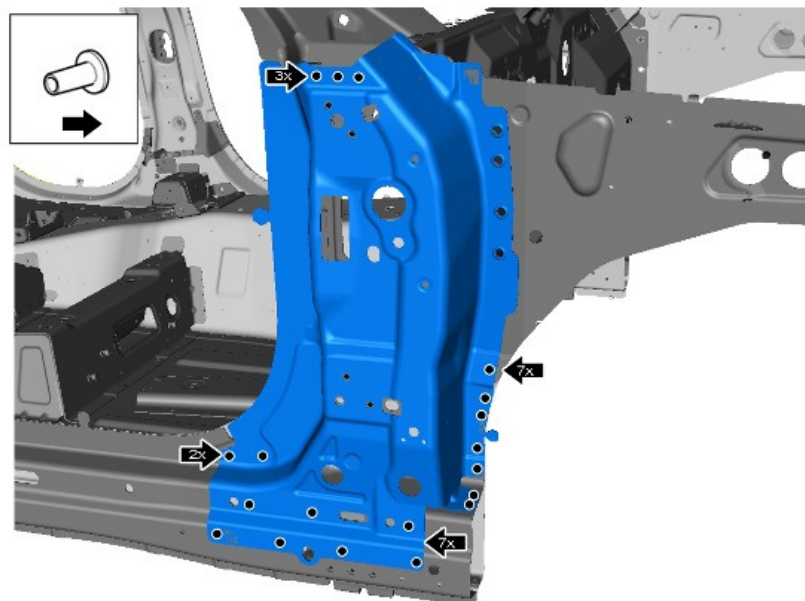


E143352

Remove SPR's as indicated.

10.

CAUTION:

Avoid where possible damaging the noise, vibration and harshness (NVH) components located behind the A-pillar reinforcement.

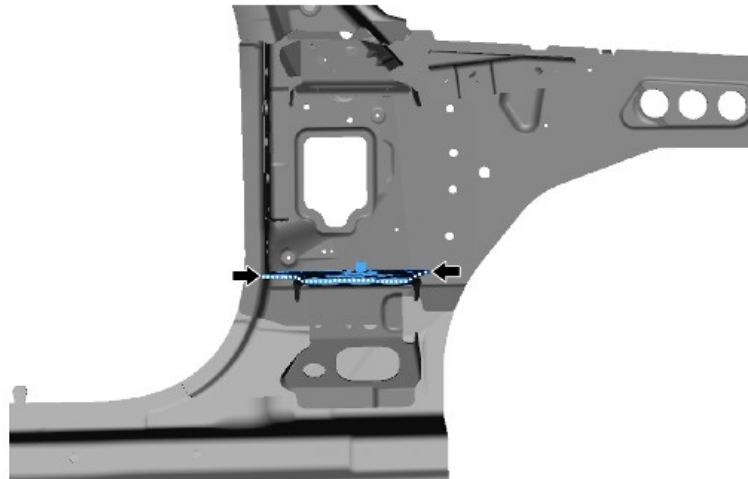

E144308

Separate the joints and remove the A-pillar reinforcement also releasing the NVH components.

INSTALLATION


CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.


1. Remove rivet remnants.
2. Dress flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces.
4. Offer up the new A-pillar reinforcement and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
- 5.

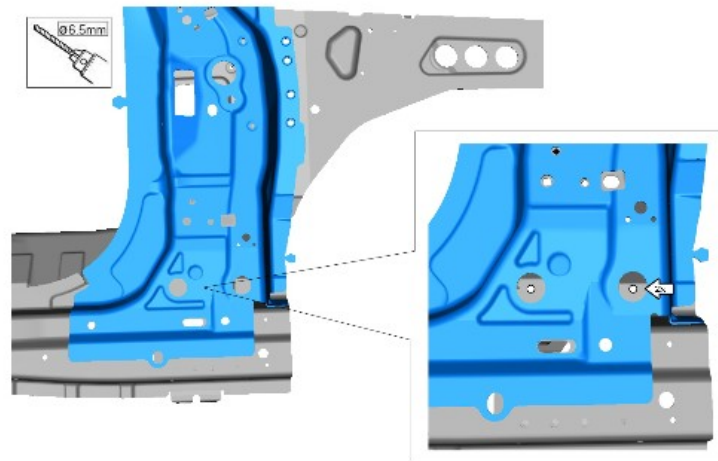

E143353

Drill holes through the old A-pillar reinforcement panel into the new A-pillar reinforcement panel where BSF's are to be installed as indicated.

6.

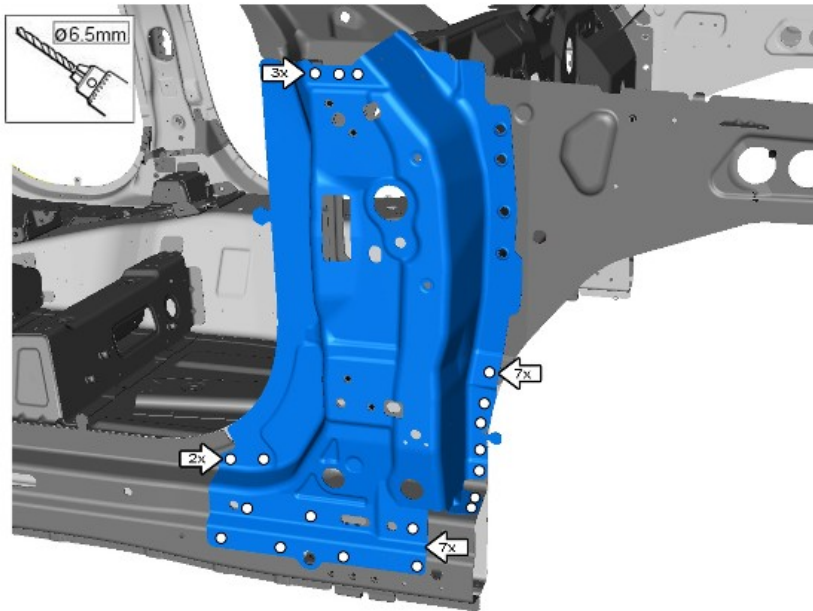


E143354

Drill holes through the old A-pillar reinforcement panel into the new A-pillar reinforcement panel where BSF's are to be installed as indicated.

-
7. Remove the new A-pillar reinforcement.
-
8. Deburr the drilled holes.
-
9. Using a fine bristle disc, clean and prepare the panel surfaces.
-
10. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.
-

11.

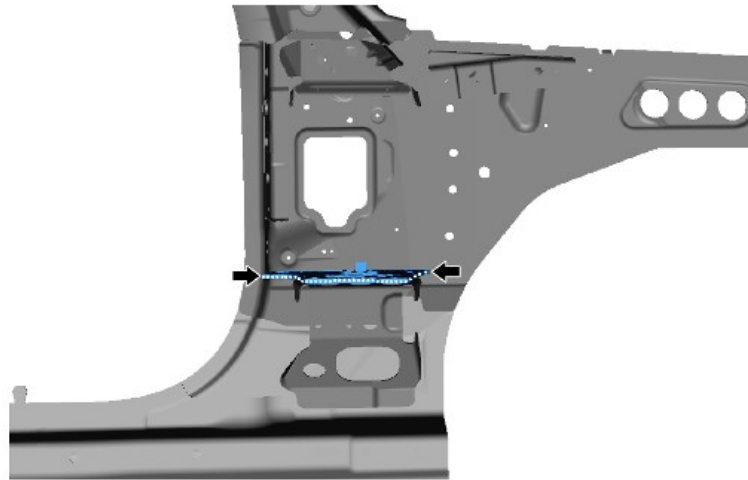

E144308

Install the NVH component and apply a bead of the Land Rover recommended semi-rigid sealer as indicated.

12.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.




E143355

Apply a 5mm zig zag bead of the Land Rover recommended

bonding material to the A-pillar reinforcement as indicated.

13. Offer up the new A-pillar reinforcement and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.


14.

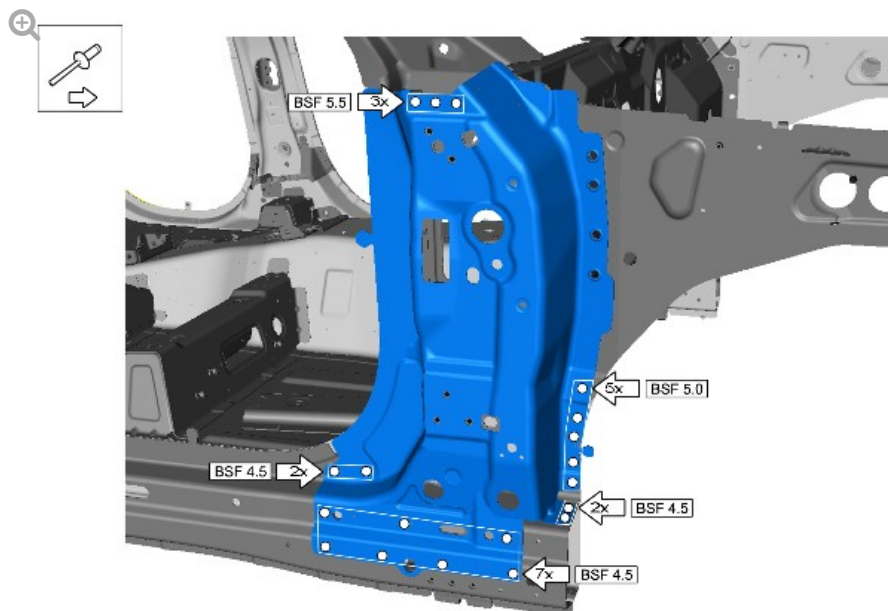

E143356

Install the BSF's as indicated.



15.

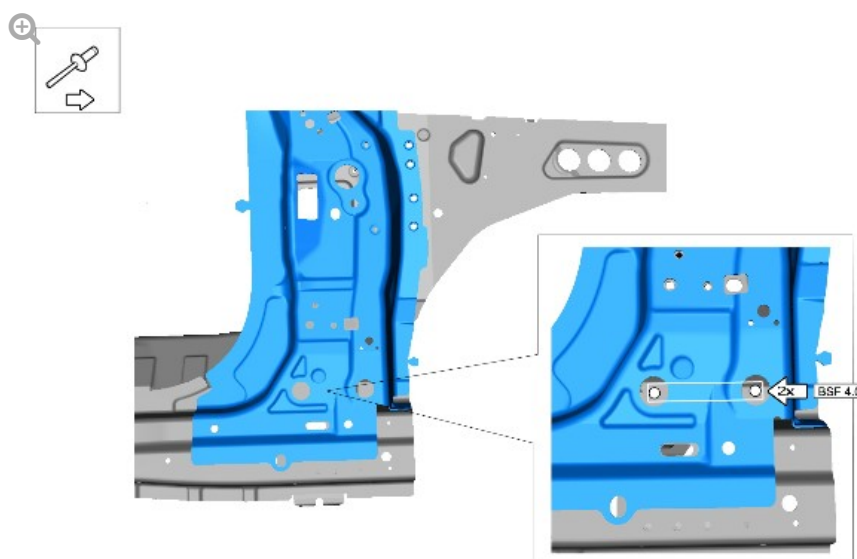

E143357

Install the BSF's as indicated.

16.

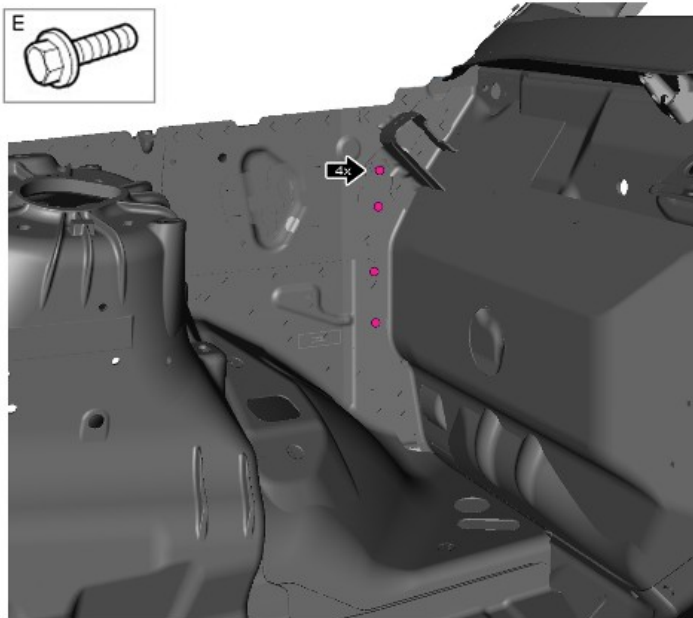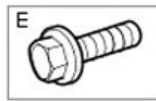

E143350

Install the retaining bolts as indicated and tighten to 24Nm.

17. Remove any excess adhesive.

18. Make sure that any open or exposed panel joints are suitably sealed.

19. Make sure corrosion protection is applied to all areas affected by repair.

20. The installation of associated panels and components is the reversal of removal procedure.