

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

B-PILLAR REINFORCEMENT

[G1454635]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The B-pillar reinforcement is installed in conjunction with:

- B-pillar outer panel
 - Rocker panel
 - Rocker panel reinforcement
-

1.



E143409

The B-pillar reinforcement is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.


For additional information, refer to: Health and Safety Precautions (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: B-Pillar Outer Panel (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
5. For additional information, refer to: Rocker Panel (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
6. For additional information, refer to: Rocker Panel Inner Reinforcement (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

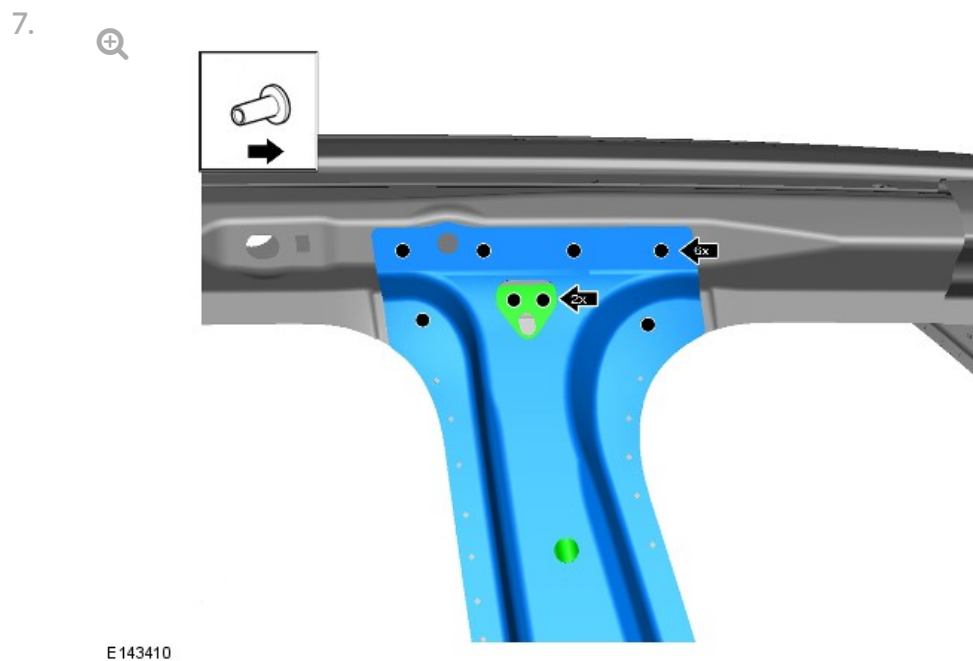

Remove the SPR's as indicated.

8. Separate the joints and remove the B-pillar reinforcement also releasing the noise, vibration and harshness (NVH) components.

INSTALLATION

CAUTION:



Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.
2. Dress flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces.
4. Offer up the new B-pillar reinforcement and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

5.

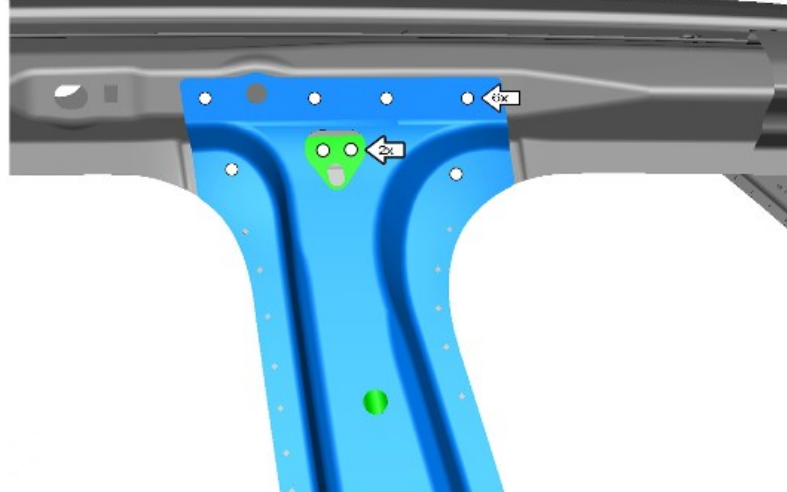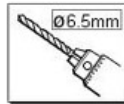


E143412

Drill holes through the old B-pillar reinforcement into the new B-pillar reinforcement where BSF's are to be installed as indicated.

-
6. Remove the new B-pillar reinforcement.
 7. Deburr the drilled holes.
 8. Using a fine bristle disc, clean and prepare the panel surfaces.
 9. Apply the coupling agent where the Land Rover approved bonding material is to be applied and allow to dry.
-

10.

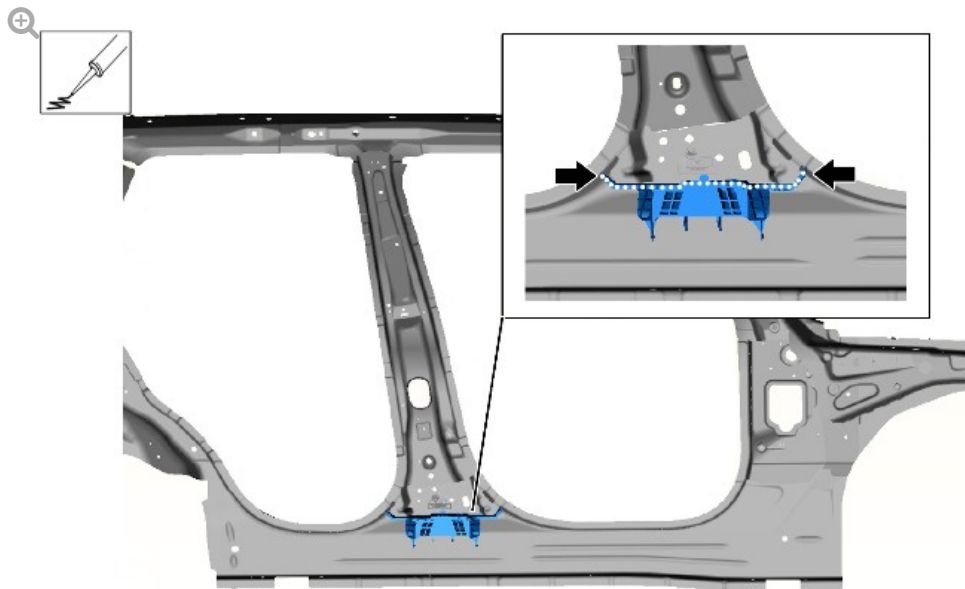


E143411

Install the NVH components and apply a bead of Land Rover recommended semi-rigid sealer as indicated.

11.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

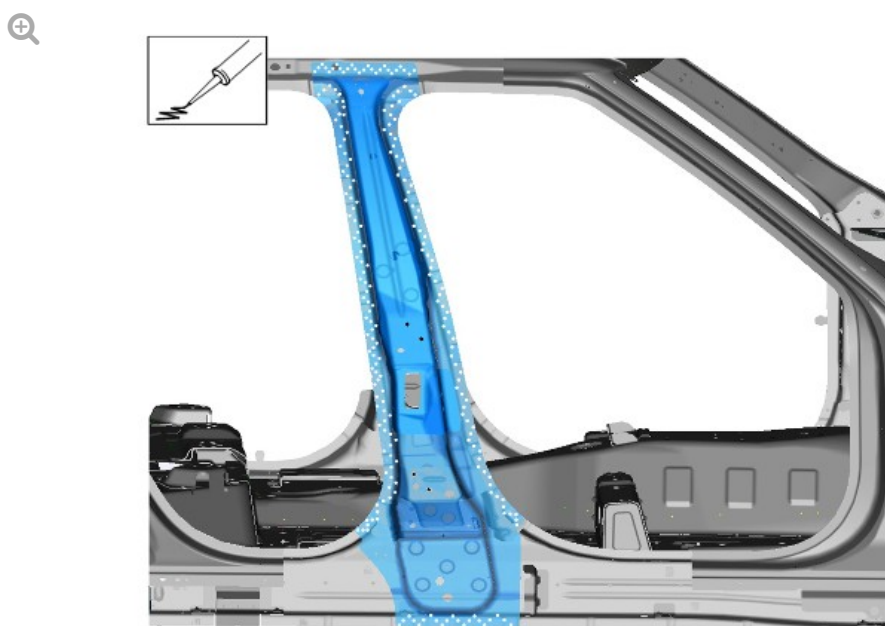


E143413

Apply a 5mm zig zag bead of the Land Rover recommended

bonding material as indicated.

-
12. Offer up the new B-pillar reinforcement and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-

13.

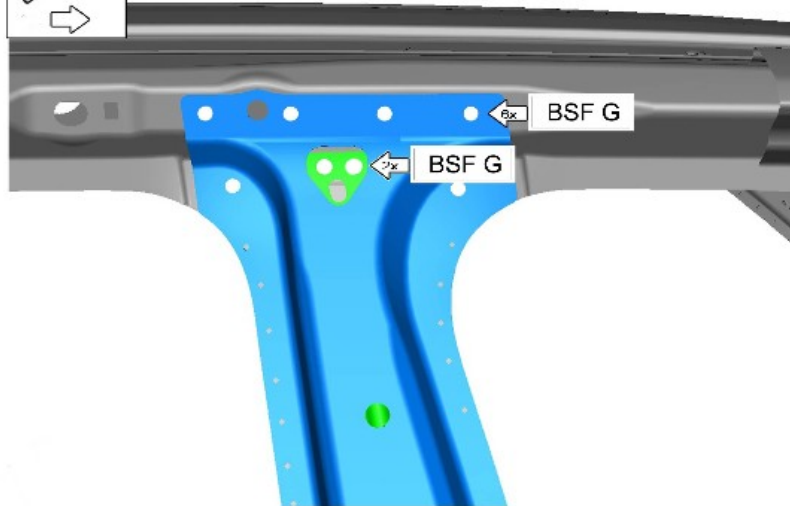

E143414

Install the BSF's as indicated.

-
14. Remove any excess adhesive.
-
15. Make sure that any open or exposed panel joints are suitably sealed.
-
16. Make sure corrosion protection is applied to all areas affected by repair.
-
17. The installation of associated panels and components is the reversal of removal procedure.
-