

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

ROCKER PANEL AND B PILLAR INNER (G1478817)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The rocker panel and B-pillar inner are installed in conjunction with:

- Rocker panel
 - Front door
 - Rear door
 - B-pillar outer panel
 - B-pillar inner reinforcement
 - Rocker panel inner reinforcement
-

1.



E143389

The B-pillar inner is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: Health and Safety Precautions (100-00 General Information, Description and Operation).


-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: Front Door (501-03, Removal and Installation).
5. For additional information, refer to: Rear Door (501-03, Removal and Installation).
6. For additional information, refer to: B-Pillar Outer Panel (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
7. For additional information, refer to: Rocker Panel (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
8. For additional information, refer to: Rocker Panel Inner Reinforcement (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
9. For additional information, refer to: B-Pillar Reinforcement (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).


10.

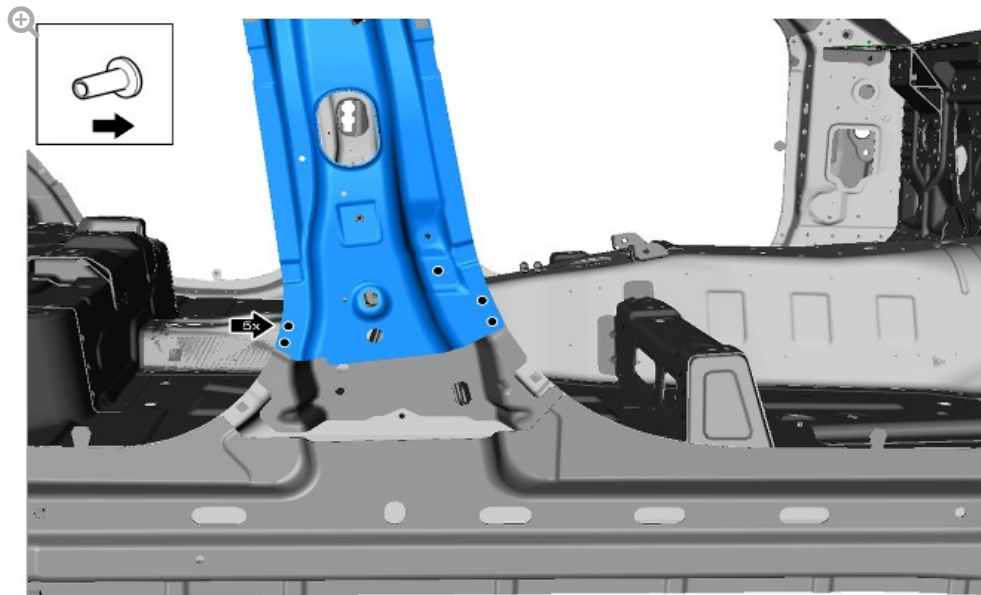

E143390

Remove the SPR's as indicated.

11.

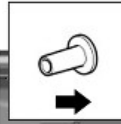

E143391

Remove the SPR's as indicated.

12. Separate the joints and remove the B-pillar inner.

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.



1. Remove rivet remnants.

2. Dress flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces.
4. Offer up the new B-pillar inner and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

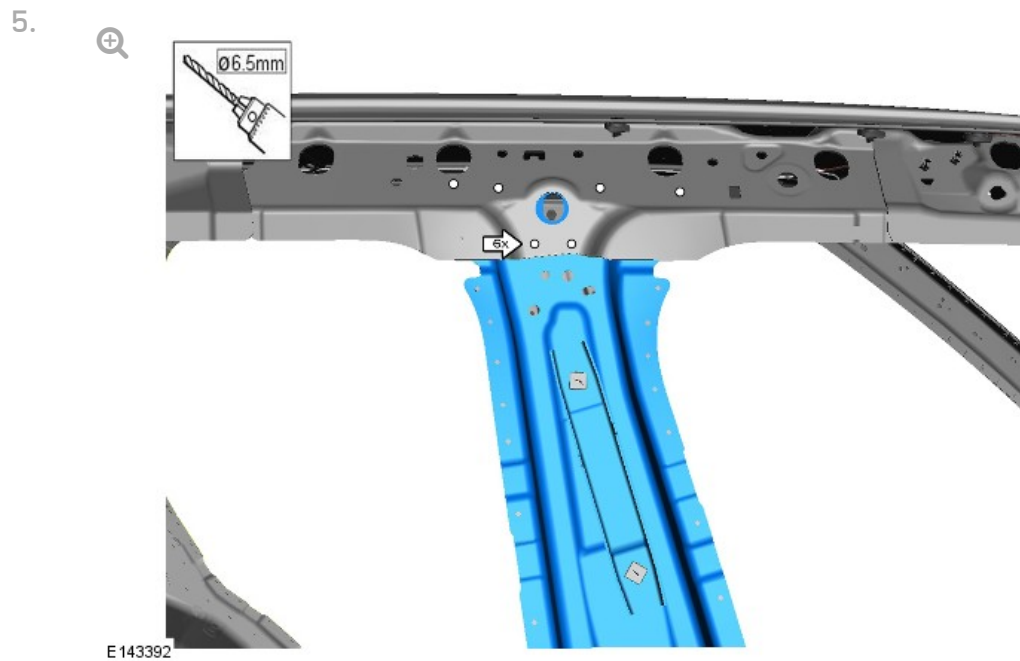

Drill holes through the old B-pillar inner into the new B-pillar inner where BSF's are to be installed as indicated.

6.

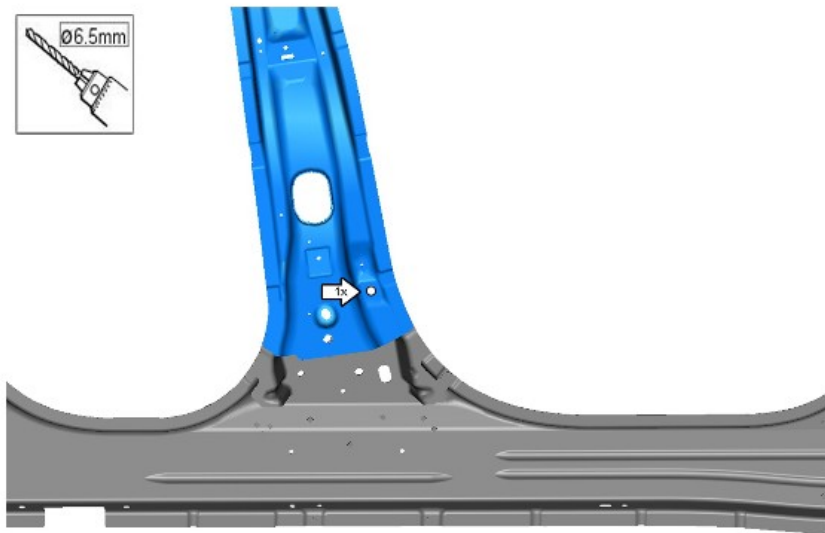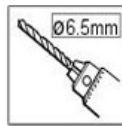

E143397

Drill holes through the old B-pillar inner into the new B-pillar inner where BSF's are to be installed as indicated.

7. Remove the new B-pillar inner.

8. Deburr the drilled holes.

9. Using a fine bristle disc, clean and prepare the panel surfaces.

10. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

11.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.




E143393

Apply a 5mm zig zag bead of the Land Rover recommended bonding material to the body joints.

12.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

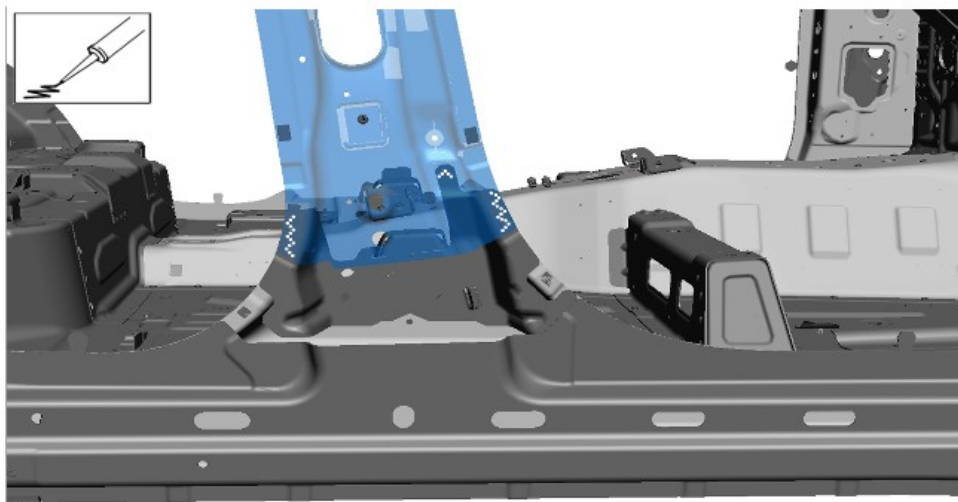

E143394

Apply a 5mm zig zag bead of the Land Rover recommended


bonding material to the body joints.

13. Offer up the new B-pillar inner and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

14.

NOTE:

Make sure that the BSF's are installed from the inside.

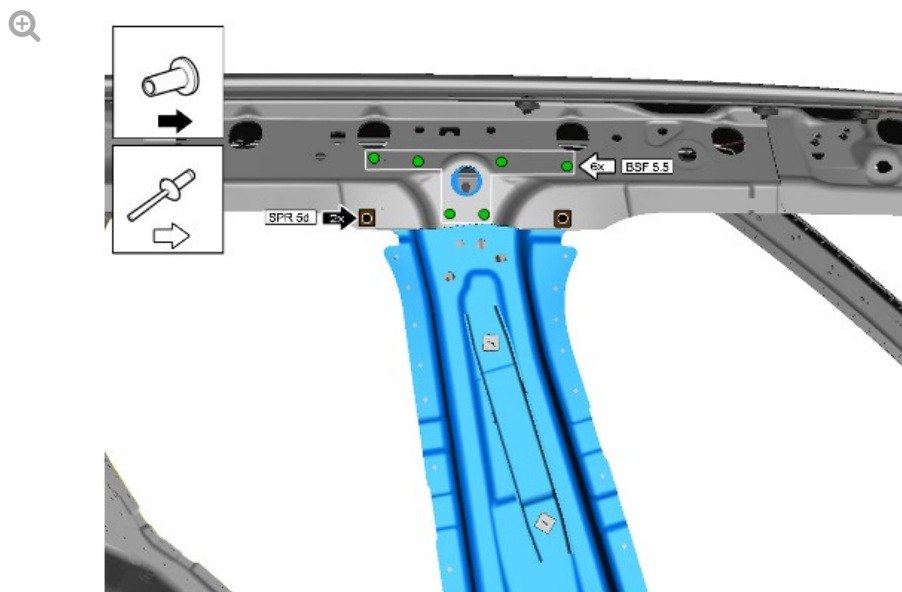


E 143395

Install the SPR's and the BSF's as indicated.

15.

NOTE:

Make sure that the BSF's are installed from the inside.

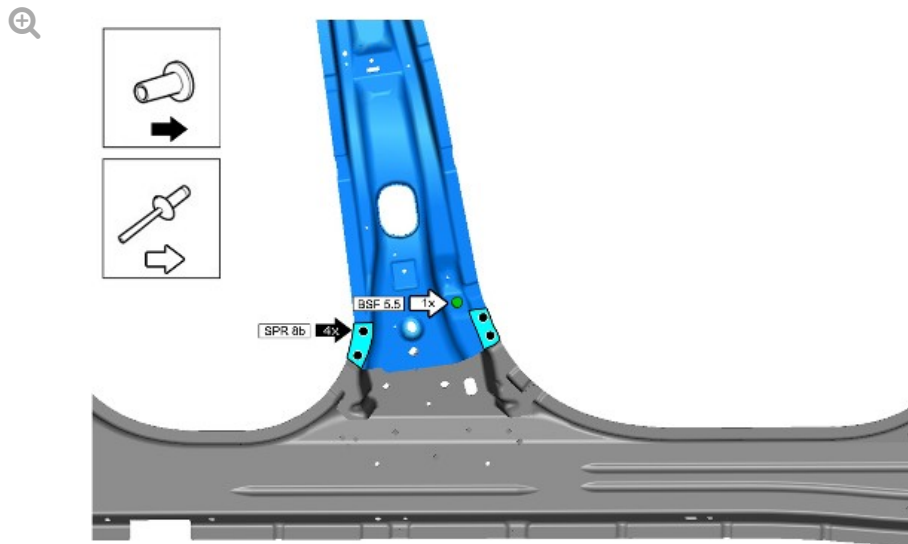

E143396

Install the SPR's and the BSF's as indicated.

-
16. Remove any excess adhesive.
-
17. Make sure that any open or exposed panel joints are suitably sealed.
-
18. Make sure corrosion protection is applied to all areas affected by repair.
-
19. The installation of associated panels and components is the reversal of removal procedure.