

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

ROCKER PANEL INNER REINFORCEMENT - STANDARD WHEEL BASE

[G1454631]

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The rocker panel inner reinforcement is installed in conjunction with:

- Rocker panel
- Side panel front section
- Quarter panel
- Side panel
- A-pillar reinforcement
- B-pillar reinforcement
- Rocker panel reinforcement
- Rear wheelhouse outer

1.

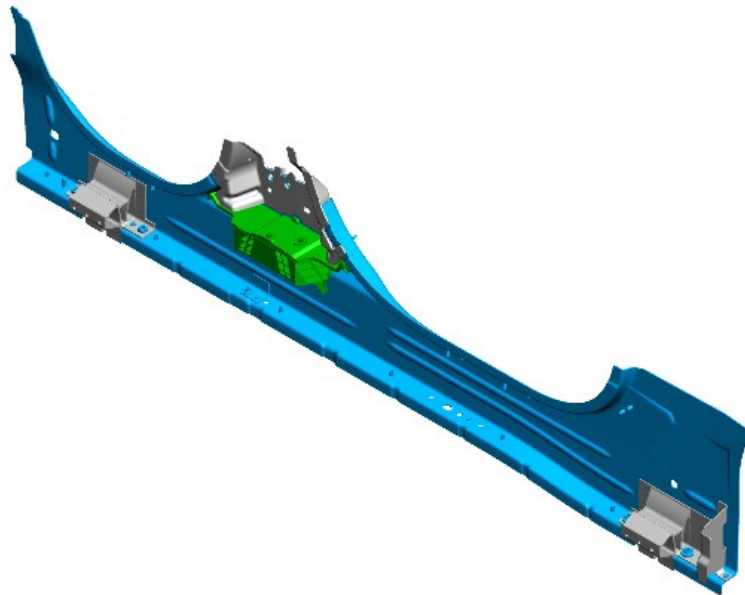

E186489

The rocker panel inner reinforcement is serviced as indicated.

2. Before commencing this procedure make sure that you are aware of

all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

-
4. For additional information, refer to: [Rocker Panel](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

-
5. For additional information, refer to: [Side Panel Front Section](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

-
6. For additional information, refer to: [Quarter Panel](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

-
7. For additional information, refer to: [Side Panel - Standard Wheel Base](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

-
8. For additional information, refer to: ['A' Pillar Reinforcement](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

-
9. For additional information, refer to: [B-Pillar Reinforcement](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).


 10. For additional information, refer to: [Rocker Panel Reinforcement](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

 11. For additional information, refer to: [Rear Wheelhouse Outer](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

12.

NOTE:


Do not discard the bracket as it is used in installation.

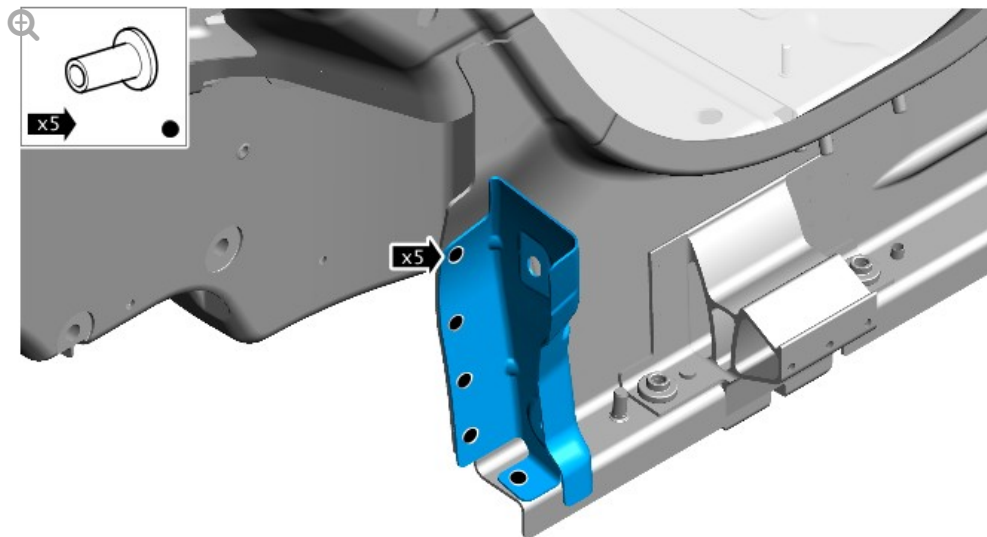

E186473

Remove the SPR's as indicated.


13.

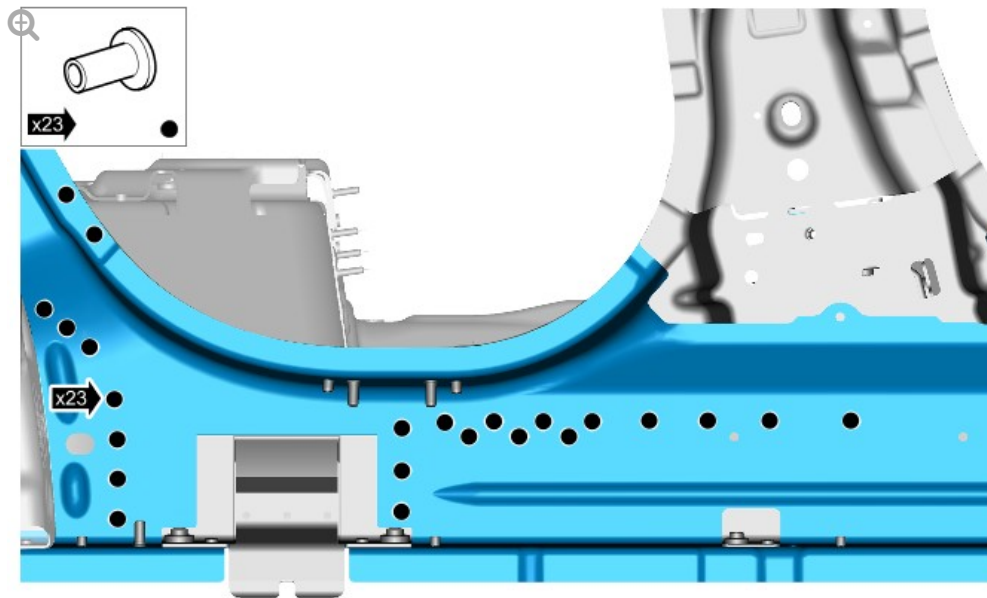

E186478

Remove the SPR's as indicated.


14.

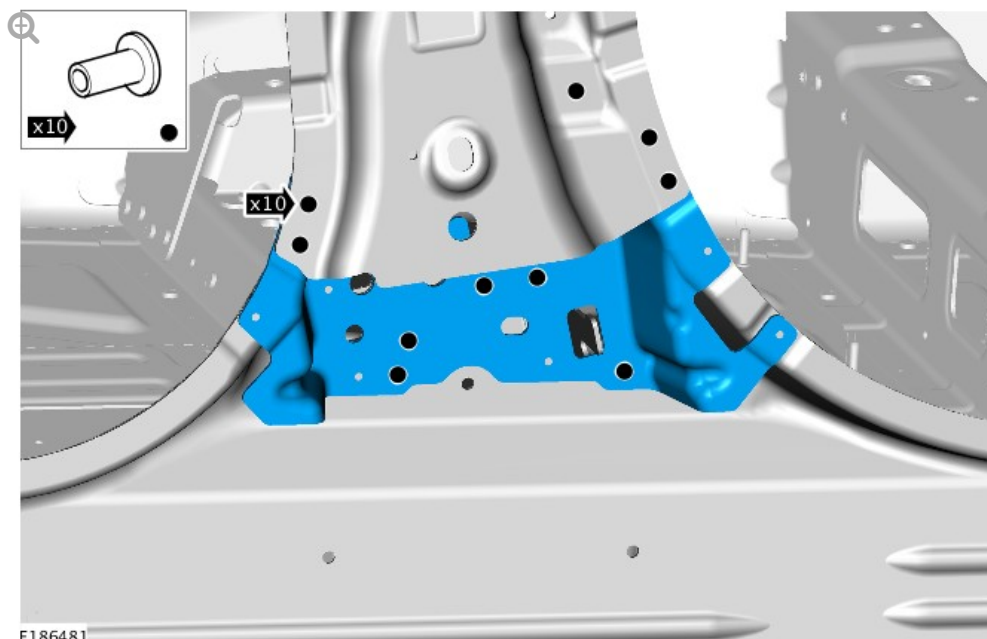

E186481

Remove the SPR's as indicated.


15.

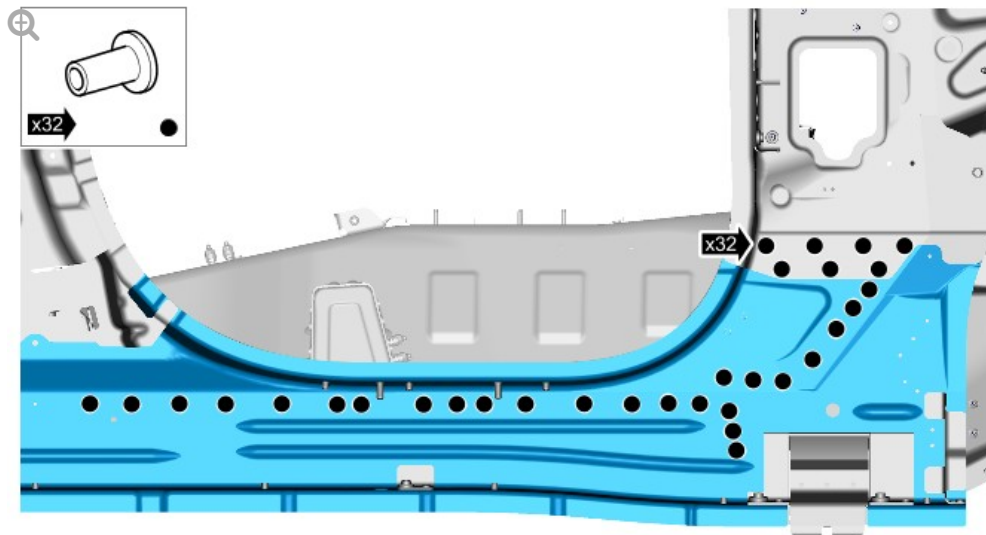

E186484

Remove the SPR's as indicated.

16.

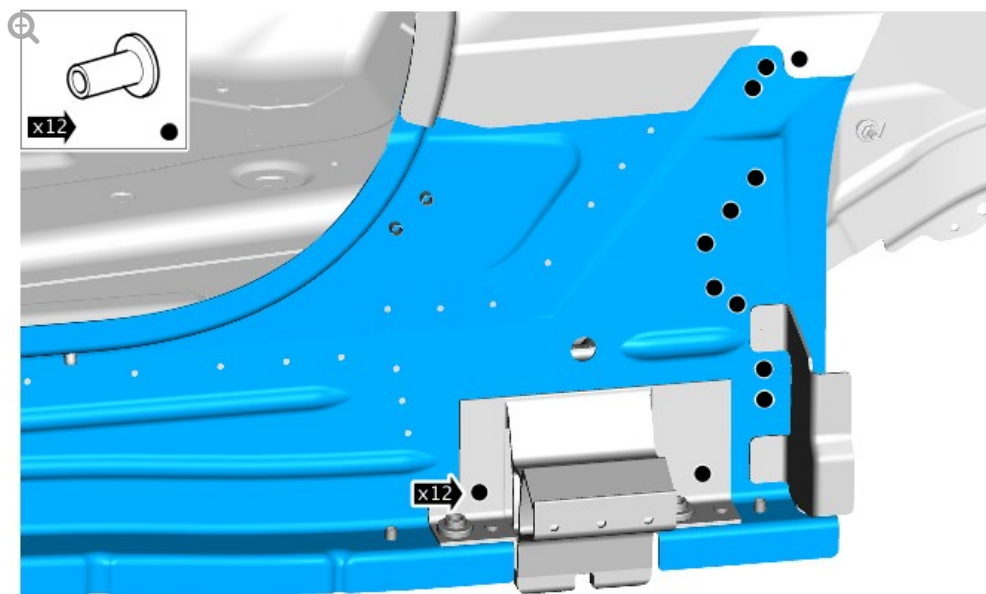

E186487

Remove the SPR's as indicated.

17. Separate the joints and remove the rocker panel inner reinforcement.

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove the rivet remnants.
2. Dress the flanges where necessary.
3. Using a fine bristle disc clean and prepare the panel surfaces.
4. Offer up the new rocker panel inner reinforcement and the bracket and clamp into position. Check alignment if correct proceed to next step, if not rectify and recheck before proceeding.


5.

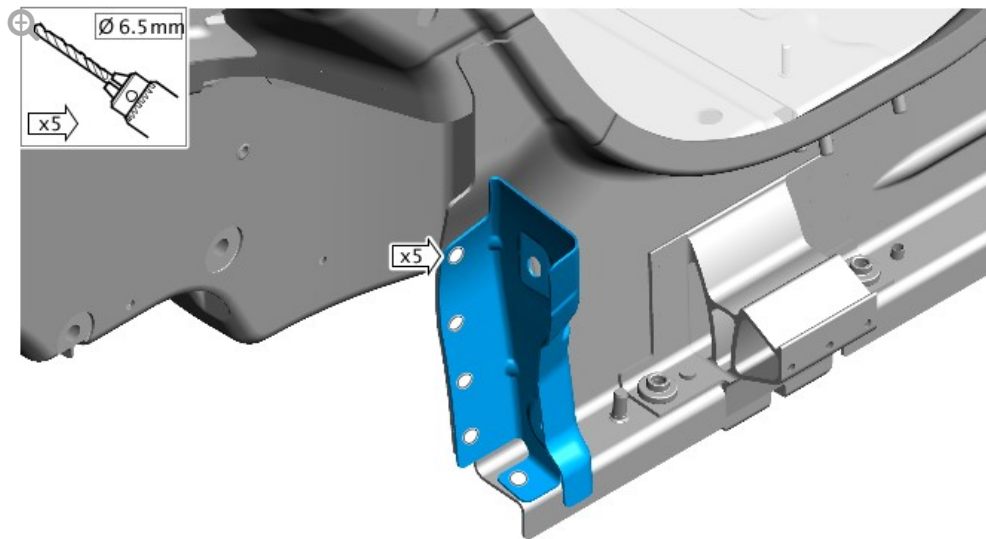

E186474

Drill holes where BSF's are to be installed as indicated.


6.

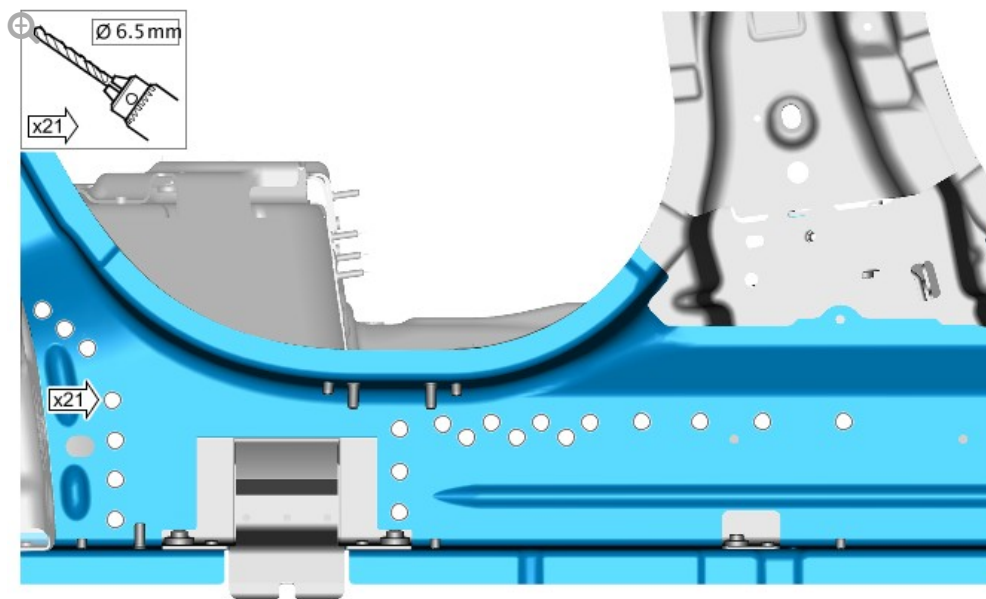

E186476


Drill holes where the BSF's are to be installed as indicated.

7.

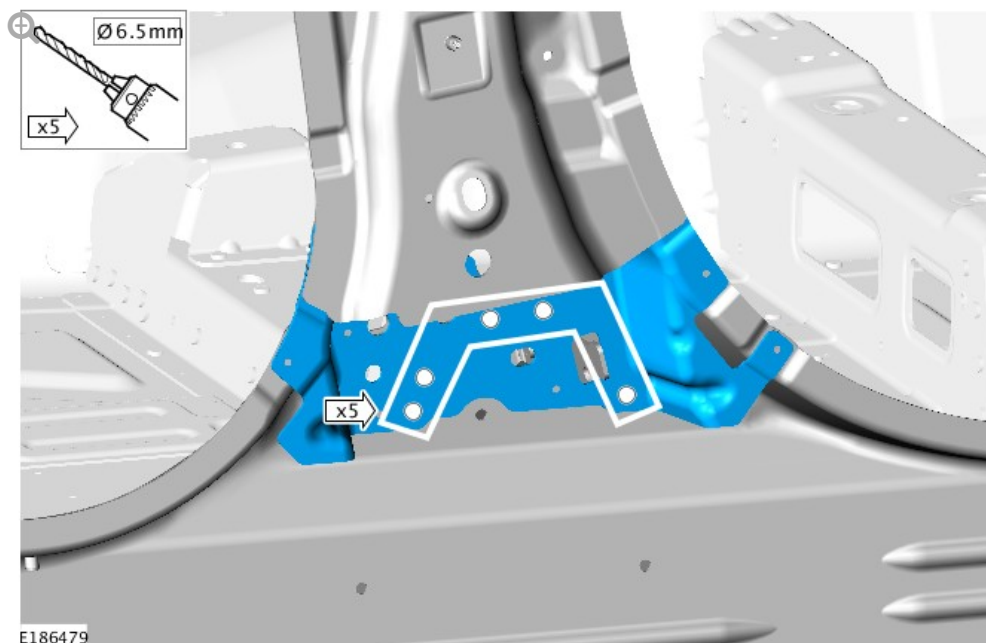

Drill holes where the BSF's are to be installed as indicated.


8.

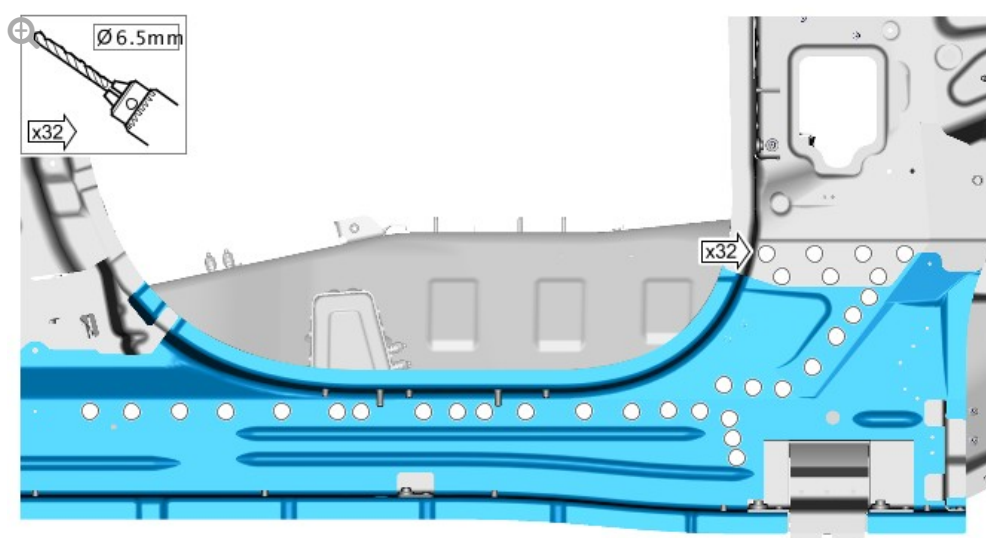

E186482

Drill holes where the BSF's are to be installed as indicated.

9.

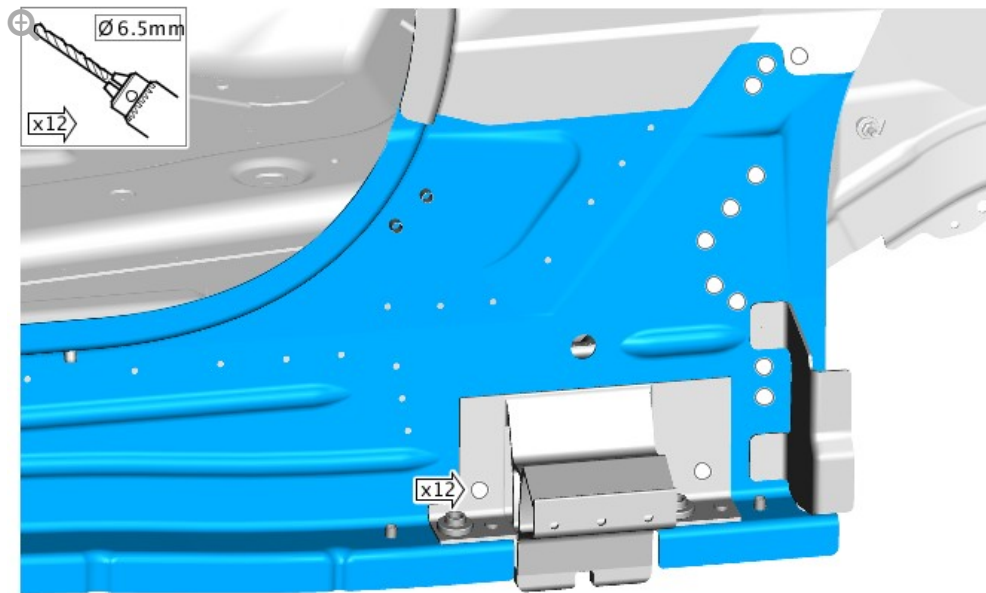

E186485

Drill holes where the BSF's are to be installed as indicated.

10. Remove the rocker panel inner reinforcement.

11. Deburr the drilled holes.


12. Using a fine bristle disc clean and prepare the panel surfaces.

13. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

14.

NOTE:


Make sure a continuous bead of adhesive surrounds fixing holes.

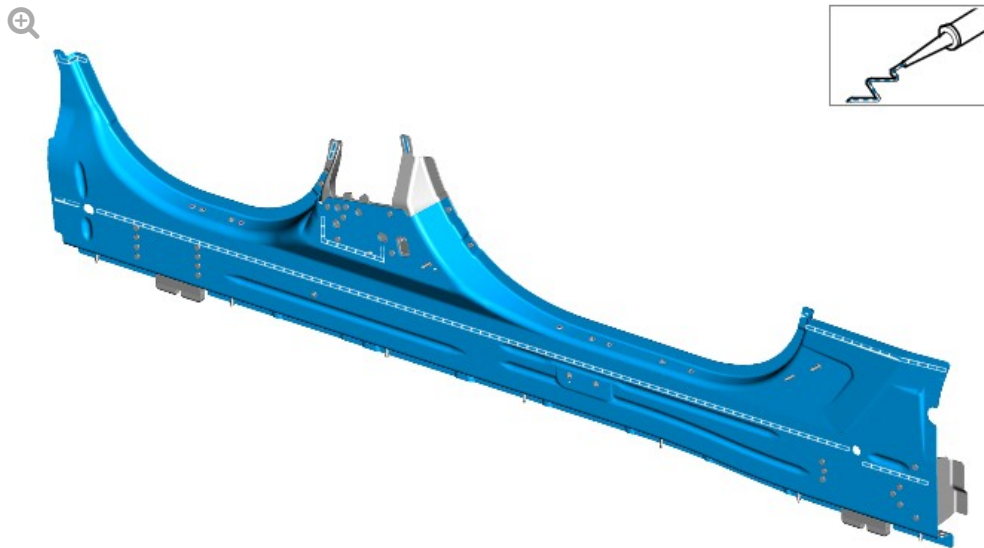

E186488

Apply a 5mm zig zag bead of the Land Rover recommended bonding material as indicated.


-
15. Offer up the new rocker panel inner reinforcement and the bracket and clamp into position. Check alignment if correct proceed to next step, if not rectify and recheck before proceeding.
-

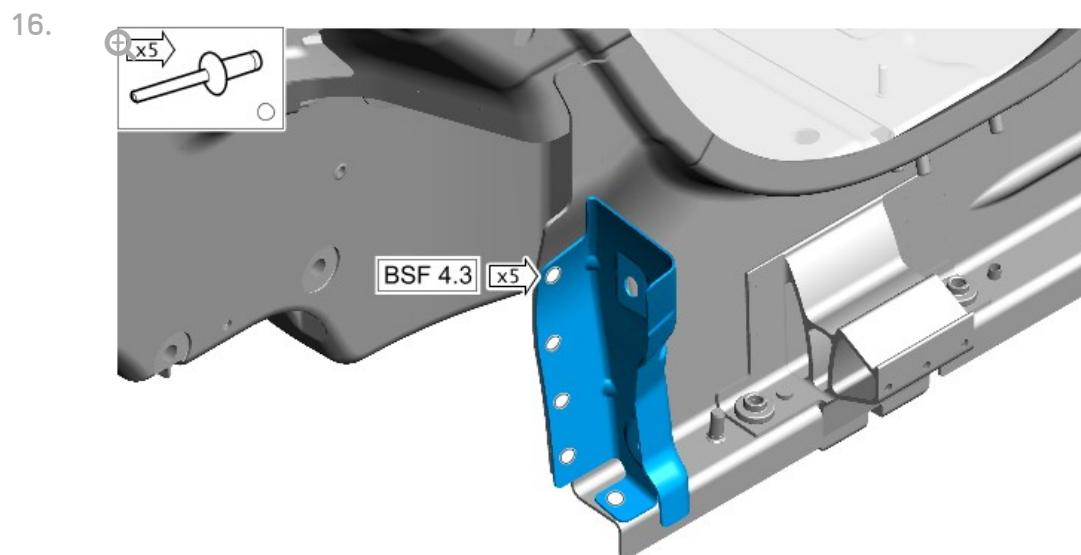

E186475

Install the BSF's as indicated.


17.

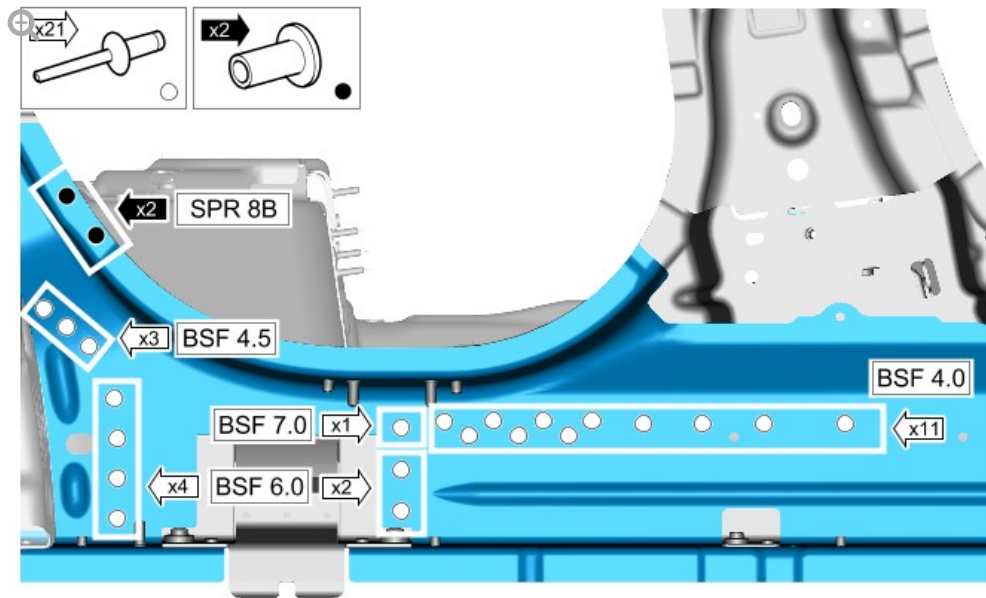

E186477

Install the BSF's and the SPR's as indicated.

18.

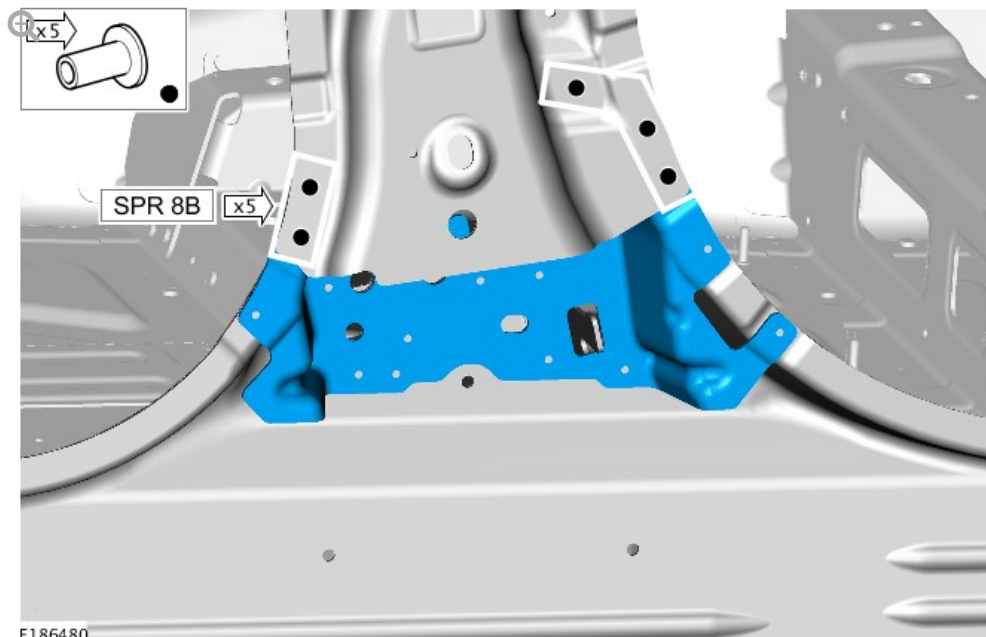


E186480

Install the SPR's as indicated.

19.


NOTE:

Make sure that the BSF's are installed from the inside.

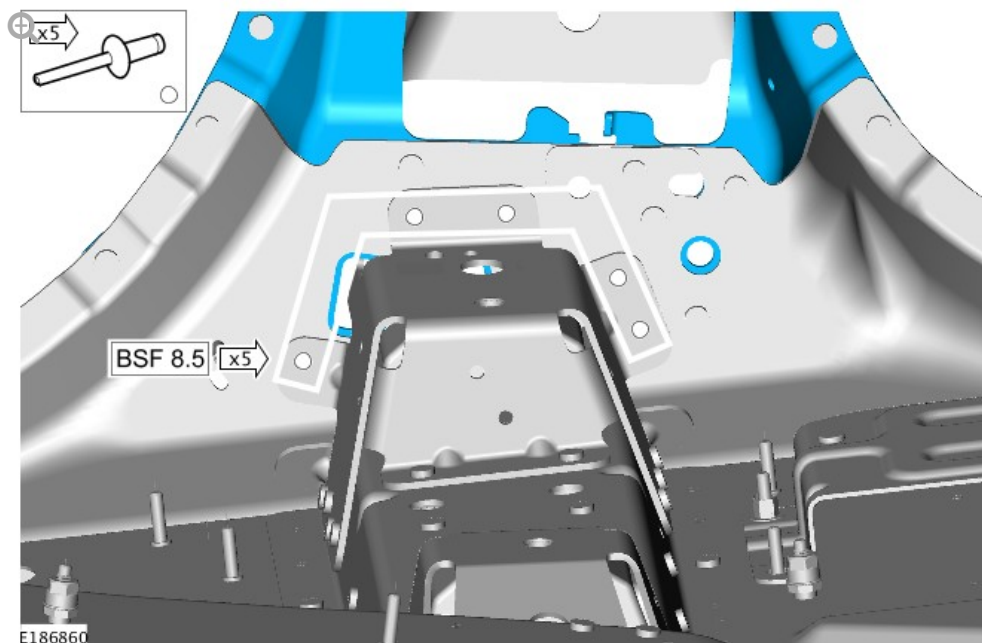


Install the BSF's as indicated.

20.

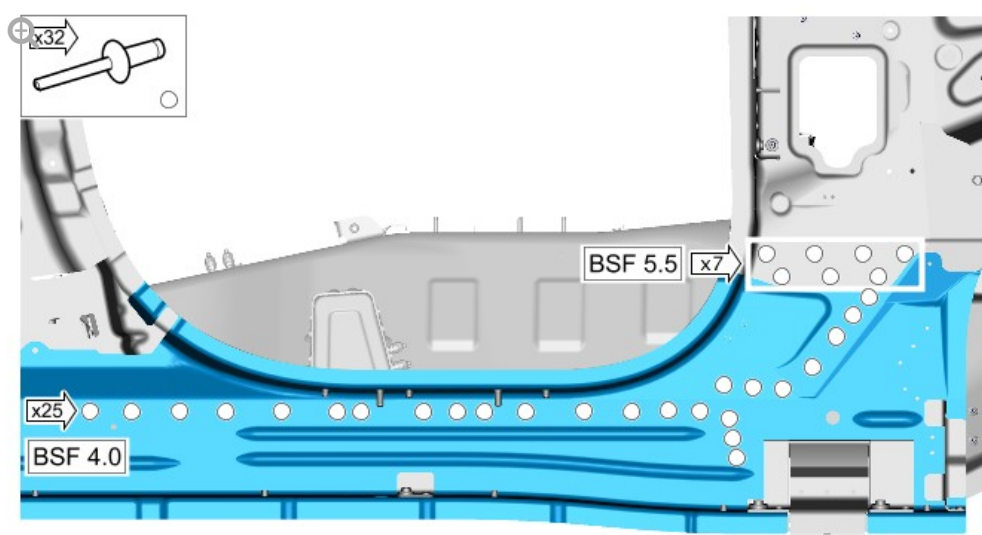

Install the BSF's as indicated.

21.

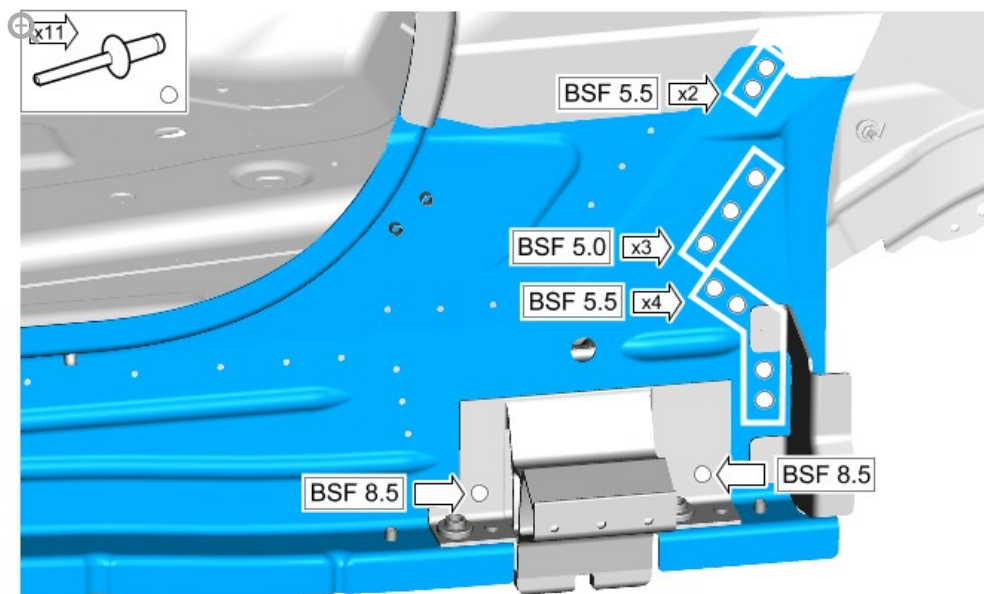


E186486

Install the BSF's as indicated.

22.

NOTE:

Make sure that the BSF is installed from the inside.

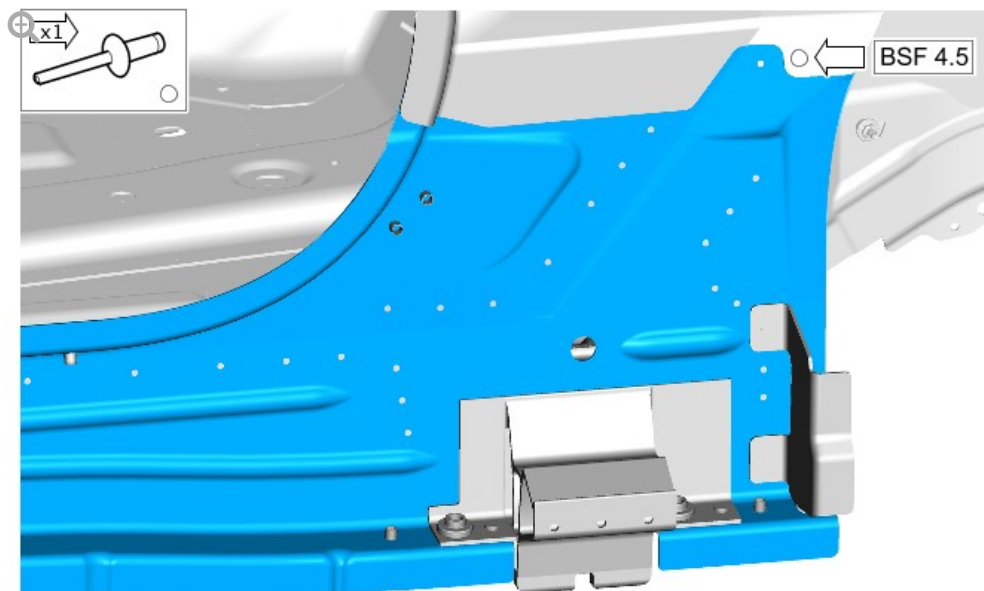

E186861

Install the BSF as indicated.

23. Remove any excess adhesive.

-
24. Make sure that any open or exposed panel joints are correctly sealed.
-
25. Make sure corrosion protection is applied to all areas affected by repair.
-
26. The installation of associated panels and components is the reversal of removal procedure.