

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

ROCKER PANEL REINFORCEMENT (G1935491)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

The rocker panel reinforcement is installed in conjunction with:

- Rocker panel
 - A-pillar reinforcement
-

1.



E143369

The rocker panel reinforcement is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.


For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:


- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Rocker Panel](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).
5. For additional information, refer to: ['A' Pillar Reinforcement](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

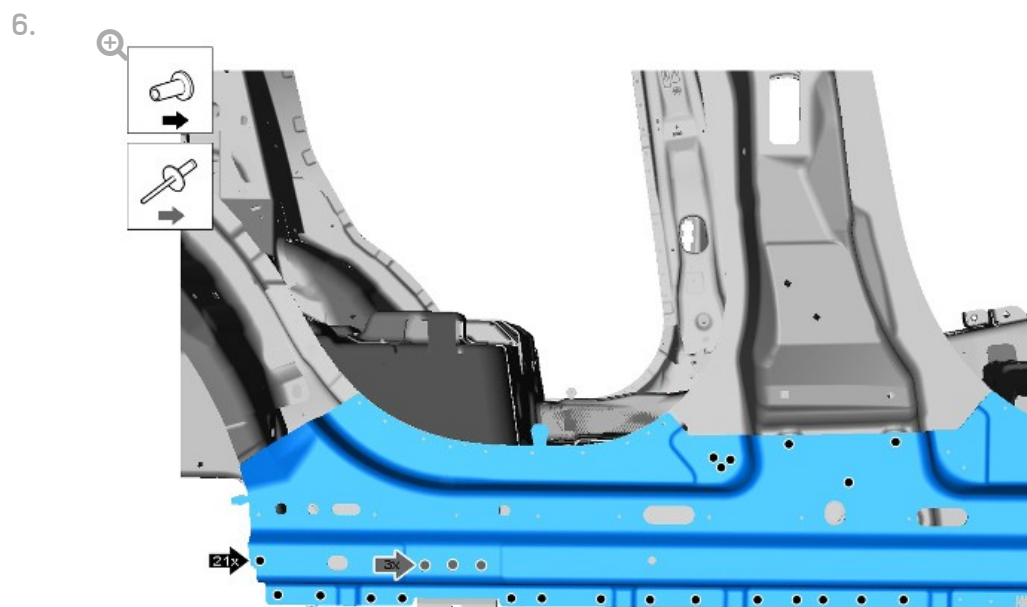

E143370

Remove the SPR's and the BSF's as indicated.

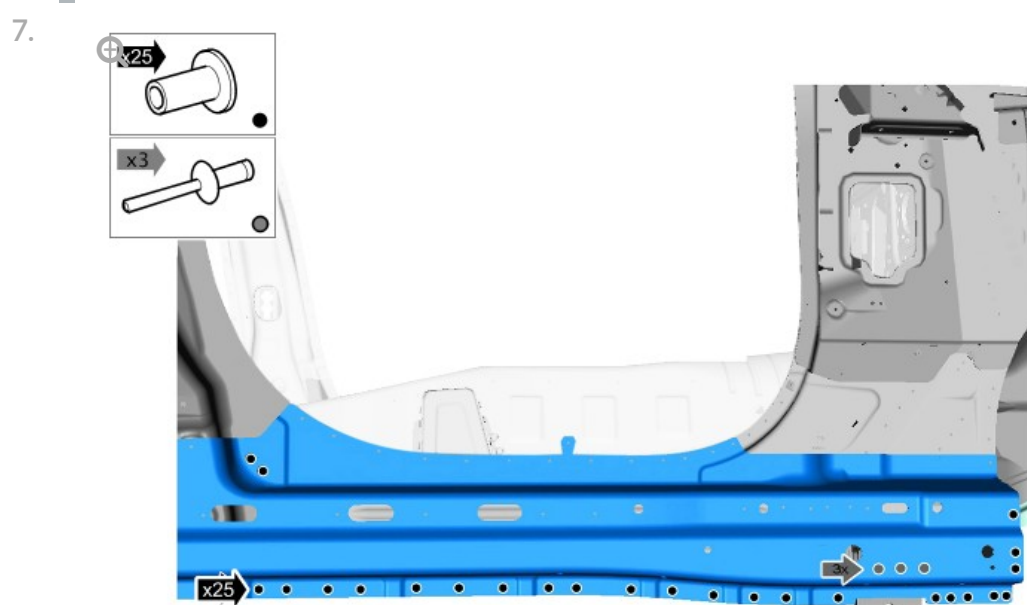

E143371

Remove the SPR's and the BSF's as indicated.

-
8. Separate the joints and remove the rocker panel reinforcement.
-

INSTALLATION

CAUTION:


Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

-
1. Remove the rivet remnants.
-
2. Dress the flanges where necessary.
-
3. Using a fine bristle disc clean and prepare the panel surfaces.
-
4. Offer up the new rocker panel reinforcement and clamp into position. Check alignment if correct proceed to next step, if not rectify and recheck before proceeding.
-


5.

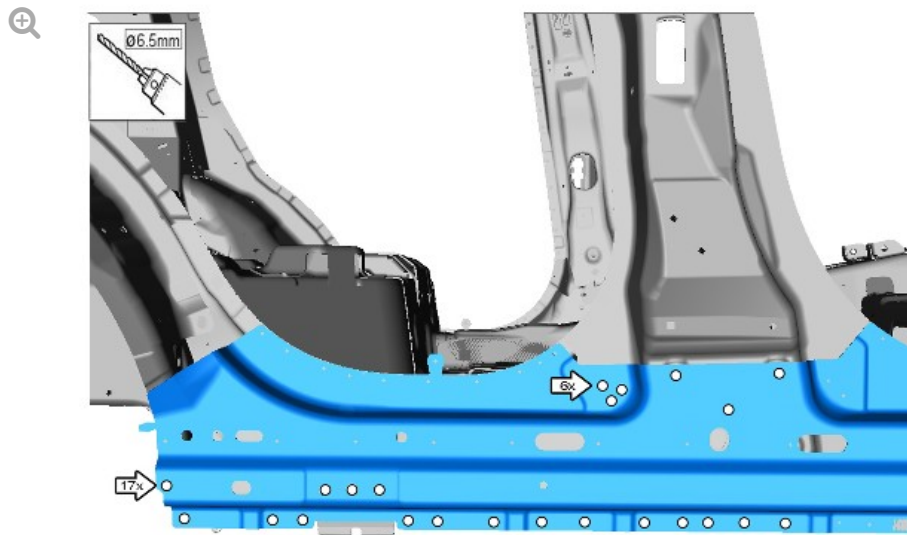

E143372

Drill holes through the old rocker panel reinforcement into the new rocker panel reinforcement where BSF's are to be installed as indicated.

6.

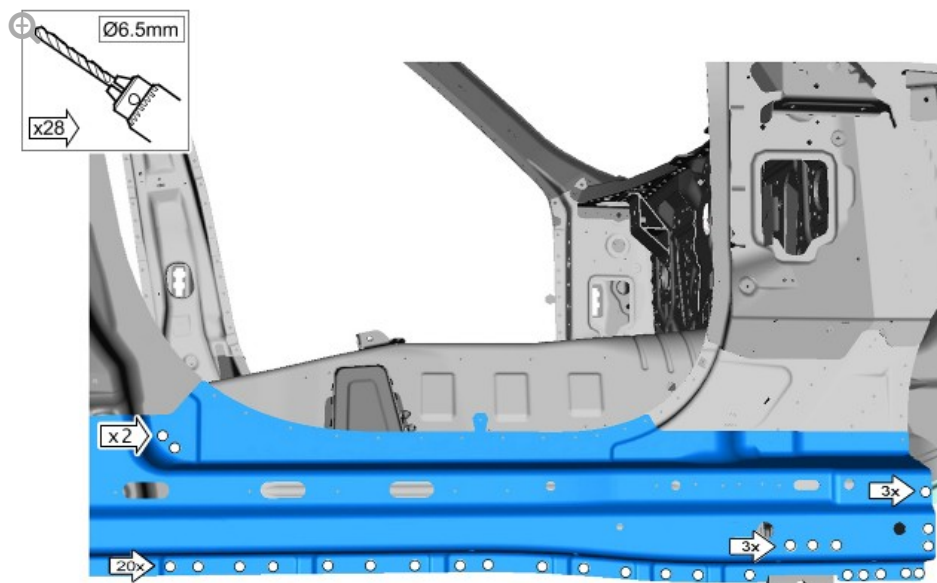

E143373

Drill holes through the old rocker panel reinforcement into the new rocker panel reinforcement where BSF's are to be installed as indicated.

7. Remove the new rocker panel reinforcement.

8. Deburr the drilled holes.


9. Using a fine bristle disc clean and prepare the panel surfaces.

10. Apply the coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.

11.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

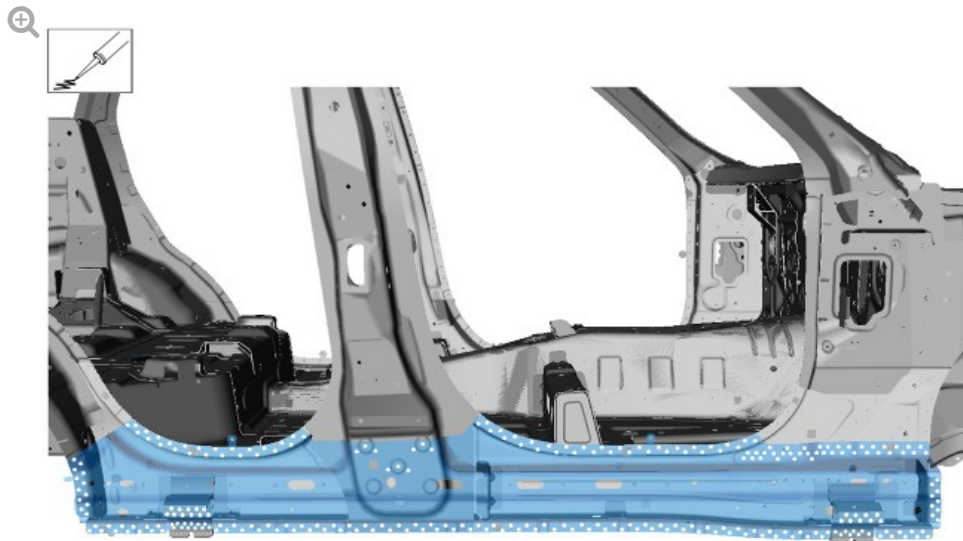


E143374

Apply a 5mm zig zag bead of the Land Rover recommended bonding material as indicated.

12. Offer up the new rocker panel reinforcement and clamp into position. Check alignment if correct proceed to next step, if not rectify and recheck before proceeding.



13.

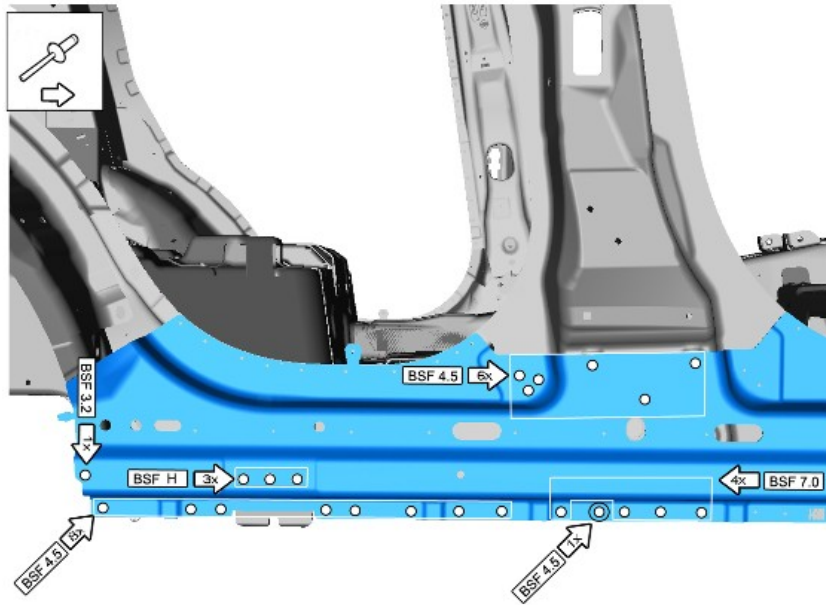

E143375

Install the BSF's as indicated.

14.

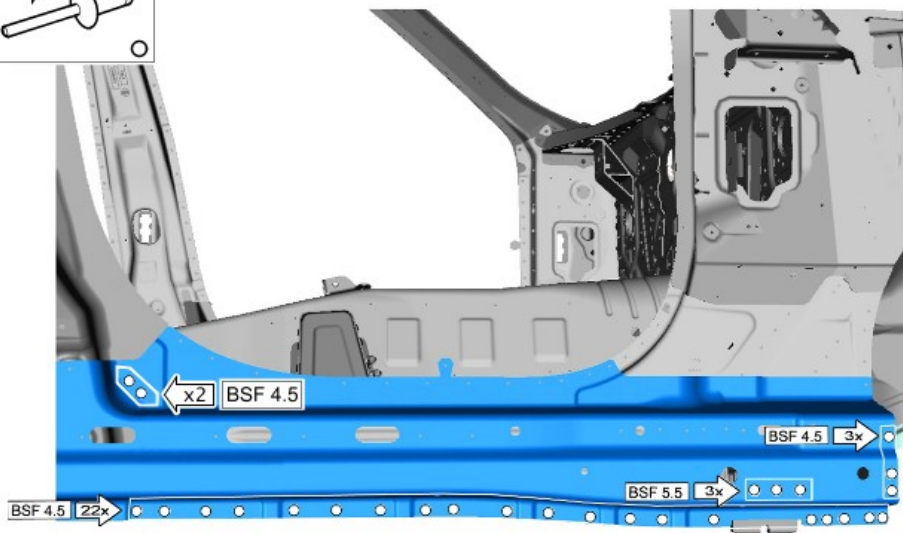

E143376

Install the BSF's as indicated.

15. Remove any excess adhesive.

16. Make sure that any open or exposed panel joints are correctly sealed.

17. Make sure corrosion protection is applied to all areas affected by repair.

18. The installation of associated panels and components is the reversal of removal procedure.