

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

SIDE PANEL – LONG WHEEL BASE [G1676587]

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- The side panel is installed in conjunction with:
 - Fender
 - Fender splash shield
 - Front fender lower mounting bracket
 - Fender apron panel
 - Windshield glass
 - Front door
 - Rear door
 - Rocker panel moulding
 - Roof moulding
 - Headliner
 - Side air curtain module

- Rear quarter window glass
- Rear fender splash shield
- Rear bumper cover
- Fuel tank filler pipe
- Rear lamp assembly
- Front seat
- Rear seat cushion
- Instrument panel
- Roof opening panel frame
- Roof front panel
- Roof rear panel
- Right hand indicated left hand similar.

1.



E161470

The side panel is serviced as indicated.

2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.
For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3. For further information on the methods, tools and fixings used in

this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

4. For additional information, refer to: [Fender](#) (501-02 Front End Body Panels, Removal and Installation).

5. For additional information, refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

6. For additional information, refer to: [Front Fender Lower Mounting Bracket](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).

7. For additional information, refer to: [Fender Apron Panel](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).

8. For additional information, refer to: [Windshield Glass](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

9. For additional information, refer to: [Front Door](#) (501-03 Body Closures, Removal and Installation).

10. For additional information, refer to: [Rear Door - Long Wheel Base](#)

(501-03 Body Closures, Removal and Installation).

-
11. For additional information, refer to: [Rear Rocker Panel Moulding - Long Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
-
12. For additional information, refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
-
13. For additional information, refer to: [Headliner](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
-
14. For additional information, refer to: [Side Air Curtain Module](#) (501-20B Supplemental Restraint System, Removal and Installation).
-
15. For additional information, refer to: [Rear Quarter Window Glass](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
-
16. For additional information, refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
-
17. For additional information, refer to: [Rear Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
-

18. **NOTE:**


Right hand only.

For additional information, refer to: [Fuel Tank Filler Pipe](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation).

-
19. For additional information, refer to: [Rear Lamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
-


20. For additional information, refer to: [Front Row Seat](#) (501-10B Seating - Long Wheel Base, Removal and Installation).
-
21. For additional information, refer to: [Rear Seat Cushion](#) (501-10B Seating - Long Wheel Base, Removal and Installation).
-
22. For additional information, refer to: [Instrument Panel Lower Section](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).
-
23. For additional information, refer to: [Instrument Panel Upper Section](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).
-
24. For additional information, refer to: [Roof Opening Panel Frame](#) (501-17 Roof Opening Panel, Removal and Installation).
-
25. For additional information, refer to: [Roof Front Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).
-
26. For additional information, refer to: [Roof Rear Panel - Long Wheel Base](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).
-

27.

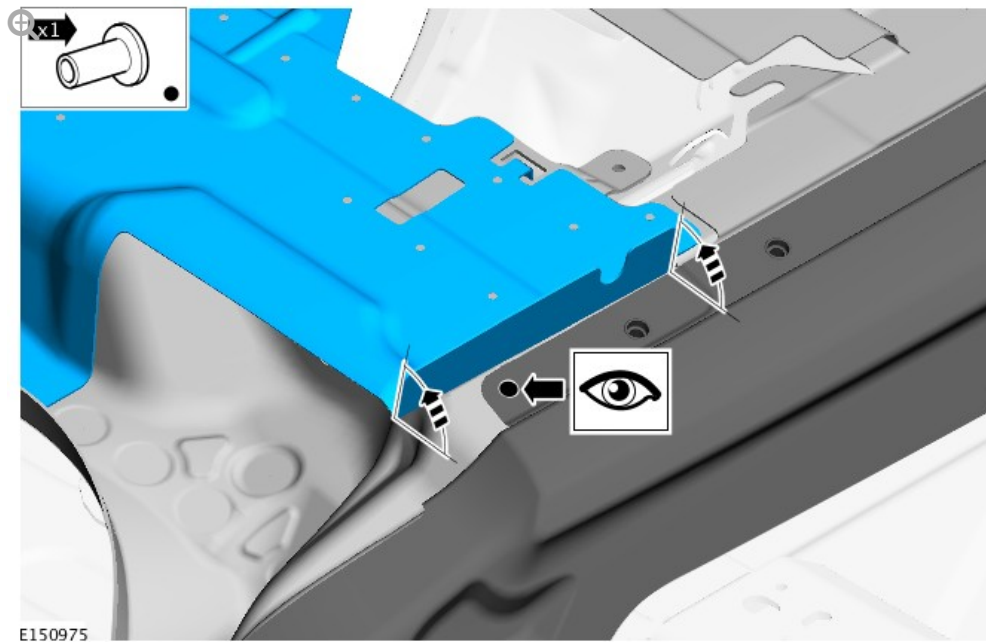


Lift edge of rear header rail to reveal the hidden SPR as indicated.

28.

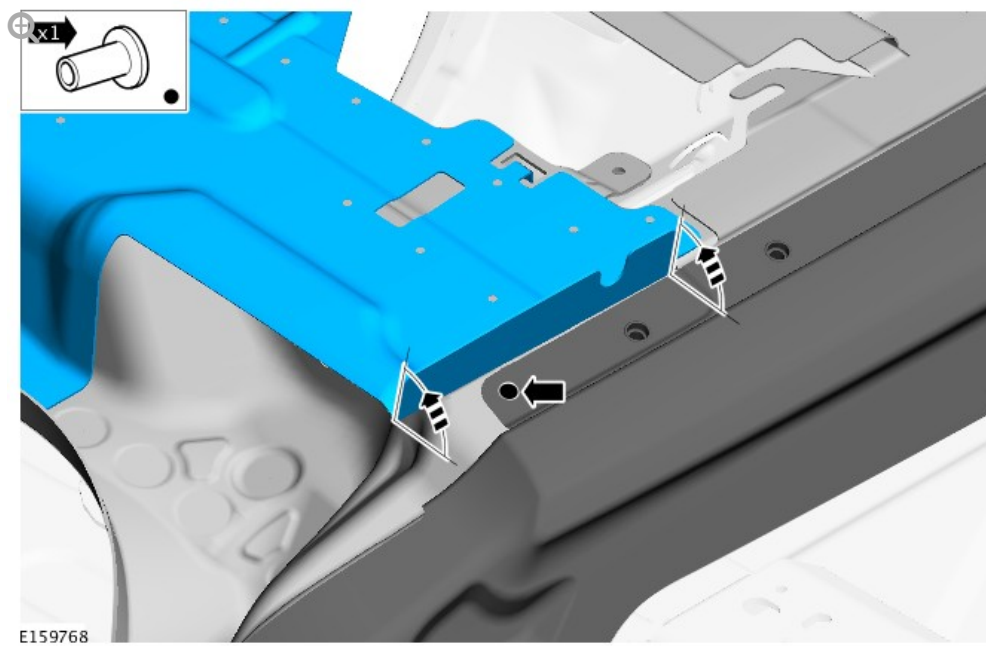

Remove the SPR as indicated.



29.

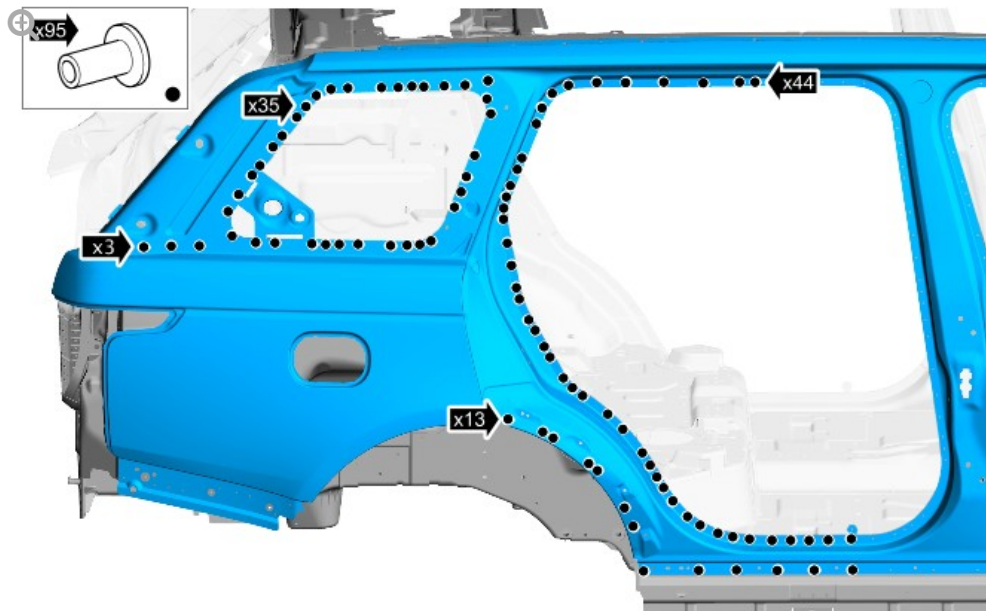

E161471

Remove the SPR's as indicated.


30.

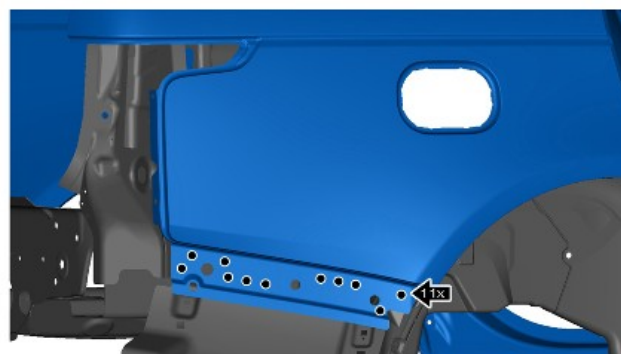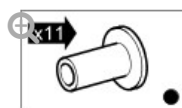

E143435

Remove the SPR's as indicated.


31.

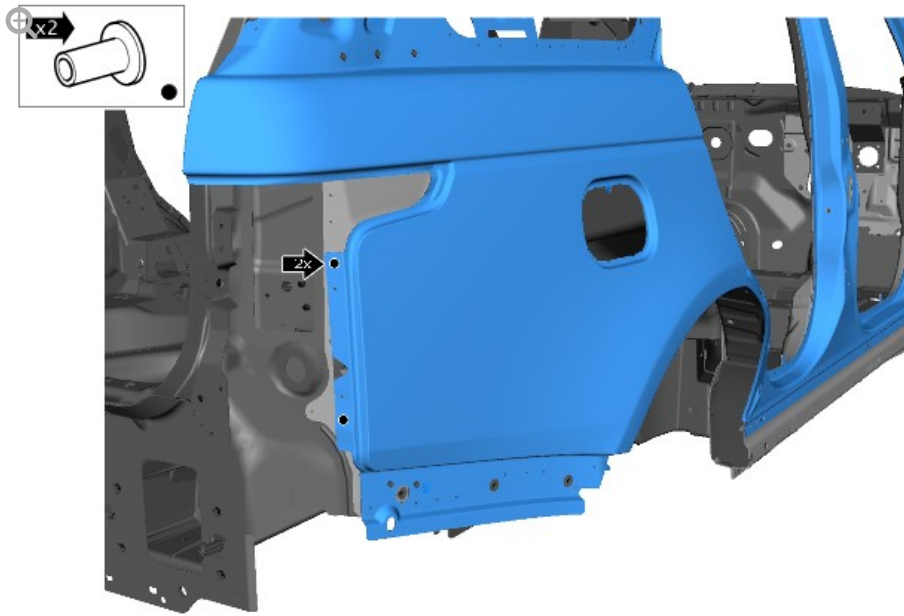

E143431

Remove the SPR's as indicated.


32.

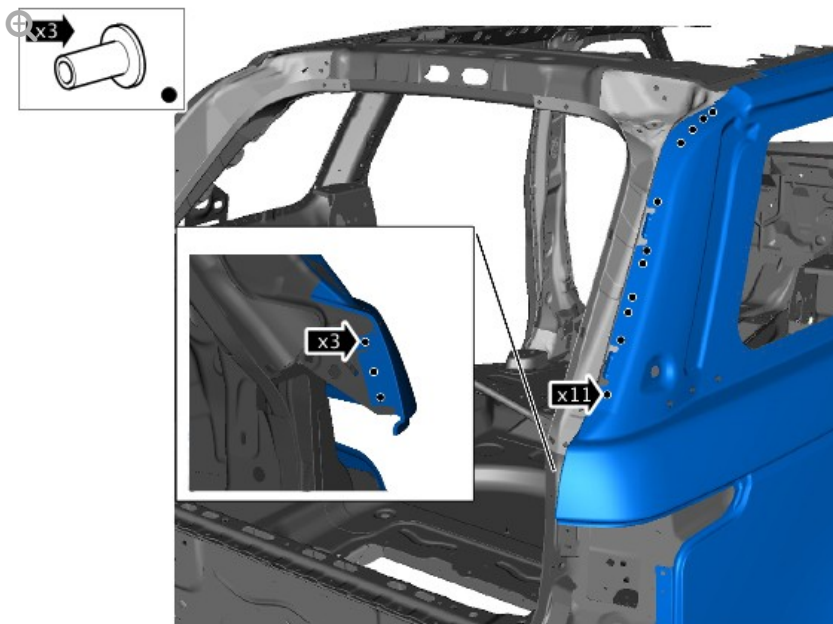

E144294


Remove the SPR's as indicated.

33.

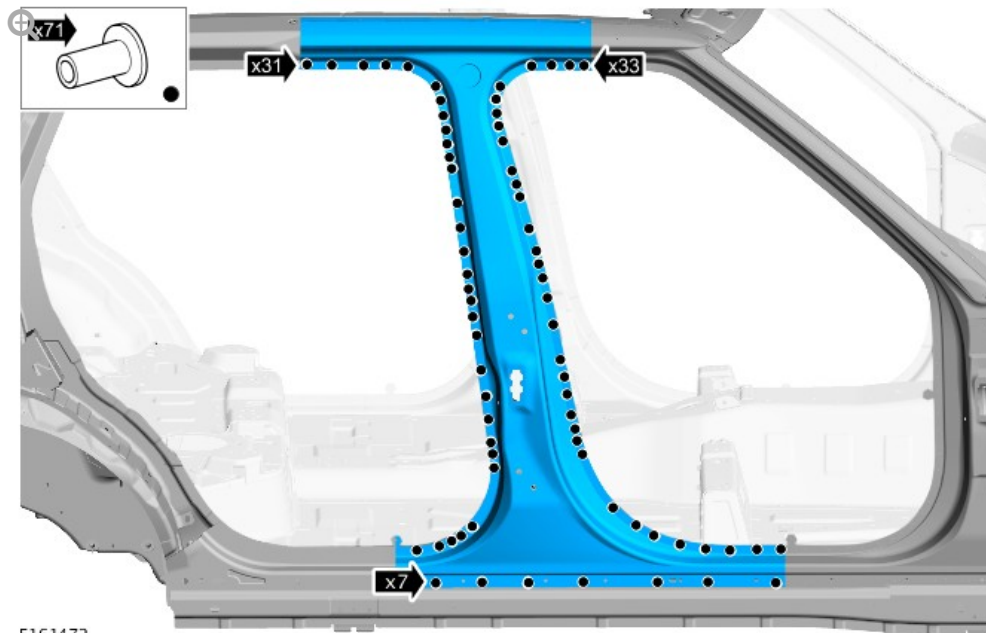


Remove the SPR's as indicated.

34.

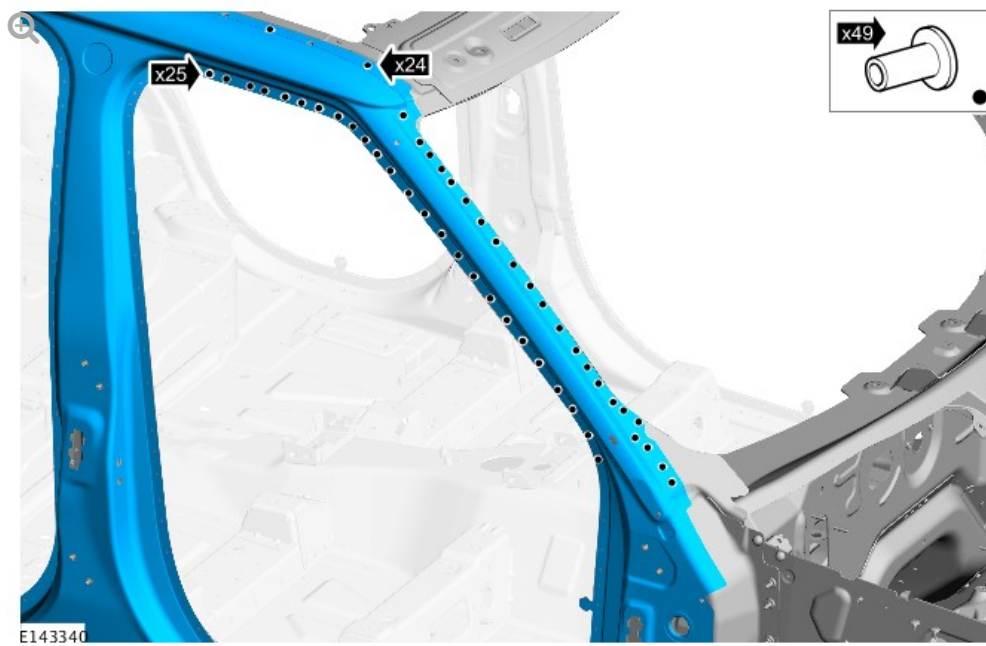

Remove the SPR's as indicated.

35.

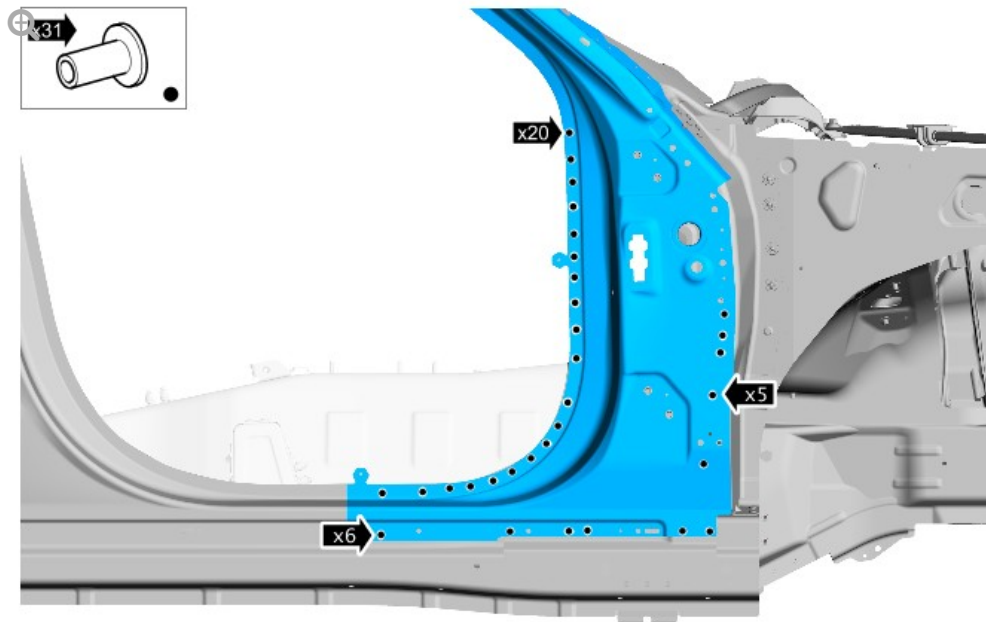

E143341

Remove the SPR's as indicated.


36.



E161473

Remove the SPR's as indicated.

37.

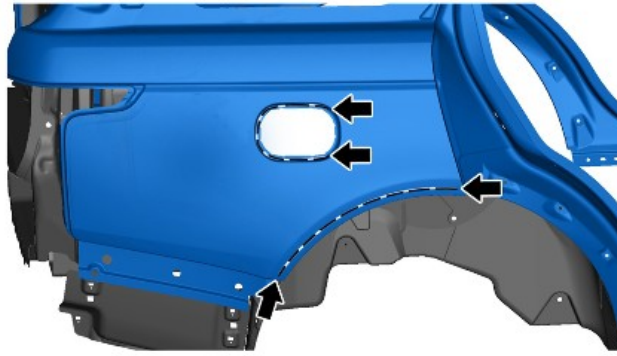

E143436

Carefully separate and release the adhesive from the rear wheelarch outer, rear lamp panel outer and the fuel filler neck aperture as indicated.

38. Separate the joints and remove the side panel.

INSTALLATION


CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.


1. Remove rivet remnants.
2. Dress flanges where necessary.
3. Using a fine bristle disc, clean and prepare the panel surfaces, removing any sealer and adhesive residue.
4. Offer up the new side panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

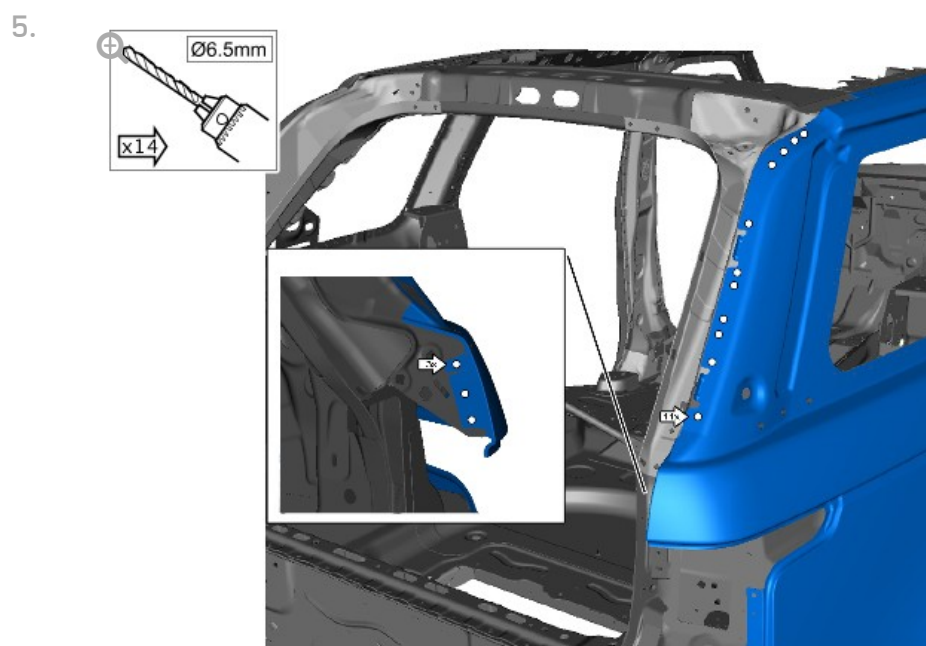

E144295

Drill holes at the points where BSF's are to be installed as indicated.


6.

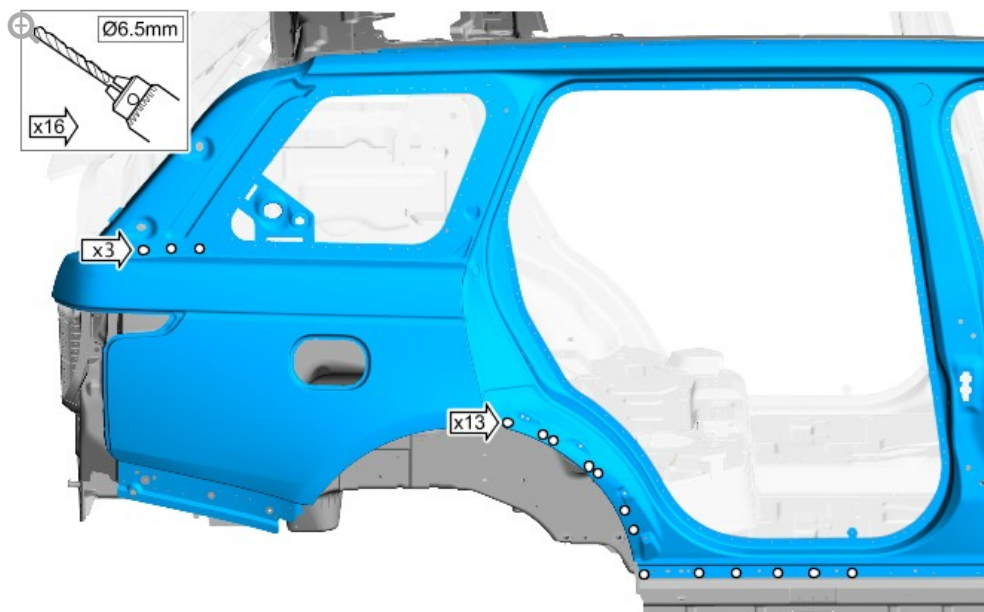

E161474

Drill holes at the points where BSF's are to be installed as indicated.


7.

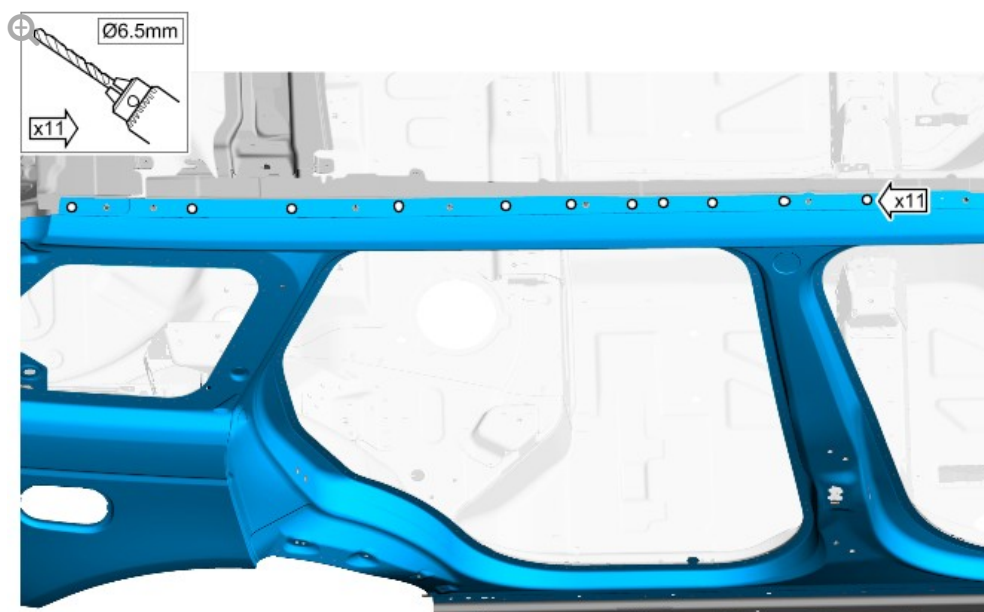

E161475

Drill holes at the points where BSF's are to be installed as indicated.


8.

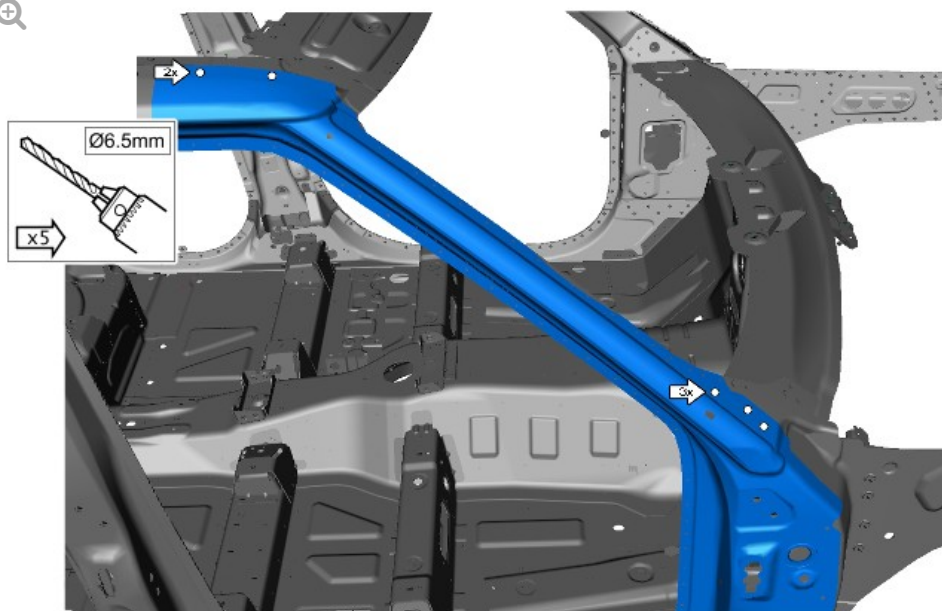

E143344

Drill holes at the points where BSF's are to be installed as indicated.



9.

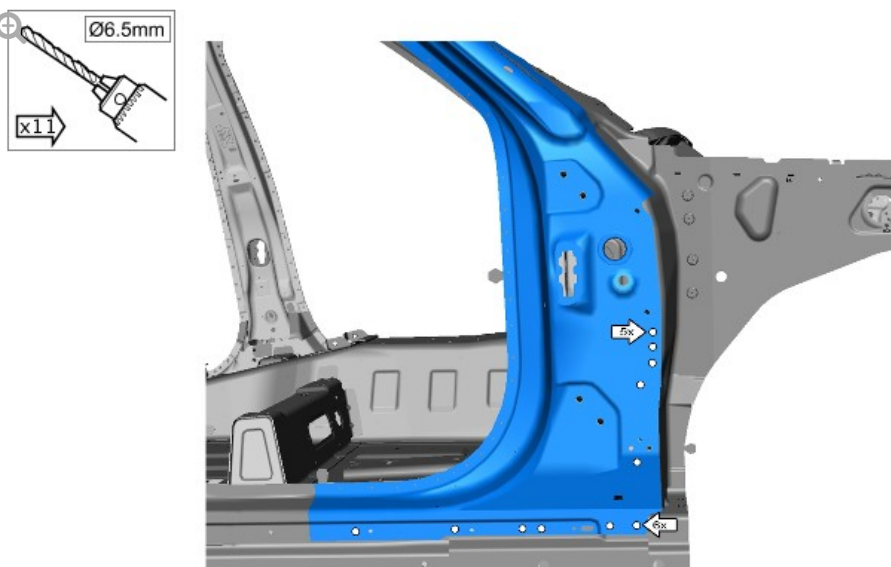

E143345

Drill holes at the points where BSF's are to be installed as indicated.



10.

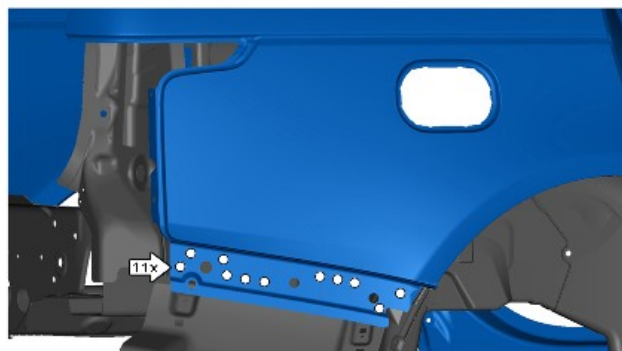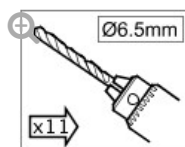

E143317

Drill holes at the points where BSF's are to be installed as indicated.


11.

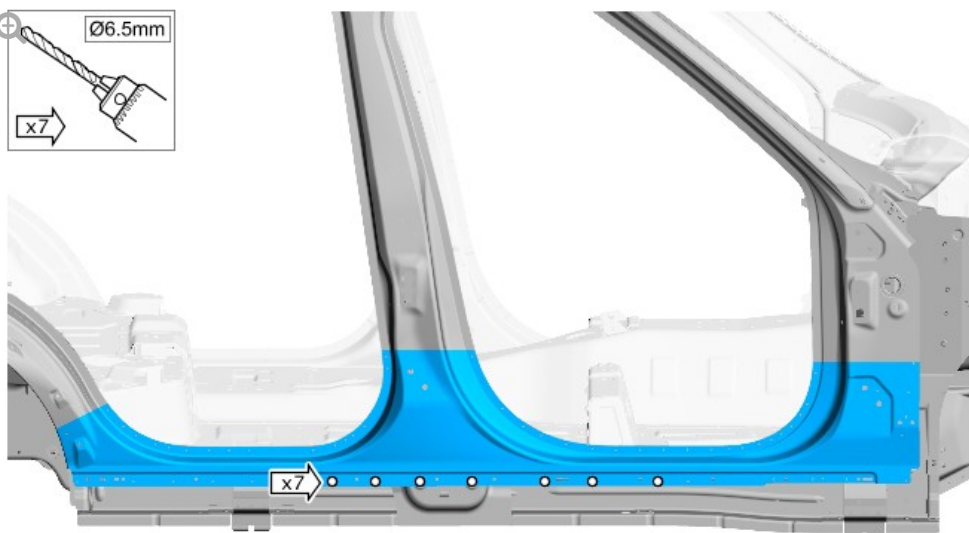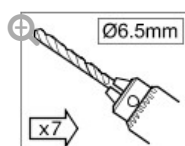

E161476

Drill holes at the points where BSF's are to be installed as indicated.

12.

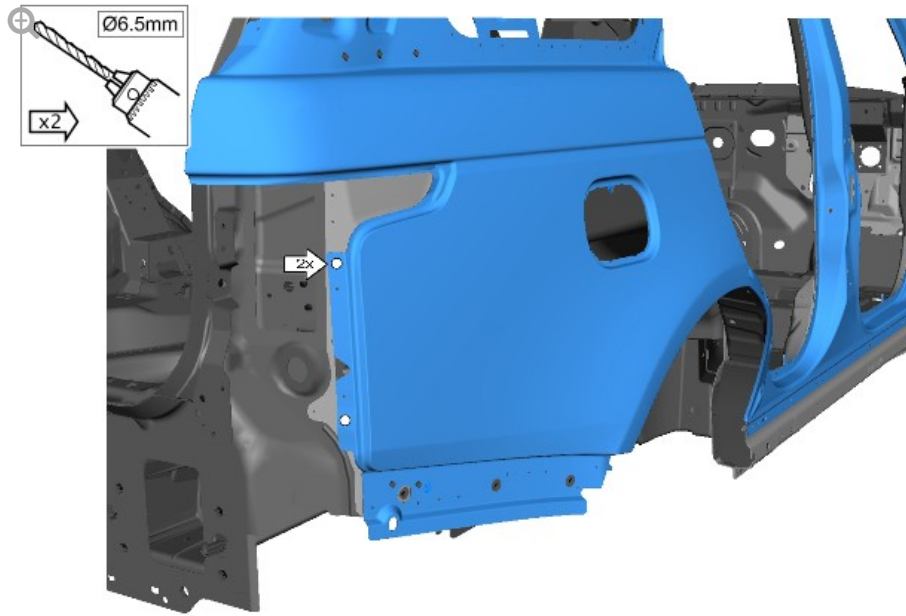

E144529

Drill holes at the points where BSF's are to be installed as indicated.

13. Remove the new side panel.

14. Deburr the drilled holes.

15. Using a fine bristle disc, clean and prepare the panel surfaces.

16. Apply a coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.


17.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

Apply a 5mm zig zag bead of Land Rover recommended bonding material to the body joints in the area of the contact surface of the side panel.


18.

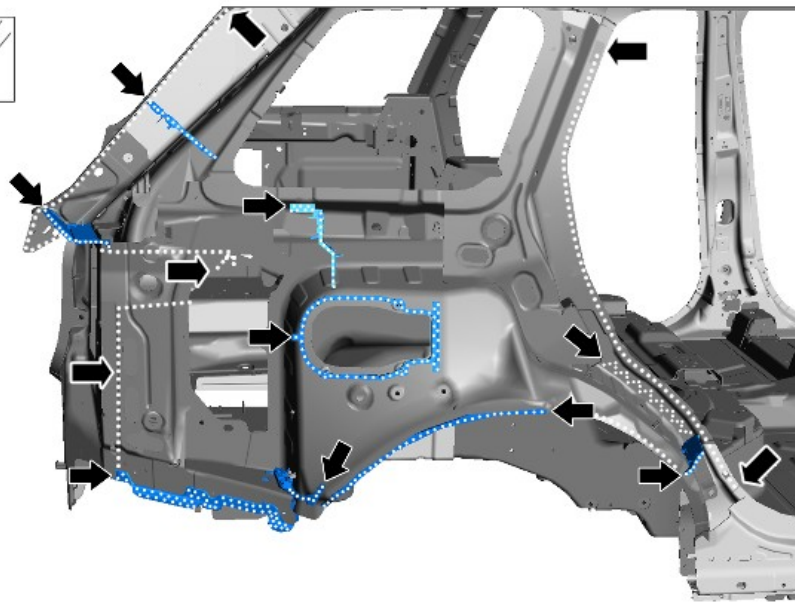

E143437

Install the noise, vibration and harshness (NVH) components and apply semi-rigid sealer to the NVH components as indicated.


19.

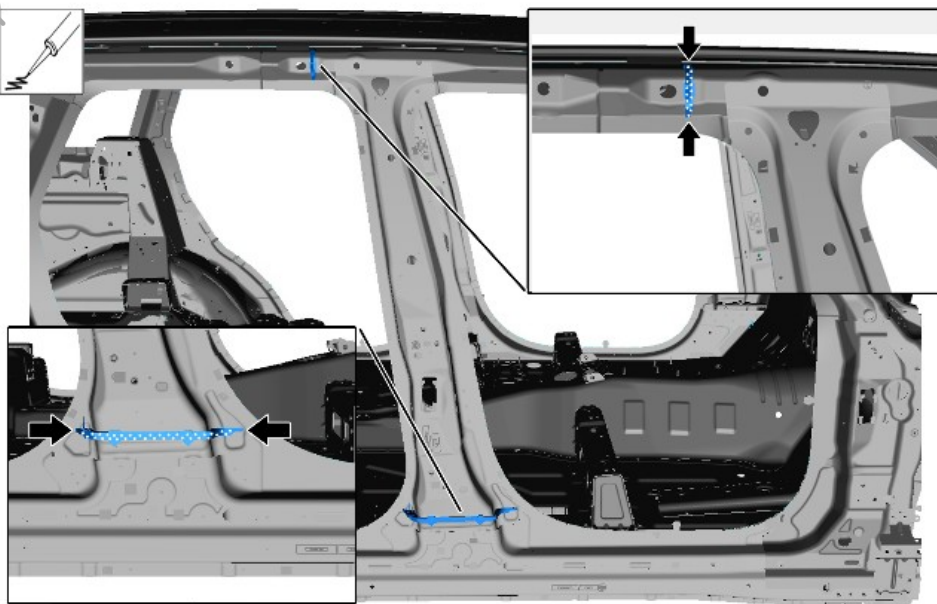

E 144292

Install the NVH components and apply semi-rigid sealer to the NVH components as indicated.

20.

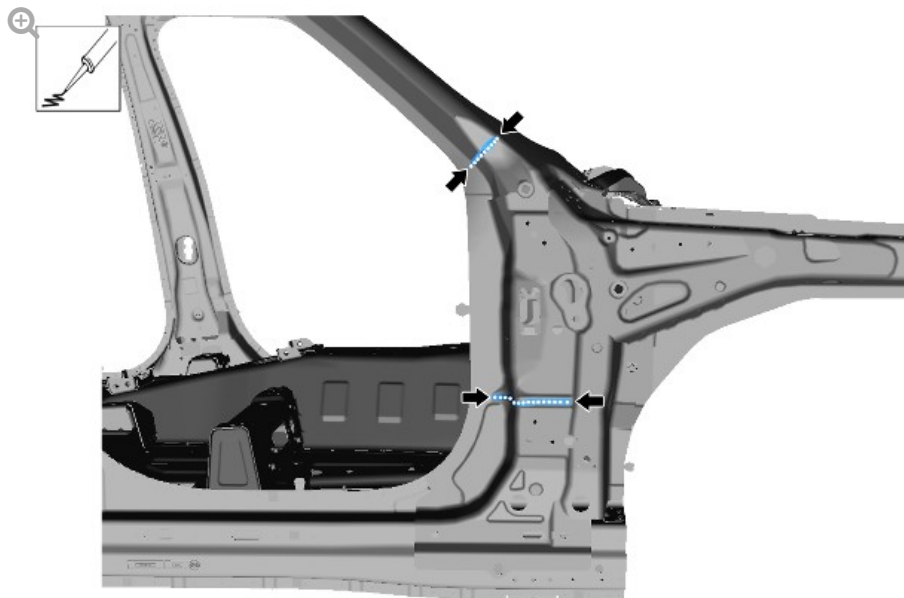


E144305

Install the NVH components and apply semi-rigid sealer to the NVH components as indicated.

-
21. Offer up the new side panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-



22.

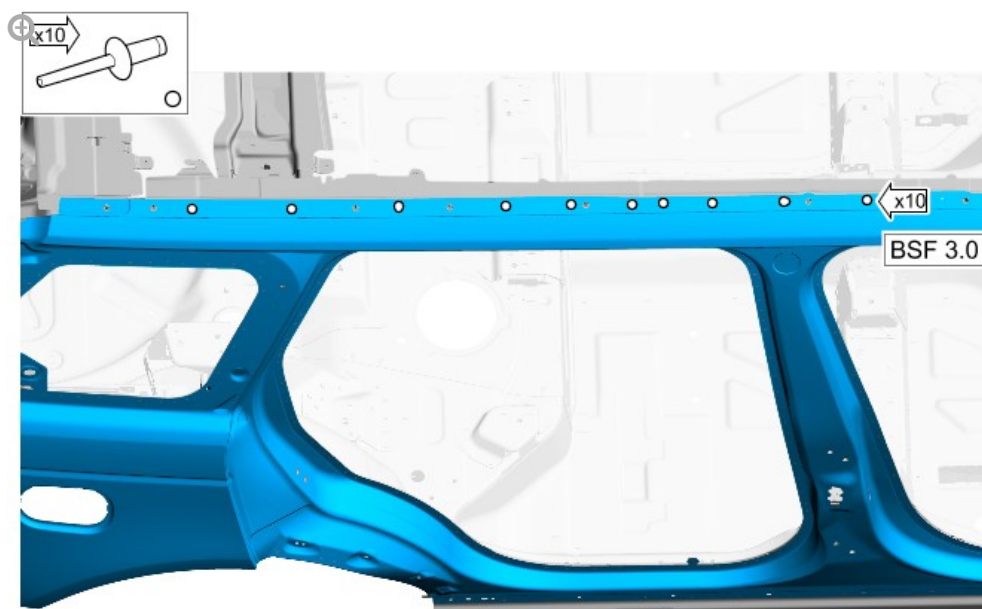

E161477

Install the BSF's as indicated.



23.

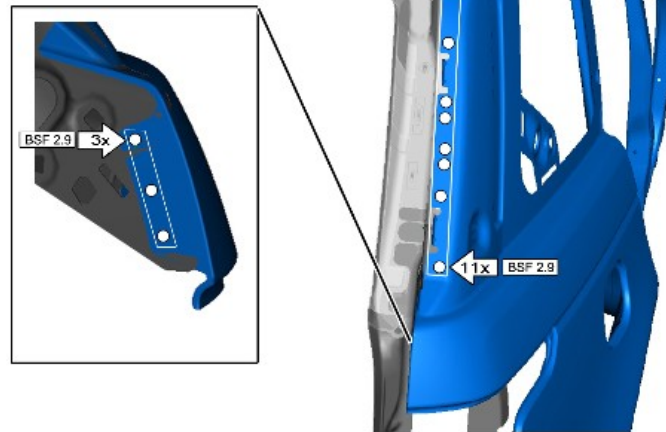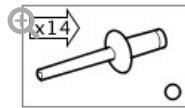

E144391

Install the BSF's as indicated.


24.

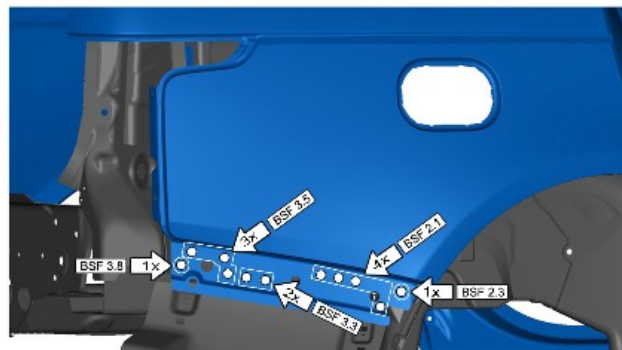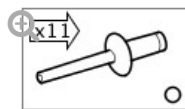

E144394

Install the BSF's as indicated.


25.

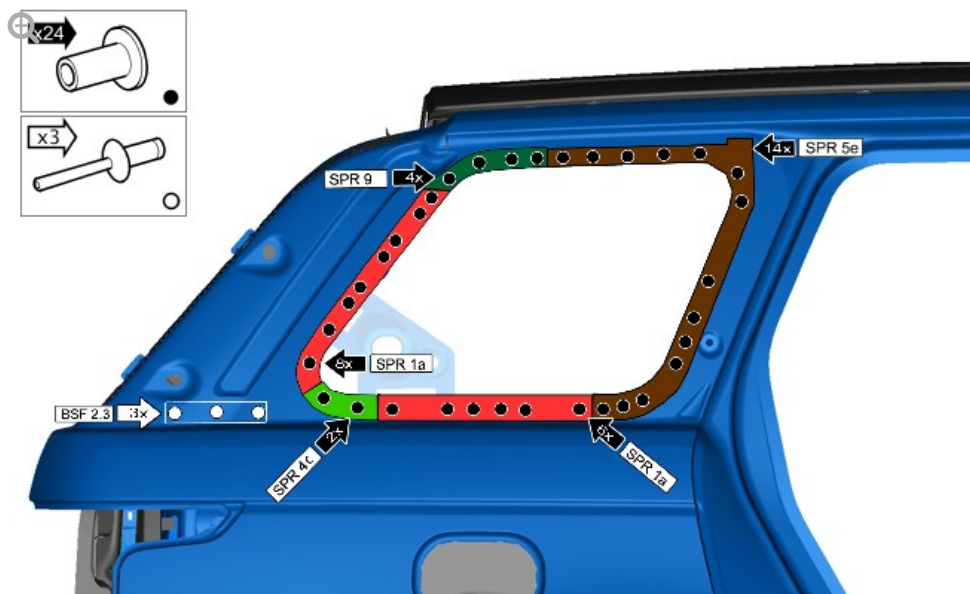

E159777

Install the SPR's and the BSF's as indicated.


26.

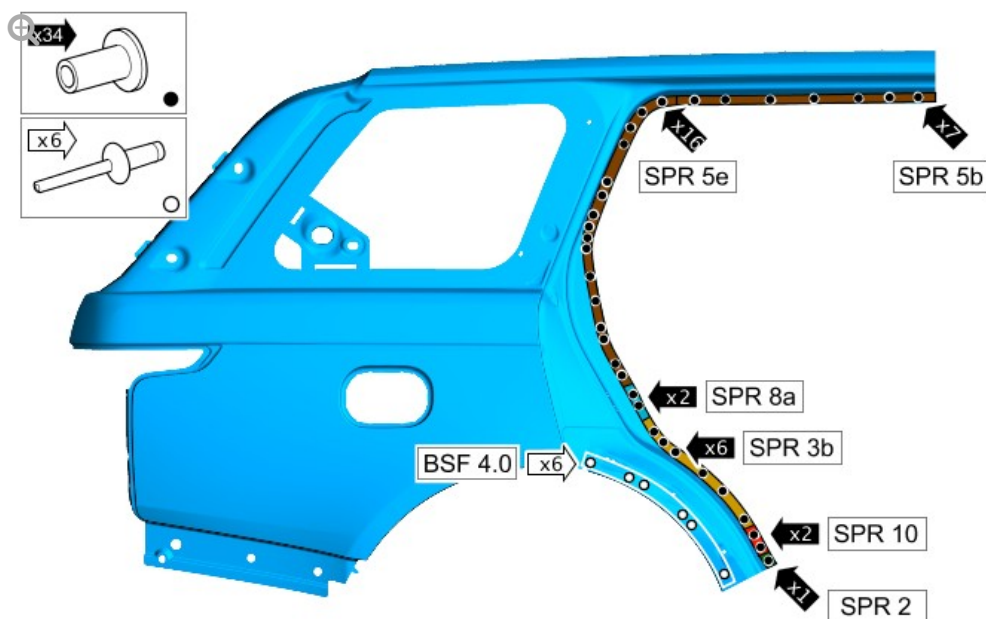

E161478

Install the SPR's and the BSF's as indicated.


27.

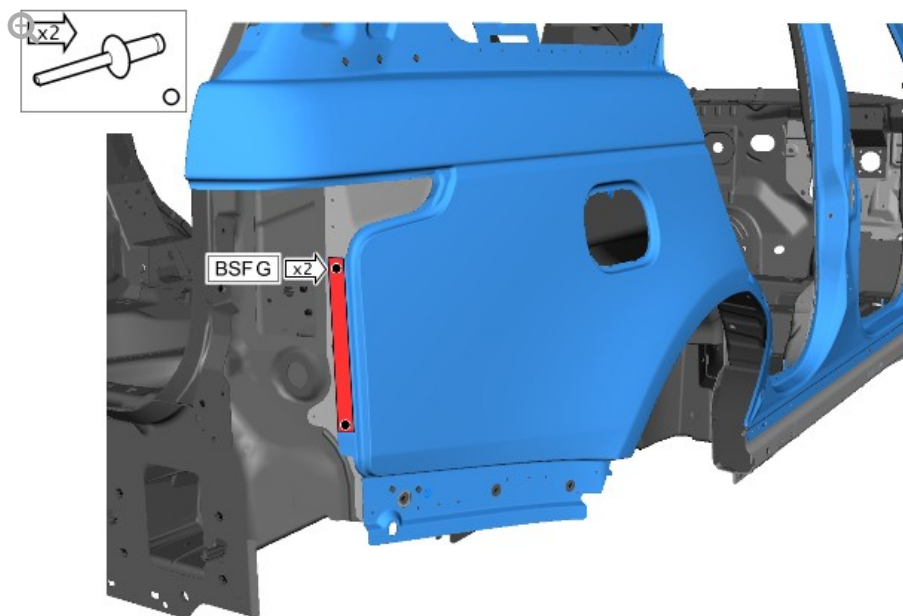

E144389

Install the BSF's as indicated.


28.

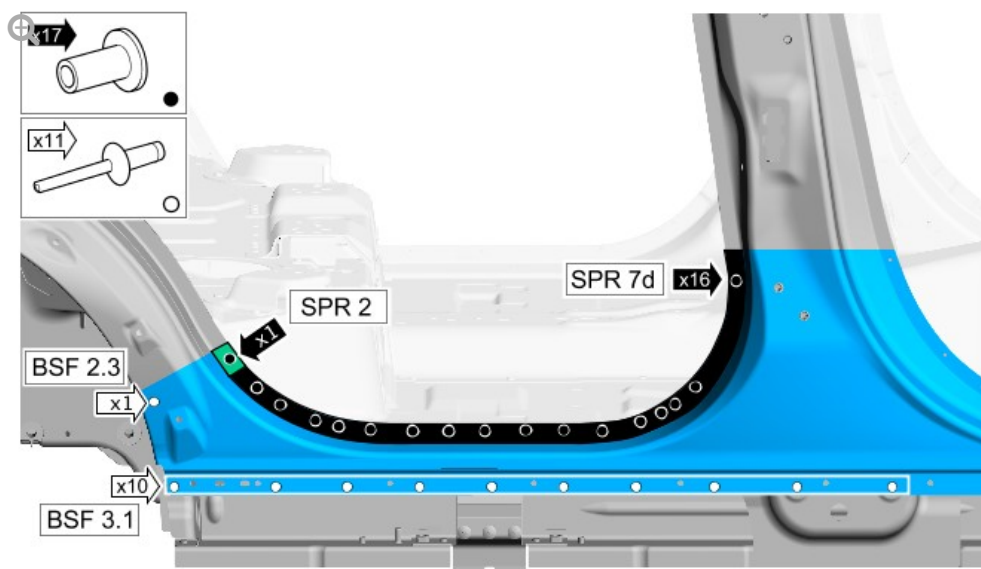

E161479

Install the SPR's and the BSF's as indicated.

29.

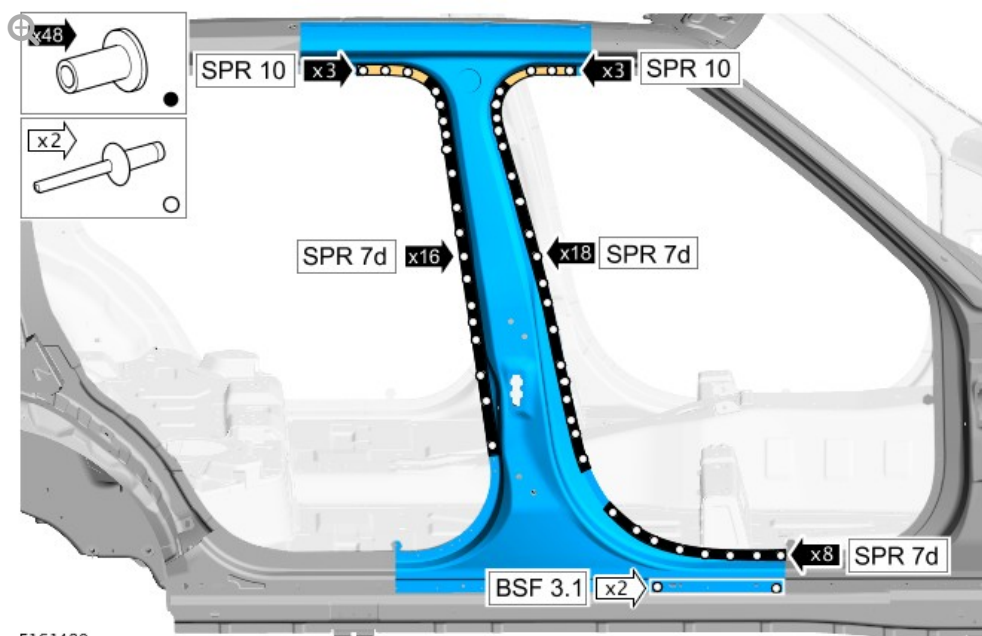


Install the SPR's and BSF's as indicated.

30.


NOTE:

The BSF's highlighted with a cross are installed in conjunction with the roof panel.

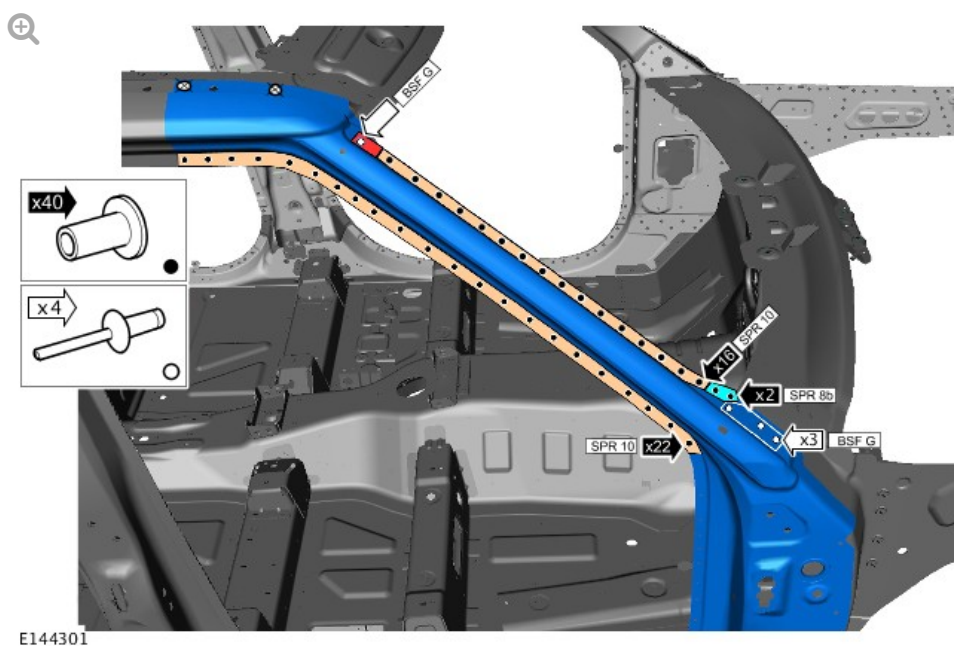

Install the SPR's and BSF's as indicated.


31.

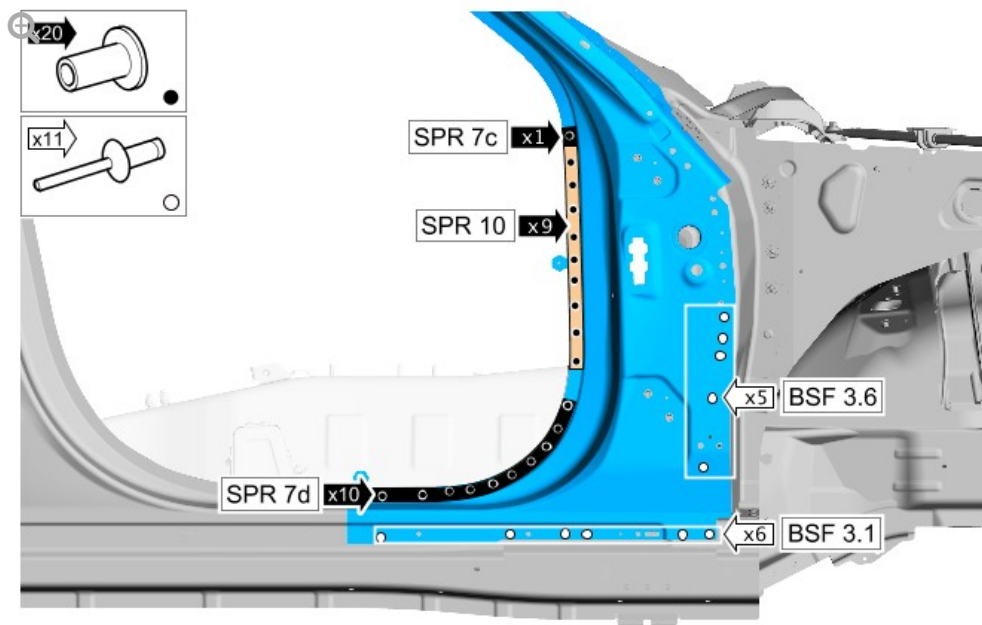

E144302

Install the SPR's and the BSF's as indicated.


32.

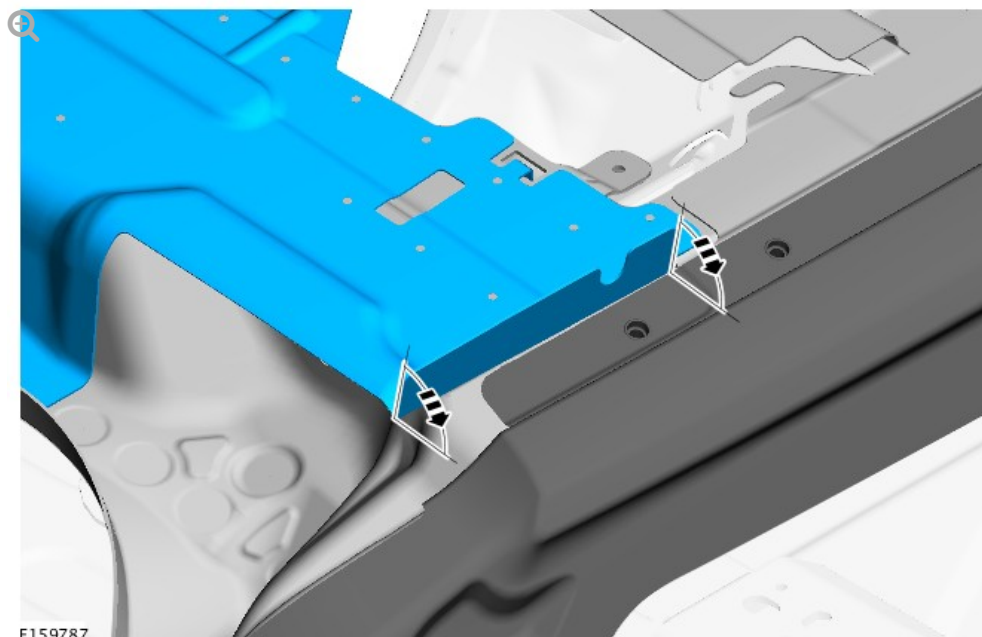

E159787

Fold back the edge of rear roof header rail as indicated.

33.

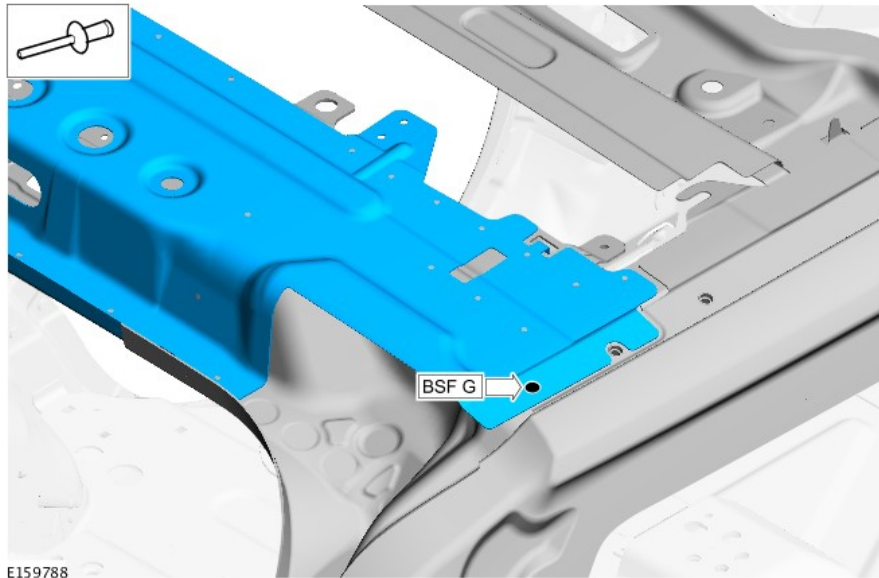

Install the BSF as indicated.

34. Remove any excess adhesive.

35. Make sure that any open or exposed panel joints are suitably sealed.

36. Make sure corrosion protection is applied to all areas affected by repair.

37. The installation of associated panels and components is the reversal of removal procedure.