

2016.0 RANGE ROVER (LG), 501-29

SIDE PANEL SHEET METAL REPAIRS

SIDE PANEL – STANDARD WHEEL BASE (G1454615)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

-
1. The side panel is a category A repair.
-

2.



E143399

The side panel is serviced as indicated.

3.

NOTE:

The procedures described in these removal and installation steps combine individual steps in the repair processes of side panel front section, B-pillar outer panel and quarter panel.

For additional information, refer to:

General Service Information (100-00 General Information, Description and Operation),


Body Construction (501-25 Body Repairs - General Information, Description and Operation),

Corrosion Prevention (501-25 Body Repairs - General Information, Description and Operation),

Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).


4. For additional information, refer to: Roof Panel (501-28 Roof Sheet Metal Repairs, Removal and Installation).

5.

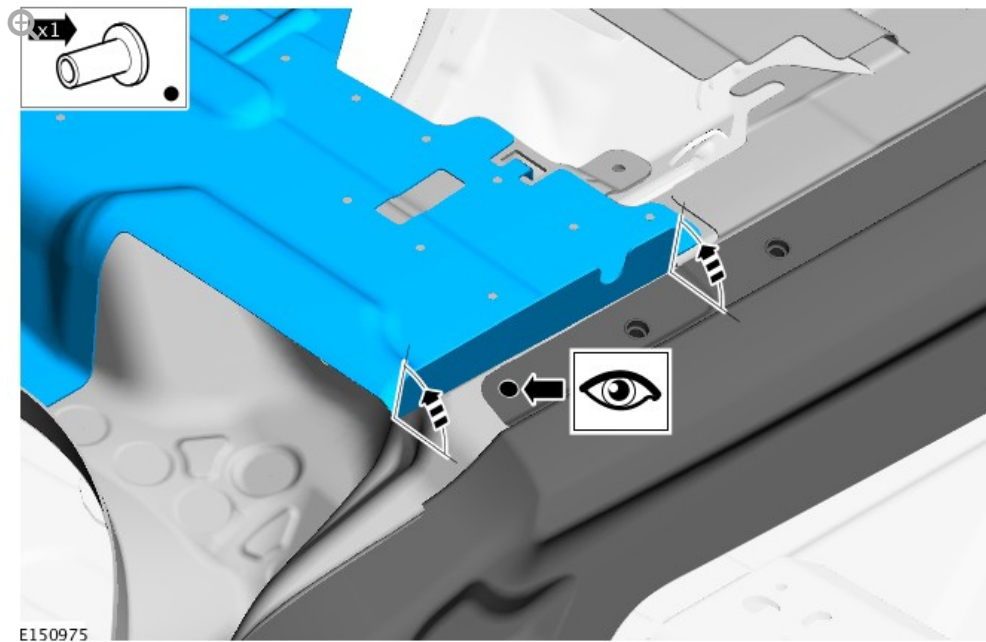


Lift edge of rear header rail to reveal hidden SPR as indicated.

6.

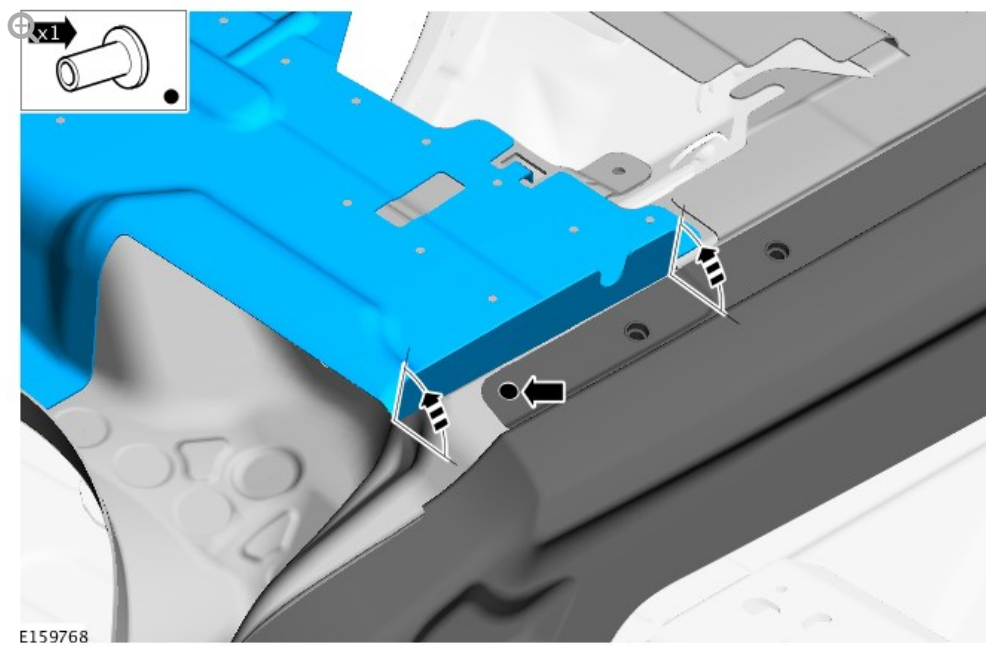

Remove the SPR as indicated.



7.

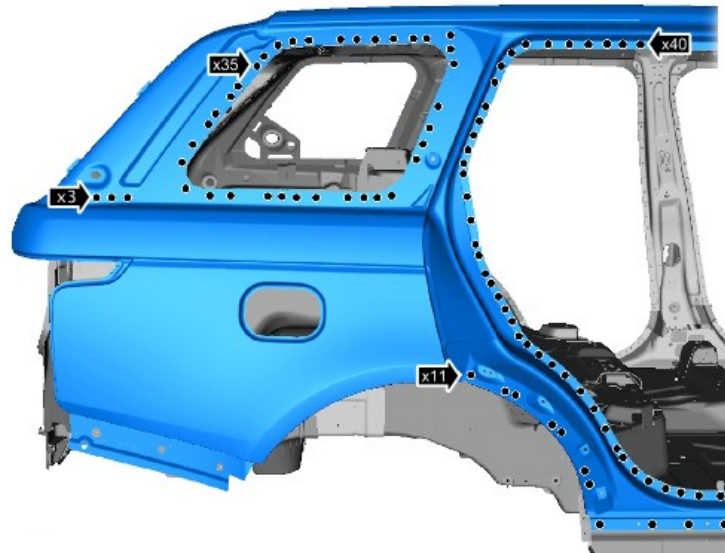

E159774

Remove the SPR's as indicated.


8.

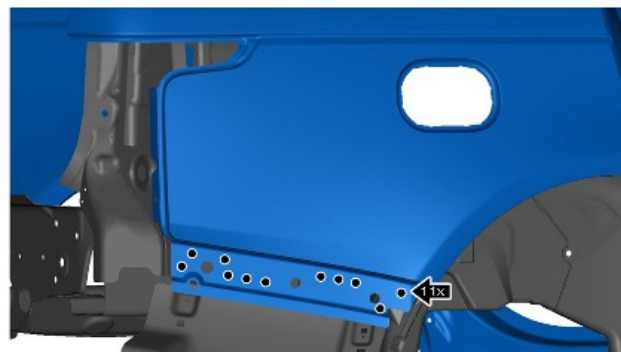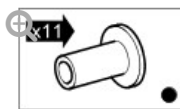

E143435

Remove the SPR's as indicated.


9.

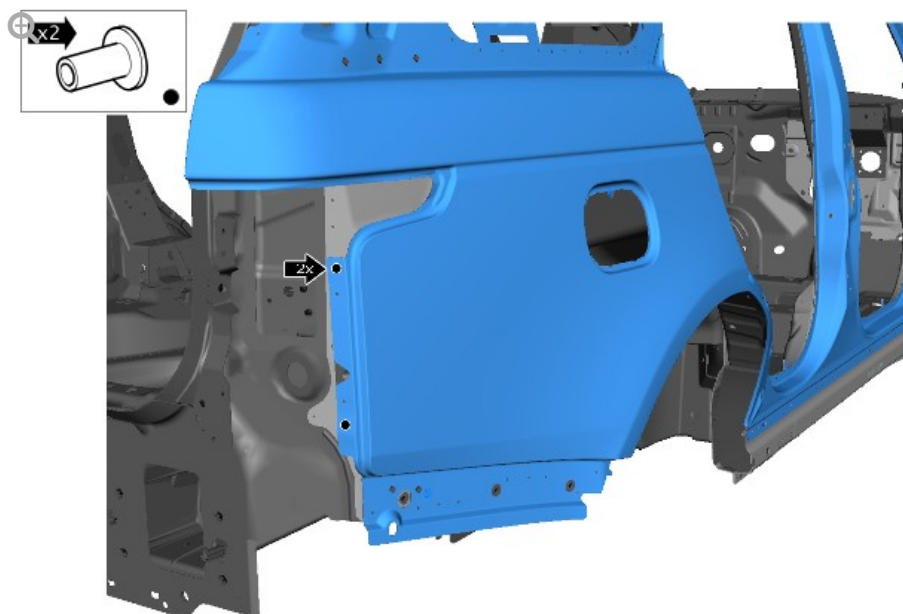

E143431

Remove the SPR's and the BSF's as indicated.


10.

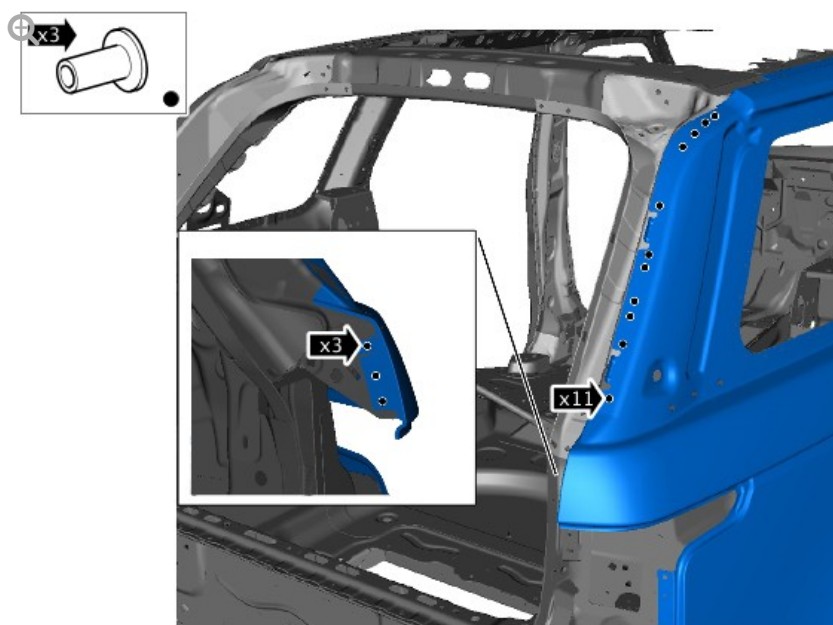

E144294

Remove the SPR's as indicated.


11.

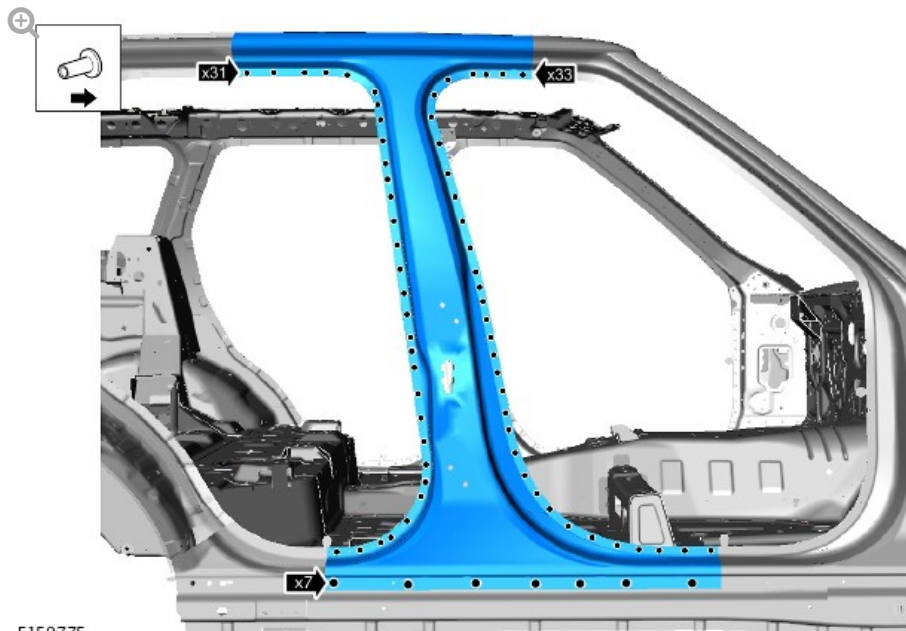

E159775

Remove the SPR's as indicated.



12.

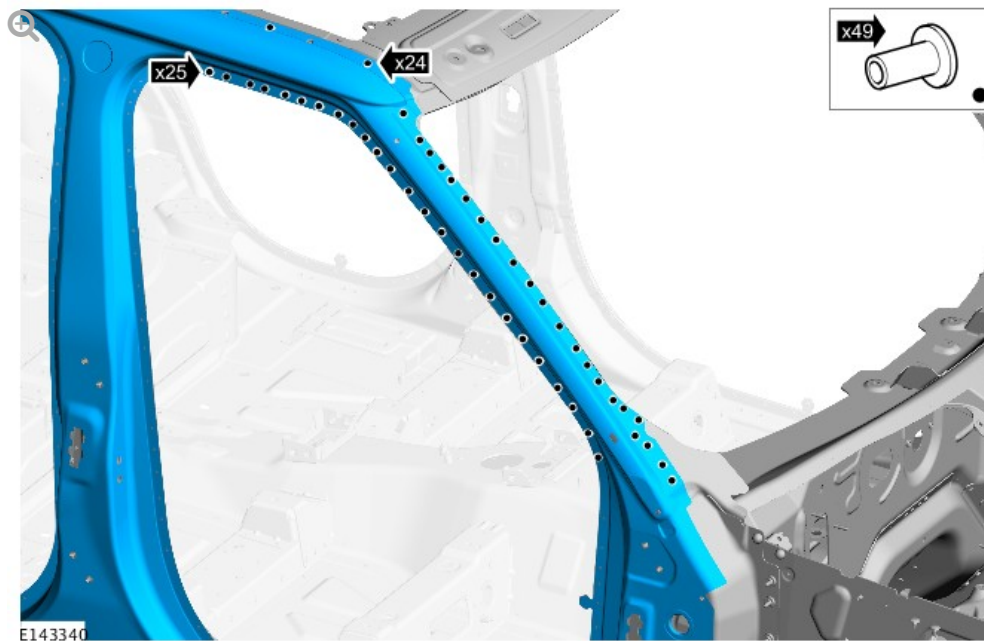

E143340

Remove the SPR's as indicated.

13.

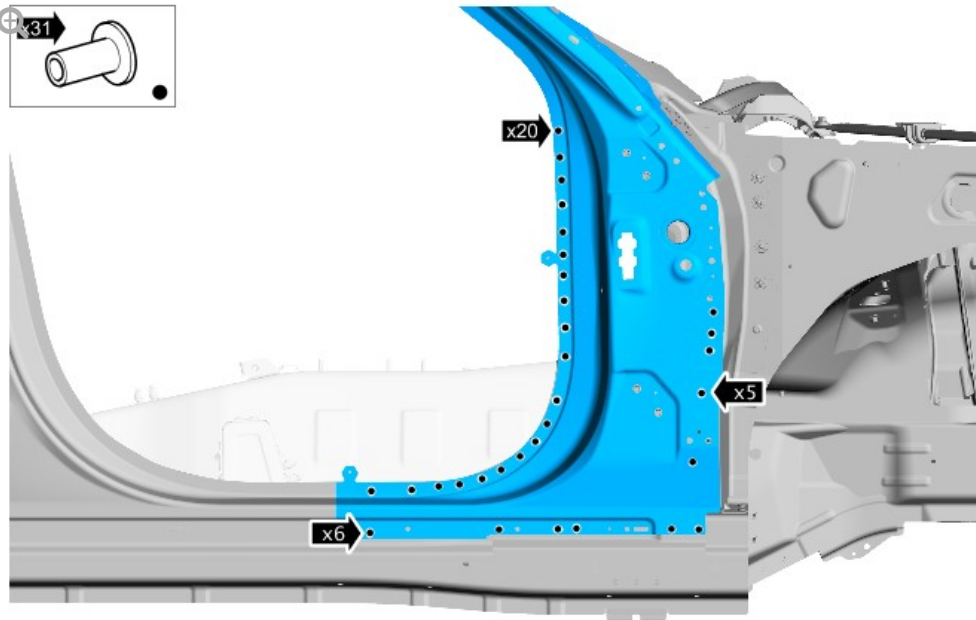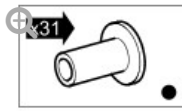

E143341

Remove the SPR's as indicated.


14.



E159769

Remove the SPR's as indicated.

15.

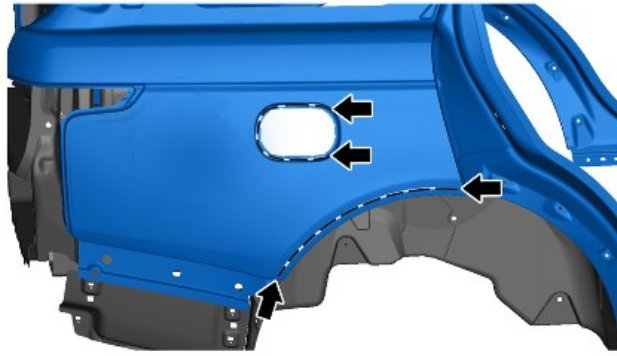

E143436

Carefully separate and release the adhesive from the wheelarch outer and rear lamp panel outer and if the right hand quarter panel is to be repaired, from the fuel filler door aperture as indicated.

16. Separate the joints and remove the side panel.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
 - SPR installation requires using the Land Rover approved SPR tool.
-


1. Remove rivet remnants.

2. Dress flanges where necessary.

3. Using a fine bristle disc, clean and prepare the panel surfaces, removing any sealer and adhesive residue.

4. Offer up the new side panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.

5.

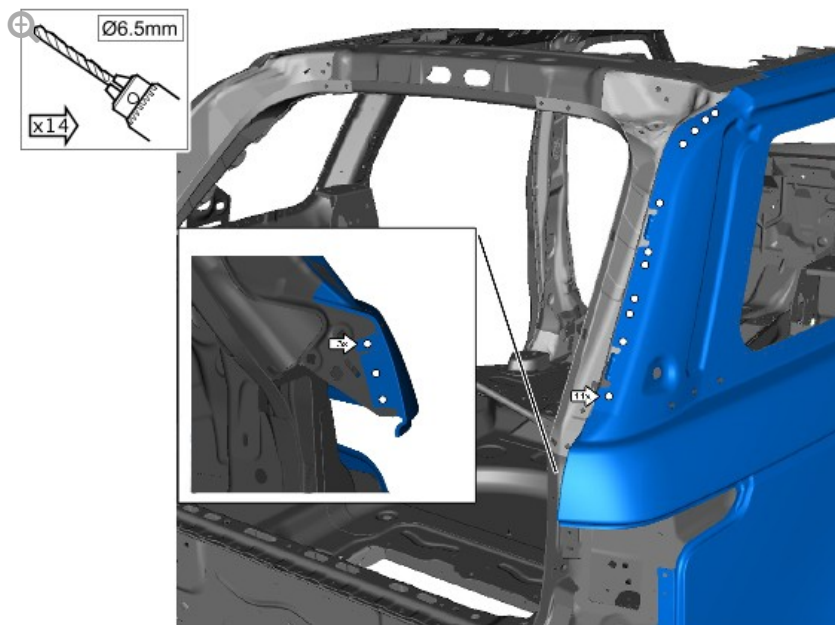

E144295

Drill holes at the points where BSF's are to be installed as indicated.

6.



E159770

Drill holes at the points where BSF's are to be installed as indicated.


7.



E159771

Drill holes at the points where BSF's are to be installed as indicated.


8.

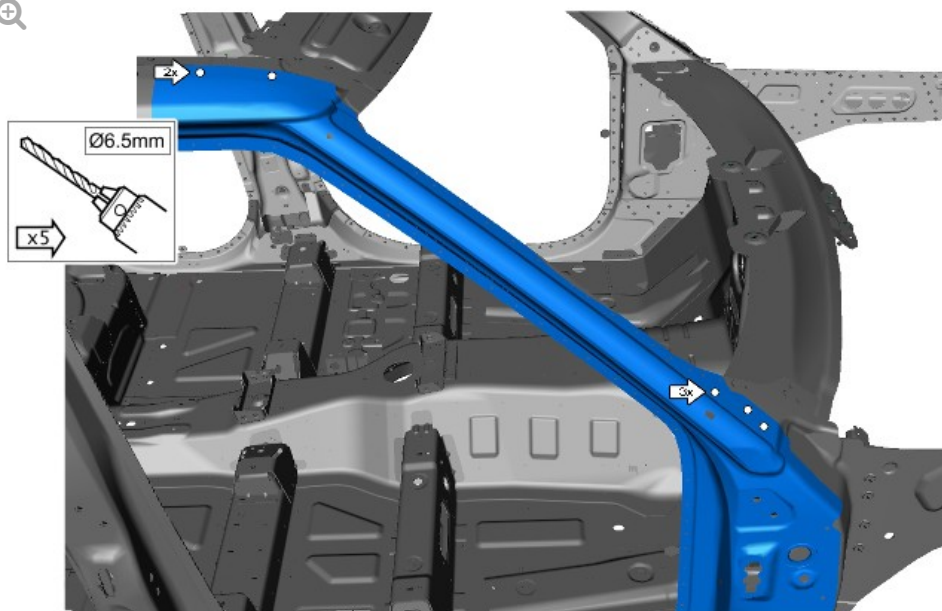

E143344

Drill holes at the points where BSF's are to be installed as indicated.



9.

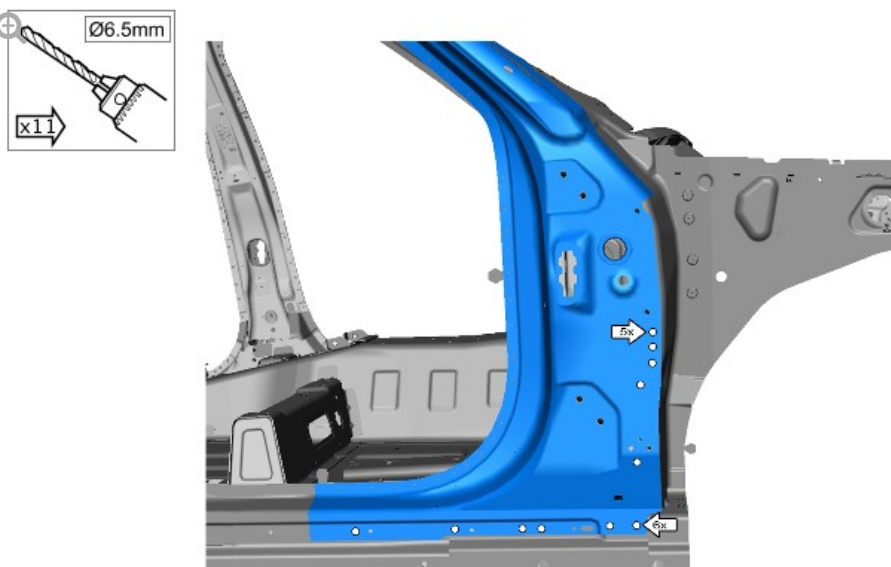

E143345

Drill holes at the points where BSF's are to be installed as indicated.


10.

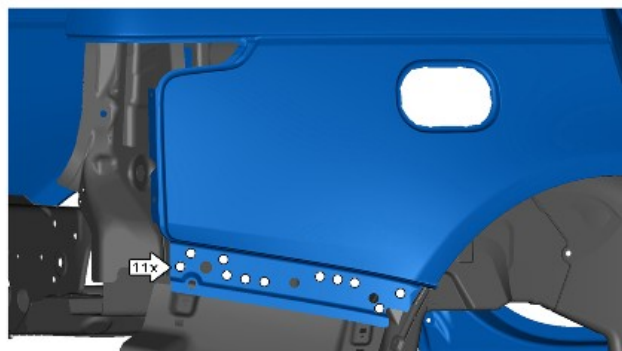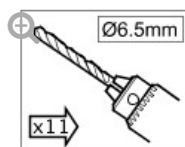

E143317

Drill holes at the points where BSF's are to be installed as indicated.


11.

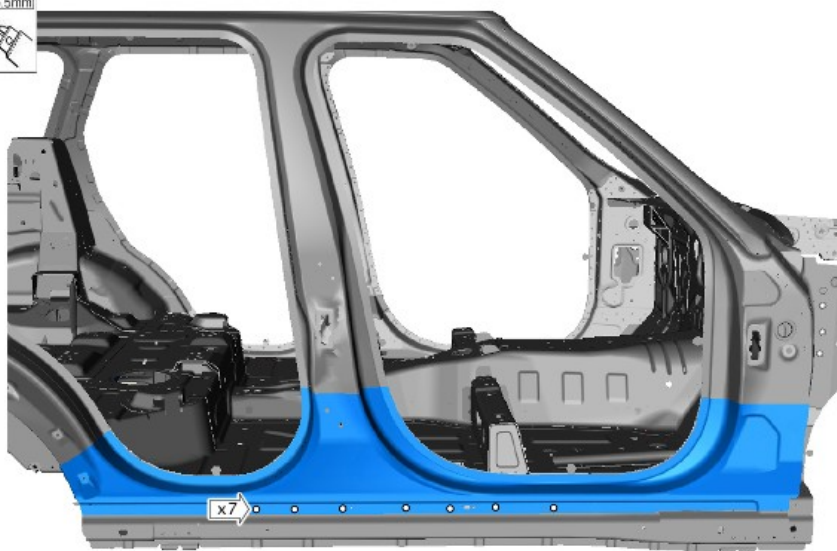

E159772

Drill holes at the points where BSF's are to be installed as indicated.

12.

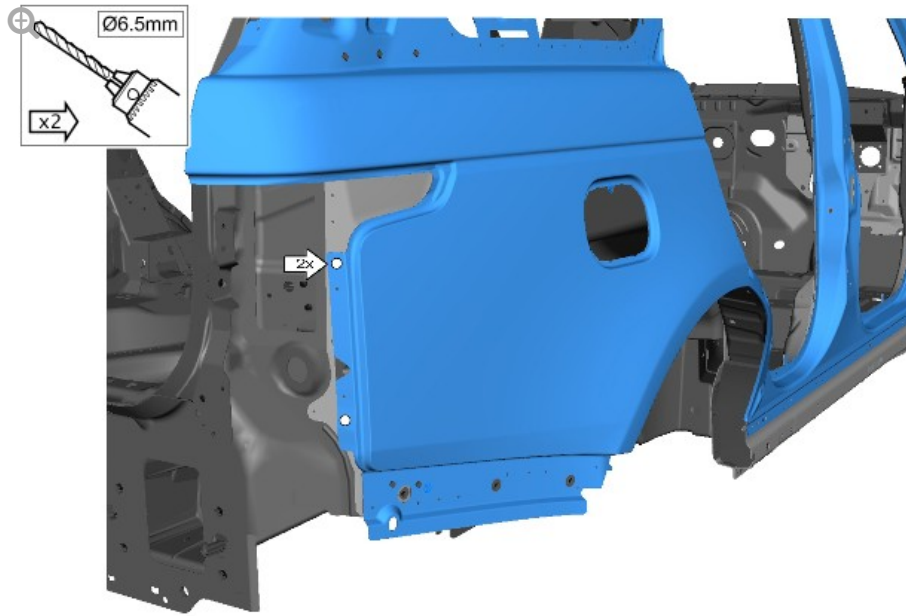

E144529

Drill holes at the points where BSF's are to be installed as indicated.

13. Remove the new side panel.

14. Deburr the drilled holes.

15. Using a fine bristle disc, clean and prepare the panel surfaces.

16. Apply a coupling agent where the Land Rover recommended bonding material is to be applied and allow to dry.


17.

NOTE:

Make sure a continuous bead of adhesive surrounds fixing holes.

Apply a 5mm zig zag bead of Land Rover recommended bonding material to the body joints in the area of the contact surface of the side panel.


18.

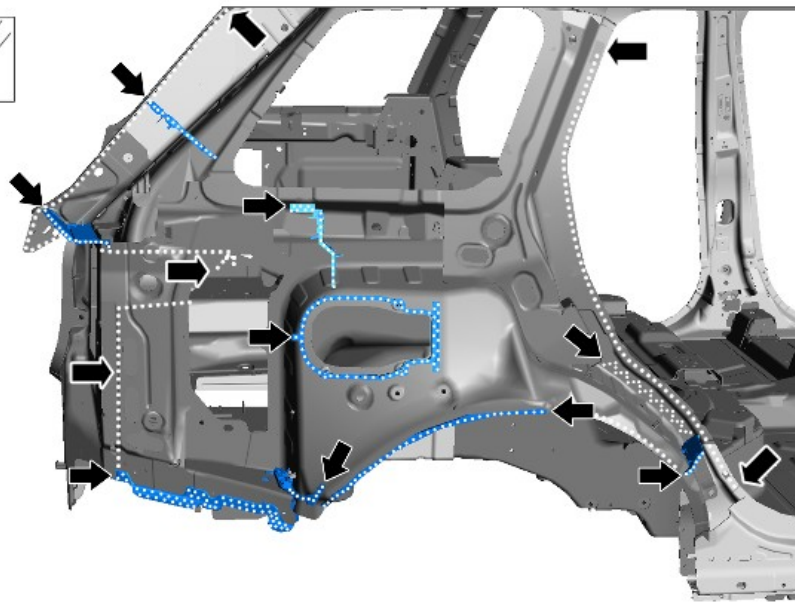

E143437

Install the noise, vibration and harshness (NVH) components and apply semi-rigid sealer to the NVH components as indicated.


19.

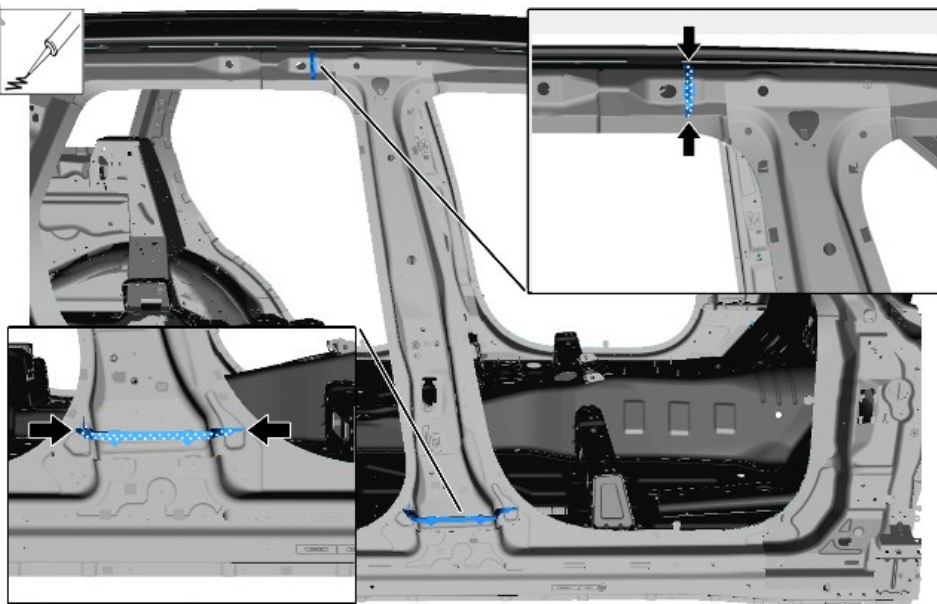

E 144292

Install the NVH components and apply semi-rigid sealer to the NVH components as indicated.

20.

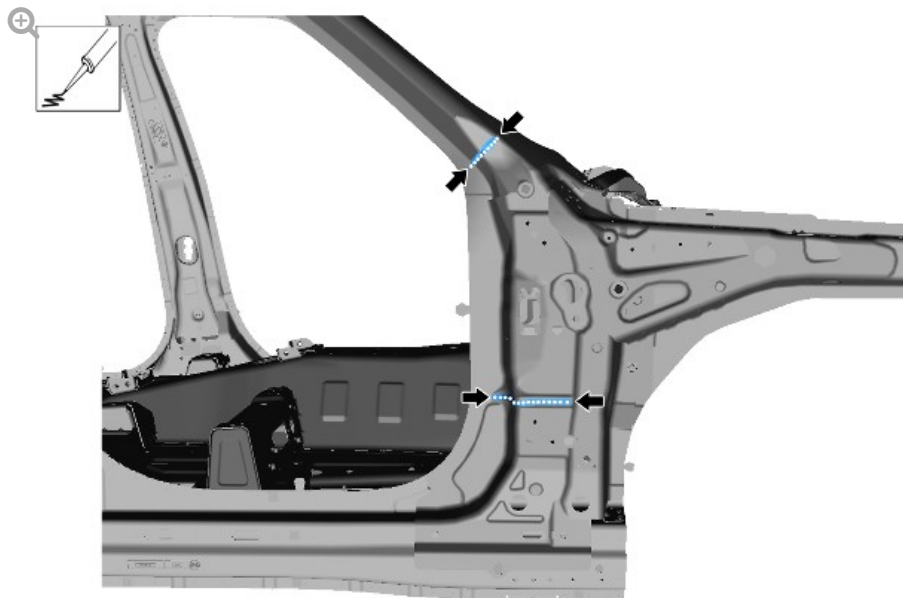

E144305

Install the NVH components and apply semi-rigid sealer to the NVH components as indicated.

-
21. Offer up the new side panel and clamp into position. Check alignment, if correct proceed to next step, if not, rectify and recheck before proceeding.
-




22.



E159776

Install the BSF's as indicated.



23.

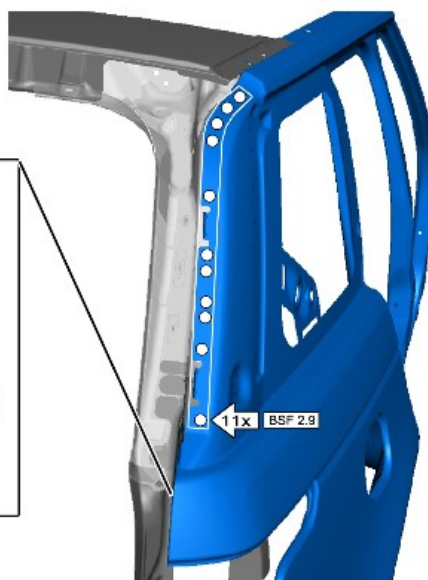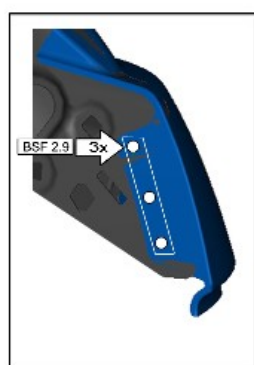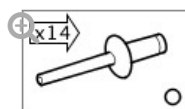

E144391

Install the BSF's as indicated.


24.

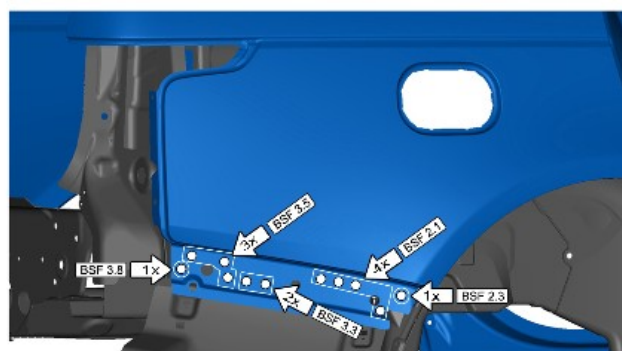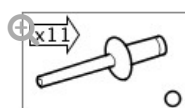

E144394

Install the BSF's as indicated.


25.

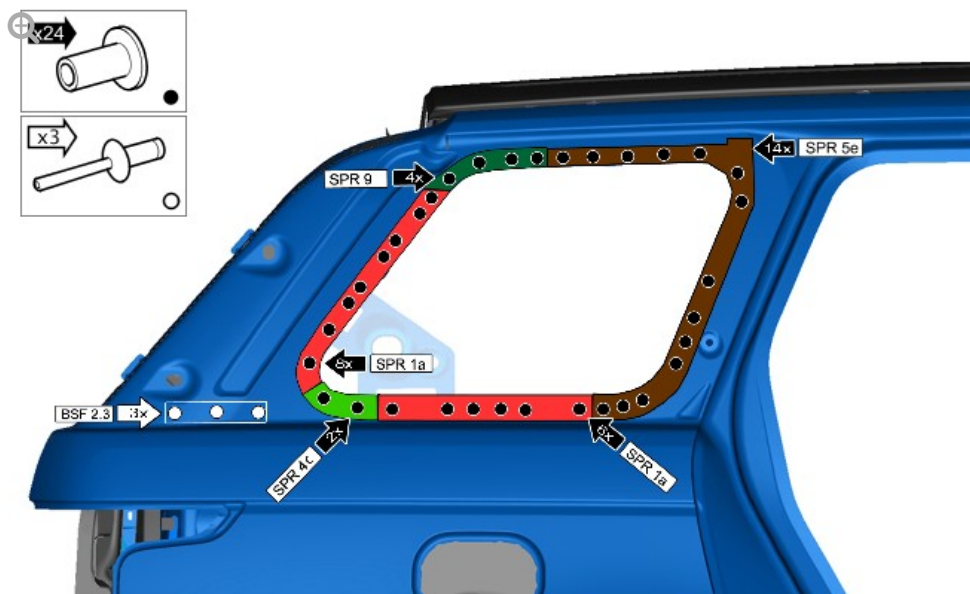

E159777

Install the SPR's and the BSF's as indicated.


26.

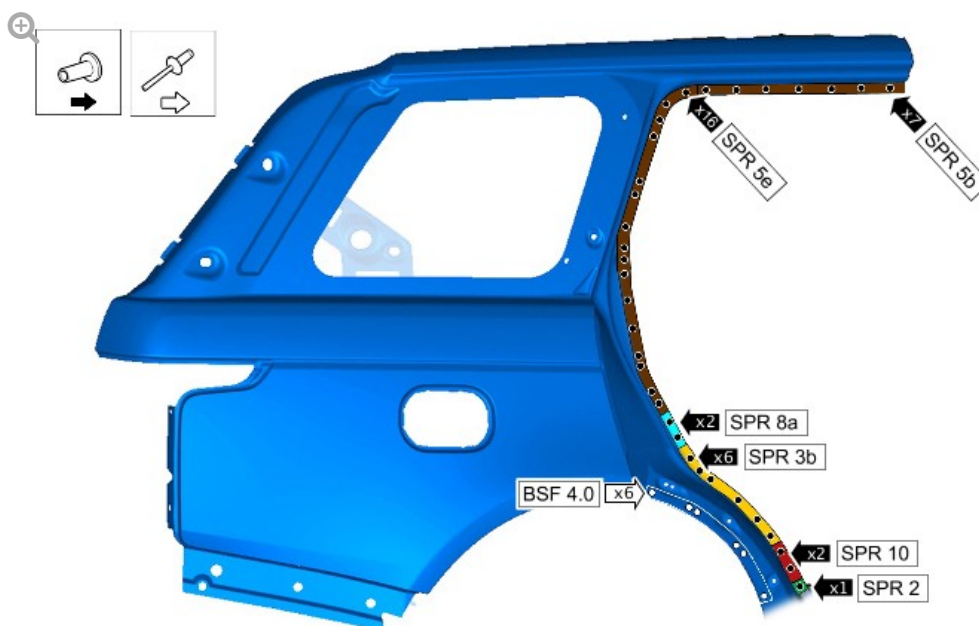

E159780

Install the SPR's and the BSF's as indicated.


27.

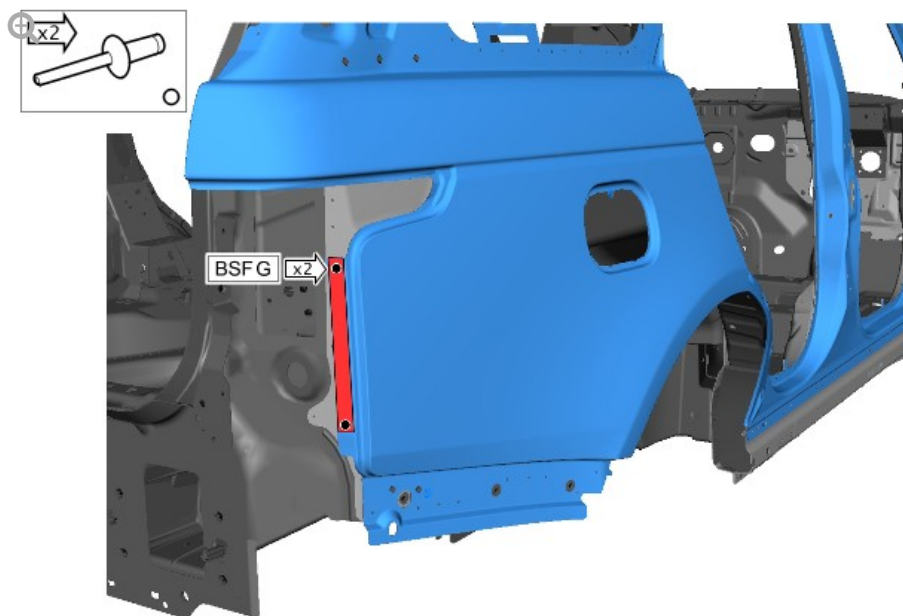

E144389

Install the BSF's as indicated.


28.

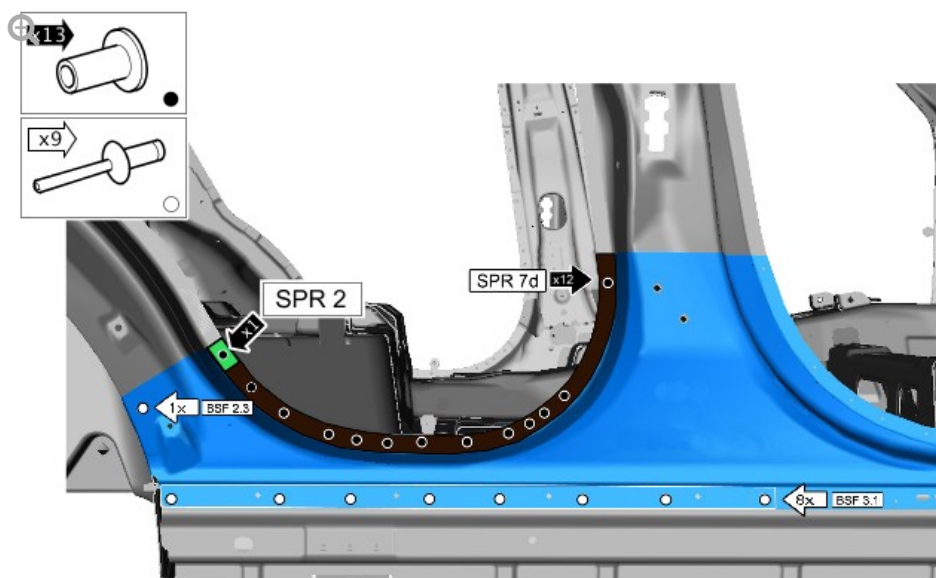

E144323

Install the SPR's and the BSF's as indicated.


29.

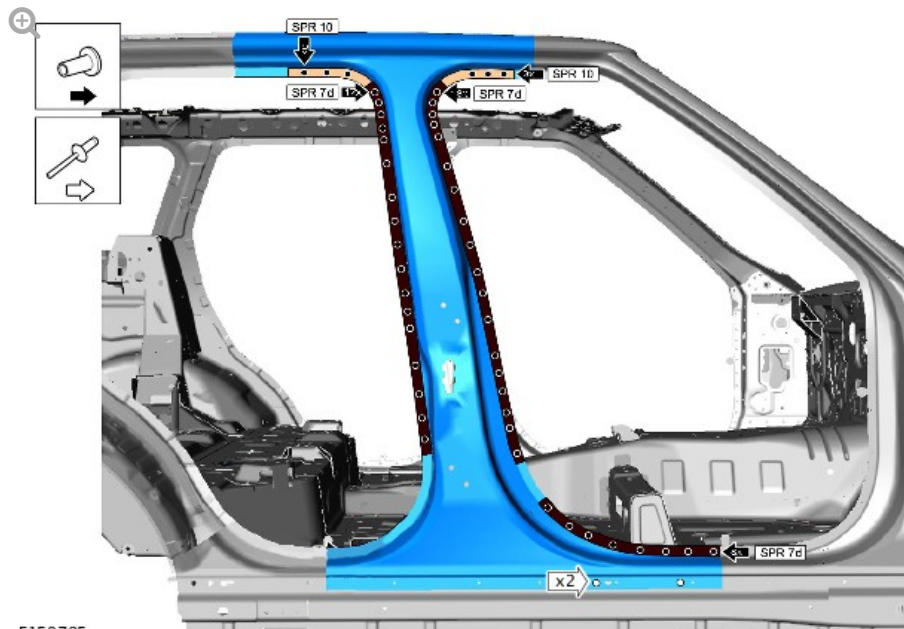

E159785

Install the SPR's and BSF's as indicated.


30.

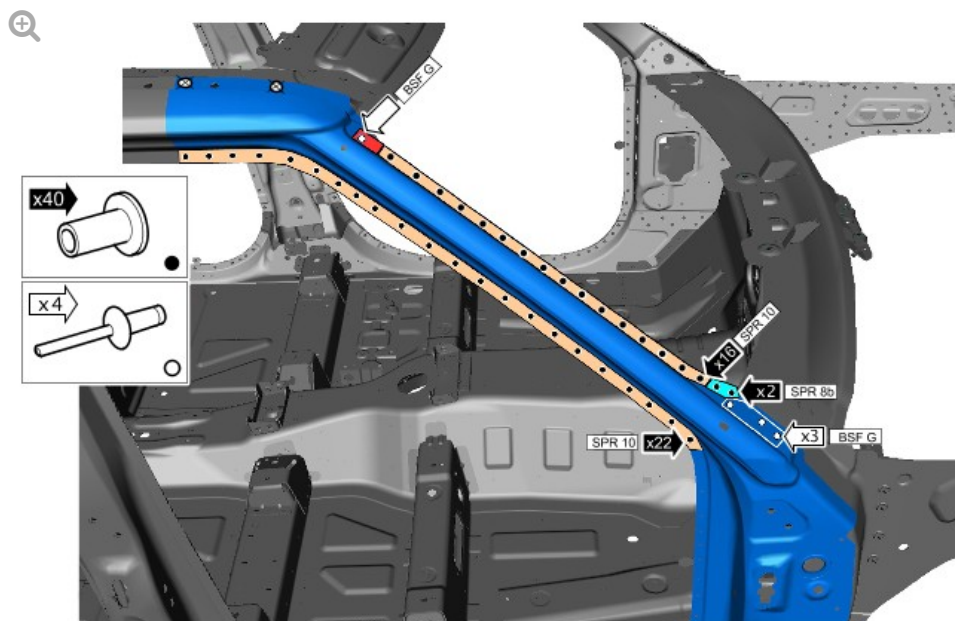

E144301

Install the SPR's and BSF's as indicated.


31.

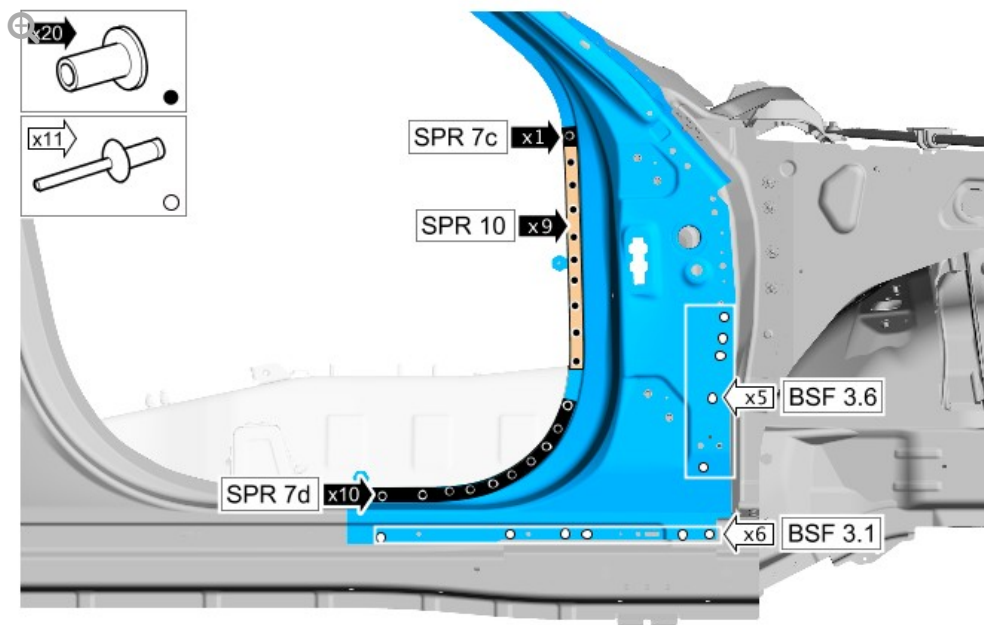

E144302

Install the SPR's and the BSF's as indicated.


32.

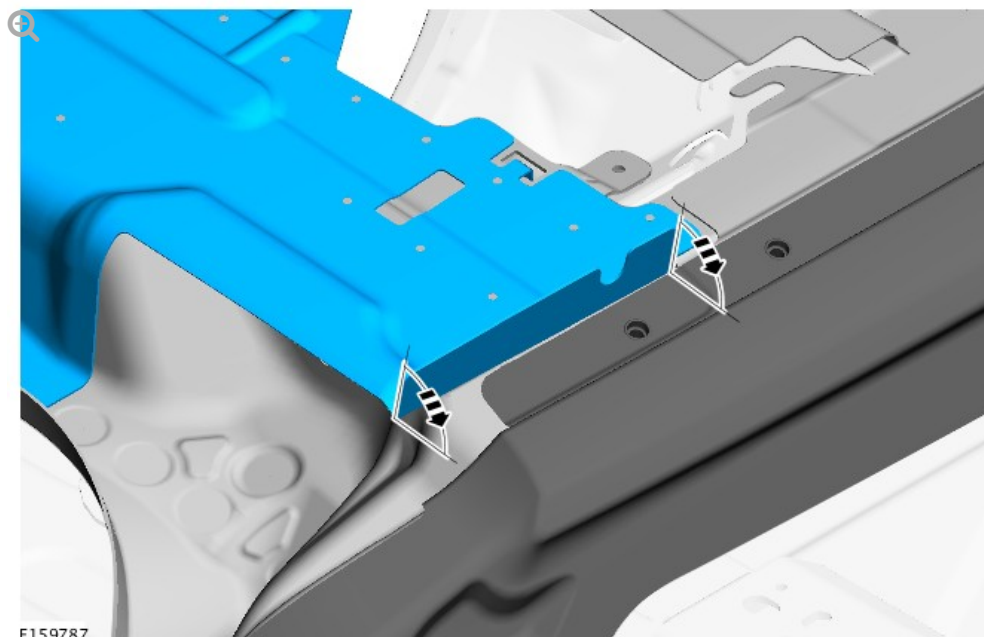

E159787

Fold back the edge of rear roof header rail as indicated.

33.

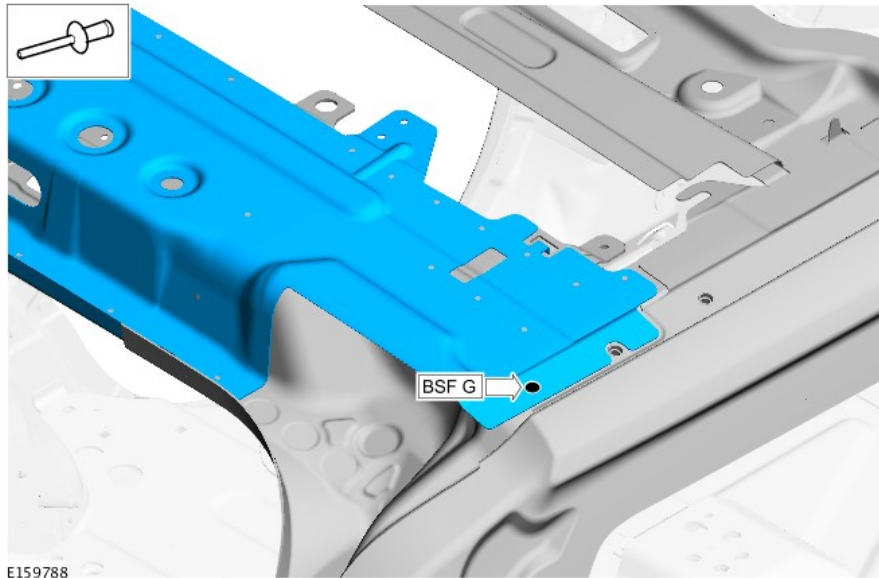

Install the BSF as indicated.

34. Remove any excess adhesive.

35. Make sure that any open or exposed panel joints are suitably sealed.

36. Make sure corrosion protection is applied to all areas affected by repair.

37. The installation of associated panels and components is the reversal of removal procedure.