

2016.0 RANGE ROVER (LG), 501-20

SUPPLEMENTAL RESTRAINT SYSTEM

'B' PILLAR SIDE IMPACT SENSOR (G1521671)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on the SRS.
- Do not probe supplemental restraint system (SRS) electrical connectors.
- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplemental restraint system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait one minute. Failure to follow this instruction may result in personal injury.
- Always use new fixings when replacing an SRS component.
- Persons working on the supplemental restraint system (SRS) must be fully trained and have been issued with the safety guidelines.
- When repairing an SRS system, only use genuine new parts.

NOTES:


- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- RH illustration shown, LH is similar.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).
2. Refer to: [Front Scuff Plate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


3.

NOTE:


Push down the carpet to allow access to the component.

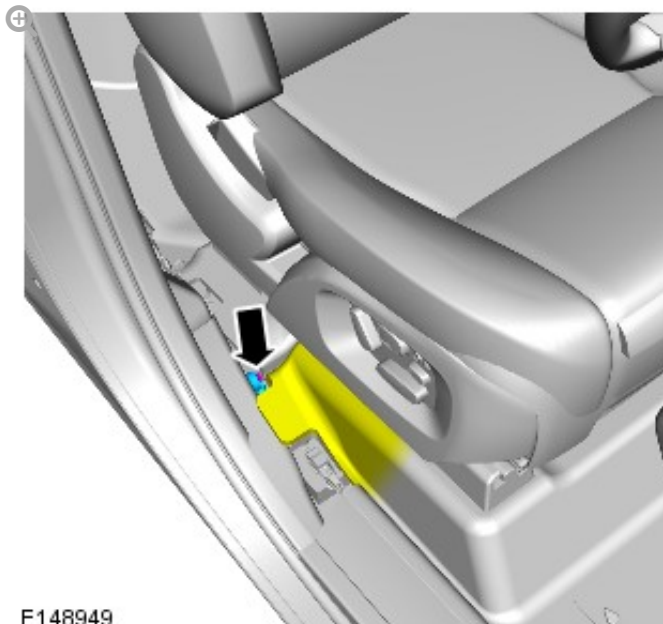

4.

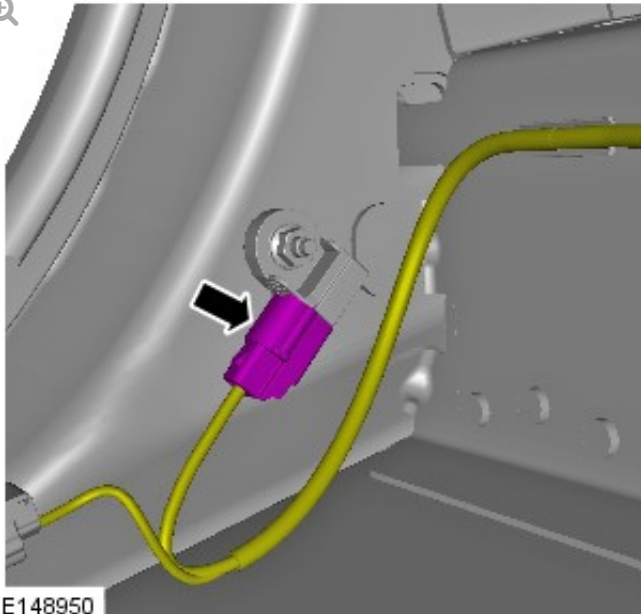

5.

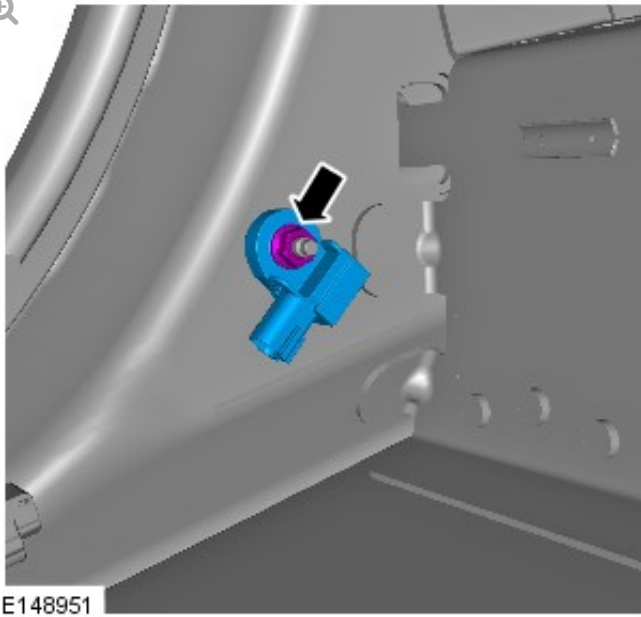

Torque: 11 Nm

INSTALLATION

1. To install, reverse the removal procedure.

